





Post your creations on Instagram, Twitter, or Facebook with the hashtag #minimaterials and we'll send you a personalized discount code!


### *Bottom Layer*

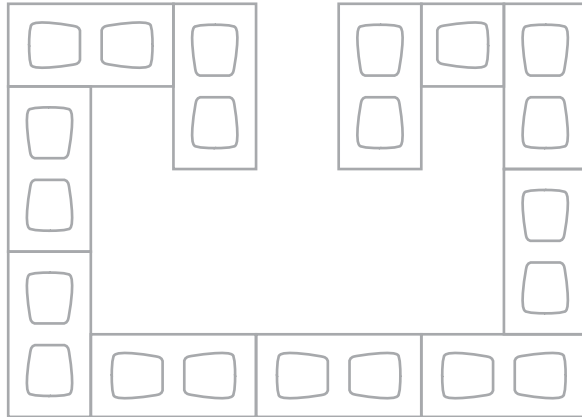

### *Middle Layer*

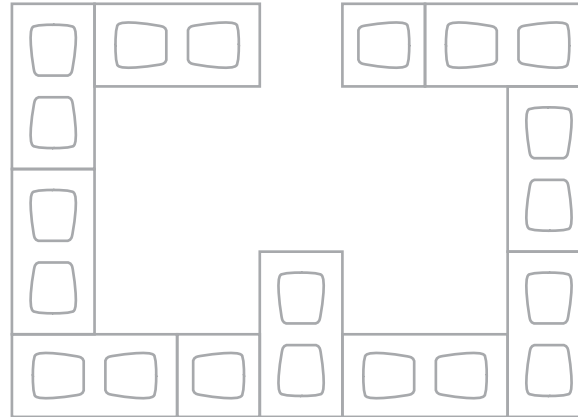

### *Top Layer*

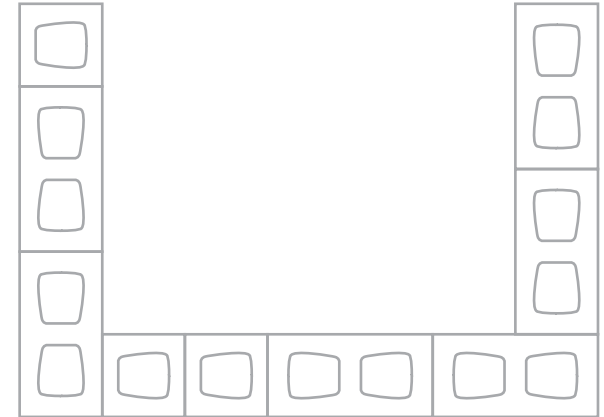

### *Tips:*

- When mortaring, fill in the holes of the cinder blocks to create a stronger bond.
- Follow instructions carefully. You need to overlap bricks or structure will be weak.
- When done, run application sticks over running warm water and rub clean. Let dry completely.
- Let dry for two hours before using.