



# FORT PLANS


FRONT

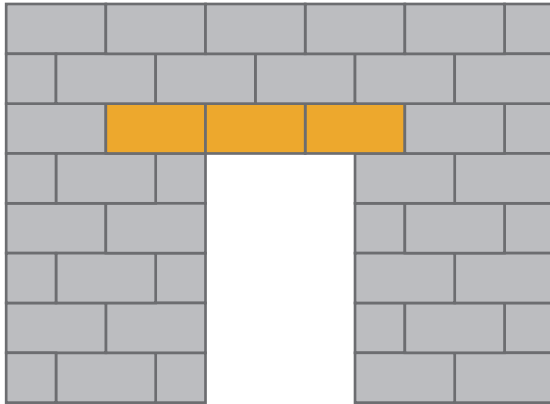


LEFT SIDE

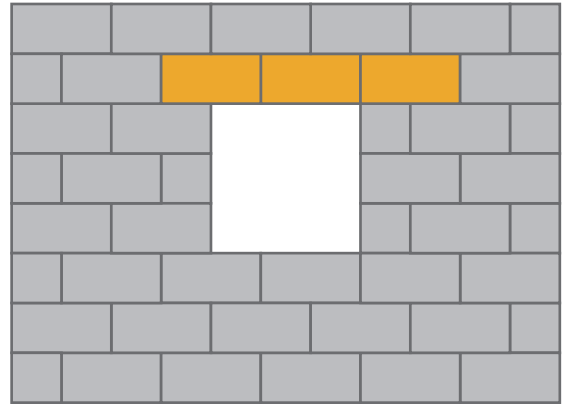

RIGHT SIDE

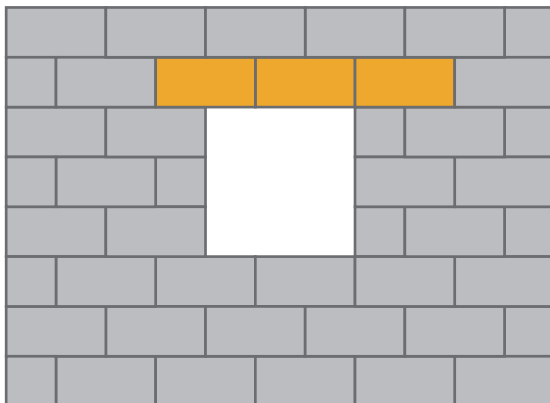

BACK

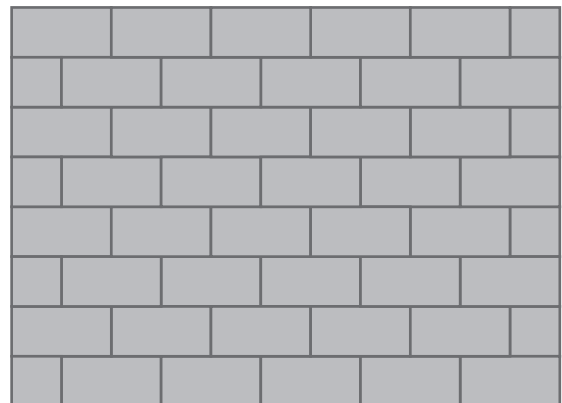

— **MORTAR THESE BLOCKS TOGETHER AND LET DRY BEFORE PUTTING OVER TOP OF DOORS AND WINDOWS TO PROVIDE SUPPORT.**