



# Installation Instructions

For part number 127051 Road Glide Twin LP6 Bracket

- 1- Rear Bracket.....127051-1B
- 1- Left LP6 Mount...127051-2B
- 1- Right LP6 Mount.127051-3B
- 1- Shield Seal.....127051-Seal
- 1- Hardware Kit.....127051-H
- 1- Front Tin.....127057-4B

**SCAN QR-CODE  
FOR LINK TO  
INSTALL VIDEO**




OR EMAIL TECH SUPPORT  
INFO@CALIRAISEDMOTO.COM

## Kit Contains:

Thanks for purchasing our Road Glide LP6 Kit. After using other kits & components available, we decided to create A More "installer friendly" version that allowed access to bolts that, in many bikes, are hidden and VERY time Consuming to install. **NOTE:** Amps and/or other after market add-ons may require modification to the fins on the back of the light housing. We do this from time to time ourselves and it has not created any issues.

1. Remove your Road Glide front fairing. Keep track of your factory hardware as you will re-use factory bolts to Hold down the rear plate of your new kit.
2. Remove your headlight assembly and unplug your light, leaving harness inside. Put this in a safe place with Any parts in case you need this later.
3. Open your new Road Glide Kit 127051.
4. Carefully remove front Shield/Tin and set aside being very careful not to twist bend or sit anything on this piece.
5. Locate the "Rear Plate" and remove packaging. (See illustration #1 below)
6. Install this rear plate using the factory screws that held your head light assembly. Important: Install all 4 screws Before tightening any. Once all 4 screws are in it is ok to torque down TOP 2 ONLY, by hand or using T-Handle allen. Leave the bottom 2 factory bolts just snug as they will come off at the end to be put back thought the top Shield.

**Illustration #1  
Rear Plate**

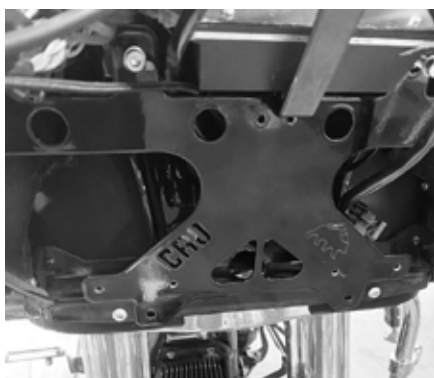

**Using Factory bolts insert all 4 screws loosely before tightening any.**

7. Next, open both LP6 Brackets. One left and one right. Mount your LP6 lights to these in the order you want them to show. Note: There is a Left and a Right. Leave front 7/16 nut a bit loose so you can adjust later. See Illustration 3 and 4 below.

**Illustration #3  
Left LP6 Plate**

**Illustration #3  
Right LP6 Plate**



### INSTALL TOOLS Required:

- 3/16 Allen Wrench (T-handle preferred)
- 5mm Allen Wrench (T-handle preferred)
- T-30 Torx Driver
- T-25 Torx Driver
- #2 Phillips Screw Driver
- 7/16 Wrench / Socket
- Blue Loctite (Or Equal) Do not use Red

Cali Raised Off-Road Phone: 714-534-6700

Part #: 127051

Rev # **B**

Desc. Road Glide Twin LP6 Bracket System 2015+

Install Instructions 127051B 10/21/22

CONTINUED ON BACK

8. Open the small hardware bag full of 6mm socket heads. Apply a drop of BLUE thread Locker to the thread on each small sock head. If you can't get any thread locker, then use black RTV silicone adhesive.
9. Install both lights. Do not tighten any one socket head until all 4 are in on each side.
10. Next , check the lights to insure they work. BEFORE YOU PUT YOUR FRONT SHIELD/TIN on.. We suggest you roll bike in front of a wall about 15 feet away and look to see that the bright ball of light is in sensible location.
11. Take the Shield and locate the rubber seal supplied about 12" long. Install the seal on the top lip with hands.
12. Once you feel lights are good, and you're ready to install front shield, remove the lower 2 factory bolts that hold the light assembly on and place the shield around your lights, lining up the lower holes. Install those 2 bolts but do not tighten yet.
12. Lastly, install the top center and last remaining 6mm socket head in the center of the shield.

**Showing LP6 Mounting Plates attached to Rear plate with Socket Heads**



**Bulb Seal Slides On to Top of Shield**



**Post your upgraded ride... Be Sure To Tag Us @Cali\_Raised\_Offroad\_Moto**