



CONTENTS

Mini Farrago Sconce

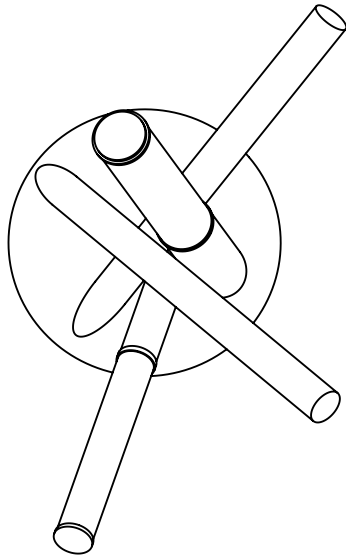

Custom Crossbar

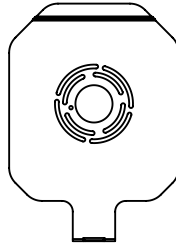

Hex Driver - 5/32



6-32 Set Screw



Wago Electrical Connectors (2)



8-32 Screws (2)



SAFETY INFORMATION

Only suitable for direct mounting on non-combustible surfaces.
Under no circumstances can Mini Farrago Fixtures be mounted on normally flammable surfaces.
Suitable for dry, indoor use only.
Maximum ambient temperatures: 25° C

WALL INSTALLATION | MINI FARRAGO SCONCE

1. Mount the provided custom crossbar (A) to the junction box using the (2) provided 8-32 screws, allowing the lead wires to come out of the center hole. Attach the ground wire to the crossbar using the green ground screw.
2. Once the crossbar is attached to the wall, lift the fixture and connect the wires using the provided Wago connectors. Push the wires back through the crossbar hole into the junction box.
3. While supporting the fixture, hook the backplate brace (B) onto the crossbar flange. Once this is hooked on, thread in the bottom set screw (C) to mount the backplate to the crossbar.

