
#### **CONTENTS**

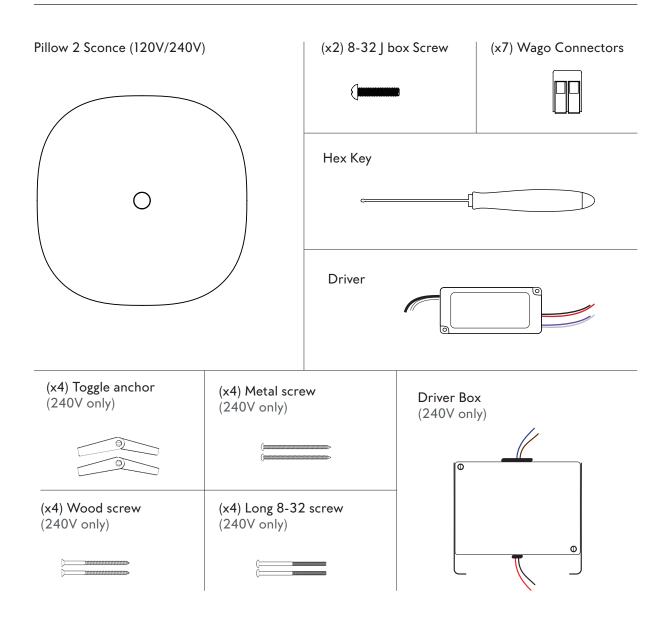

#### SAFETY INFORMATION

UL/Outdoor wet rated.

Maximum ambient temperature: 25°C


The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.

Updated 01FEB2024

## PILLOW 2 SCONCE (120V) | INSTALLATION

Note: Please contact a licensed electrician.

01. With the provided hex key (A), unscrew the set screw (B) from the fixture back plate (C), to release the crossbar with LED assembly (D).

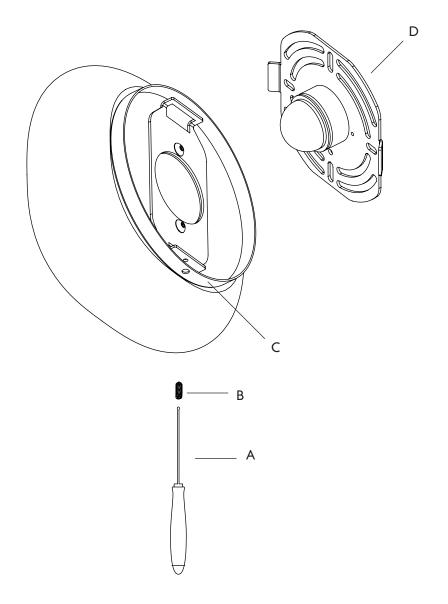


Updated 02FEB2024


#### PILLOW 2 SCONCE (120V) | INSTALLATION

Note: Please contact a licensed electrician.

- 02. Take the LED driver (E), and connect the lead wires with the provided 2-port wagos (F) from the J-box (G).
- 03. Fit the LED driver inside the J-box and tuck in the lead wires.

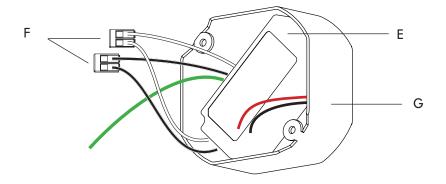

- 04. Bring the crossbar with LED assembly (D) up to the J-box (G), and make the ground wire connection using the provided 2-port wago (H).
- 05. Then make the low voltage wire connection with the provided 2-port wagos (I).

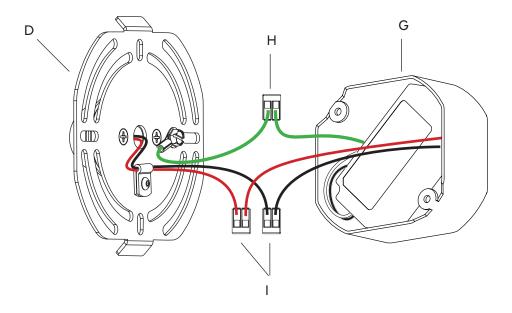


Updated 02FEB2024 3


## PILLOW 2 SCONCE (120V) | INSTALLATION

Note: Please contact a licensed electrician.

06. Tuck all the wires into the J-box (G), and secure the crossbar assembly (D) with two provided 8-32 screws (J).

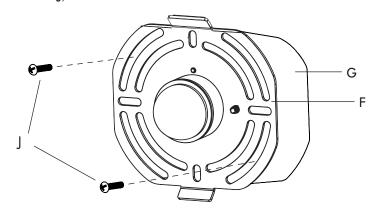

- 07. Hook the glass assembly (C) onto the french cleat of the crossbar assembly (D).
- 08. Using the hex key (A) secure the glass assembly with set screw (B).

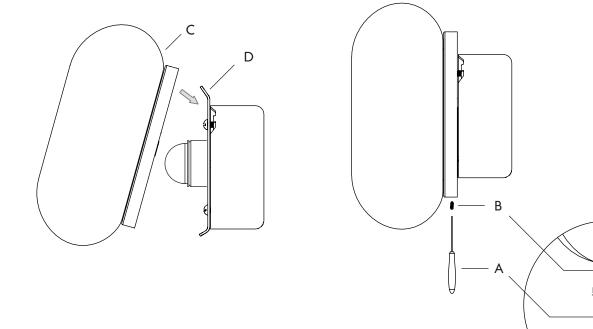


Updated 02FEB2024

## PILLOW 2 SCONCE (240V) | INSTALLATION

Note: Please contact a licensed electrician.

01. With the provided hex key (A), unscrew the set screw (B) from the fixture back plate (C), to release the crossbar with LED and 240V driver enclosure assembly (D).

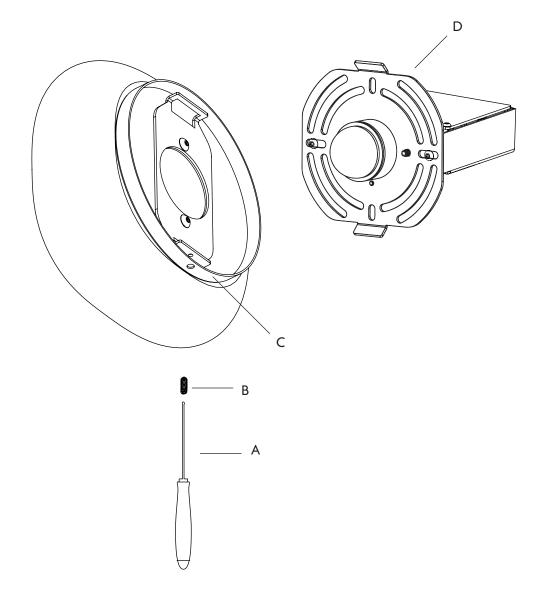


Updated 02FEB2024 5

## PILLOW 2 SCONCE (240V) | INSTALLATION

Note: Please contact a licensed electrician.

- 02. Connect the lead wires (E) to the power supply wires.
- 03. Mount the crossbar to the wall using the provided screws (F).

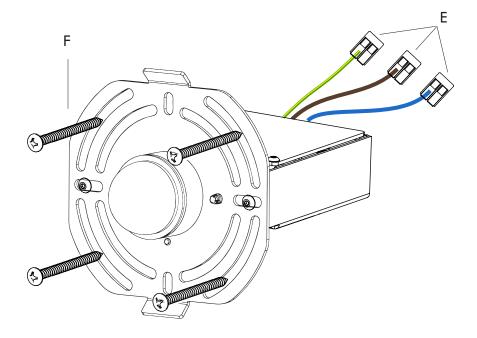



Updated 02FEB2024 6

# PILLOW 2 SCONCE (240V) | INSTALLATION

Note: Please contact a licensed electrician.

- 04. Hook the glass assembly (C) onto the french cleat of the crossbar assembly (D).
- 05. Using the hex key (A) secure the glass assembly with set screw (B).

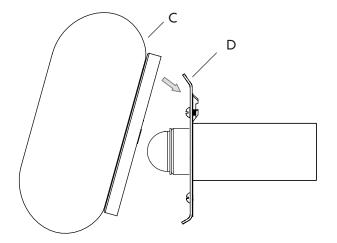

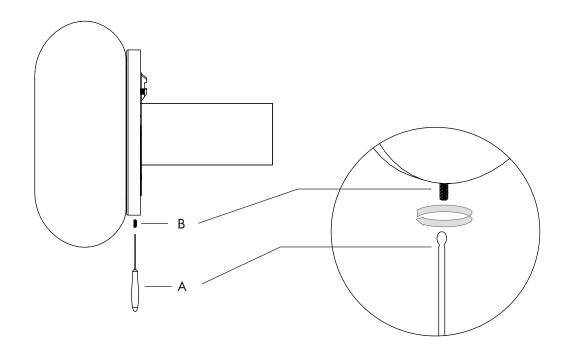

Updated 02FEB2024