



FUNKY Monkey bars[®]

THE DOOR KNOB - ASSEMBLY INSTRUCTIONS


COMPONENTS

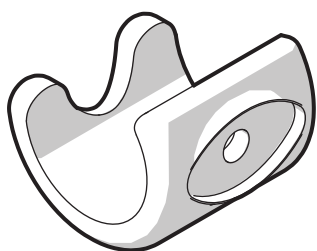

PIPE GRIP

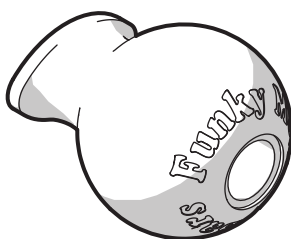



DOOR KNOB

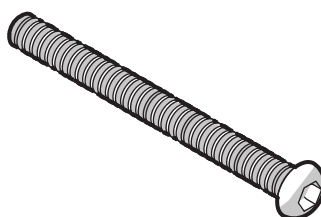

M10X110 BOLT




CAP

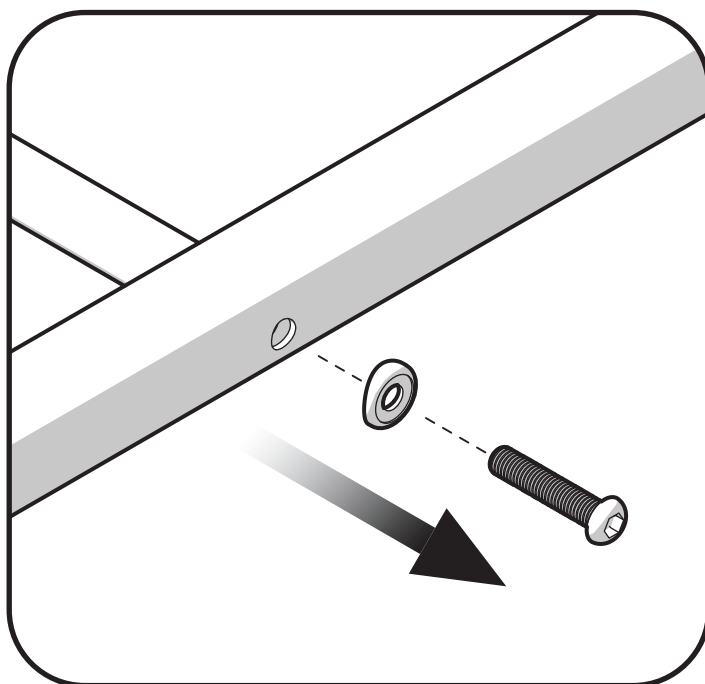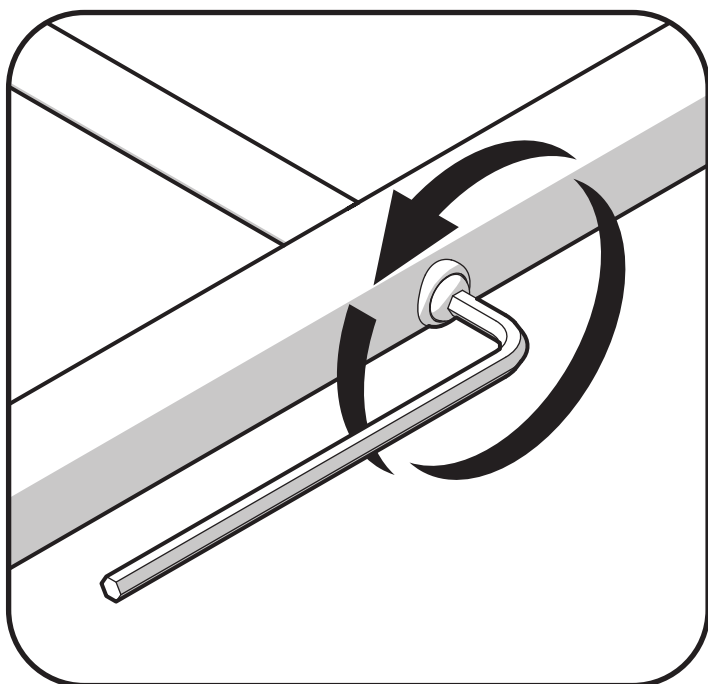


IF ADDING TO AN EXISTING LADDER, REMOVE RUNG BOLT AND WASHER

1

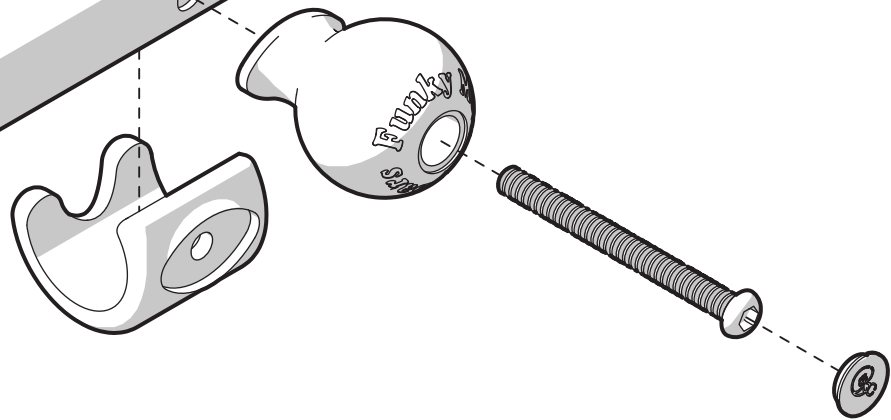


CLIP PIPE GRIP ONTO LADDER. ALIGN HOLES

2

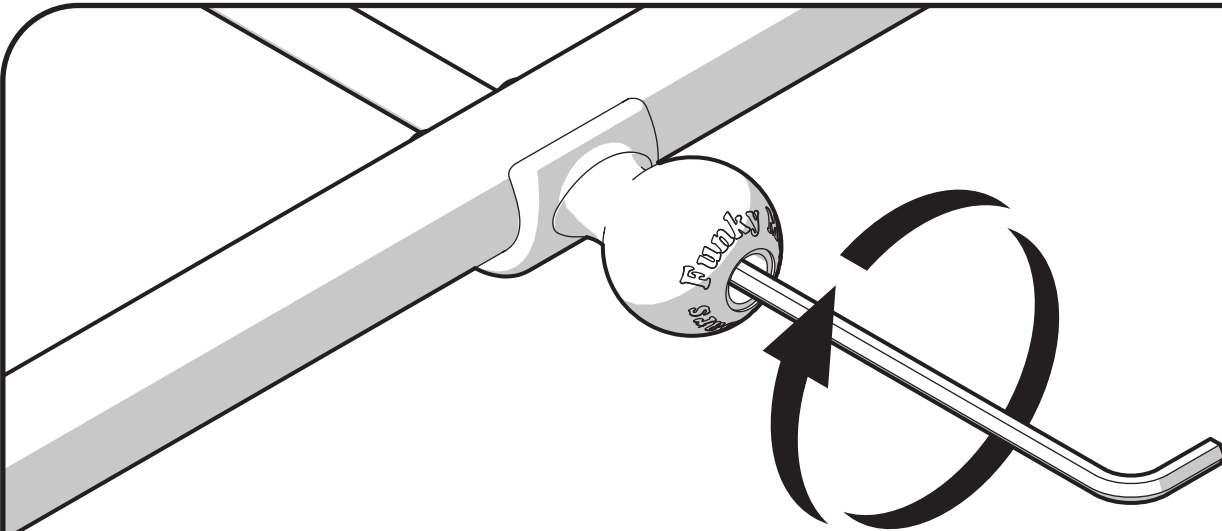

TIGHTEN BOLT USING THE LONG END OF THE ALLEN KEY

3

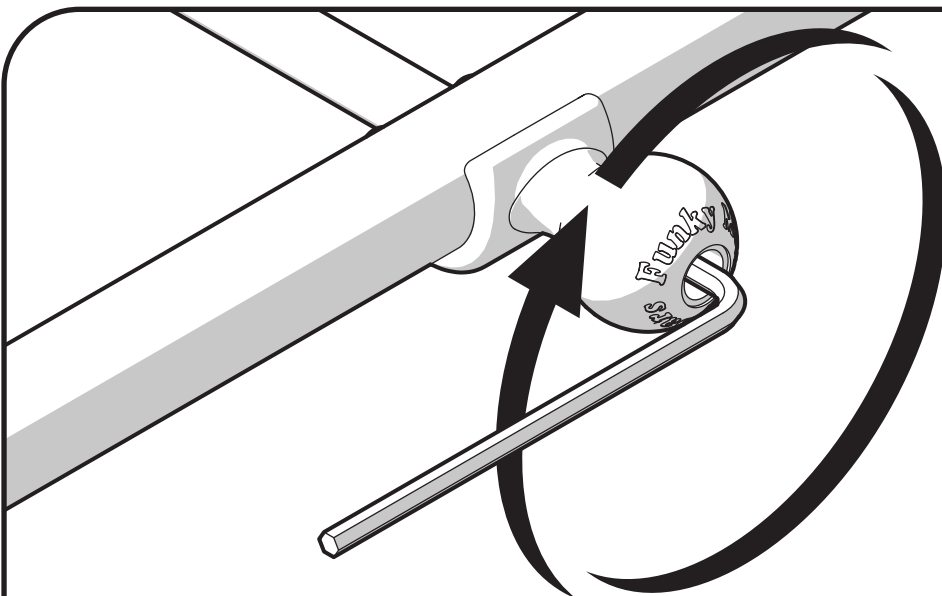

ONCE TIGHT, USE THE SHORT END OF THE ALLEN KEY TO COMPLETE ANOTHER FULL ROTATION