




Alba Slim nightstand

ASSEMBLY INSTRUCTIONS

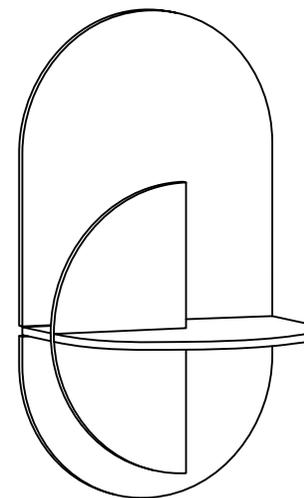

Woodendot
LIVE DESIGN


4 DIFFERENT POSSIBILITIES

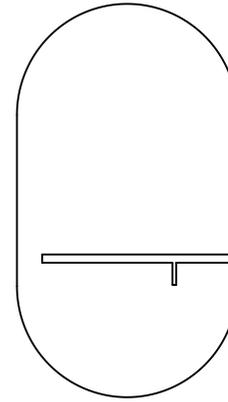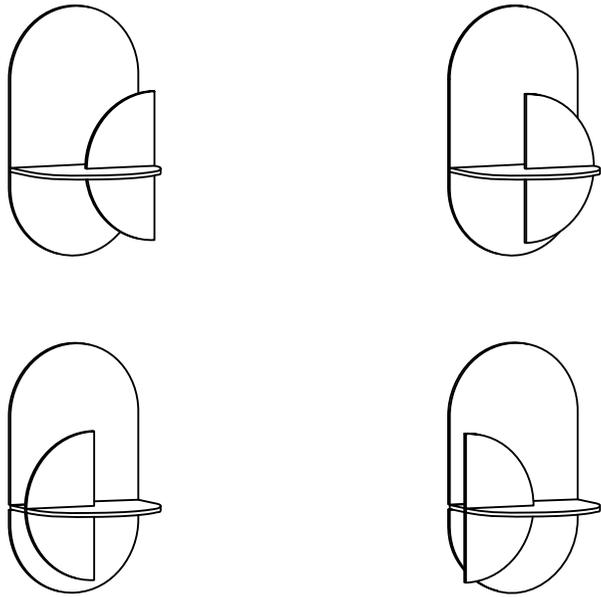


1x



1x

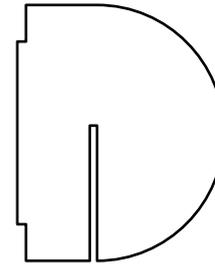




1x



1x




1x

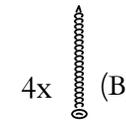

We recommend two people for the installation




You will need a manual drill for the wall holes




The drill bit required is \varnothing 6 mm or 15/64" Depth of the hole in wall: 50 mm / 1.96"


For the hole to be the exact depth, measure 50mm/1.96" on the drill bit and place tape around it to mark the distance. Stop drilling when it reaches that depth.

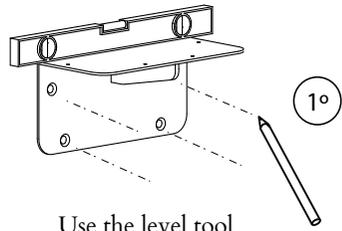


1°
Use the level tool
Mark the holes with a pencil

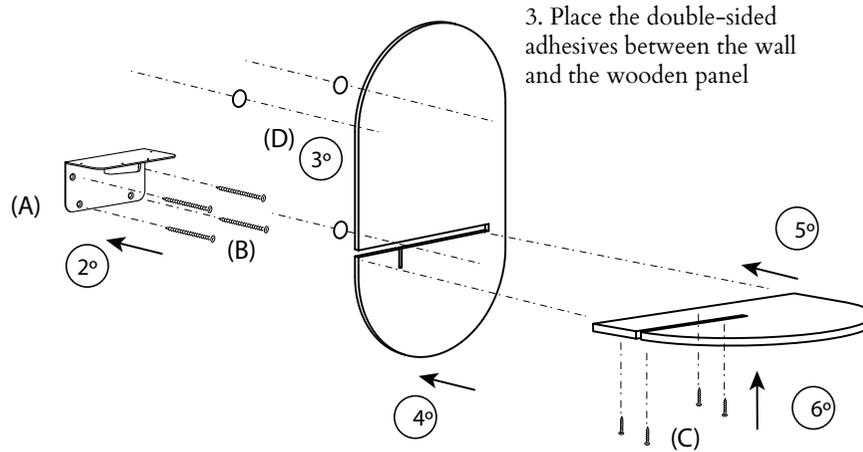

3. Place the double-sided adhesives between the wall and the wooden panel


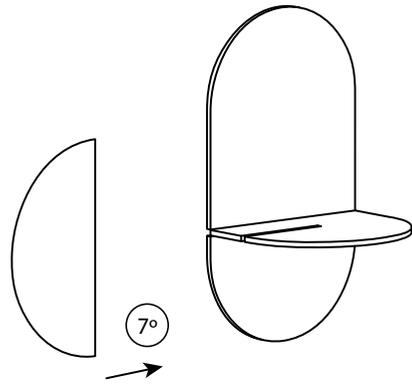


7°
Introduce the small wooden piece

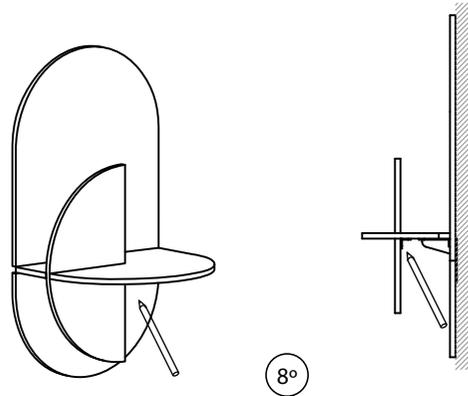


8°
Make a line at the intersection of the small piece of wood on the back

Take out the small wooden piece

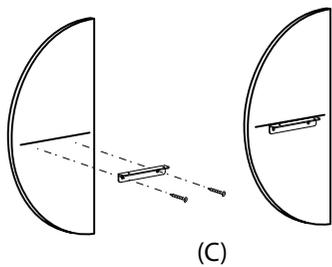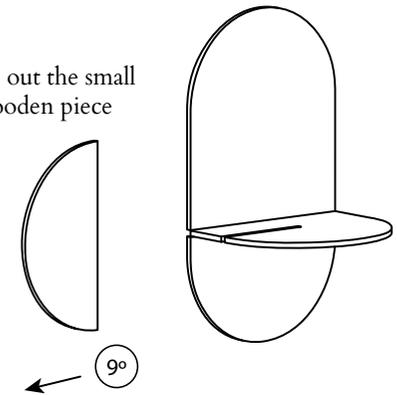


10°
Screw on the L-shaped metal piece using the marked line

Introduce the small wooden piece with the metal piece towards the back

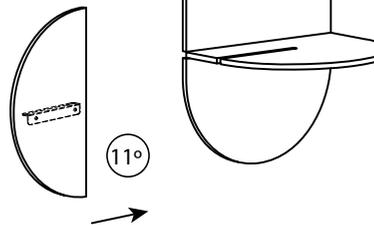

11°

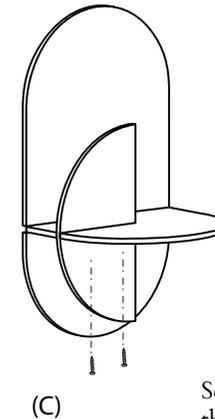

12°
Screw to the set