




Alba Wall shelf

ASSEMBLY INSTRUCTIONS

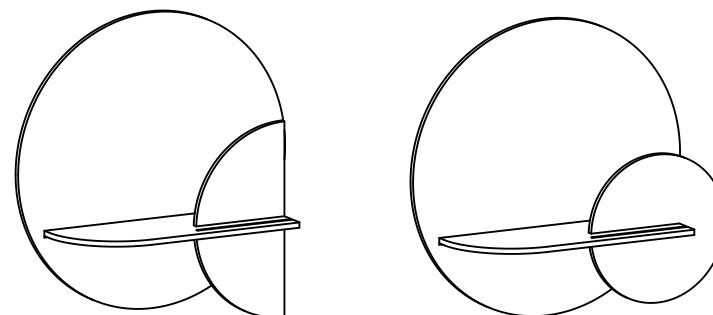


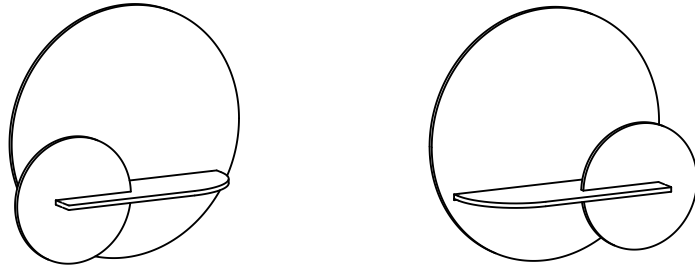

2 DIFFERENT POSSIBILITIES



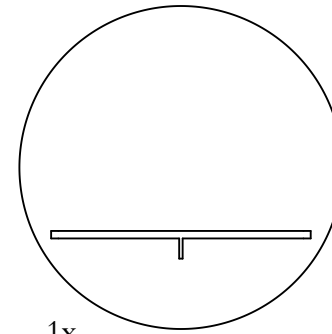


1x

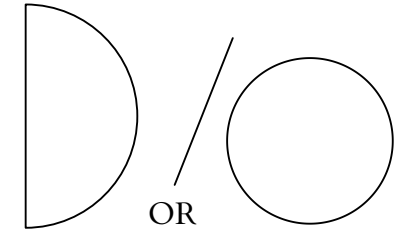


1x


OR

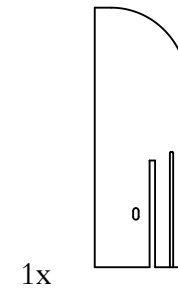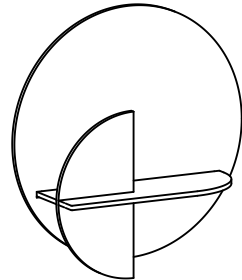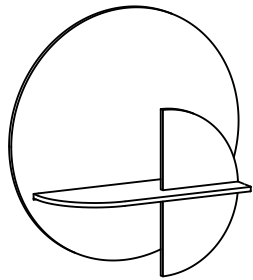




1x




1x




1x

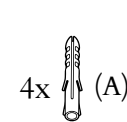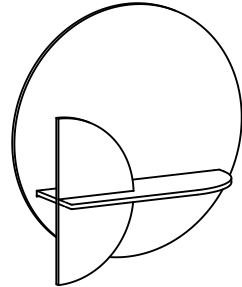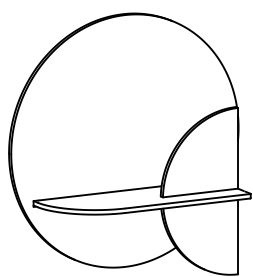


4x (A)

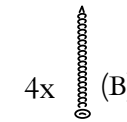

4x (B)

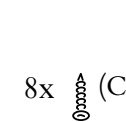

8x (C)

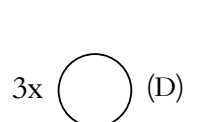

3x (D)

4 DIFFERENT POSSIBILITIES



We recommend two people for the installation




You will need a manual drill for the wall holes





The drill bit required is \varnothing 6 mm or 15/64" Depth of the hole in wall: 50 mm / 1.96"


For the hole to be the exact depth, measure 50mm/1.96" on the drill bit and place tape around it to mark the distance. Stop drilling when it reaches that depth.

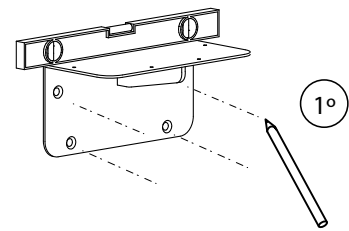


Use the level tool
Mark the holes with a pencil

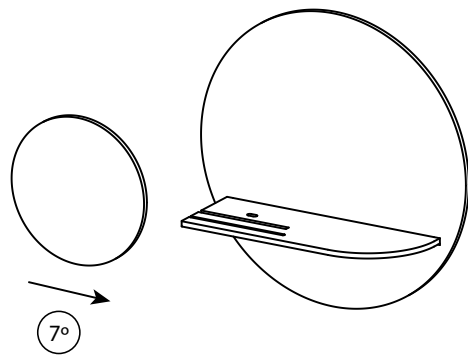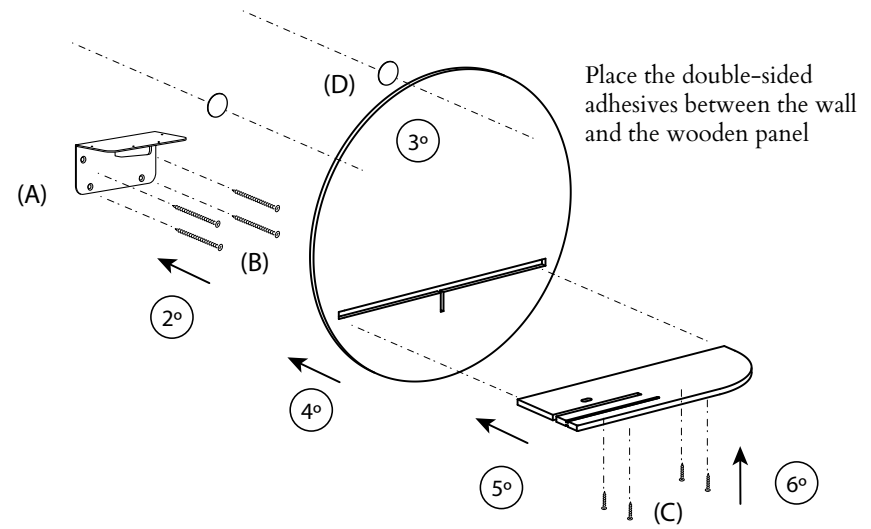


Introduce the small
wooden piece

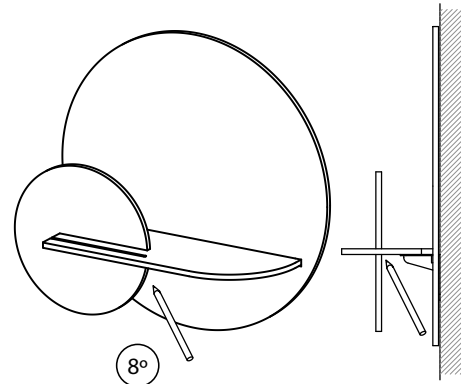


Make a line at the intersection of the
small piece of wood on the back

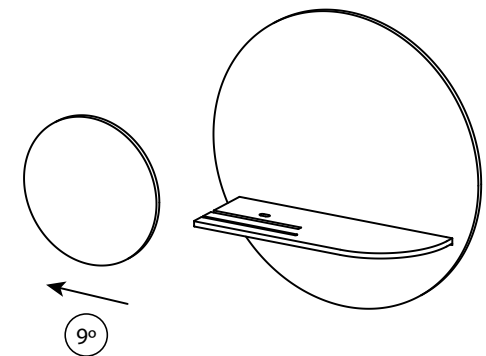


Take out the small
wooden piece

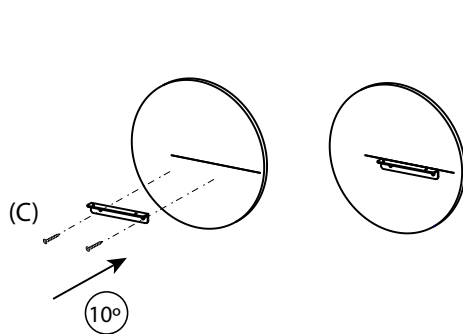

Screw on the L-shaped metal
piece using the marked line

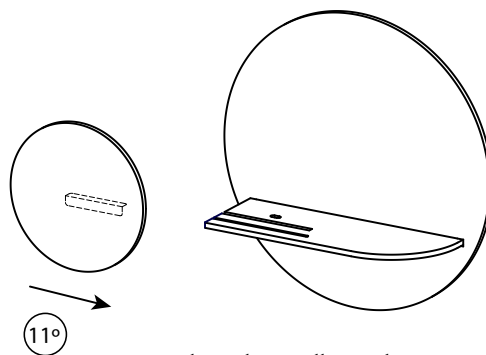

Introduce the small wooden piece
with the metal piece towards the back

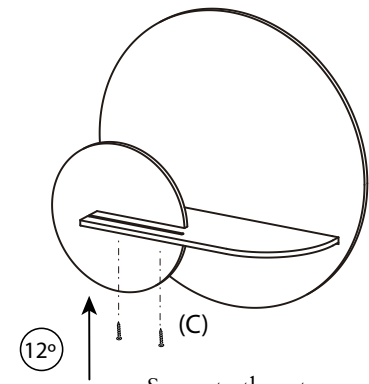

Screw to the set