







# Alba Wall shelf

## *ASSEMBLY INSTRUCTIONS*

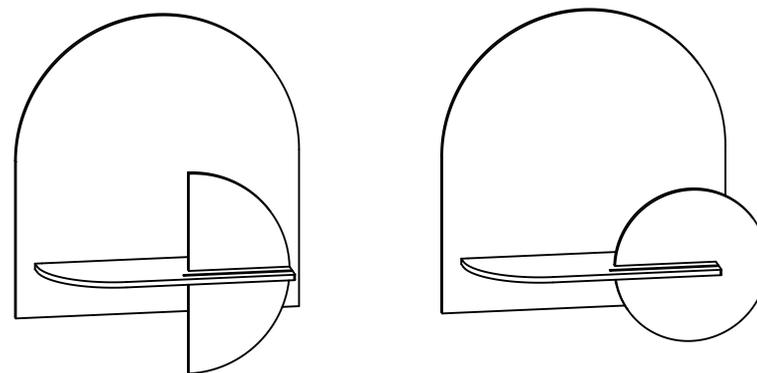


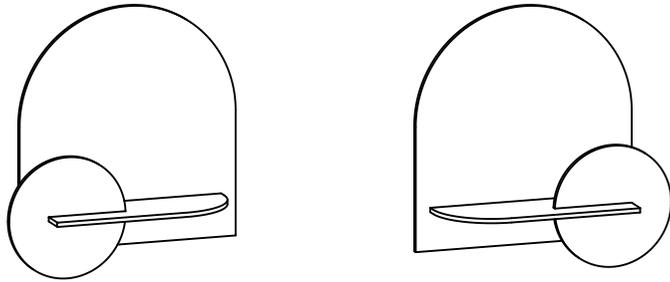

2 DIFFERENT POSSIBILITIES

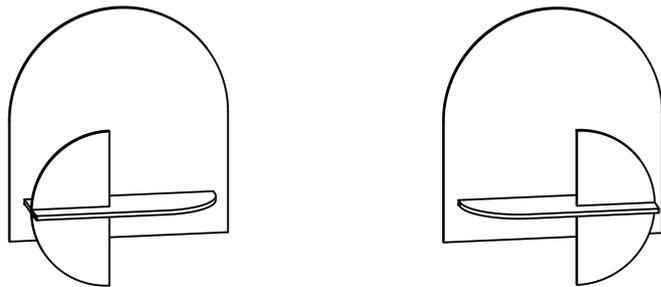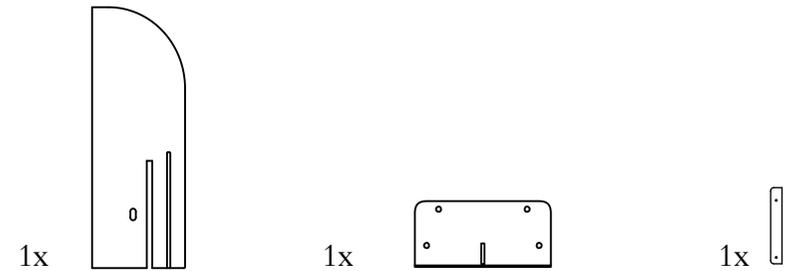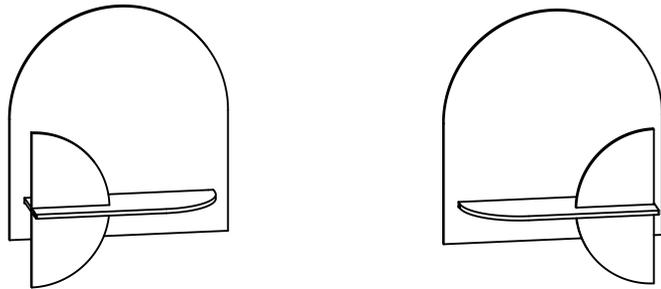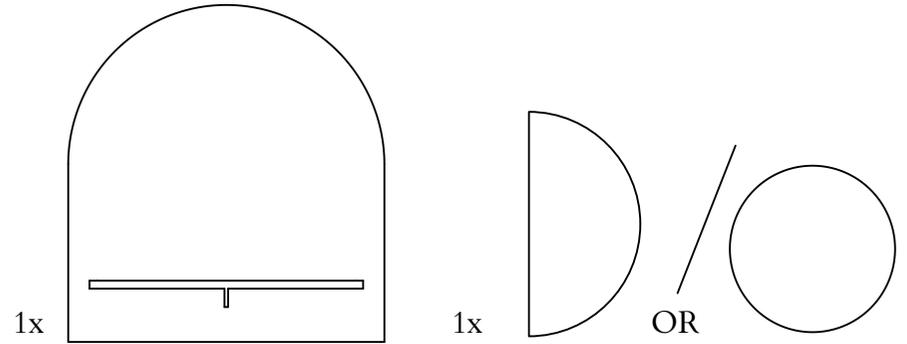

4 DIFFERENT POSSIBILITIES

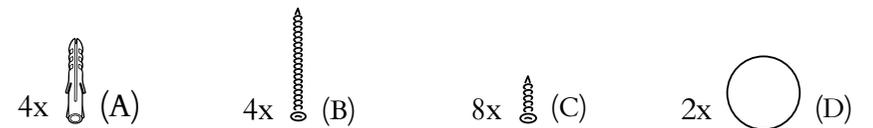

We recommend two people for the installation




You will need a manual drill for the wall holes




The drill bit required is  $\varnothing$  6 mm or 15/64" Depth of the hole in wall: 50 mm / 1.96"


For the hole to be the exact depth, measure 50mm/1.96" on the drill bit and place tape around it to mark the distance. Stop drilling when it reaches that depth.

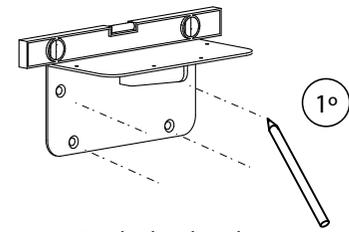


Use the level tool  
Mark the holes with a pencil

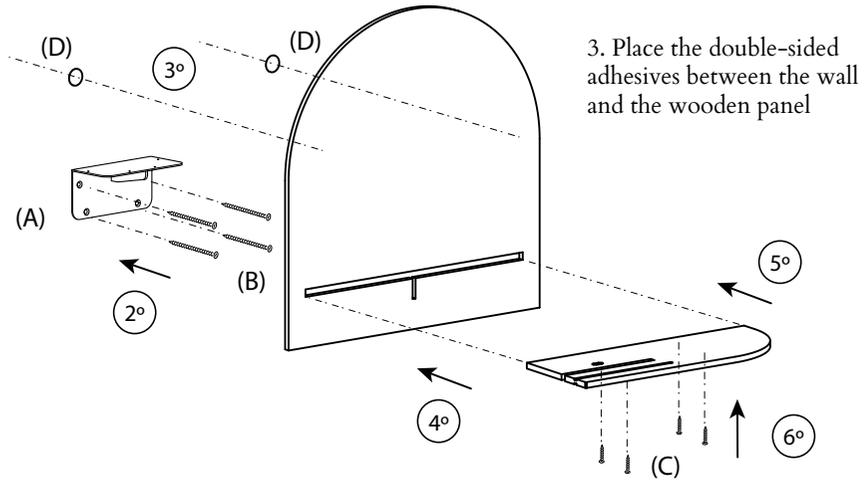


3. Place the double-sided  
adhesives between the wall  
and the wooden panel

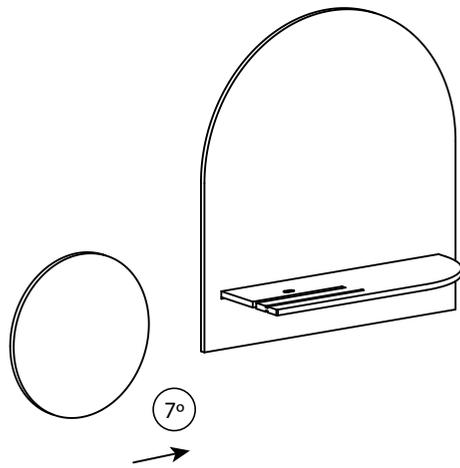


Introduce the small  
wooden piece

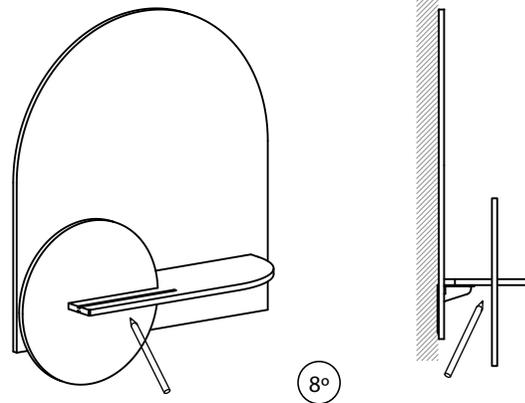

Make a line at the intersection of the  
small piece of wood on the back


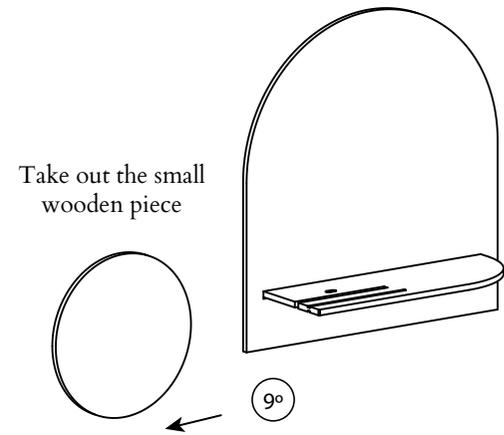


Take out the small  
wooden piece

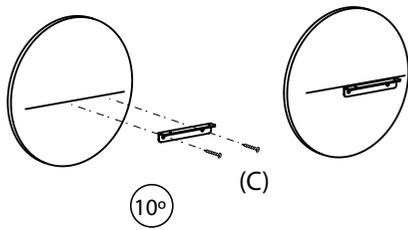

Screw on the L-shaped metal  
piece using the marked line

Introduce the small wooden piece with  
the metal piece towards the back

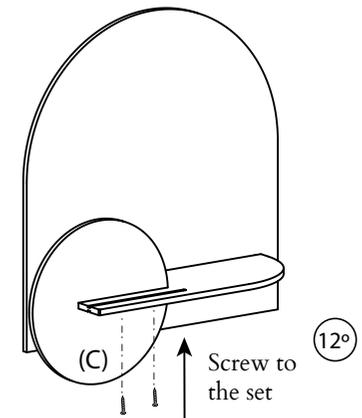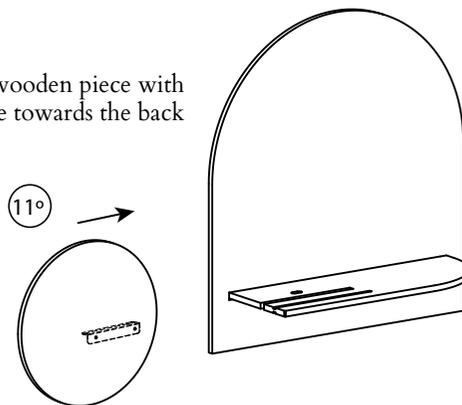

Screw to  
the set