


# **RTUNES RACING**

**Part Number: CAI-DG009**

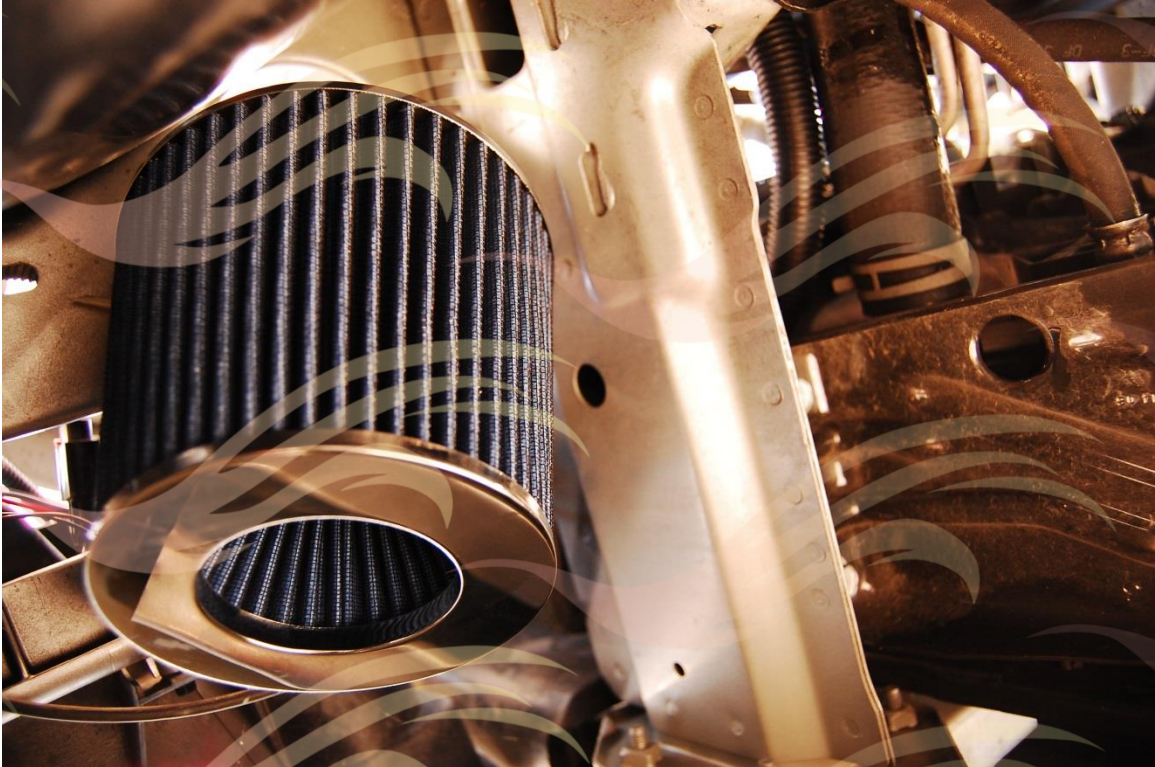



Part List:


Cold air intake pipe	2 Pieces
Coupler	1 Piece
Elbow Coupler	1 Piece
Clamp	5 Pieces
Rubber hose	1 Piece
Air filter	1 Piece
Universal bracket	1 Set

**Note: Disconnect the negative battery terminal before starting this installation. The installation of this cold air intake does require mechanical skills.**

- 1- Disconnect the inlet air temperature (IAT) sensor connector.



- 2- Loosen hose clamp at the throttle body.

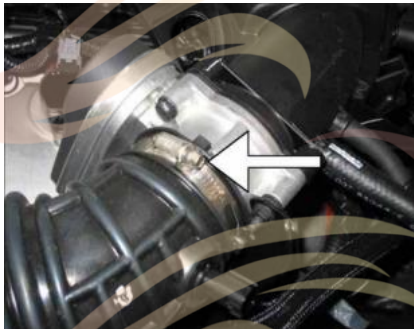


- 3- Remove the PCV breather tube from the air box.



- 4- Loosen and remove the air box mounting screw. This screw will be reused.



- 5- Remove the coolant line from the air tube.

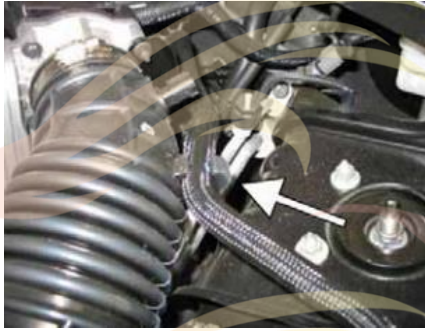

- 6- Remove the air box assembly from the engine bay.



- 7- Connect the coupling onto the throttle body and tighten it.
- 8- Insert the S-shape cold air intake pipe (like the picture above) to the end of the coupler and semi-tighten it.
- 9- Connect the elbow coupler over the other end of the S-shape pipe and semi-tighten it.
- 10- Insert the stock IAT sensor into the grommet hole.
- 11- Connect the filter and the rubber hose.
- 12- A set of universal bracket is included. Find a spot to utilize it. Please see the first picture.
- 13- Installation completed.

For the idea of the Universal Bracket Installation (Not for all intakes), please visit <http://www.youtube.com/watch?v=IMIXVYGW2Zk>.

If you have any questions about the product, please contact us at [sales@rtunesracing.com](mailto:sales@rtunesracing.com)