

— **Instruction Manual** —

MODEL WPVT

Velcro Padding Mounting Track



Customer Service
(800) 247-7668

PARTS LIST					
Item	Qty	Description	Item	Qty	Description
A	*	Wall Pads (ordered separately)	D	*	#8 X 3/4" Phillips Pan Head Screw (10 per package)
B	*	WPVT Velcro Track	E	*	Ribbed Plastic Anchor (10 per package)
C	*	WPVH Hook Velcro			

*Quantity is determined by how much wall space to be padded/protected.

- ◆ Inspect all contents prior to installation. Report any missing parts to dealer immediately.
- ◆ Read all instructions before proceeding.

Warning!
Per ASTM F2440-04 The bottom of all wall padding should be mounted no more than 4" from the floor

Warning!
Use eye protection during all drilling operations.

Notice:
In cases where your area to be protected is not divisible by 6' you will need to cut/trim the Velcro Tracks accordingly.

1. Drill a 1/4" hole along the center groove in the *Velcro Track* (B). Holes should be spaced 3" from each end of the *Velcro Track* (B) and approximately 12"-18" apart. See Figure 1.
2. It is common for the wall that the padding is being mounted to not be flat or in the exact same plane. This can cause unsightly wrinkling of the vinyl. Shimming the center of the padding as needed will help offset wall irregularities, stretch the vinyl and improve the finished appearance.
3. Once you have determined the desired wall pad position, strike a level line on the wall for what will be the bottom of the wall pad when installed. Using the bottom of the *Wall Track* (B) as a guide, position the *Wall Track* (B) onto of the level line and mark the wall through each 1/4" hole. Carefully drill concrete wall at each location with a 3/16" masonry bit.

Note:
If walls are other than concrete substitute appropriate fasteners for the wall type (not included)

4. Repeat the process from instruction #3 to mount the top *Wall Track* (B).

Note:
The height of the top wall track will be determined by the loop velcro that is factory installed on the wall padding. Measure from the top of the top loop padding velcro to the bottom of the bottom loop padding Velcro to determined the correct *Velcro Track* (B) mounting locations on the wall.
See Figures 2 and 3.

5. Install one *Ribbed Plastic Anchor* (E) flush into each drilled hole. See Figure 2.
6. Use the *#8 X 3/4" Phillips Pan Head Screws* (D) to attach the *Velcro Track* (B) to the anchors/wall. Make sure the edge of the *Velcro Track* (B) lines up with the factory installed loop velcro on the padding as shown. See Figure 2.
7. Once *Velcro Track* (B) has been installed on the wall, slide *Hook Velcro* (C) into wall track rails from the outside edge of the track to complete installation. See Figure 4.

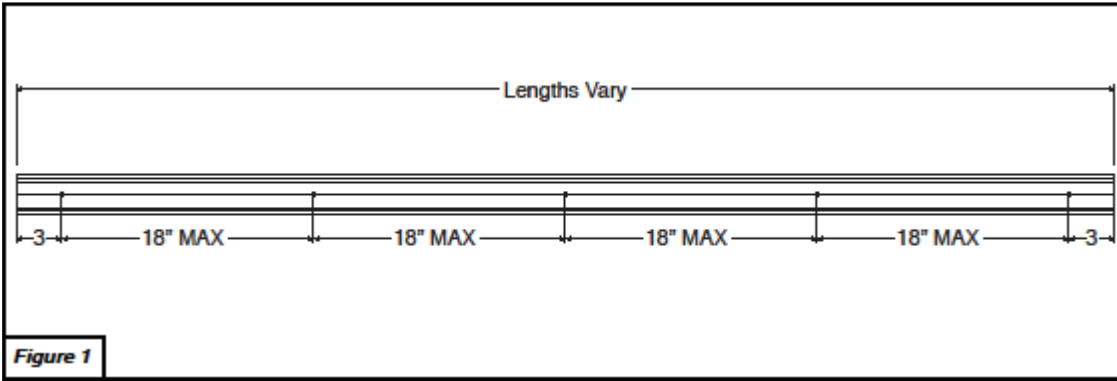


Figure 1

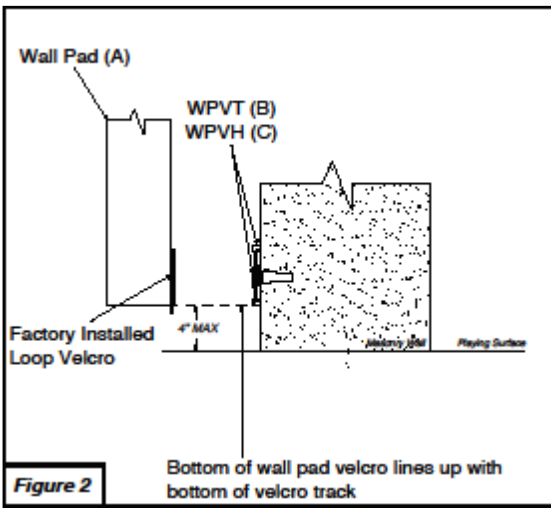


Figure 2

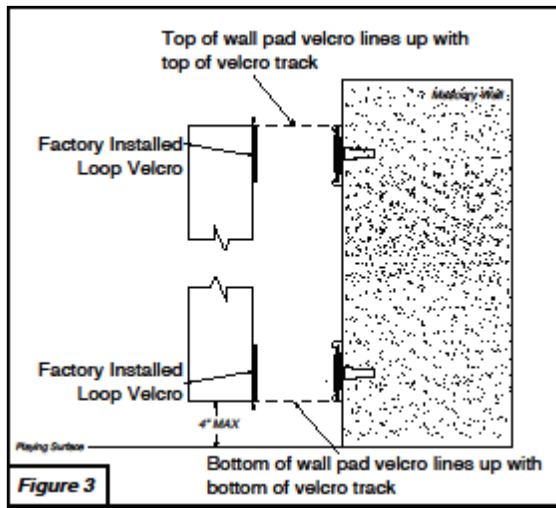


Figure 3

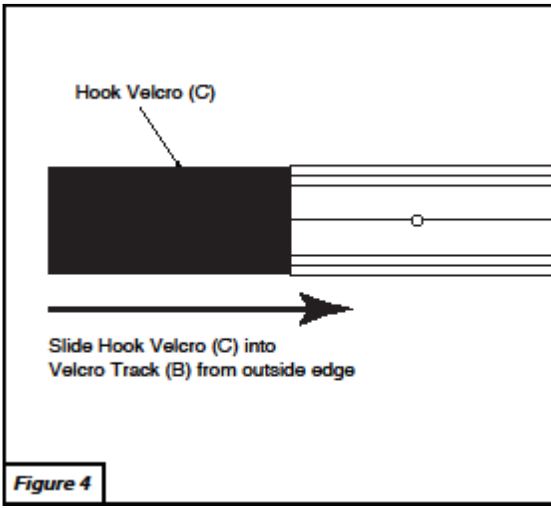


Figure 4