


Cape Collection Folding & Reclining Adirondack Chair





Assembly Guide

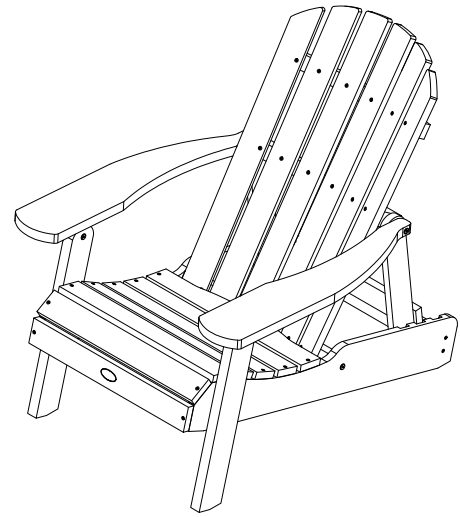


IMPORTANT!

DO NOT fully tighten the bolts until all bolts are started.
Once all bolts are inserted, go back & tighten all the bolts.


HARDWARE INCLUDED

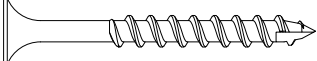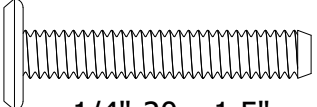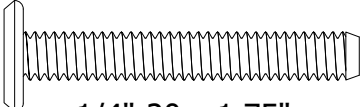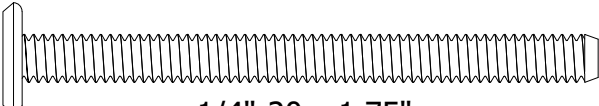- A  Qty: 4
#8 x 1.63"
- B  Qty: 2
1/4"-20 x 1.5"
- C  Qty: 2
1/4"-20 x 1.75"
- D  Qty: 2
1/4"-20 x 1.75"

TOOLS INCLUDED

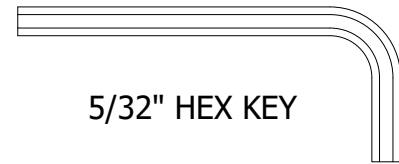


5/32" HEX KEY



#2 SQUARE BIT


CUSTOMER SUPPLIED TOOLS

Cordless screwdriver/drill OR
Multi-bit handle for the Square Bit

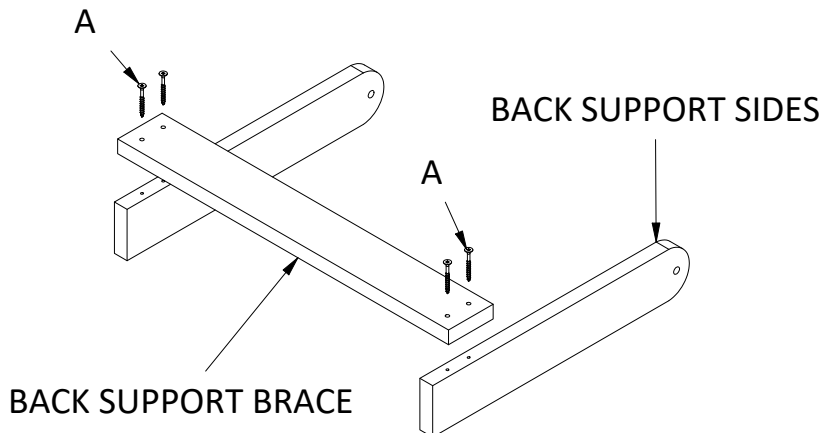

STEP 1


Attach Back Support Brace to Back Support Sides using (4) A Screws as shown.

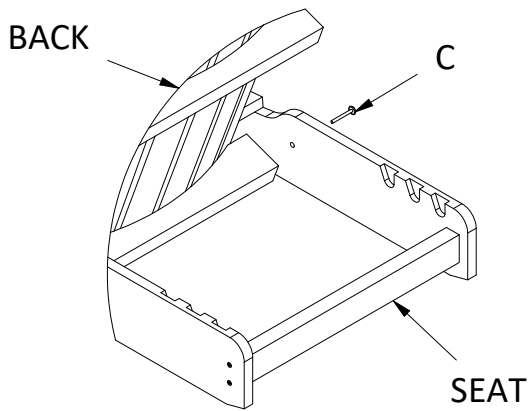

STEP 2-3

With the Back and Seat on their sides, attach one side of the Back to the Seat using (1) C Bolt as shown.


Repeat on other side.

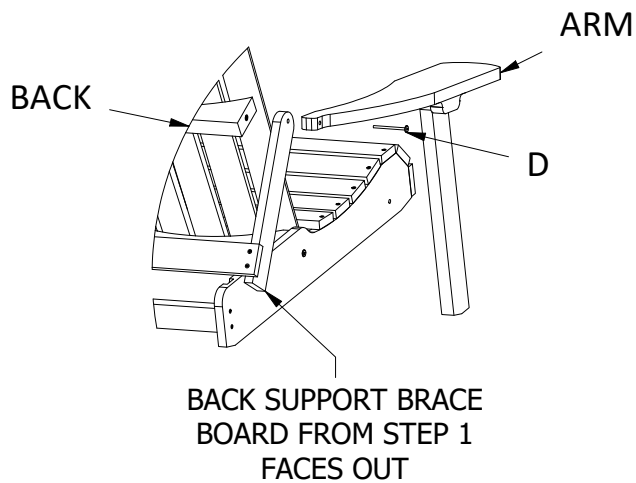

STEP 4-5

With Chair on its side. Attach Arm to Back using (1) Bolt D. Insert Bolt from Arm, through Back Support Side, into the Back. (Note: Screws face outward on Back Support Brace)

Repeat on other side.

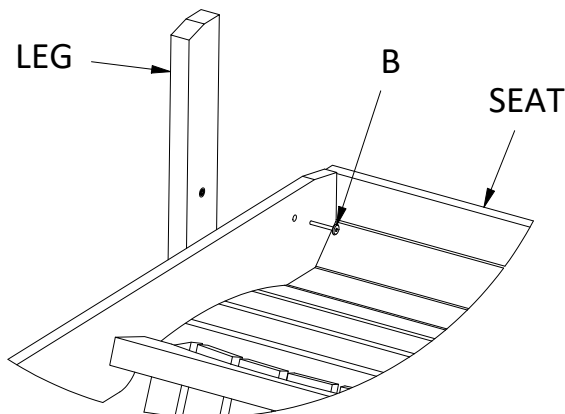

STEP 6-7

With chair still on its side, attach the Back to the Leg using (1) Bolt B.

Repeat on other side.

IMPORTANT NOTE!

NEVER adjust the level of recline while you are sitting in the chair, or while anyone else is in the chair. Always adjust with an empty chair and ensure that the back support is completely secure in the recline slots on each side of the chair. To fold the chair, lift the back support and gently push down on the back of the chair. The chair will collapse down to the floor level.