


OverdoseKits.com

CABINET MANUAL

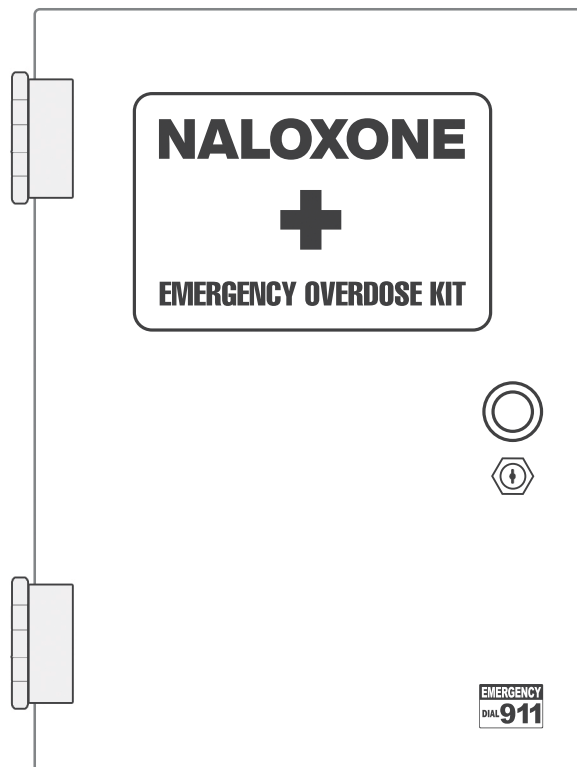

CABINET INSTALLATION

Attention

Before installing the cabinet, first confirm whether the wall material can be drilled and whether the wall can bear the cabinet, to ensure the stability and safety of the cabinet installation.



HOLE OF THE WALL



HOLE OF THE CABINET

- 1 Drill two 8 mm diameter holes in the wall aligned with the mounting hole openings on the cabinet.
- 2 Screw two expansion screws into the two holes respectively.
- 3 Align the two holes on the back of the cabinet with the expansion screws.
- 4 After the screws are screwed into the expansion screws, the installation of the cabinet is complete.

We offer a customer friendly warranty. Please email us at **info@overdosekits.com** or contact us at overdosekits.com and we'll make things right. Please reach out with any positive or negative feedback and write us a review. Thank you for your purchase.

Overd+seKits.com