


Installation Instructions for Door Pulls

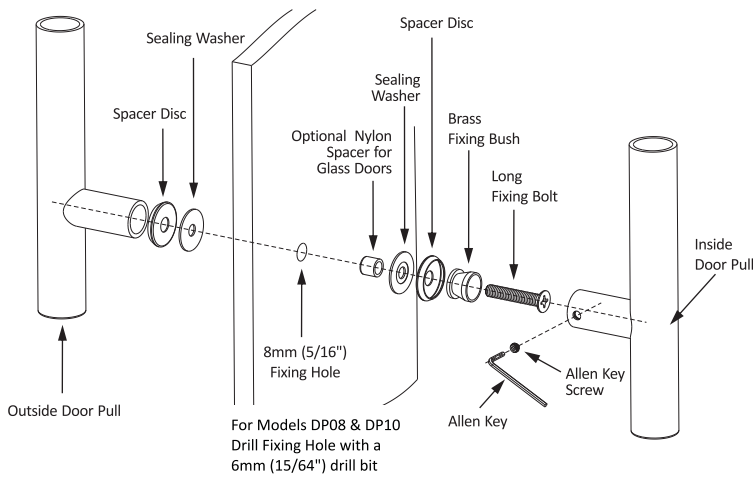

1. Door Preparation

- 1-1: Select the best position on your door that suits the SSS Innoxus Door Pull you have chosen & bought.
- 1-2: First mark the fixing point closest to the bottom of the door.
- 1-3: From the matrix in the instruction be sure you select the correct center to center fixing point distance that suits the SSS Innoxus Door pull you are about to install. Now mark the correct/exact center to center distance for the 2nd fixing point & ensure you maintain the same backset measurement from the doors edge if it is a vertical installation.


2. Drill Holes

- 2-1: Drill a 3mm (1/8") diameter Pilot hole at the center point of the previous marks for both Fixing Holes.
- 2-2: Using a 8mm (5/16") diameter drill bit to drill from both sides of the door to minimize any splintering on timber doors using the 3mm (1/8") pilot holes as the guide.

3. Installation Instructions

- 3-1: Place the outside SSS Innoxus Door Pull on the outside of the door ensuring it has the receiving thread & no Allen Screws on the collars with the Spacer Disc & Sealing Washer in line.
- 3-2: From the inside of the door insert the long Fixing Bolt through the Brass Fixing Bush, Spacer Disc & Sealing Washer in this exact sequence then push the long Fixing Bolt through the 8mm(5/16") hole to meet the receiving thread of the External Pull Handle. Now firmly tighten this Fixing Bolt & then repeat this procedure for the 2nd Fixing Bolt.
- 3-3: To complete the installation place the Internal SSS Pull Handle over the Brass Fixing Bush then tighten all the Allen Key Screws until firm & flush with the Pull Handle collar.

Note:
The shorter Fixing Bolts are specifically for Glass Door installations while the longer Fixing Bolts are for Timber or Aluminium Door installations.

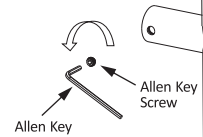

4. Innoxus SSS Pull Handle Size & Dimension Matrix

Model	DP01	DP03	DP04	DP05	DP06	DP07	DP08	DP0960	DP10	DP11	DP12	DP13	DP14	DP14A	DP14B	DP14C	DP15
Round Tube	●	●			●			●		●	●	●					
Square Tube			●	●													●
Rectangular Tube						●	●		●				●	●	●	●	
Length	600mm	600mm	600mm	450mm	600mm	1200mm	600mm	1340mm	600mm	600mm	750mm	1200mm	600mm	900mm	1200mm	1800mm	600mm
Diameter	32mm	32mm	25x25mm	25x25mm	32mm	25x38mm	30(W)x15(T)mm	25mm	15(W)x30(T)mm	32mm	32mm	32mm	40(W)x20(T)mm	40(W)x20(T)mm	40(W)x20(T)mm	40(W)x20(T)mm	25x25mm
C/C Fix Points	450mm	450mm	450mm	300mm	400mm	1162mm	585mm	850mm	570mm	450mm	540mm	800mm	580mm	880mm	1180mm	1780mm	575mm

When fitting to Wooden or Aluminium section doors drill 8mm (5/16") fixing holes.

When fitting to 10mm thick Plate Glass doors the fixing holes need to be 12mm (1/2") diameter to accommodate the "Optional Nylon Spacer".

5. Single Sided SSS Pull Handle Installation Kit (Optional Order Separately)

- Contents:
- 2 x Long Threads for use on Timber or Aluminium Doors.
 - 2 x Short Threads for use on Glass Doors.
 - 2 x Threaded Decorative Caps.
 - 2 x Threaded & Tapered Brass Fixing Brushes.

Before starting please identify the Inside & Outside Handle, the Inside Handle has 2 Grub Fixing Screws at each end, while the Outside Handle has a receiving Thread at each end.

Instructions to fit an Inside Handle :


1. For Timber or Aluminium Doors, fit the pair of Long Threads into the Threaded Decorative Caps until firm, then insert into door ready for the next step.
For Glass Doors, fit the pair of Short Threads into the Threaded Decorative Caps until firm, then insert into door ready for the next step.
2. Tighten the 2 Threaded & Tapered Brass Fixing Brushes onto the Threads until firm to door surface.
3. Slide Door Pull over the Threaded & Tapered Brass Fixing Brushes, press to door surface then tighten with the Allen Key supplied with the Door Pull Set the 2 Grub Fixing Screws at each end of the Door Handle until firm.
4. To complete the installation, using the Allen Key supplied with the Door Pull set, fit into the small hole on the side of the Threaded Decorative Caps, then gently tighten until firm on both sides of the door.

Instructions to fit an Outside Handle:


1. For Timber & Aluminium Doors, fit the pair of Long Threads into the Threaded Decorative Caps until firm, then insert into door ready for the next step. For Glass Doors, fit the pair of Short Threads into the Threaded Decorative Caps until firm, then insert into the door ready for the next step.
2. Line up the Pull Handle with the Threads then hand tighten the Threads into the receiving holes in the Door Pull using the Decorative Caps until firm.
3. To complete the installation, using the Allen Key supplied with the Door Pull set, fit into the small hole on the side of the Threaded Decorative Caps, then gently tighten until firm on both sides of the door.

Note there are 3 different sets of Single Sided Fixing kits to suit the different SSS Pull Handles as follows:

- 25FK 01 - Single Pull Handle Kit suits N2LOK models DP03 & DP06.
- 25FK 02 - Single Pull Handle Kit suits N2LOK models DP01, DP04, DP05 & DP07.

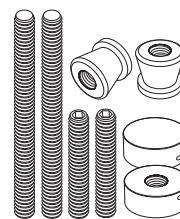

25FK01

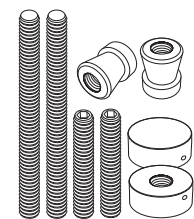

25FK02

This product is warranted to be free from mechanical & workmanship defects for 7 years and free from finish & surface defects for 5 years from the original date of purchase. Should a mechanical or finish defect occur within this warranty period just return the product along with proof of purchase to point of purchase for replacement. Premature finish deterioration due to the use of solvents, acid cleaners, paints, climatic conditions i.e. salt air or surface abrasion by keys or jewellery is not considered a defect & thus not covered by this warranty. The same applies for mechanical failure due to the incorrect installation, misuse or abuse will not be covered by this warranty. The removal & refitting of the product & any associated handling & transportation costs is not covered by this warranty. N2LOK reserves the right to modify product styles & finishes without notification. If the same product model is no longer available a similar product model will be supplied. Any accessories, spare parts & trim purchased separately to complete & compliment the lockset or hardware are not covered by this warranty.
**Matte Black finish warranty is 12 months only

