

Aluminum Inner Fender Liners Rear, JL



Components

1. Front Driver Side Fender Liner	(1)	7. M6 U-clip	(26)
2. Front Passenger Fender Liner	(1)	8. M6 x 35mm Allen Head Bolt	(10)
3. Center Driver Side Fender Liner	(1)	9. M6 x 20mm Allen Head Bolt	(20)
4. Center Passenger Fender Liner	(1)	10. M6 Flat Washer	(34)
5. Rear Driver Side Fender Liner	(1)	11. M6 Ny-Lock Nut	(4)
6. Rear Passenger Fender Liner	(1)		

OMIX-ADA® TECHNICAL SUPPORT

PHONE: M-F 8am - 5pm EST 1-800-449-6649

FOR WARRANTY OR TECH CONCERNS EMAIL: webmaster@omixsupport.com

ATTN: STATE OF CALIFORNIA CONSUMERS

 **WARNING:** Cancer and Reproductive Harm - www.P65Warnings.ca.gov.



460 HORIZON DR. | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 844-270-0593 | www.Omix-ADA.com


Aluminum Inner Fender Liners Rear, JL

Remove OE fender flare and plastic liner (see Jeep documentation for instructions, if needed).


1. Install U-Clips to the three fender liners panels. Notice the holes made for the U-clip is a larger oval hole. Take time to assure the U-clip is oriented correctly. The flat face of the U-clip faces forward.



2. Attach the center and rear panel together using 20mm Allen head bolts and washers. Don't fully tighten at this time.

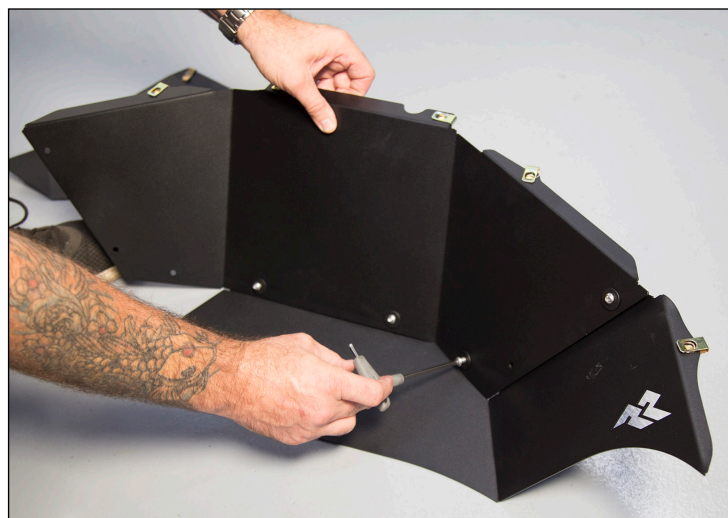

3. Attach the front panel to the other two panels from step two. Use 20mm allen head bolts and don't fully tighten at this time.

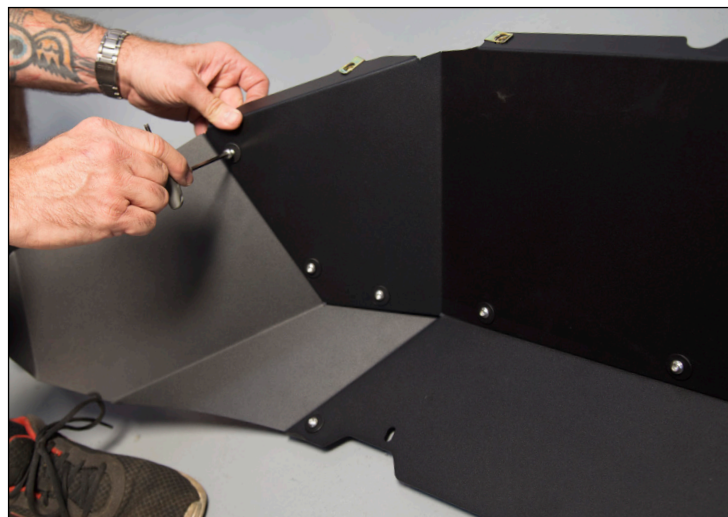



460 HORIZON DR. | SUWANEE, GA 30024 | PHONE: 770-614-6101 | FAX: 844-270-0593 | www.Omix-ADA.com

Aluminum Inner Fender Liners Rear, JL

4. If installing to OE fender: compare the inner fender to the OE fender. Remove the clips from the OE fender that share the same mounting holes as the inner liner. Now install the fender to the Jeep.

If installing after market fenders: there could be hardware needed to be removed to properly install the inner fender. Place inner liner into place to compare, remove the similar hardware.

Now place inner liner behind the sheet metal, feed 35mm allen head bolts through fender, Jeep body and thread into inner liner U-clip.



5. Two 35mm allen head bolt use washers and ny-lock nuts instead of threading into U-clips.



6. Completely tighten all hardware. When tightening make sure the panel does not bind or pitch any wires or lines.

