


Installation Guide

READ THROUGH ALL THE INSTRUCTIONS CAREFULLY BEFORE YOU BEGIN INSTALLING YOUR BLEND CONCRETE DESIGN BASIN



01

Double check the basin and benchtop measurements. Place your basin in position to check that it aligns with the waste hole and that you are happy with the position.



02

Make sure that the under side of the basin and the benchtop are free of dust and debris so that the silicone can adhere properly to the surface



03

Install your waste according to its type/model.


When installing the waste do not over tighten the plug and waste or you risk cracking the concrete.



04

Use a flexible bathroom silicone. Using a rigid sealant may result in an insufficient bond and/or cracking of the sealant.

Evenly apply the bathroom silicone to the underside of the basin. Be cautious of applying too much silicone near the outer edge of the basin or too close to the waste, as this may cause excess silicone to seep onto the benchtop or waste when you complete step 05.

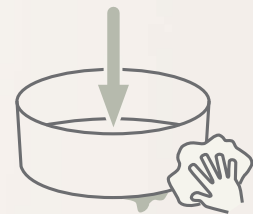

05

Align the basin with the waste hole and press it onto the benchtop. If there is any excess silicone, quickly wipe it away with a damp cloth.



06

OPTIONAL: Apply a thin layer of clear silicone to the outside of the basin where the seam meets the benchtop. Use a paddle pop stick (wooden stirrer) or a rounded spatula to create a clean, smooth finish. Carefully wipe away any excess silicone.

Applying silicone to this edge stops water and debris from accumulating between the basin and the benchtop

blend. CONCRETE DESIGN

Warranty is void if customer:

- fails to follow the method outlined in the installation guide
- over tightens the waste and plug; or
- uses a non flexible bathroom silicone to secure the basin