

## VARIO™ TRIPLE MONITOR MOUNT 75/100 + 100/200

VERSION 1.2 Last updated: 19-07-2023

## **BEFORE YOU START:**

Thank you for purchasing this Sim-Lab product! On the following pages, you will find detailed instructions on assembly. This requires only a set of simple tools and some of your time. Please check the bill of materials before starting (page 13) and make sure all the parts are delivered.


This product combines some products we normally offer separately. In some cases there are slight changes in the assembly instructions in this manual versus what the products' own manual states.

We encourage you to read the product manuals for included products if this one doesn't answer all of your questions. Please refer to the following if needed:


www.sim-lab.eu/xero-play-pivots-manual www.sim-lab.eu/vario-vesa-manual


## **Inserting Slot-Nuts:**


You got excited, finished the build, put the caps on, but forgot to install one element. Do not worry. It happens to everyone. In this diagram, you can see how to insert a Slot-Nut directly into the slot from the side. You can also use one of your smaller Hex wrenches to help wiggle the Slot-Nut in place.

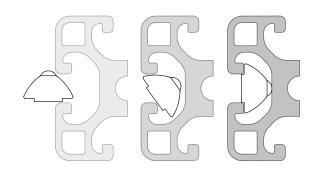



Tools needed:

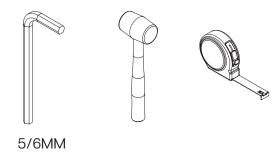


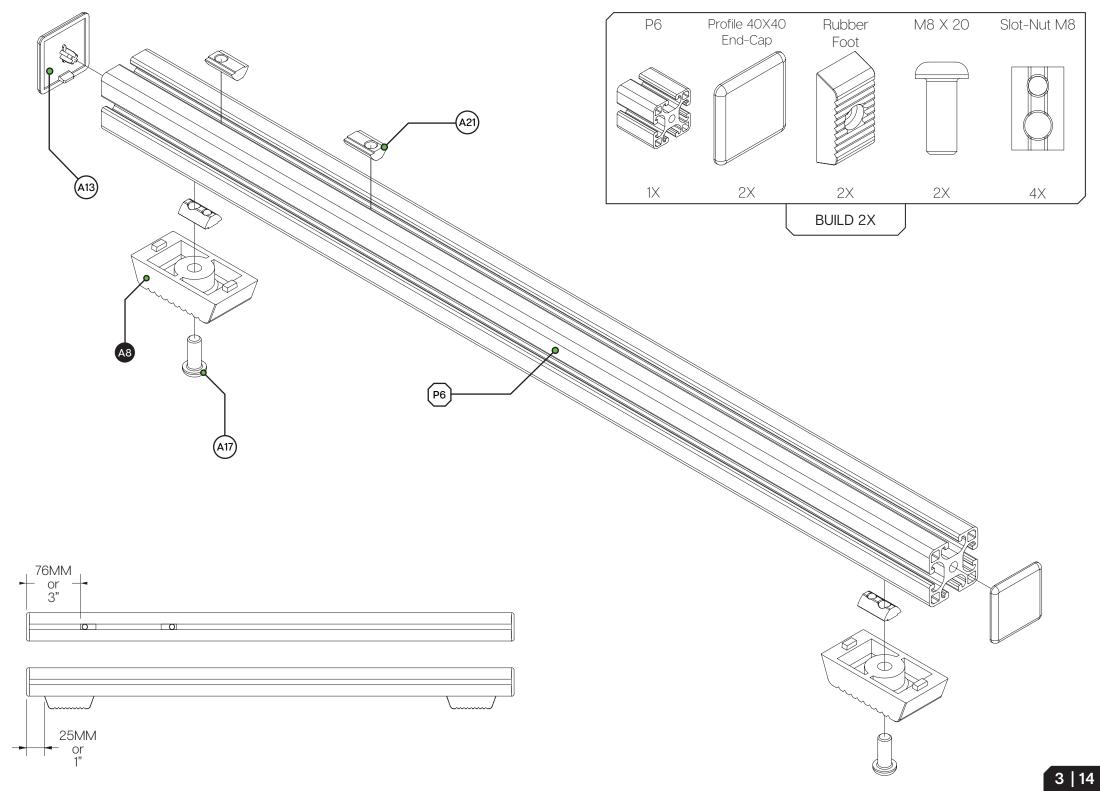


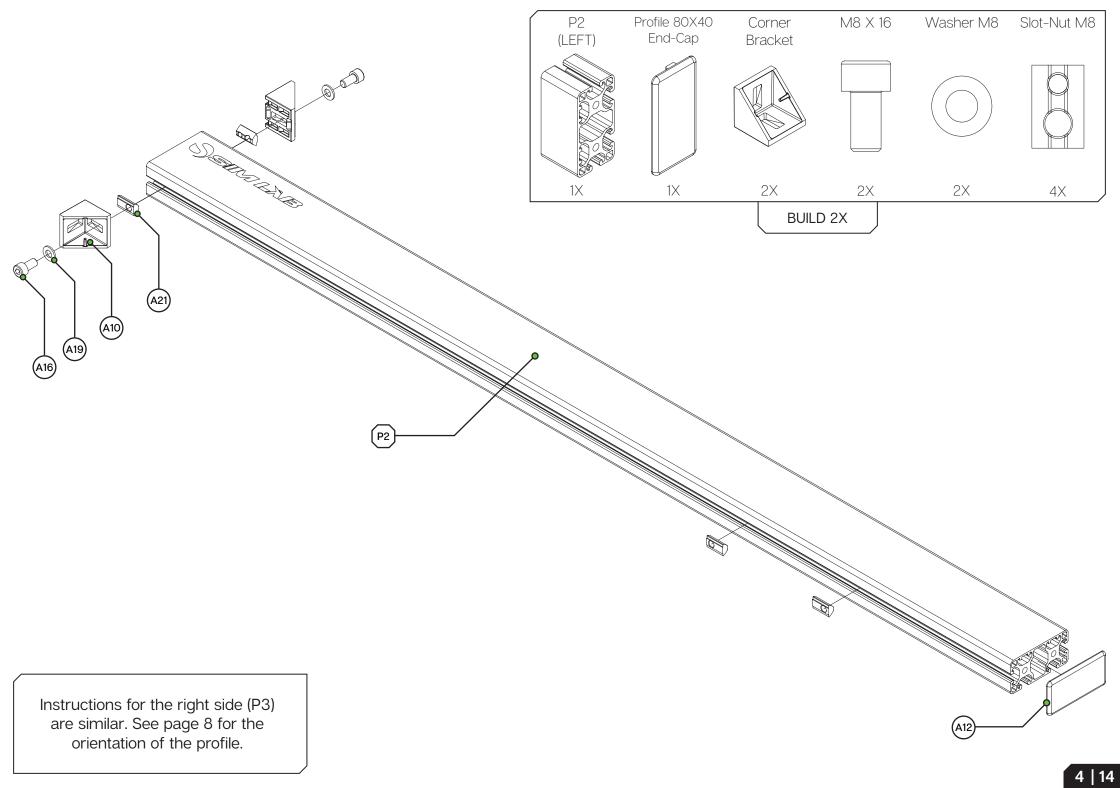


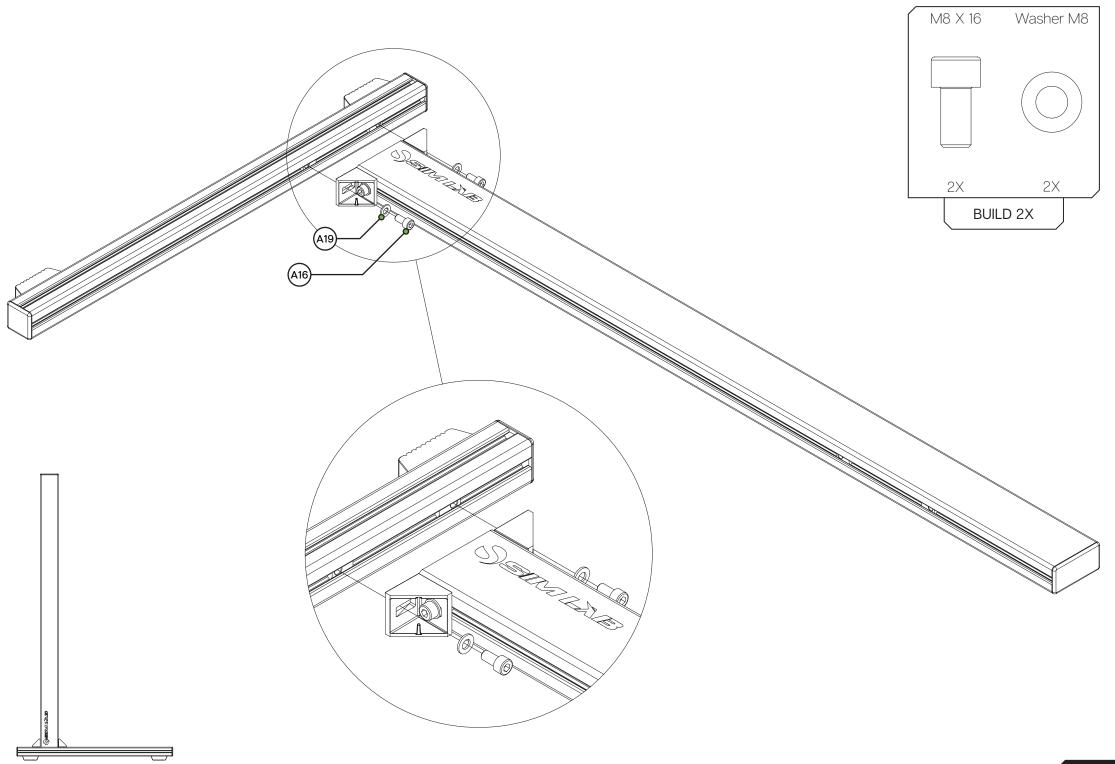


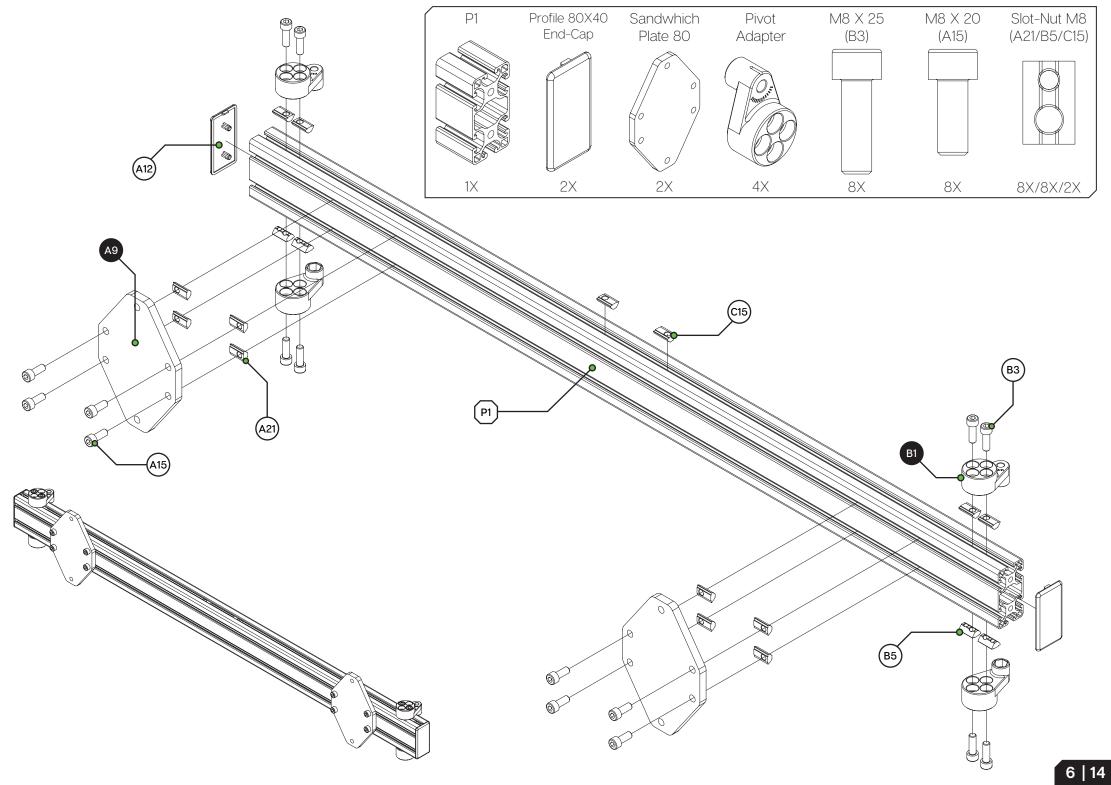

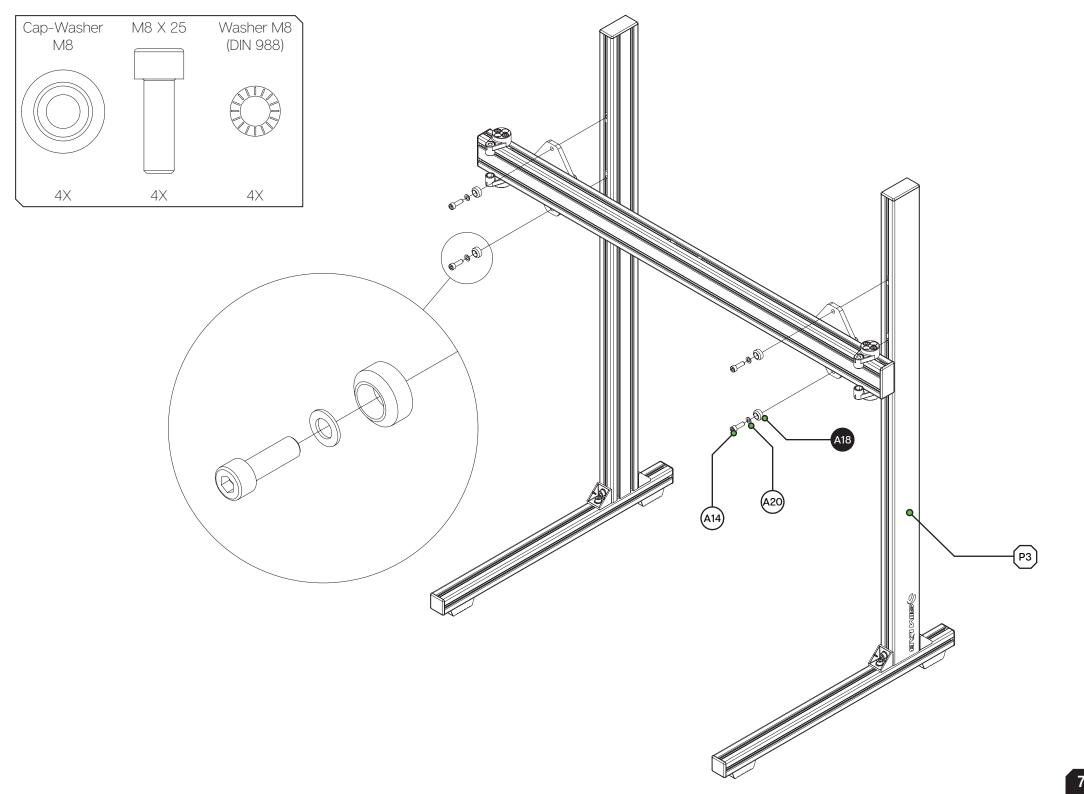

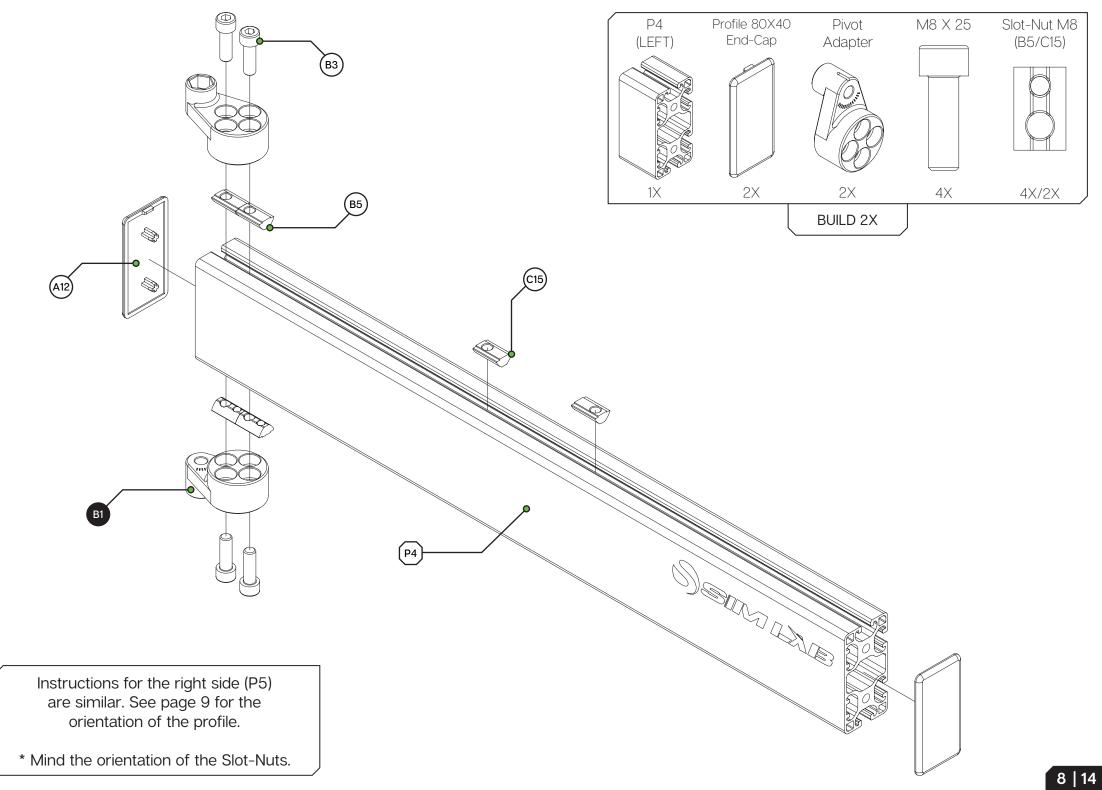


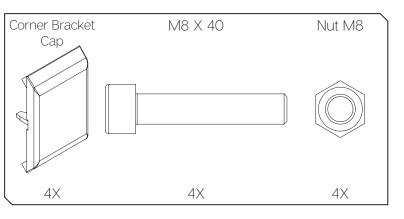


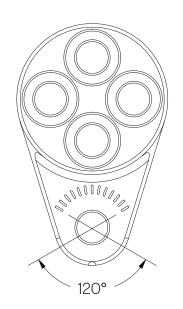



Adjust arm angles to your preference. We included markings in the pivots.


Markings are placed in 10° increments.

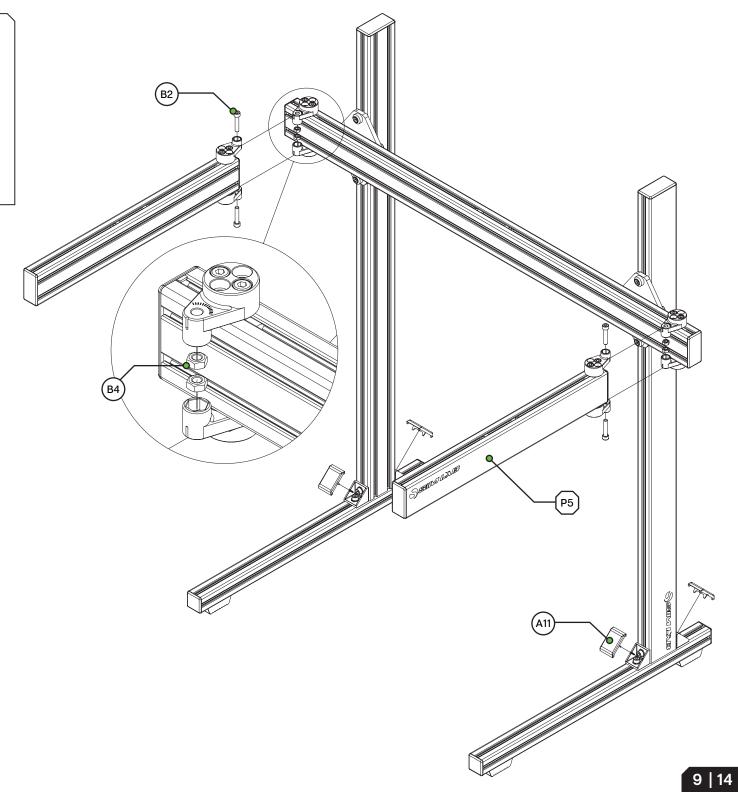

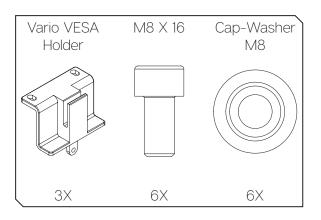

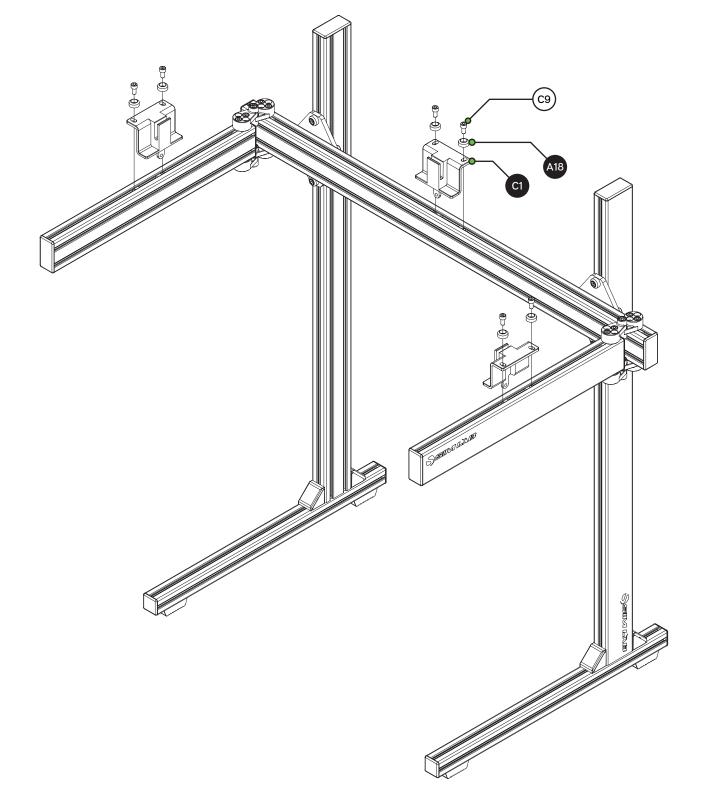

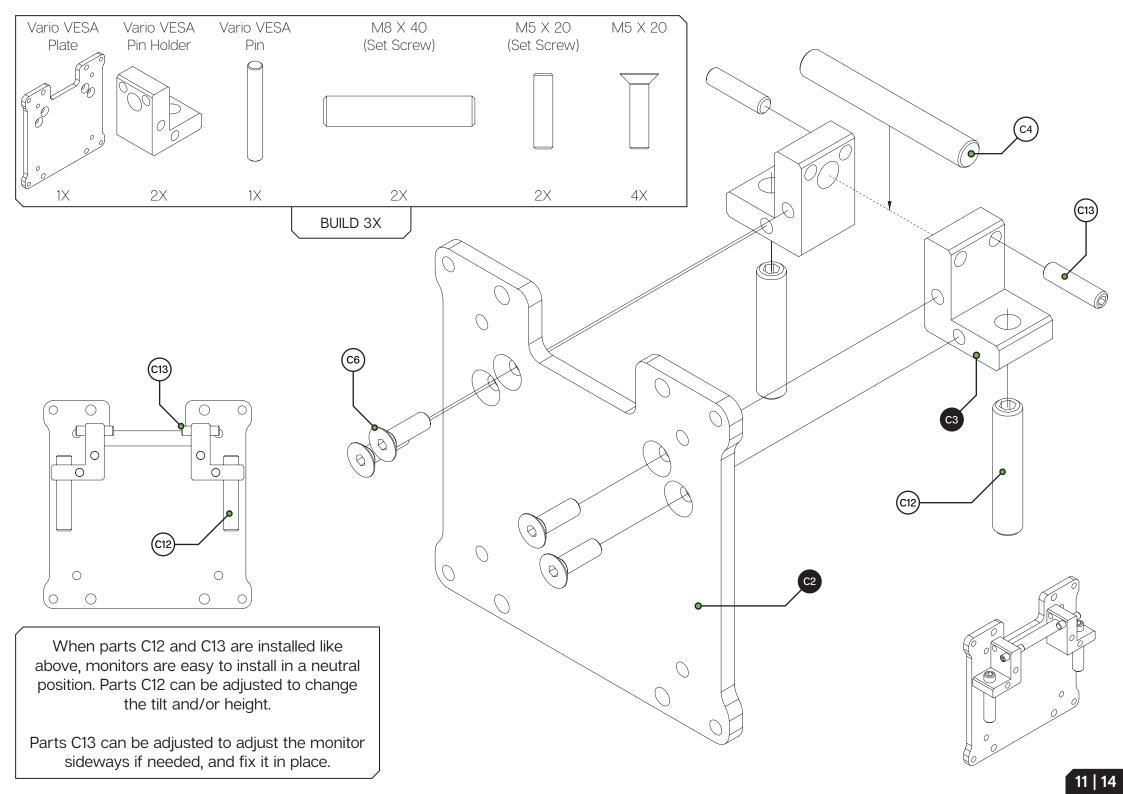

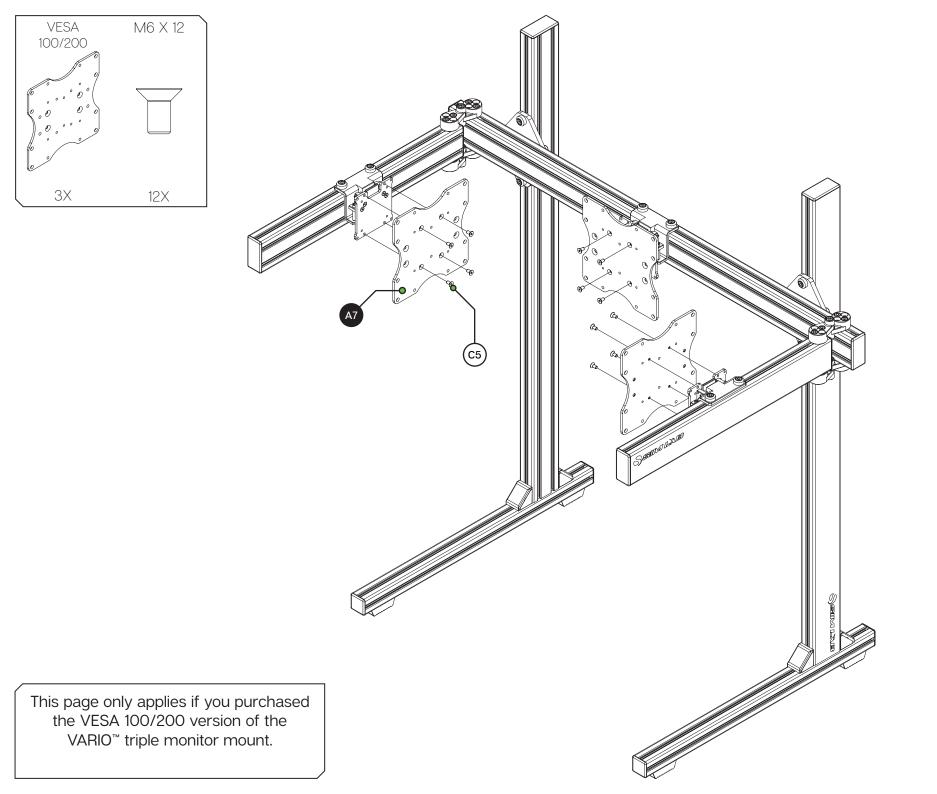

	BOX A - VARIO TRIPLE MONITOR MOUNT PROFILE KIT					
#	Part	QTY	Note			
P1	80X40 Length=1195mm	1				
P2	80X40 3N Length=1195mm	1	Left upright, engraved.			
Р3	80X40 3N Length=1195mm	1	Right upright, engraved.			
P4	80X40 3N Length=580mm	1	Left arm, engraved.			
P5	80X40 3N Length=580mm	1	Right arm, engraved.			
P6	40X40 Length=580mm	2				
HAF	RDWARE KIT					
A7	VESA 100/200 adapter (optional)	4	Depends on purchase.			
A8	Rubber foot	4				
A9	Triple sandwich plate 80	2				
A10	Corner bracket 40x40	4				
A11	Corner bracket 40x40 cap	4				
A12	Profile 80x40 end-cap	8				
A13	Profile 40x40 end-cap	4				
A14	Bolt M8 X 25 DIN 912	4				
A15	Bolt M8 X 20 DIN 912	8				
A16	Bolt M8 X 16 DIN 912	8				
A17	Bolt M8 X 20 DIN 7380	4	Buttonhead.			
A18	Cap-Washer M8	10				
A19	Washer M8 DIN 125-A	8				

Disclaimer: for some entries on this page, we supply more than required as spare materials. Don't worry if you have some leftovers, this is intentional.

Washer M8 DIN 988

Slot-Nut M8

A20

4 24

	HARDWARE KIT					
#	Part	QTY	Note			
В1	Xero-Play triple pivot adapter	8				
B2	Bolt M8 X 40 DIN 912	4				
ВЗ	Bolt M8 X 25 DIN 912	16				
B <sub>4</sub>	Nut M8	4				

16

BOX B - Xero-Play triple pivot set

В5

Slot-Nut M8

BOX C - Vario VESA triple adapter set HARDWARE KIT						
#	Part	QTY	Note			
C1	Vario VESA holder	3				
C2	Vario VESA plate	3				
СЗ	Vario VESA pin holder	6				
C4	Vario VESA pin	3				
C5	Bolt M6 X 12 DIN 7991	12	Used with VESA 100/200 adapter.			
C6	Bolt M5 X 20 DIN 7991	12				
C7	Bolt M4 X 16 DIN 7985	12	Philips head.			
C8	Bolt M4 X 10 DIN 7985	12	Philips head.			
C9	Bolt M8 X 16 DIN 912	6				
C10	Bolt M6 X 16 DIN 912	12				
C11	Bolt M5 X 16 DIN 912	12				
C12	Set screw M8 X 40 DIN 916	9				
C13	Set screw M5 X 20 DIN 916	6				
C14	Washer M8 DIN 125-A	6				
C15	Slot-Nut M8	6				

If you still have some questions regarding assembly of this product or about the manual itself, please refer to our support department. They can be reached at

support@sim-lab.eu

Alternatively, we now have a Discord server where there are quite some experienced Sim-Lab customers hanging out. They might just help you along if you ask them nicely;)

www.sim-lab.eu/discord

If you feel like printing this manual, please consider the environment before doing so. For the best results, make sure you print at 100% scale without borders.

Product page on the Sim-Lab website:

