


OVERVIEW

- Pro Bond® Adhesive Primer must be applied to wall prior to installation
- Suggested for residential and apartment use
- Repositionable *Note: one time use only
- Opaque
- Tear strength
- Apply to clean dry surface
- Walls must be flat and smooth, not for use on textured walls, will compromise adhesive and paper could bubble or peel away
- Allow 30 days for newly painted walls to outgas before installation
- Use a warm damp cloth to clean surfaces prior to installation
- Straight match

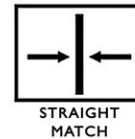

HAVE A QUESTION?

Give us a call at 971-645-9168 or email us at info@dropitmodern.com

IMPORTANT

Inspect your order within five (5) days of receiving it. If drop it MODERN is not made aware of any issues within this 5 day window, any potential replacement order would have to be paid by the customer. Verify the pattern and quantity before opening the first roll. Check the wallpaper for any issues. Find something that's not right? Stop immediately (do not install defective material) and contact us so we can correct your order. If no defect is evident before installation, the material should be inspected after three (3) panels are installed. Products must be installed by a professional installer experienced with double cutting. drop It MODERN is not responsible for errors in paper due to incorrect trimming or hanging practices. If any defect is evident at this time (or at any point in the installation) no additional material should be hung until drop it MODERN is notified. No claims will be allowed for more than 3 panels on the wall. No labor claims will be allowed at any time. Please note, we will require the defective material to be sent back to us for inspection.

ABOUT OUR WALLPAPERS

All of our papers have a straight match. Standard panel length is 10'L. Customized orders vary in length. If you order more than one panel, they will be bundled and shipped together.

BUILDING & MATERIAL CONDITIONS

The building must be weather-tight with HVAC settings (including pressure, temperature and relative humidity) the same as those of an occupied building (55 degrees F) for two (2) days prior to, throughout installation and two (2) days after installation. The walls must be structurally sound including elimination of sources of moisture accumulation into the wall or wall cavity. The wallpaper must be in a clean and dry condition and must be stored at normal occupied building temperature and humidity for at least two (2) days prior to installation. Walls must be clean, dry, and professionally primed prior to installation.

HANGING INSTRUCTIONS

MATERIALS NEEDED

- Pro Bond© Adhesive Primer
- Cleaning cloth
- X-acto knife or sharp razor
- Measuring tape
- Laser level or straight edge
- Squeegee

STEP 1: SURFACE PREPARATION

To ensure the compatibility of your drop it MODERN® wall covering be sure your wall is prepped to be clean, smooth and dry and has been primed with Pro Bond© Adhesive Primer **It is recommended to allow newly painted walls to outgas for 30 days before installation for best results.*

STEP 2: LAYOUT ORIENTATION

If you ordered a mural, your panels will be numbered at the top and are to be installed in chronological order from left to right. If you ordered a non-mural pattern, the panels can be hung in any order; each starting at the top with a straight match orientation.

STEP 3: READY TO HANG

Peel back the top 2" of the film backing and begin installation at the top of your wall and slowly work your way down by peeling back the film and pressing the wallpaper onto the wall in 5" increments until the panel is completely installed. For optimal outcome, it's best to have an assistant pull the wallpaper straight down and taunt as you are pressing the wallpaper on the wall. Use a plastic squeegee to smooth out the panel onto the wall. **Use caution not to scratch the wallpaper during this process.*

STEP 4: INSTALL NEXT PANEL

Install the second panel by following step #3 and be sure to line up the pattern along the seam. Repeat for process until install is complete!

STEP 5: TRIM

If your panel's length extends beyond the bottom of your wall, press your wallpaper down into the corners and take a straight edge ruler and an x-acto knife to slice through the excess along the corner where the wall meets the floor. Take caution to not damage your wall or flooring during this process.

CARE

We encourage preventative maintenance by using a protective topcoat during installation to prevent stains. As needed, clean wallpaper with warm water and a non-abrasive, microfiber cloth using a blotting motion, do not rub or use solvent type cleaning solutions. Dry wall covering with a lint free cloth or towel. Grease and oil stains are unlikely to come out. Do not use any abrasive tools that may scratch the paper. drop it MODERN is not liable for damages brought to wallpaper due to improper cleaning techniques.