
Wurlitzer Reed Length Chart

by Vintage Vibe Electric Piano Co.

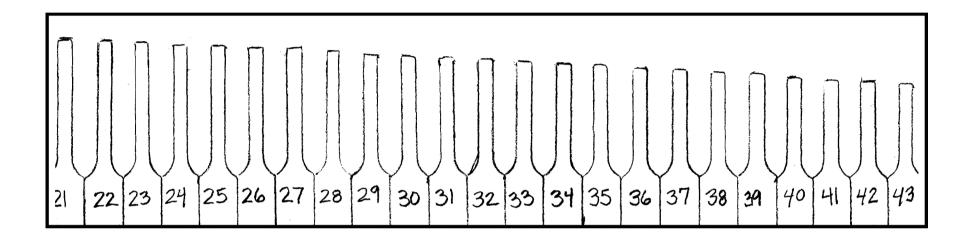

Tools Need - File, Solder, Soldering iron, Reed Mold, Blank Reed, cutter snips

- 1. Reed should be measured and marked for cutting to the inside of the line, since these reeds were traced around the outside.
- 2. Always cut square and deburr rough edges of the reed before adding solder.
- 3. Always shape the solder into a pyramind as to achieve proper oscillation and tone.

