


LAYOUT FOR BEST YIELD OF TOILEX
FOR 35 Stage Pans

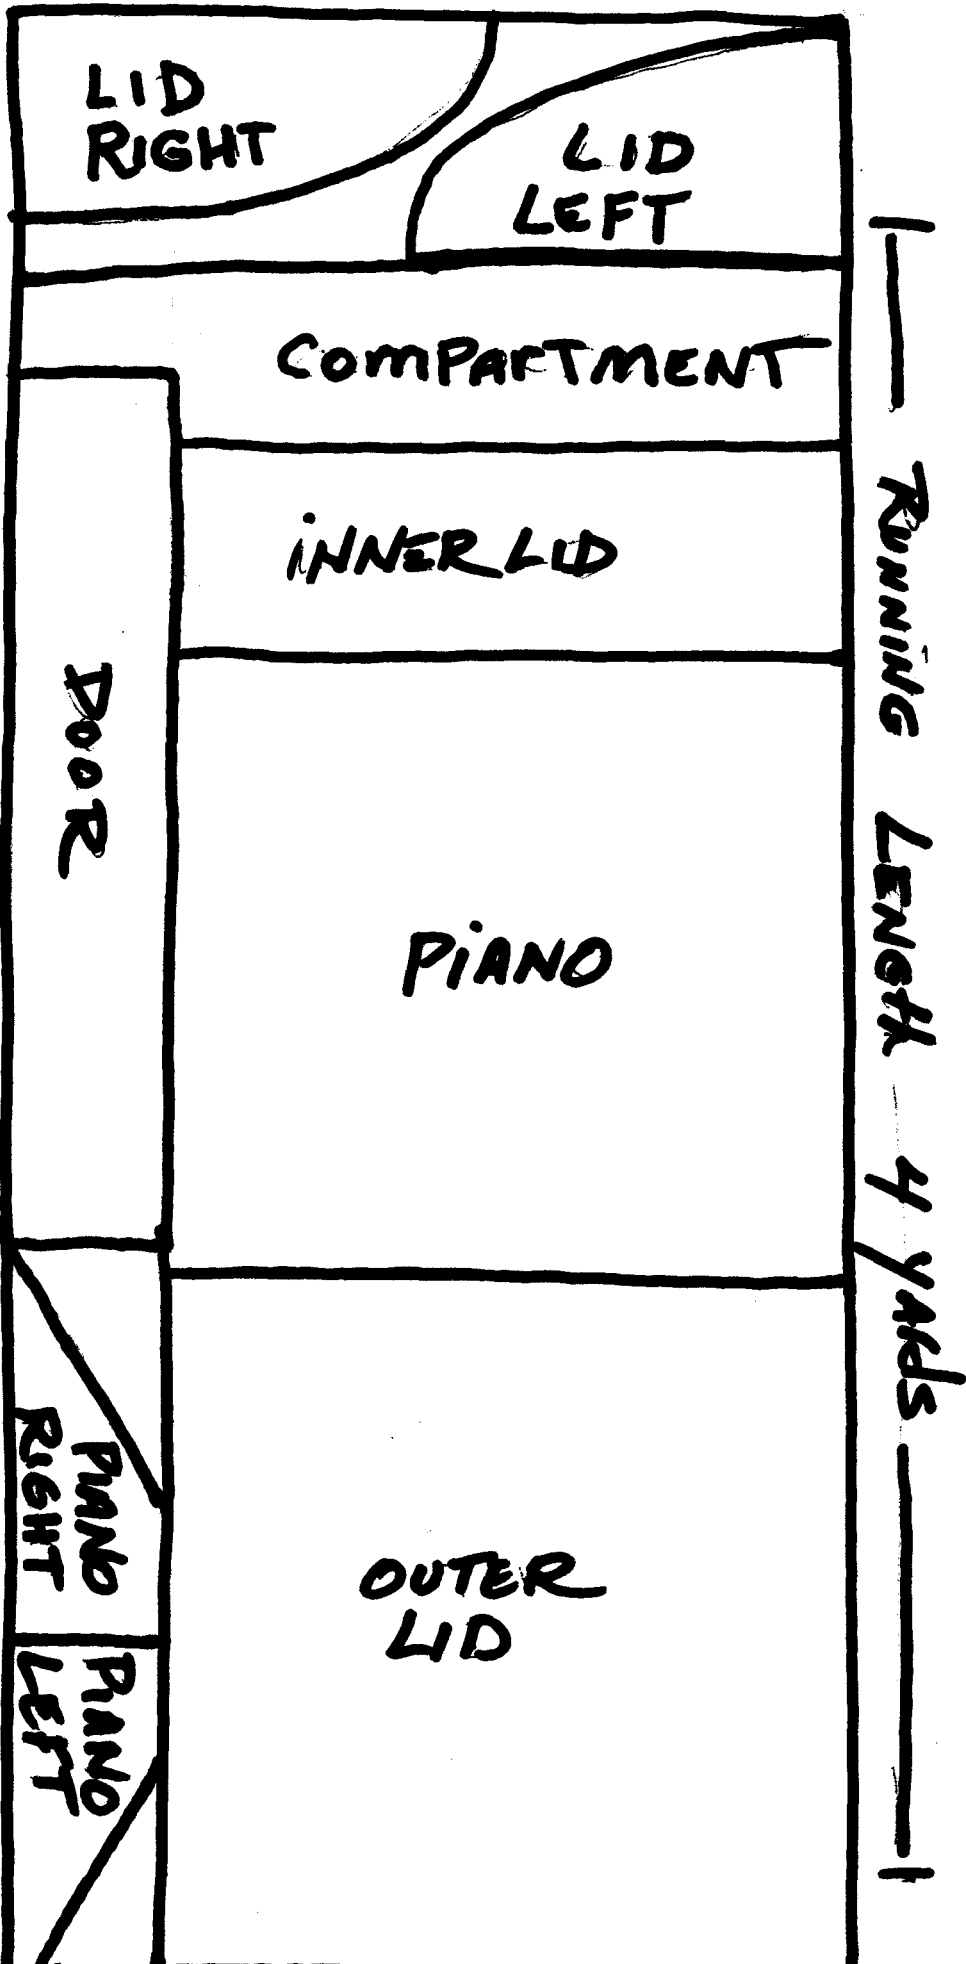

Copyright 2007 Stage Vibes. Com

Instructions for Re-Tolexing Fender Rhodes Stage Electric Piano

1. Carefully remove your old Tolex, keeping it intact for use as a template. Mark each piece as you go along. (Outer lid, piano, inner lid, compartment, door, piano left, piano right, lid left and lid right).
2. Sand the piano, lid, and door. Fill any holes, gouges and separating seams with bondo (for best results wood filler is not recommended). When dry, lightly sand the patched areas.
3. Lightly tack the Tolex pieces, the wooden pieces. Allow the adhesive to thoroughly dry (you can tell it's dry by seeing shiny crystals on the Tolex).
4. Apply the pieces in this order.
 - a. Piano sides
 - b. Piano
 - c. Lid sides
 - d. Outer lid
 - e. Compartment
 - f. Inner lid
 - g. Door
5. You will need to apply adhesive on the outer overlapping seams of the Tolex
6. Now you are ready to add your hardware back on.