


WURLITZER REED CUTTING CHART

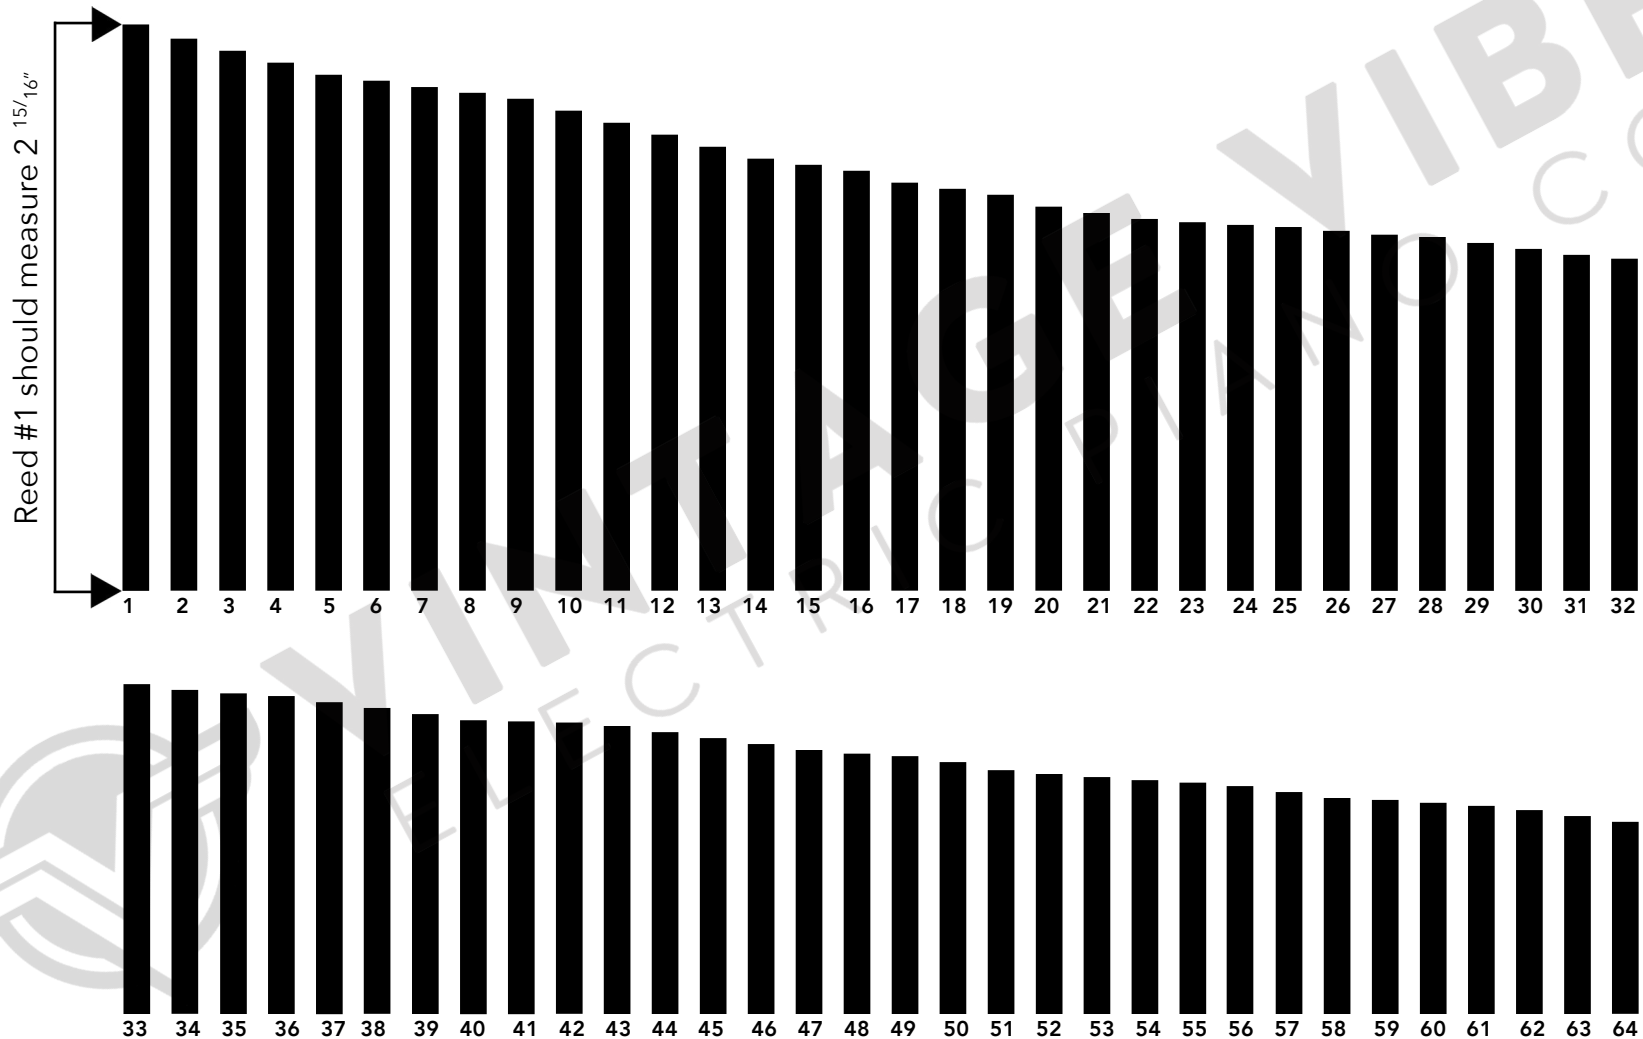

Tools needed: File, Solder, Soldering Iron, Reed Mold, Blank Reeds, Cutter Snips

1. Measure and cut reeds between indicating arrows.
2. Cut the edge square and deburr rough edges of the reed before adding solder. Before adding lead with the reed mold, ensure that you file or ground the surface for thorough adhesion.
3. File the solder into a pyramid shape to achieve proper oscillation and tone.

112 REEDS

Reed Blank #1: Keys 1-20
Reed Blank #2: Keys 21-50
Reed Blank #3: Keys 51-64

200 REEDS

Reed Blank #1: Keys 1-14
Reed Blank #2: Keys 15-20
Reed Blank #3: Keys 21-42
Reed Blank #4: Keys 43-50
Reed Blank #5: Keys 51-58
Reed Blank #6: Keys 59-64