

FITTING INSTRUCTIONS

VW T5-X OR T6 FRONT SPOILER

Please note: We recommend a professional fit. However if you wish to fit yourself, here are some instructions to help you.




Preparation:

Before you do anything you need to take the number plate off and unpack the new spoiler.



Step 1:

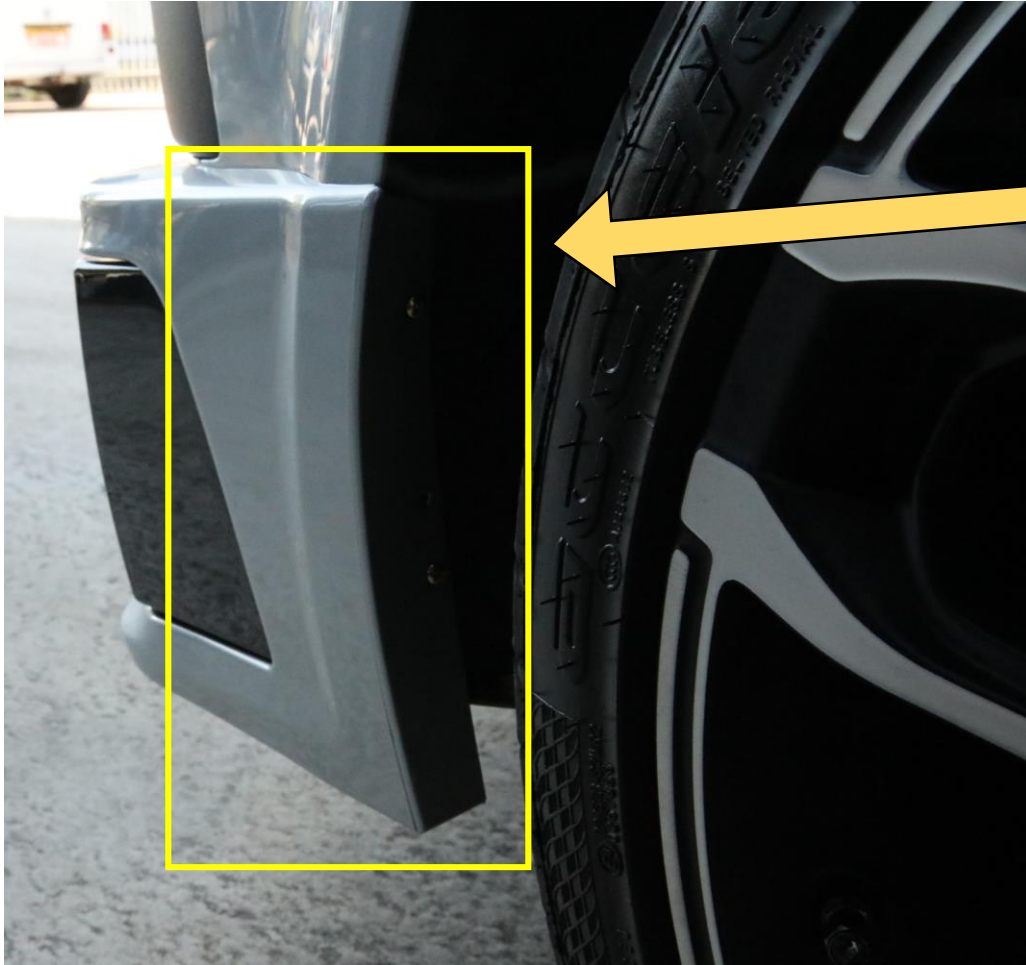

This spoiler is ideal to be fitted by 2 people. It will take less than 10 minutes.

Step 1:
You require to put the passenger/left-hand side edge first. Hold it in to place, behind the bumper as shown in this image.




Step 2:



Step 2:

The second person will need to pull the spoiler towards themselves, and slide it behind the bumper. It requires a firm pull.

After you've positioned the spoiler on the back of the bumper, everything will come together. At this point you have almost finished, you just need to secure with 3 screws at the final stage.

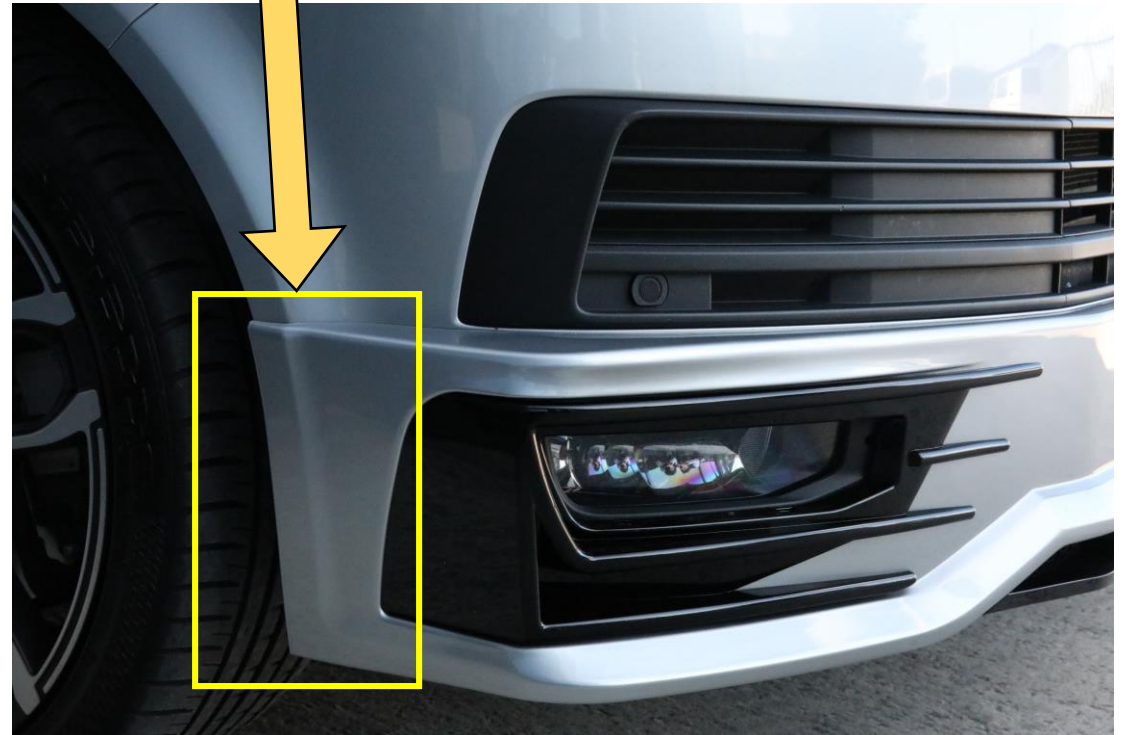

Step 3:



Step 3:
The Van-X Spoiler should look like
this when you look underneath.

Step 4:



Step 4:
Check visually that all the lines
match up like this.


Step 5:



Step 5:

If you have the fog light, you don't require the cap. However we do supply the cap if you don't have the fog lights.

Step 6:

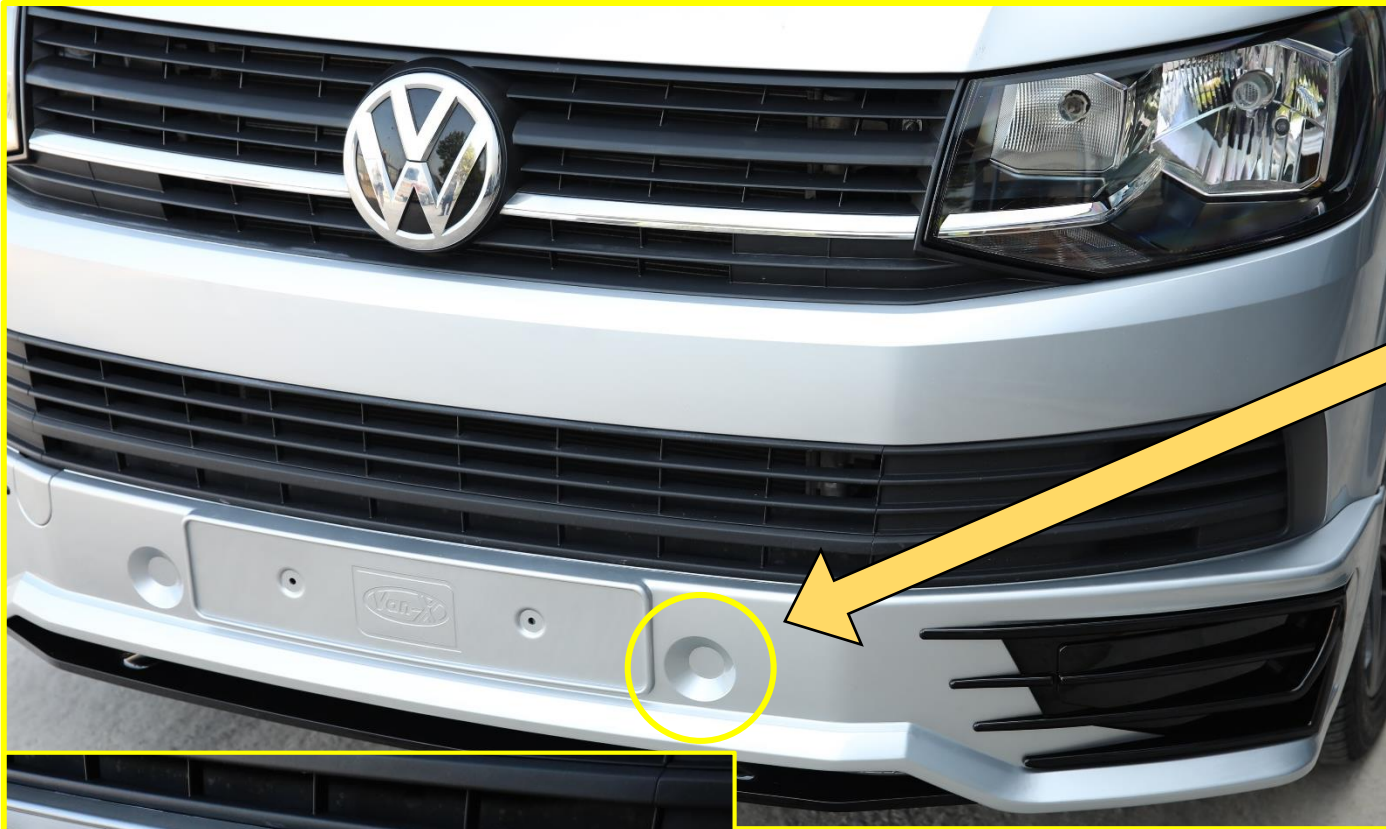

Step 6:


All of our spoilers come with a space to make a hole for the parking sensors.

The reason we haven't already made the hole is due to not all T5/T6 having parking sensors.



If you do have a parking sensor you can drill an approx. 18mm hole.

Step 7:

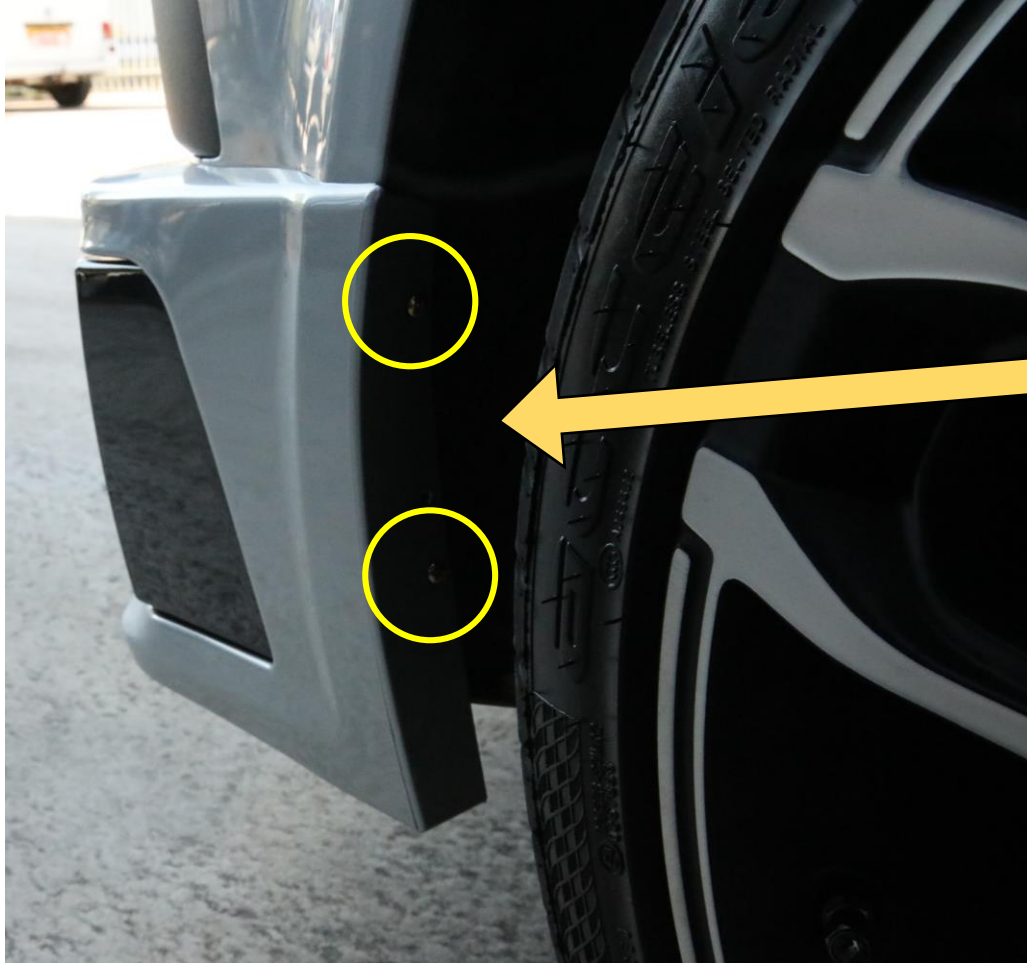

Step 7:

After the spoiler is holding strongly in position, you are ready to screw into place.

In the fitting kit you will receive 4 identical screws, you require to gently screw them into the back of the bumper.

Please do not use an electric screw driver, please use a manual screw driver. The reason for this is the bumper is very soft and if over powered it can shear the thread. This is why we recommend to do this by hand.

Final Step:



The final step:
You will have 2 odd screws in the fitting kit, that you will need to apply on the designated locations on the spoiler and the number plate will go over them.

Please check our [Facebook](#) and [YouTube](#) channel. We update our YouTube channel with instructions regularly.