



☎ 01782 280 888

VW T5 SIDE STEP ALUMINIUM WITH PLASTIC

1. Check your vehicle to ensure the brackets match the holes under the sills ready for fitment. - Do this for all three brackets along the entire side skirt.



2. Remove the rubber seal and insert the bolts into, ready for them to bolt on the three brackets. - Look at all images below for better viewing.






3. Tighten all brackets with the bolts and nuts supplied with the kit. Do this for all the brackets so they are secure under the sills. – Look at all images below for results.





4. Prepare the square-head bolts by inserting them through the grooves under the side step itself. You will need to use 6 of these bolts and position them accordingly to the same width as the brackets being bolted on the side skirt sills done in previous steps (1, 2, and 3).

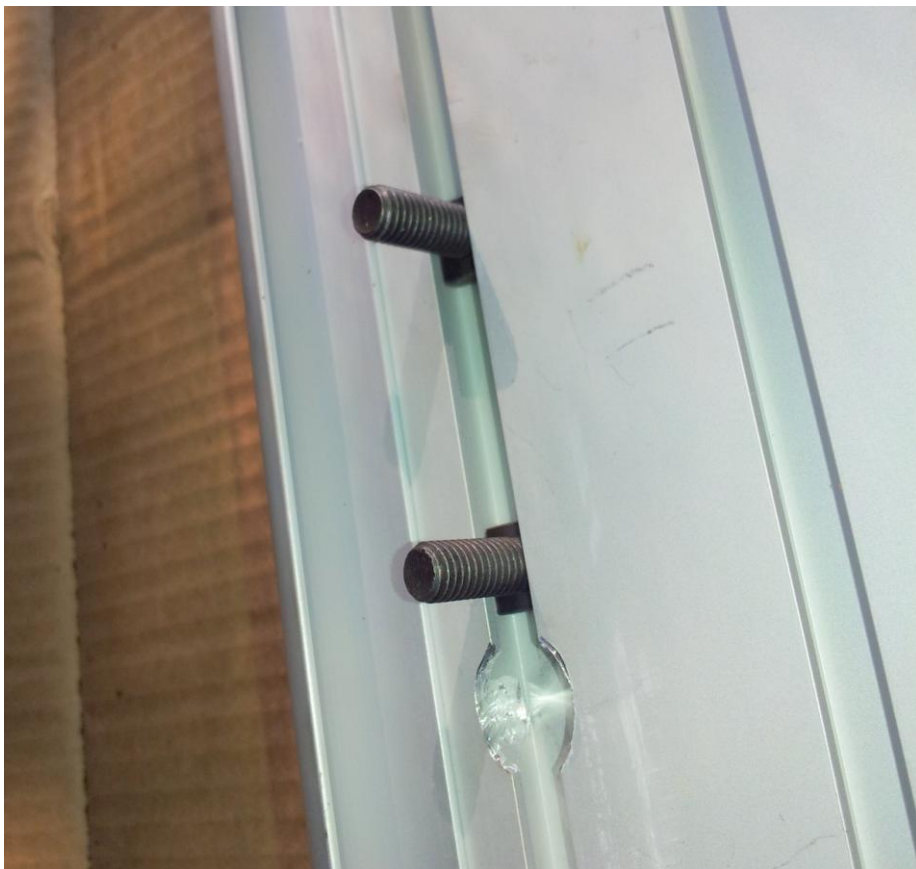

5. Place the side step onto the brackets in position through the grooves. Use 6 nuts to tighten all 6 bolts when fitting the side step. Please ensure it is tightened properly and then test the side step carefully.



6.



