




☎ 01782 280 888

Van-X LED Side Repeater Fitting Instruction

1. Unbox the Van-X LED Side Repeater Indicator.
2. You will see that there are 2 cables coming from each led repeater unit. (BLACK Wire = Earth, RED Wire = Positive / Live.)
3. Pull off your existing / standard side repeater. Hold firmly the bulb holder and carefully twist and pull the repeater from the connector.
4. Put away your existing / standard repeater.
5. Peel off the insulation tape off the cable which is attached on the wiring loom cable.
6. Carefully tear the wire cable coating; please DO NOT CUT any cables.
7. Connect the Black cable from the new LED Side Repeater to the earth wire of the T5. It should indicate brown or black cable.
8. Connect the Red cable to the second cable available. This cable should be red or blue colour.
9. Please Note: DO NOT remove existing bulb from the bulb holder.
10. Please you must watch our video tutorial on YouTube. This is very useful for the installation process in case you do not follow the instructions correctly, as these will cause some warning lights or canbus errors to you vehicle.
11. Please see the LED Side Repeater Wiring diagram below. By doing this method we are showing below, you will not any bulb error or indicator flashing error on your dashboard.

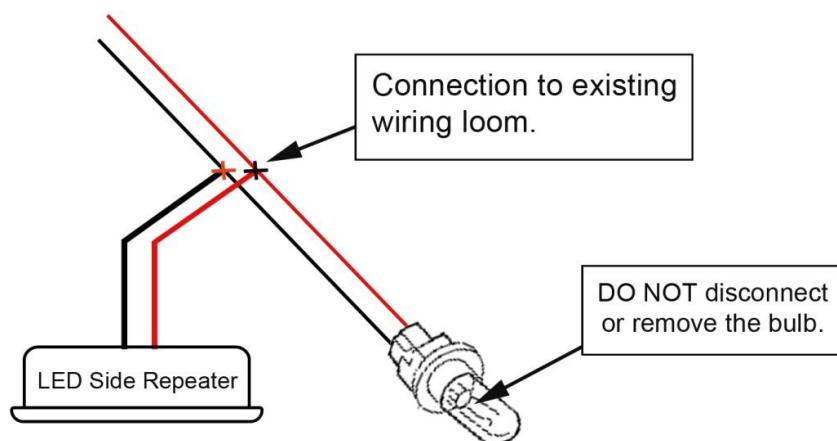

12. After installation is complete like the above diagram, please put the existing bulb, with the bulb holder and wiring loom back inside the inner wing.
13. Finally, position the new LED side repeater unit to the wing. Your new LED Side repeaters are now ready to use.

If You Still Have Problems/Difficulties Fitting Your Repeaters, Please Contact Us:
Telephone: 01782 280888 | **E-Mail:** info@van-x.co.uk | **Website:** www.van-x.co.uk