


# INSTALLATION GUIDE - D-RACK

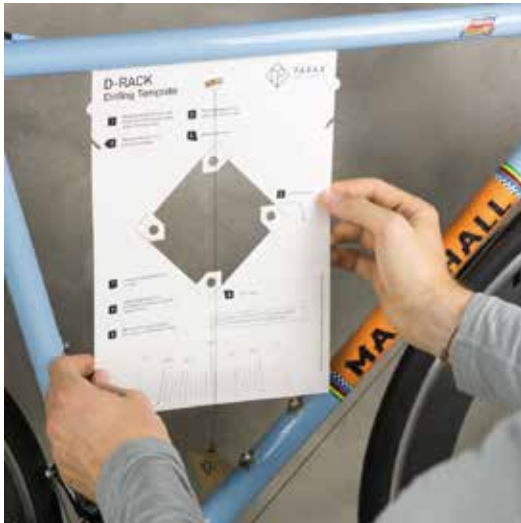

1

## Angle Measurement

Hold the supplied drilling template with the upper edge under your bike's top tube. The pendulum shows you the angle of the top tube. You can then decide between:

- a) You screw the D-Rack at this angle to the wall so that your bike hangs horizontally leveled.
- b) You screw on the D-Rack horizontally.

We recommend a horizontal mounting of the bike, as you will achieve a generally more pleasing look. We recommend a maximum angle of 10°. Please check beforehand whether the surface of your frame is slip-resistant enough.




2

## Align Drilling Template

Now peel off the two adhesive dots on the back and stick the drilling template to the wall.

Make sure that the pendulum shows the desired angle. For horizontal installation, the angle must be 0°.

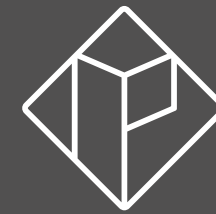

3

## Mark Holes

You can place the pendulum in the side notch so it won't get in the way for the next steps.

Mark the four holes and bend the tabs upwards.




4

## Drill Holes

When drilling, try to hit the markings as precisely as possible.

The holes must have a depth of at least 60mm.

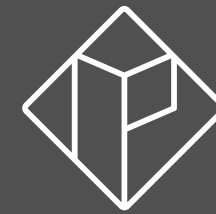

5

## Install Dowels

It's best to vacuum out the holes with a vacuum cleaner.

Then insert the dowels into the holes until they sit flush with the wall.

The delivery includes premium universal dowels. These are suitable for mounting on most types of walls. With drywall, you may have to use special cavity dowels.




6

## Screw on Wall Piece

In the next step you screw the base with the four stainless steel screws into the wall.

You can use both the supplied angle wrench and the Torx bit.

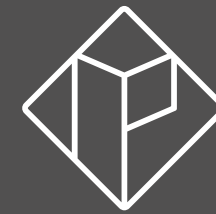

7

## Alignment & Hand Tightening

Before tightening the screws, check the correct position inside the drilling template.

Now tighten the screws by hand using the Torx wrench.



8

## D-Rack on and Screw on - Ready!

When the base is completely mounted, you can carefully insert the D-Rack. Lastly screw in the four black countersunk screws from the outside. Hand tight will suffice.

Your D-Rack is now ready to use.



Please make sure to be careful when placing your bike on the D-Rack and while taking it down, otherwise there is a danger of it getting stuck on the upper aluminum edge!

And now: Have fun with your new wall mount from PARAX!