



MagicCarpet[™] Installation Instructions

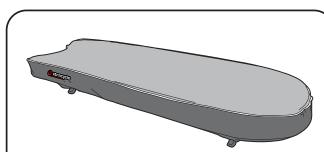

More Cushion for Your **Passengerin'**

The Magic Carpet is a simple, yet profound addition to your Xtracycle platform. The magic lies not only in your ability to carry passengers with greater comfort on their end, so to speak, but also in its safetyminded full circumference reflective piping. Periodic washings of your Magic Carpet should keep it looking and smelling fresher, longer. While the Magic Carpet is not "waterproof," it definitely weather resistant and will preserve your shiny new SnapDeck.

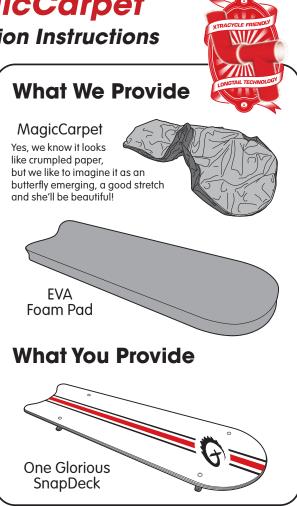

Dressing the Pad


STEP

1

STEP

2

A Unhook Velcro straps and insert foam pad into sleeve tail first. It's a snug fit so ensure you're as far into the tail

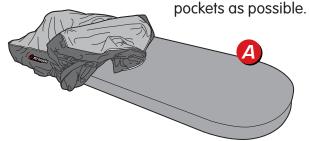



B Flex the pad and continue wrapping the sleeve around the nose. Pull sleeve snug on sitting side for an easier SnapDeck installation.

Hiding the Deck

Insert SnapDeck tail first into MagicCarpet/EVA assembly. Ensure tail is fully inserted and hooks are in sleeve holes. Just like sliding a tire on a rim, you'll want to slip the sleeve over the deck, bit by bit. Start at one side of the nose and continue around. Pass front hooks through holes, strap the Velcros across. Install your SnapDeck and go find a passenger!

> 888.537.1401 www.xtracycle.com