

**VALYÖU**


**VALKA DRESSER**

9974

HOW TO PUT TOGETHER





# Assembly Instructions


9974

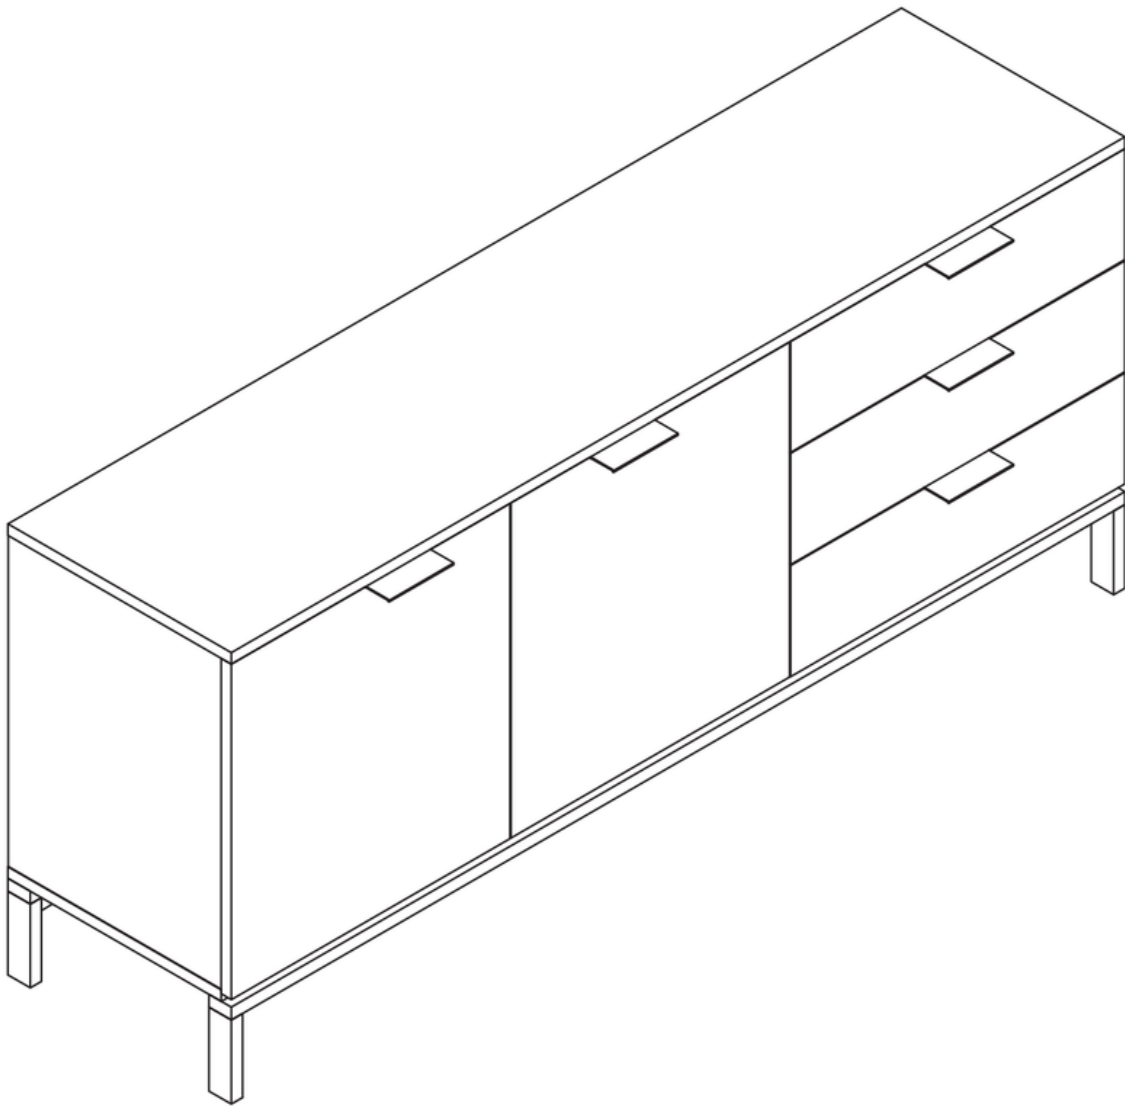



60 min

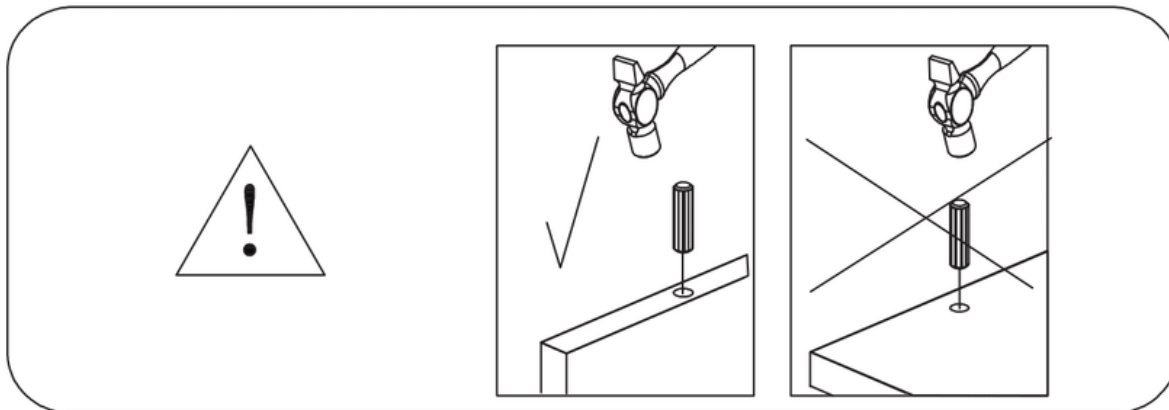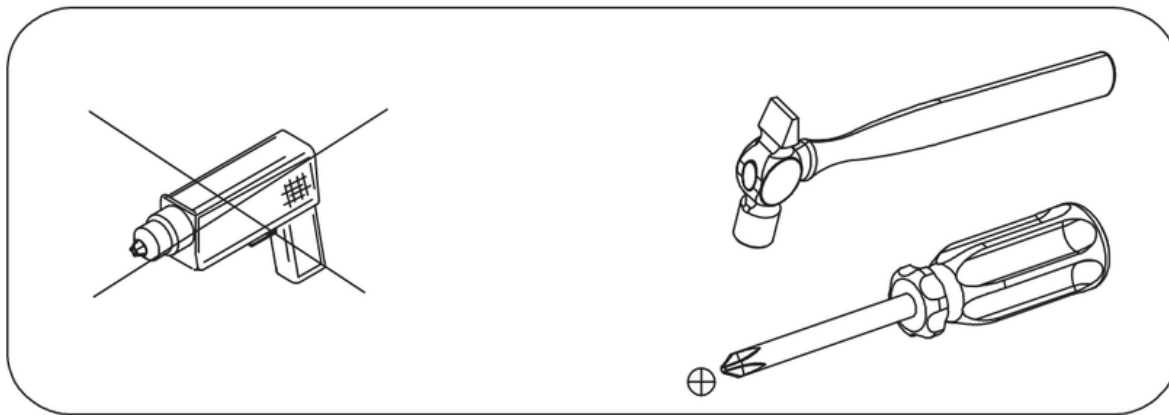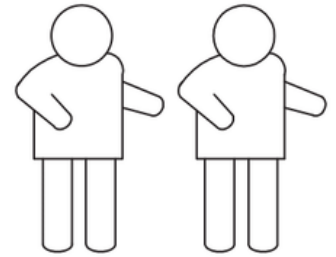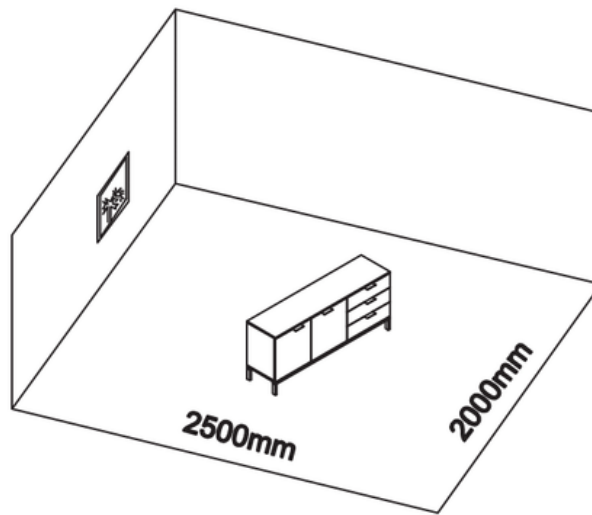

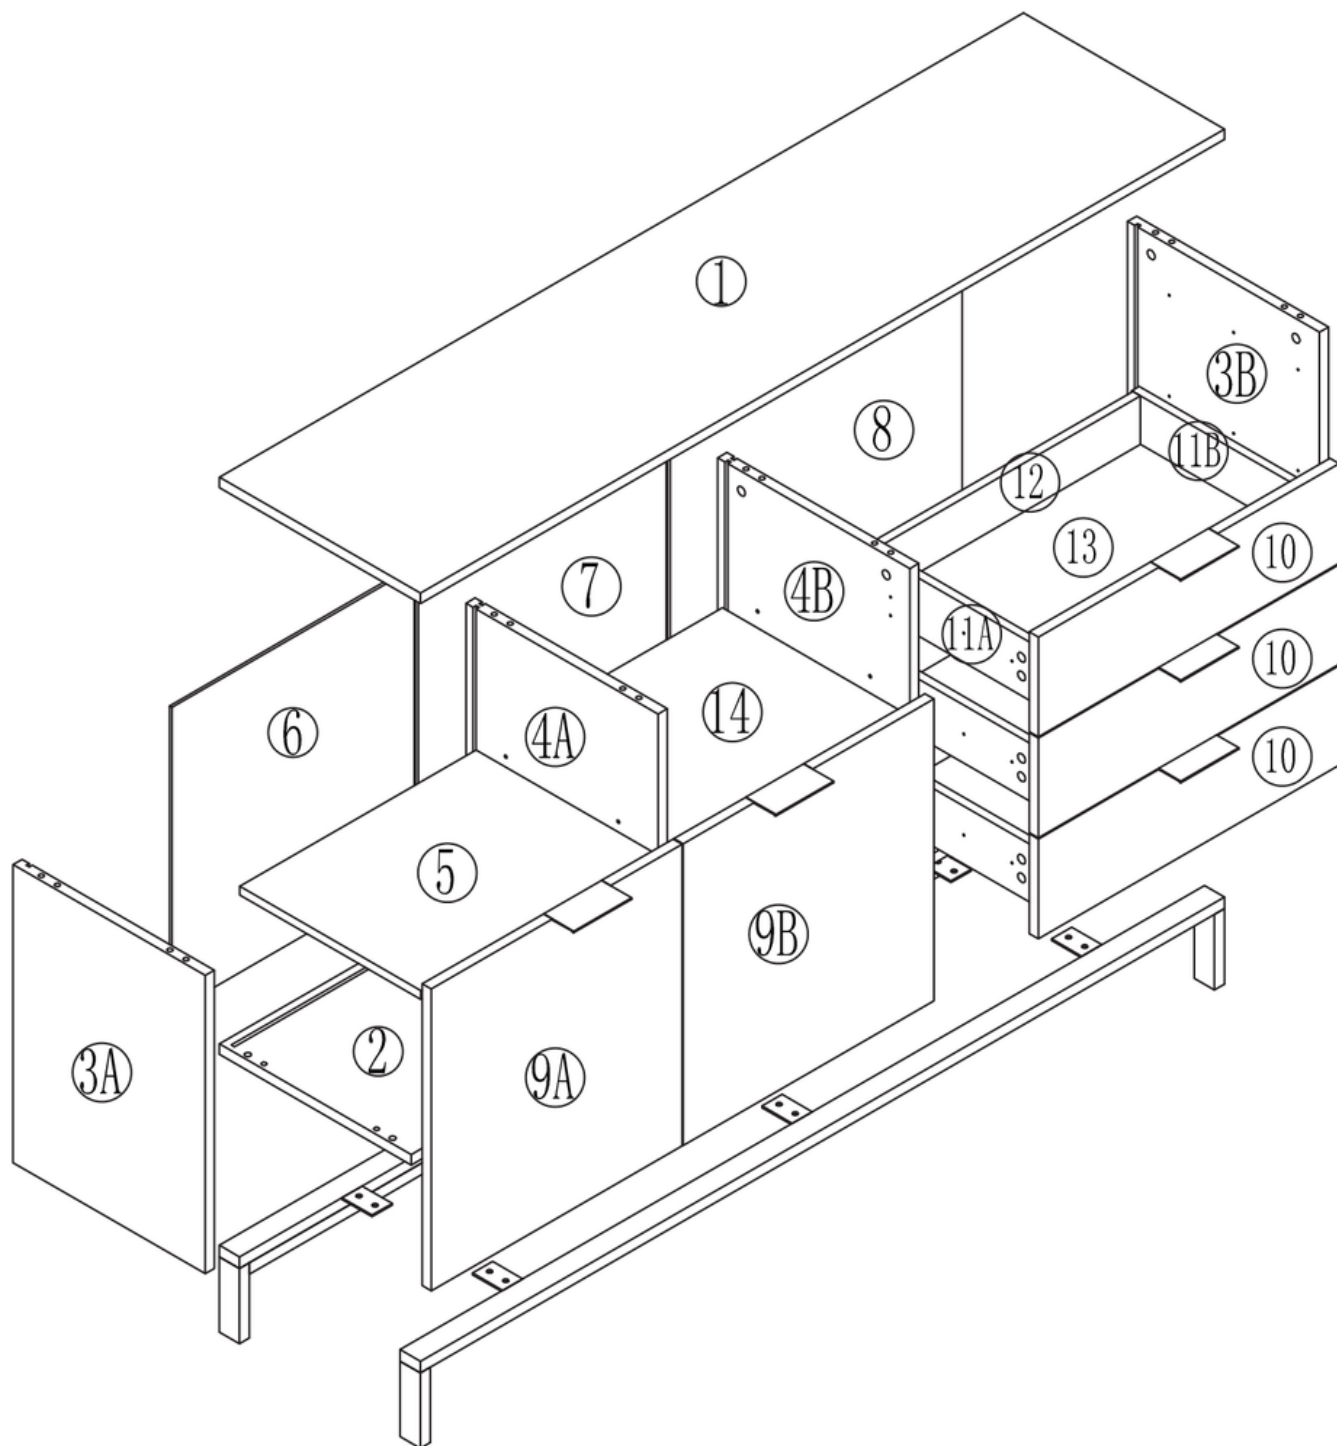


















		9974
1	1	1600x400x18 MM
2	1	1600x382x18 MM
3A	1	514x382x18 MM
3B	1	514x382x18 MM
4A	1	514x382x18 MM
4B	1	514x382x18 MM
5	1	470x360x15 MM
6	1	482x524x5 MM
7	1	493x524x5 MM
8	1	581x524x5 MM
9A	1	520x498x18 MM
9B	1	520x498x18 MM
10	3	598x172x18 MM
11A	3	332x80x18 MM
11B	3	332x80x18 MM
12	3	550x80x18 MM
13	3	524x342x5 MM
14	1	480x360x15 MM






 $\phi$ 15x12 Ax16	 M6x35 Bx16	 $\phi$ 8x40 Cx16	 $\phi$ 16xM6x1.5 Dx12
 M6 Ex12	 M6x20 Fx12	 350MM Gx6	 Hx8
 M6x24 Ix24	 $\phi$ 12x12 Jx24	 M3. 5x15 Kx82	 Lx12
 Mx2	 Nx2	 Ox1	 Px5
 Qx2			





# 1




$G=G1+G2$

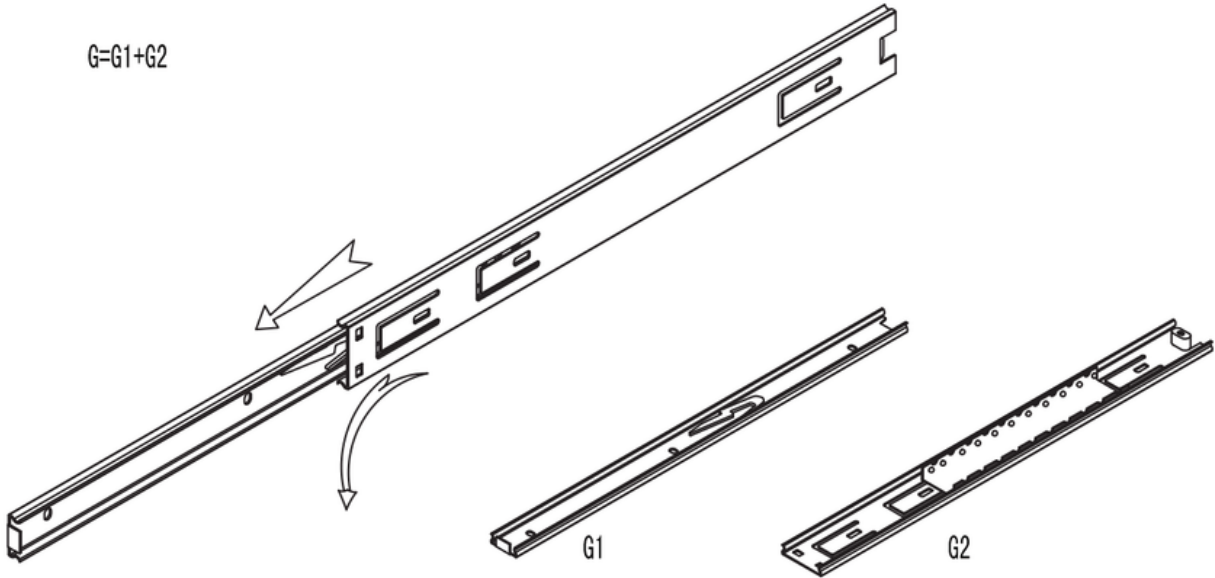


# 2

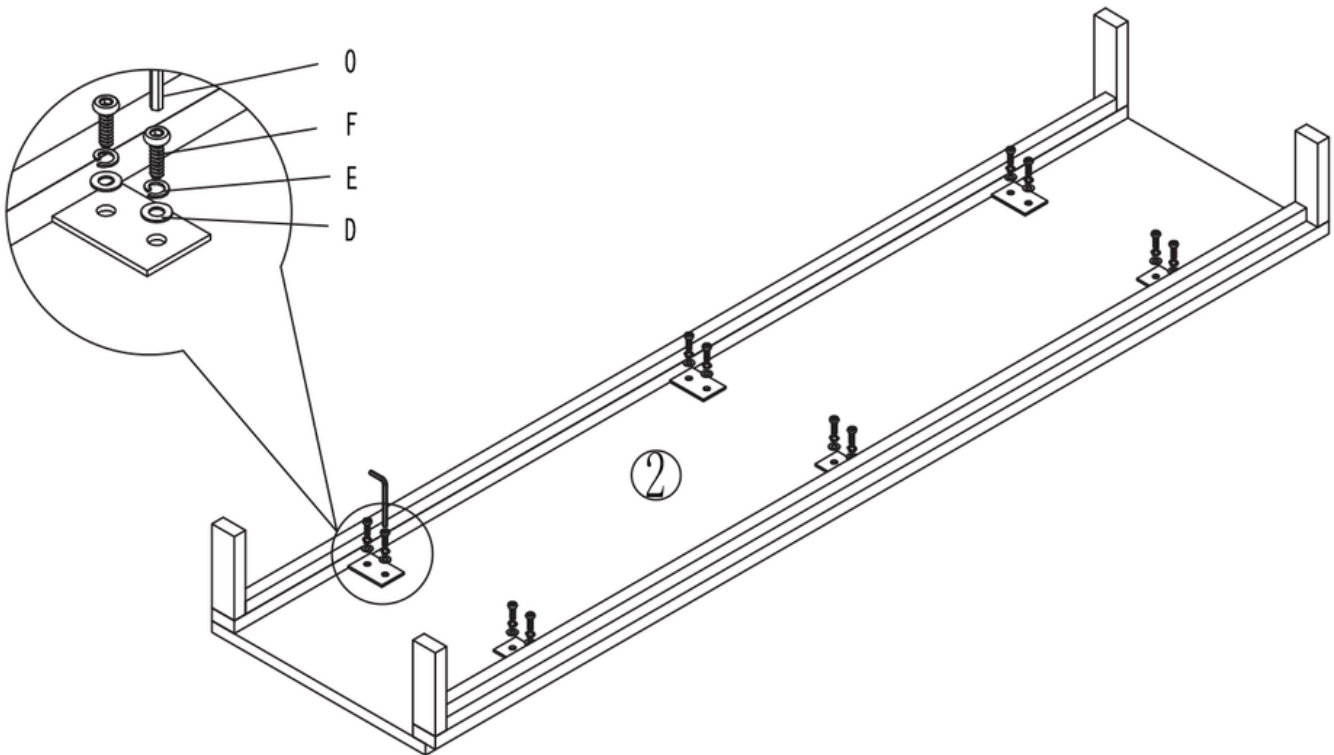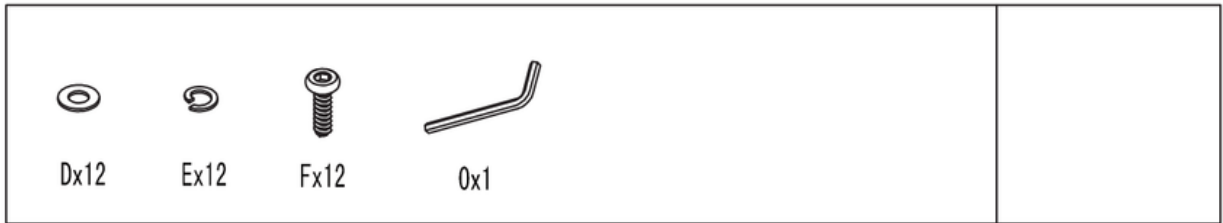

# 3

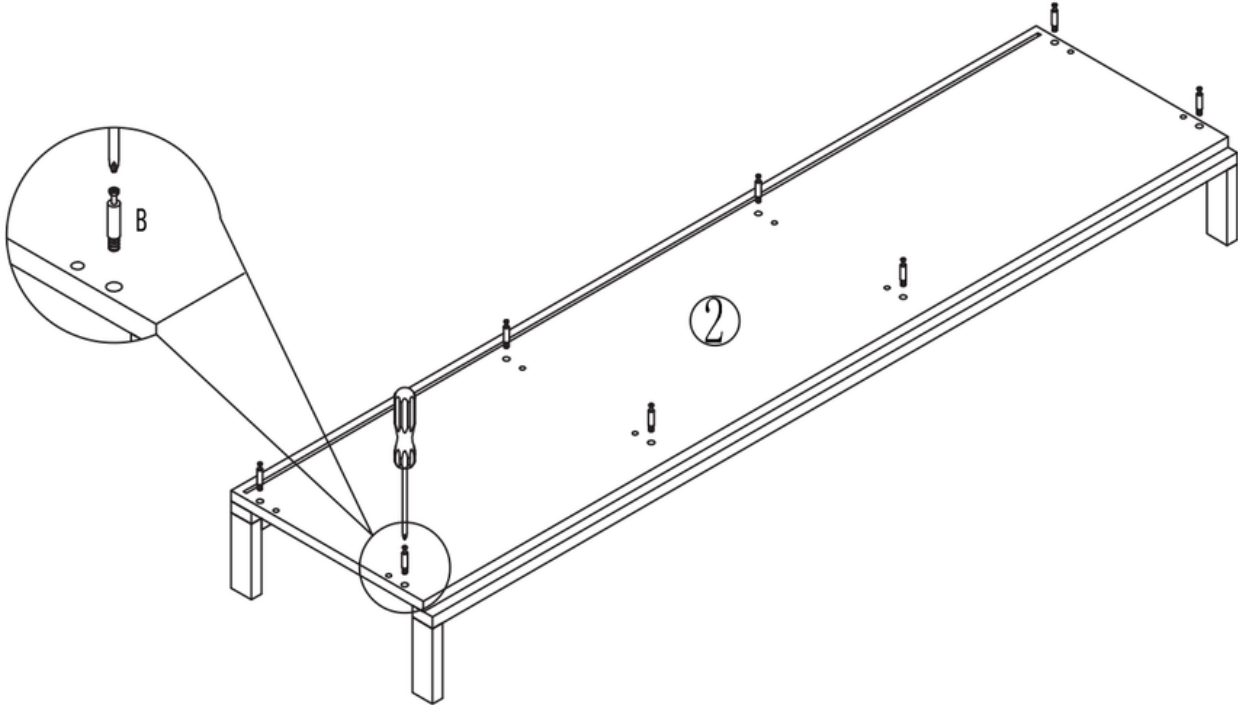


# 4

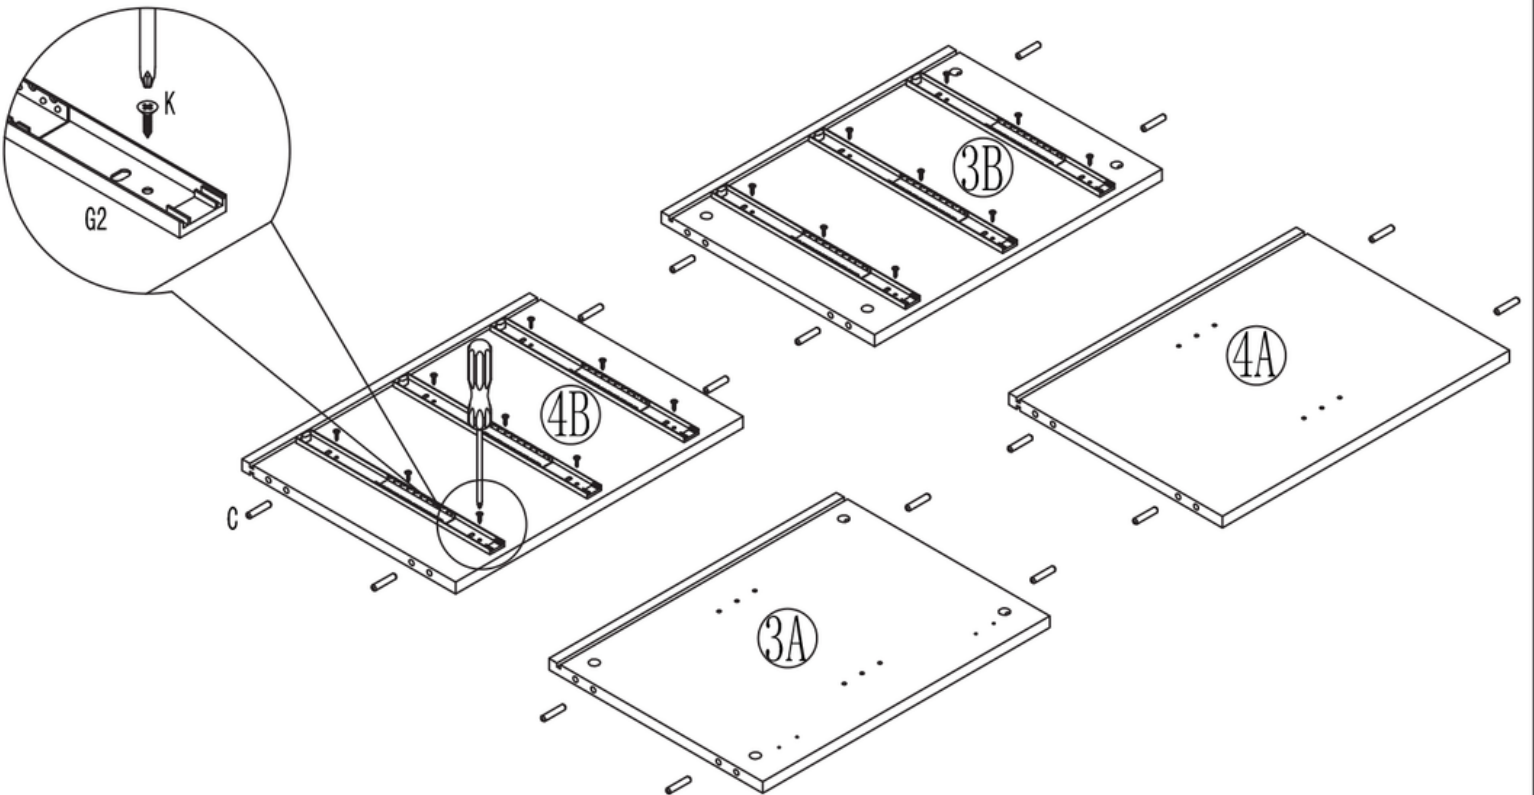






# 5

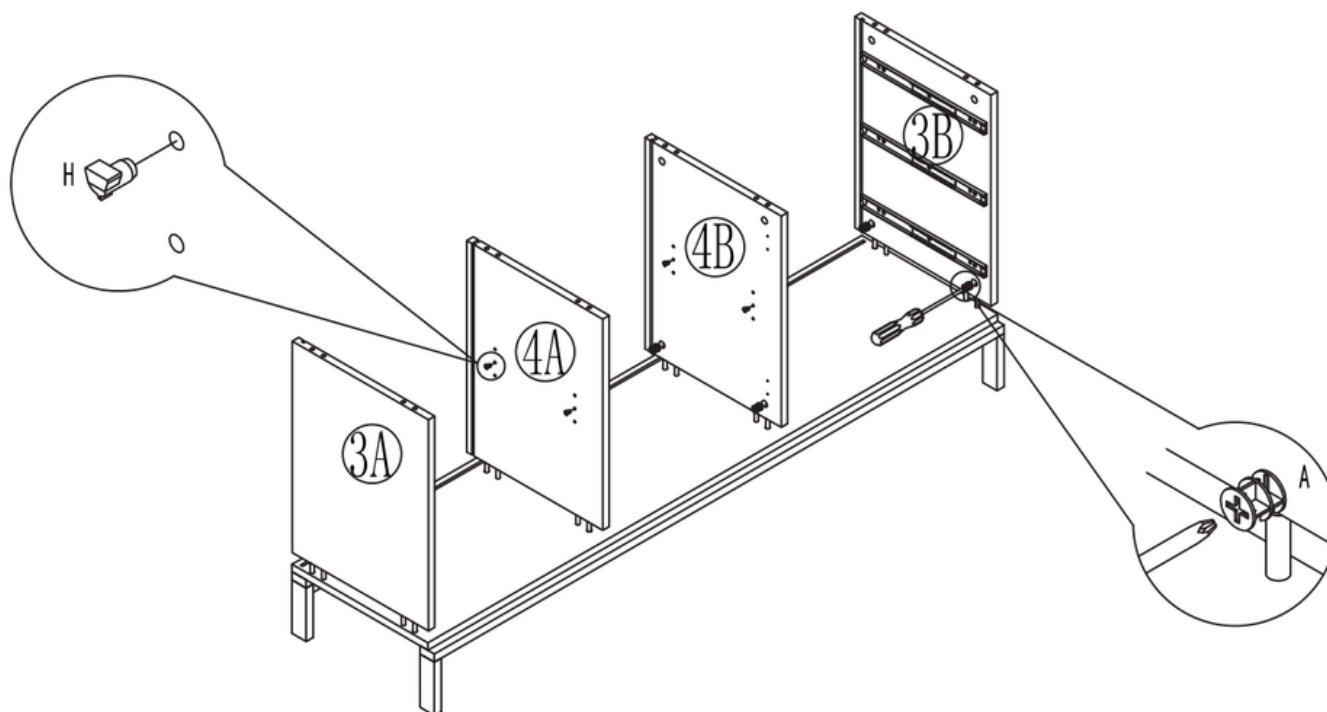


# 6

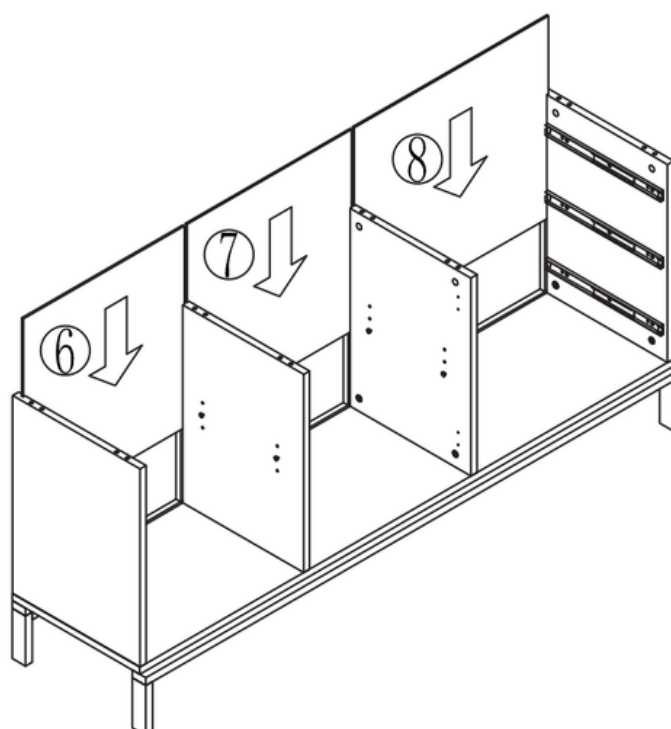


# 7

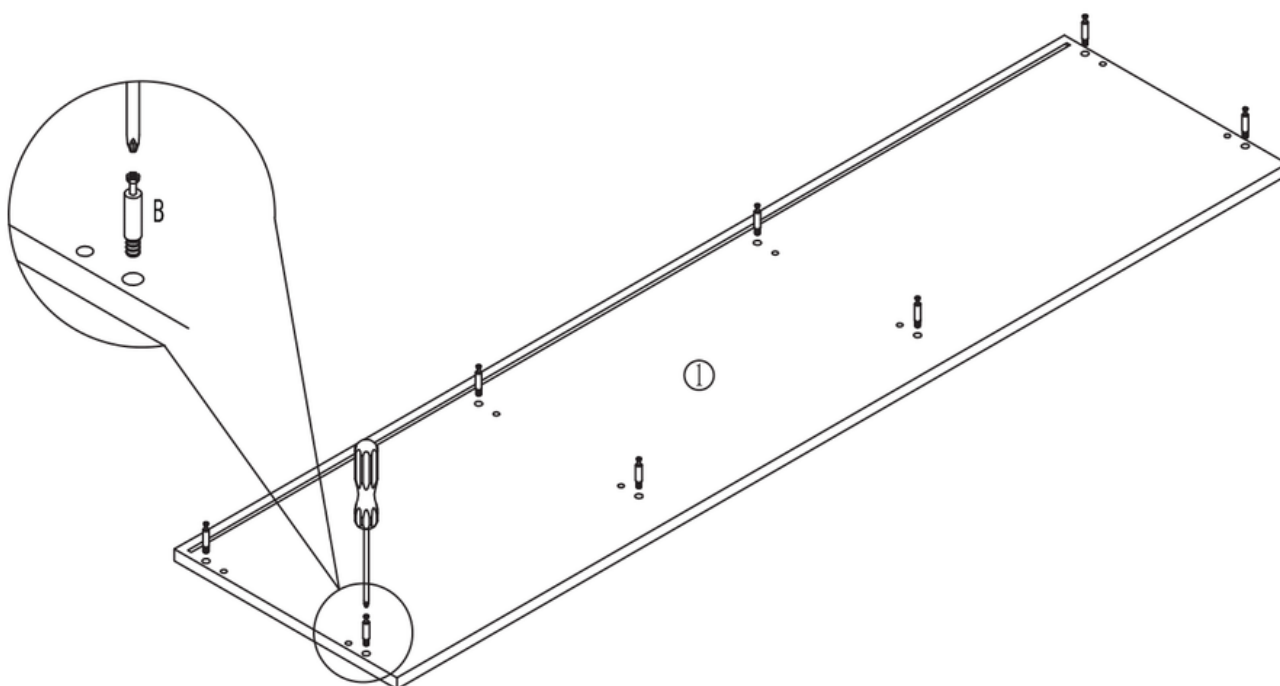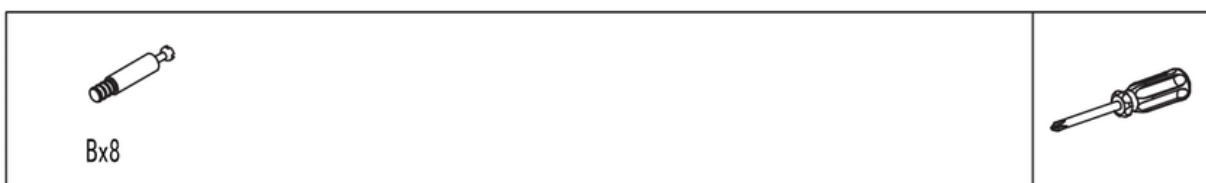



# 8

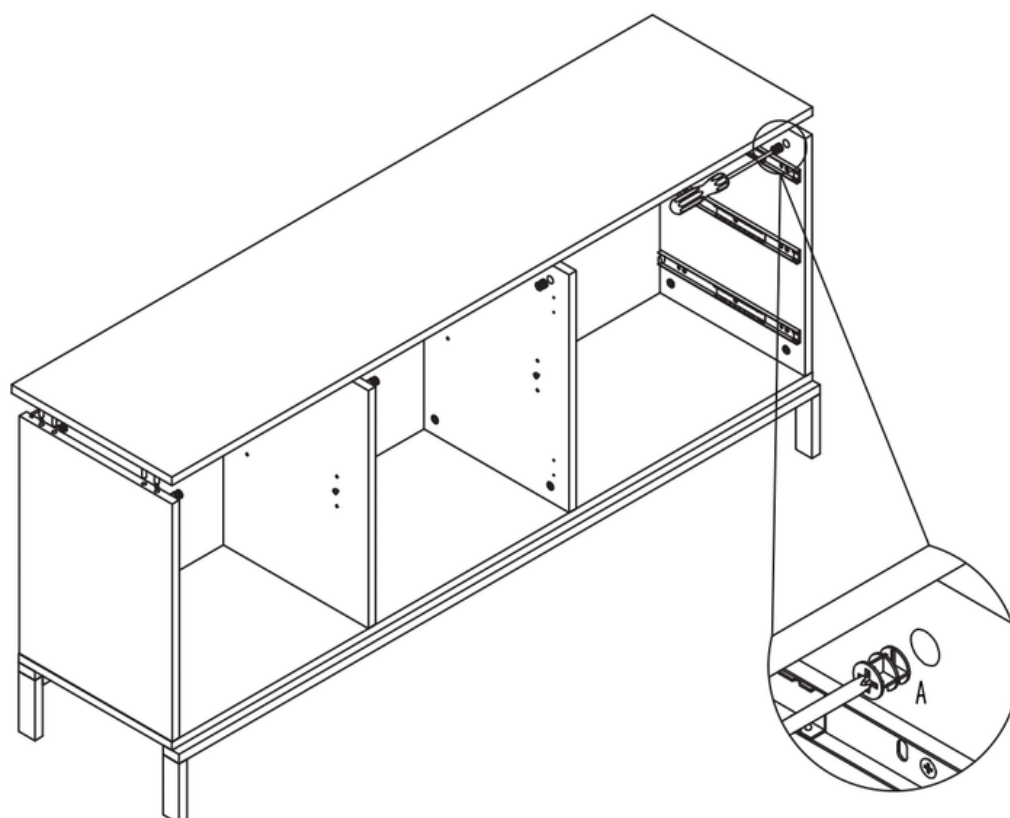

# 9

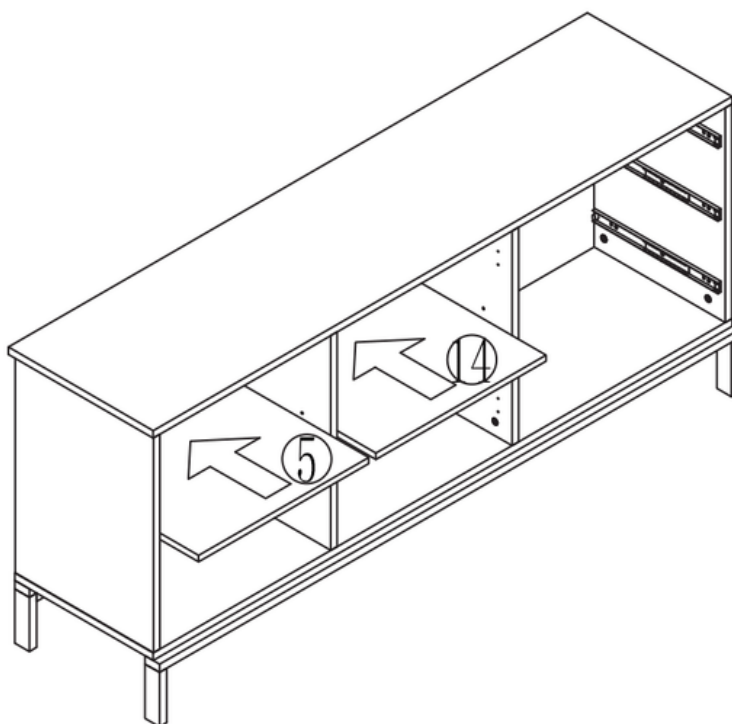

# 10

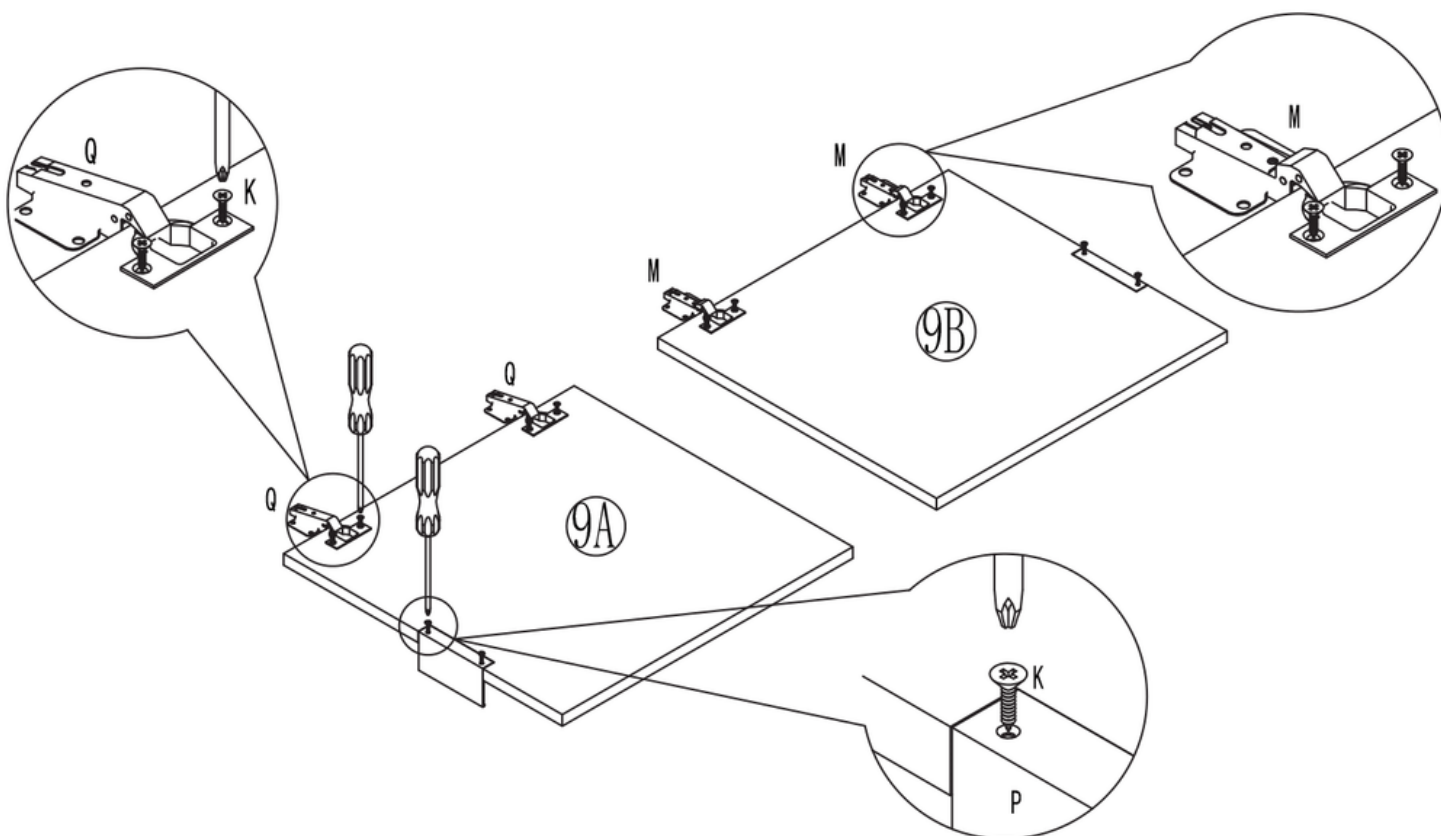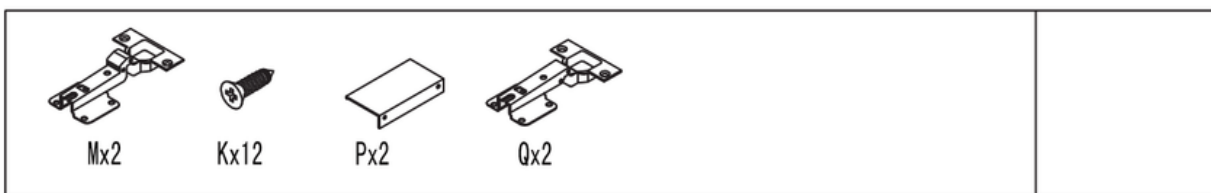


10-14

# 11



Kx16

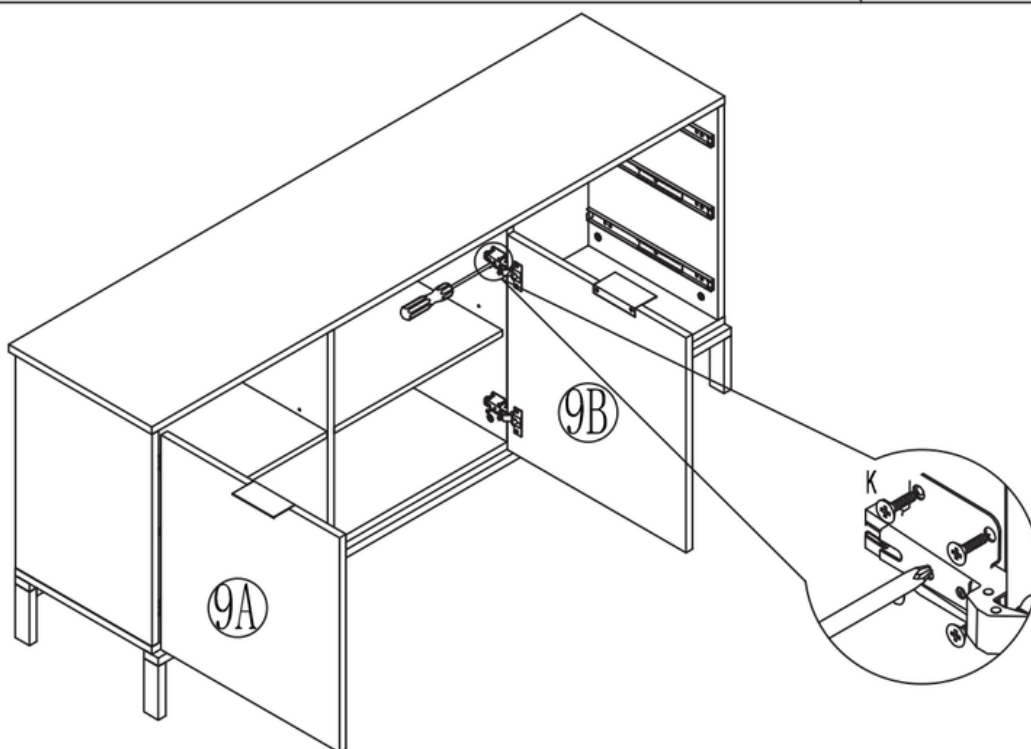



# 12



Kx12




Lx12

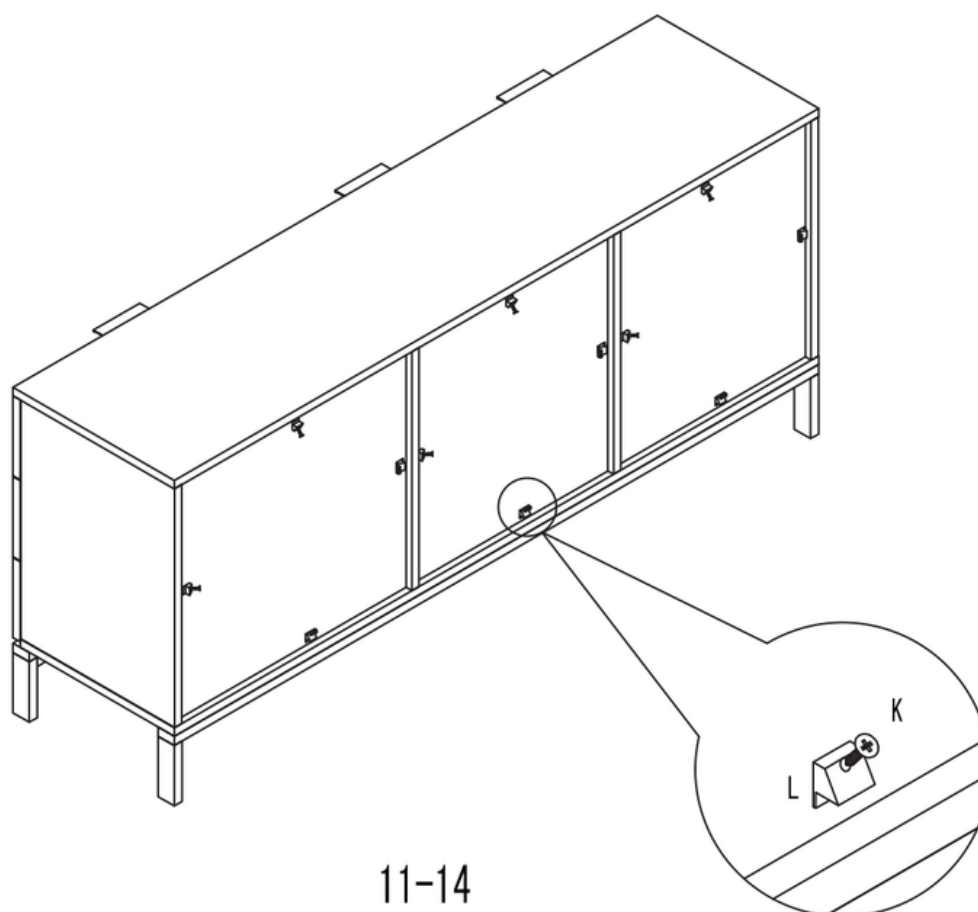


11-14

# 13

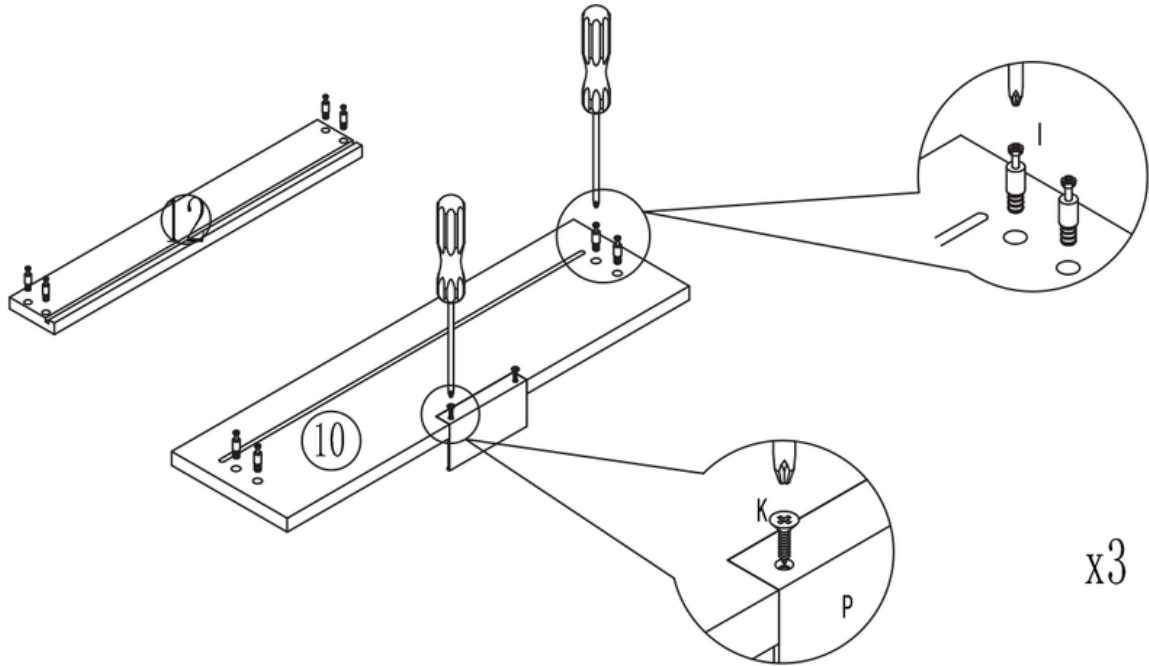

# 14

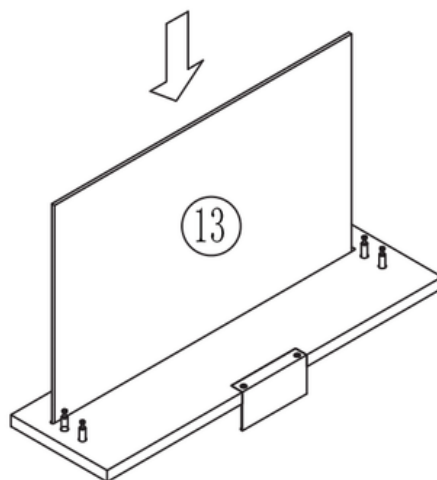



x3

12-14

# 15



Jx12

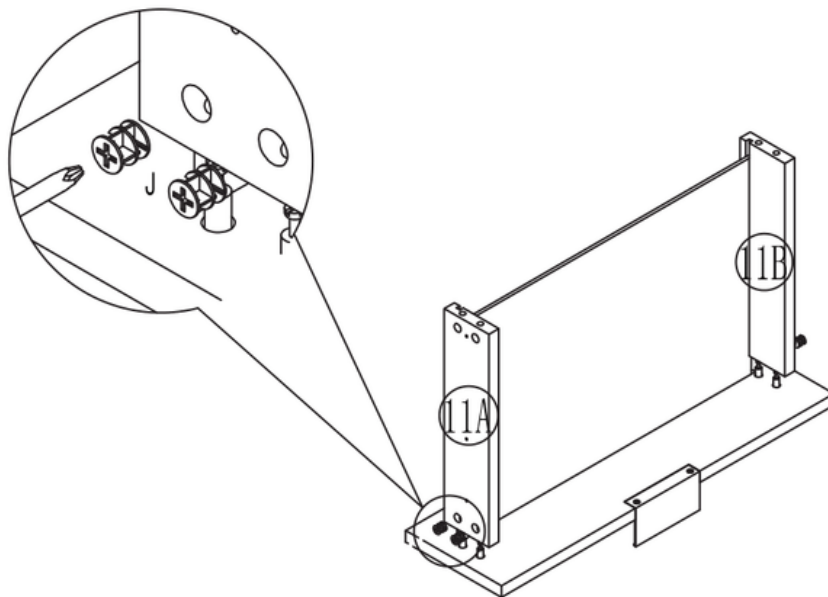


x3

# 16




Jx12

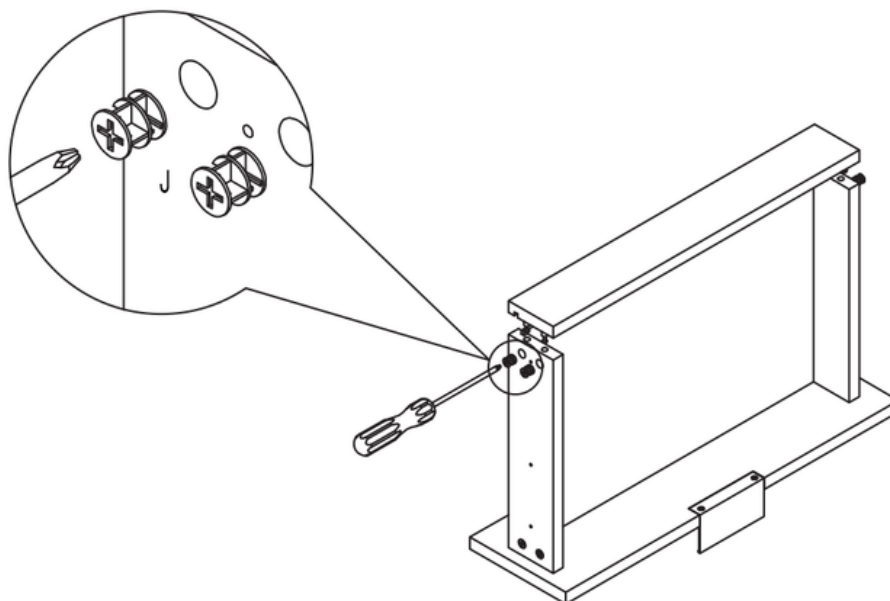


x3

# 17

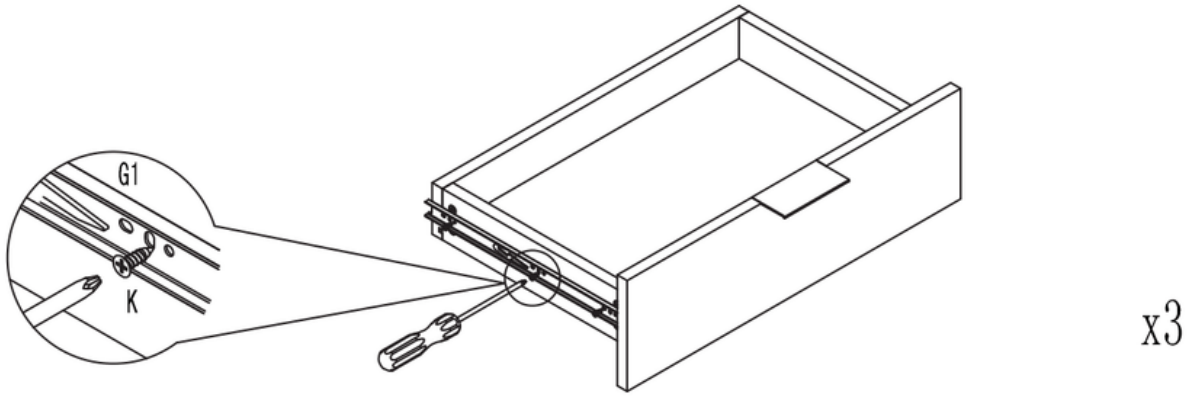

# 18

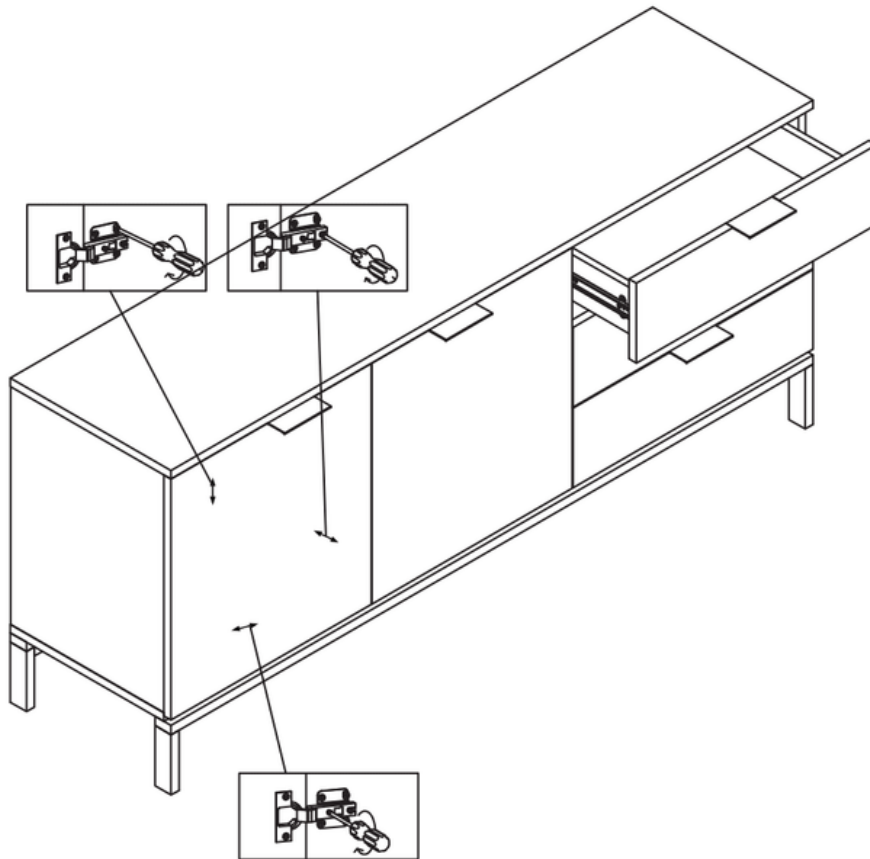

14-14

**MANUFACTURED BY**  
VALYOU FURNITURE® HONOLULU, HAWAII

**CUSTOMER SERVICE:**  
SERVICE@VALYOUFURNITURE.COM

**FOLLOW US:**  
@VALYOU FURNITURE

