

VALYÖU


VALQEE 3 DRAWER SIDE TABLE

1912

HOW TO PUT TOGETHER





Assembly Instructions


1912

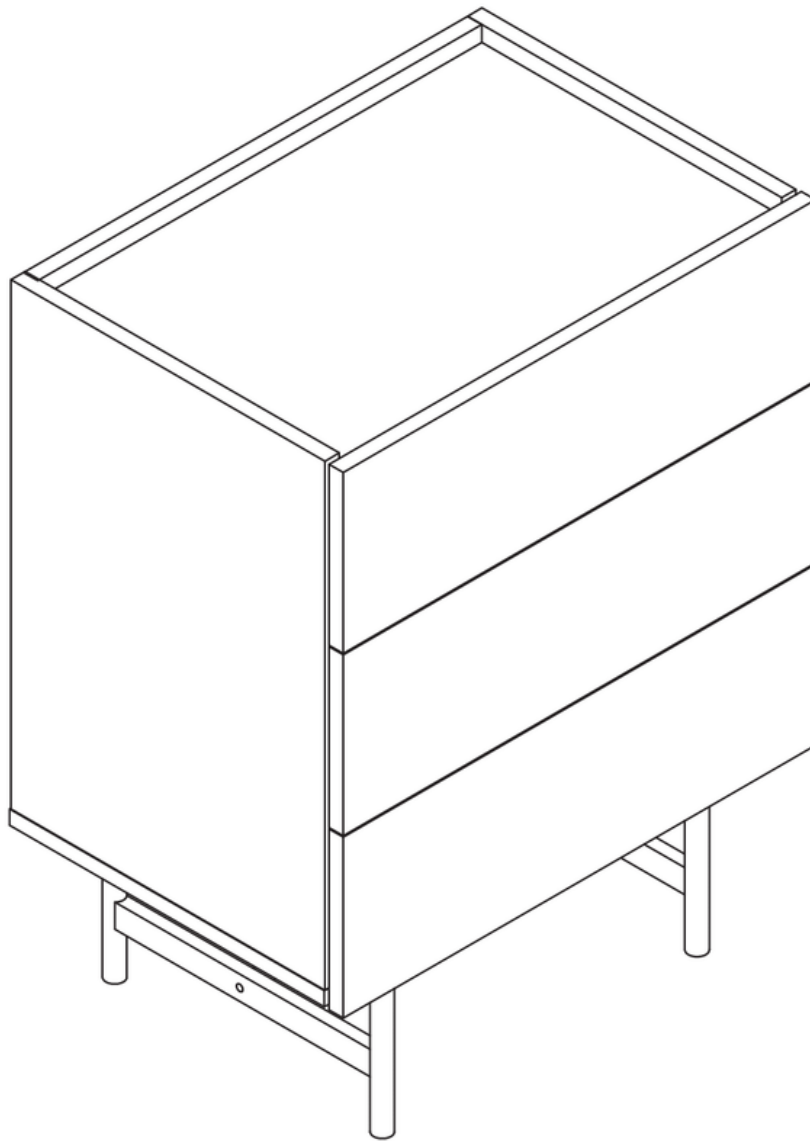




60 min

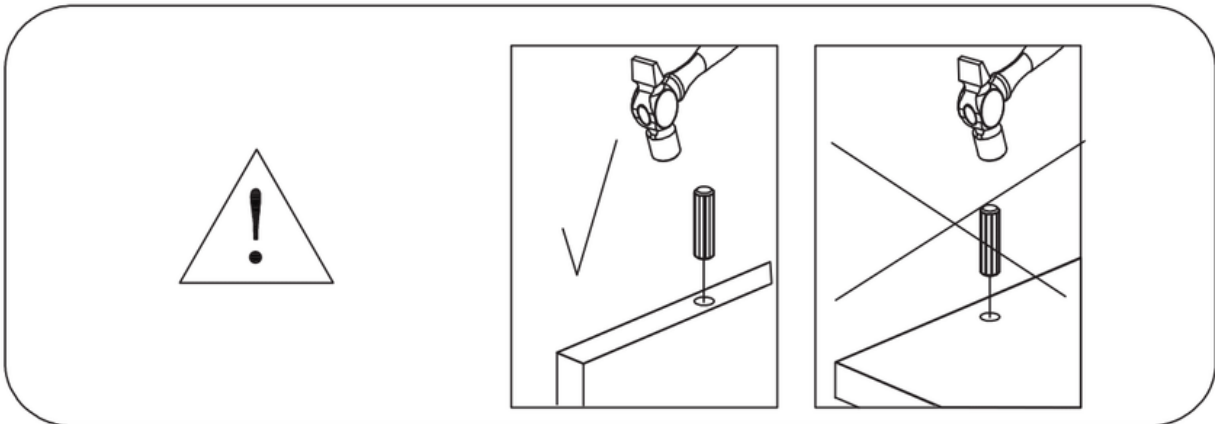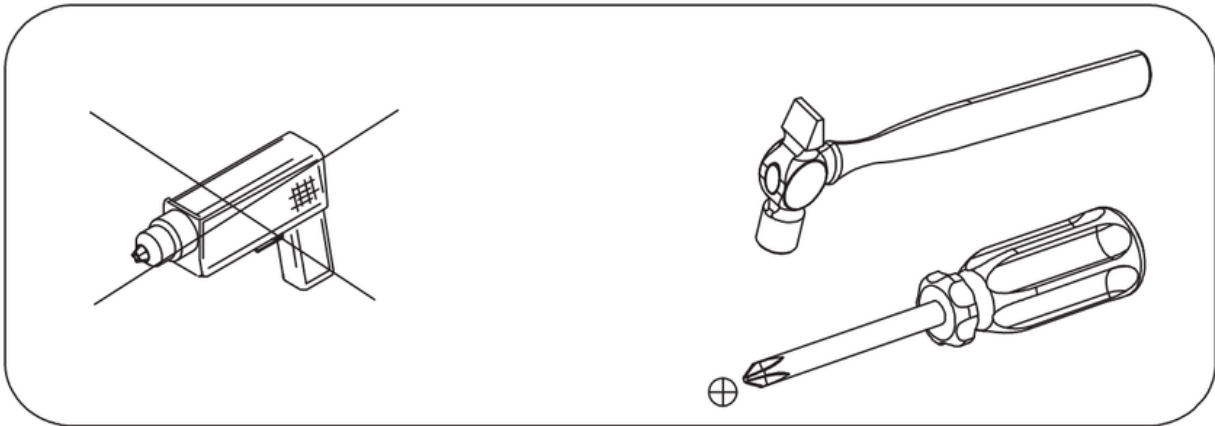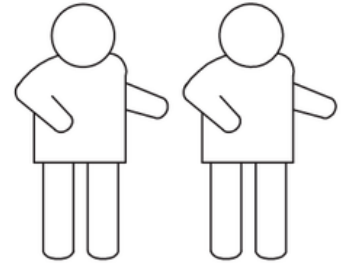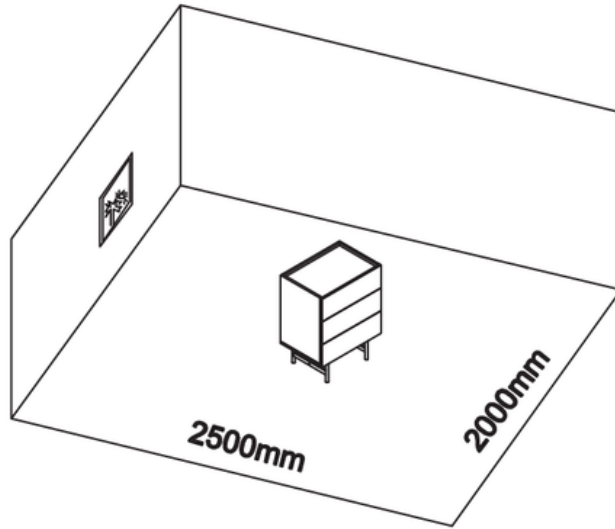

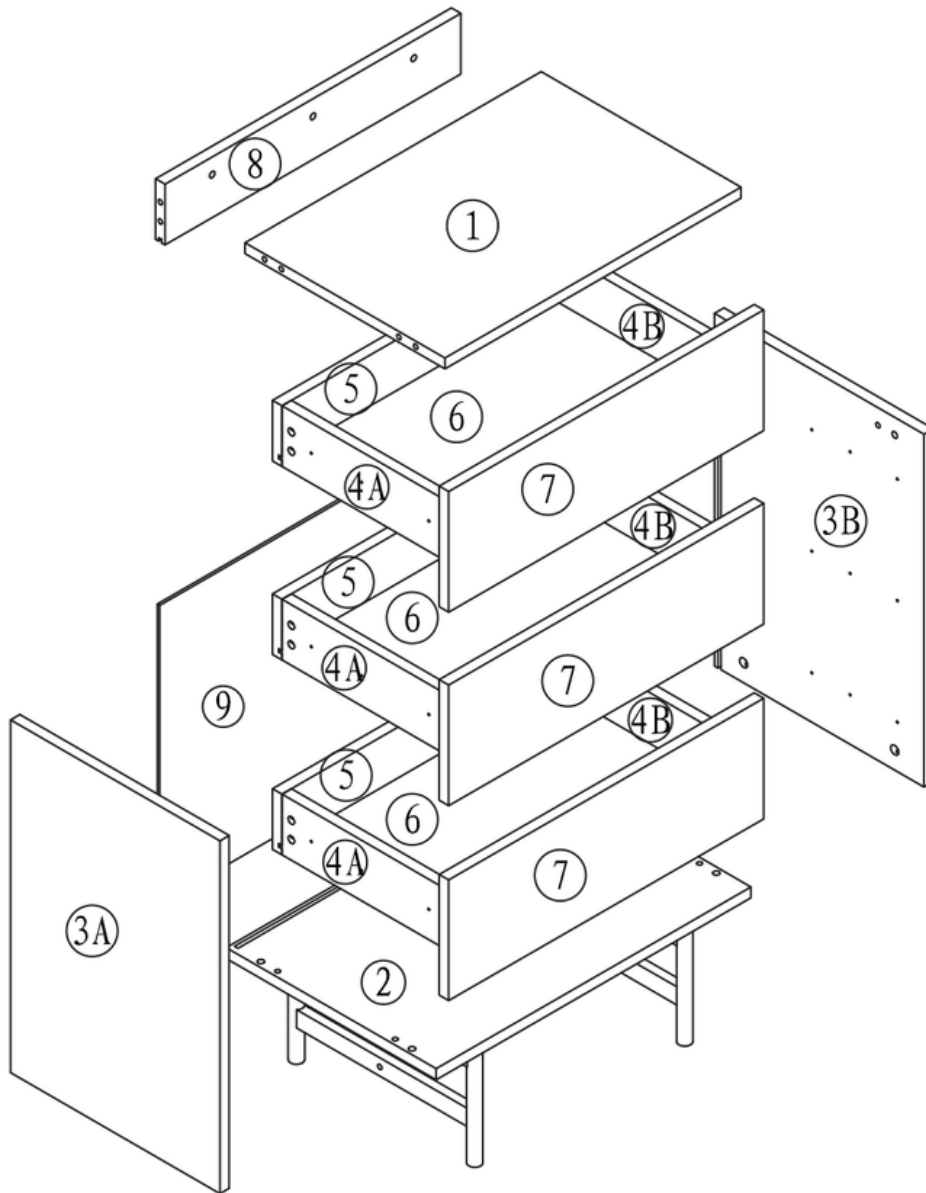



















		1912
1	1	564x381x18MM
2	1	600x400x18MM
3A	1	582x399x18MM
3B	1	582x399x18MM
4A	3	332x100x18MM
4B	3	332x100x18MM
5	3	536x100x18MM
6	3	510x342x5MM
7	3	600x199x18MM
8	1	564x100x18MM
9	1	572x492x5MM






 φ 15x12 Ax15	 M6x35 Bx15	 φ 8x40 Cx8	 M3. 5x15 Dx44
 Ex6	 M6x35 Fx10	 φ16xM6x1.5 Gx14	 M6 Hx14
 Ix8	 M6x55 Jx4	 5# Kx1	 Lx4
 Mx1	 Nx1	 Ox2	 Px24
 Qx24			





1





$E = E1 + E2$

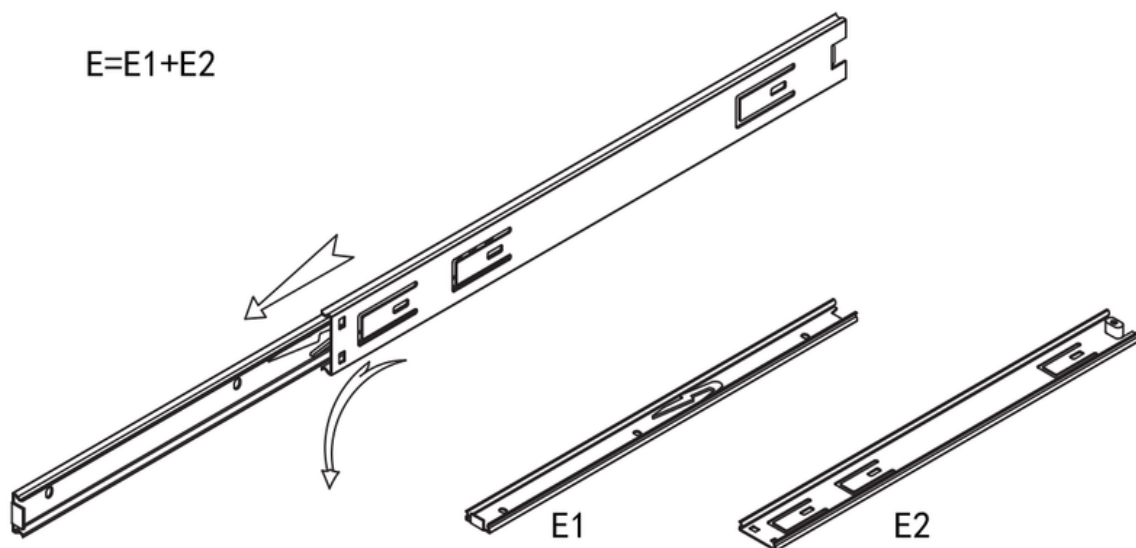


2

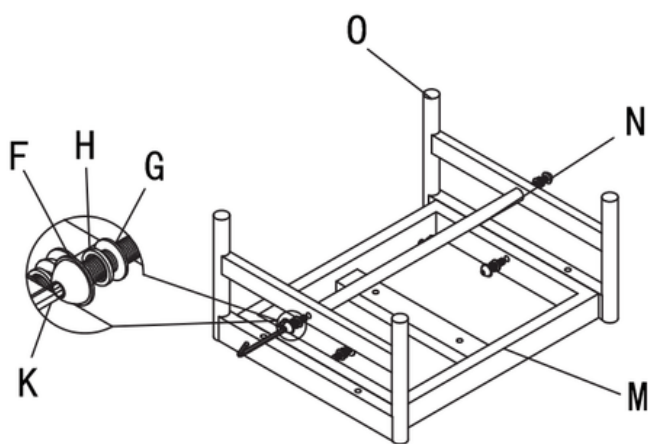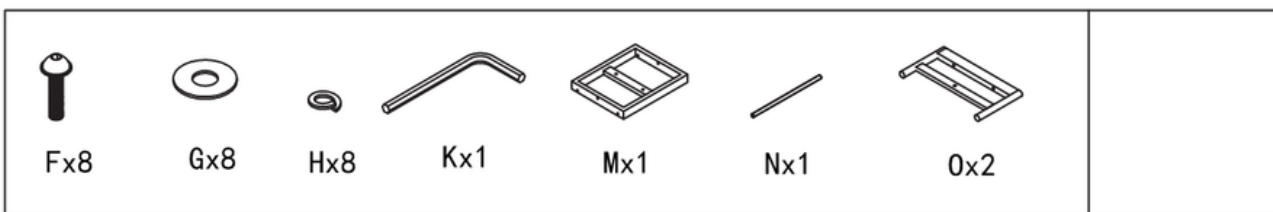

3

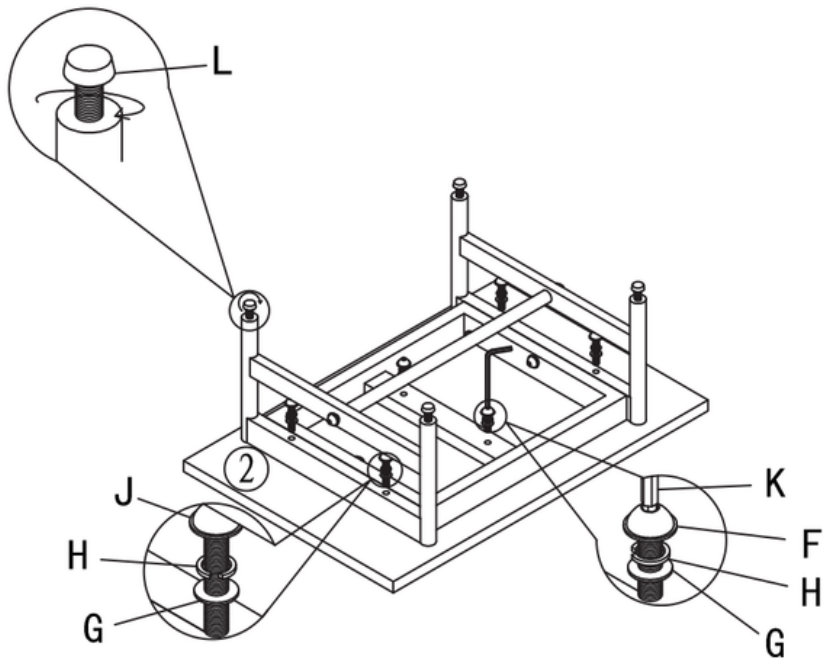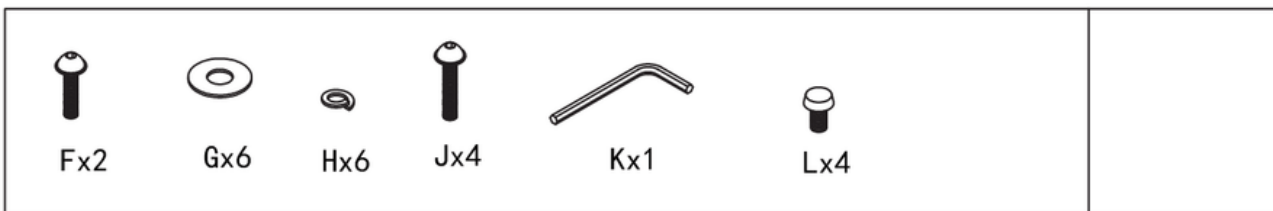

4

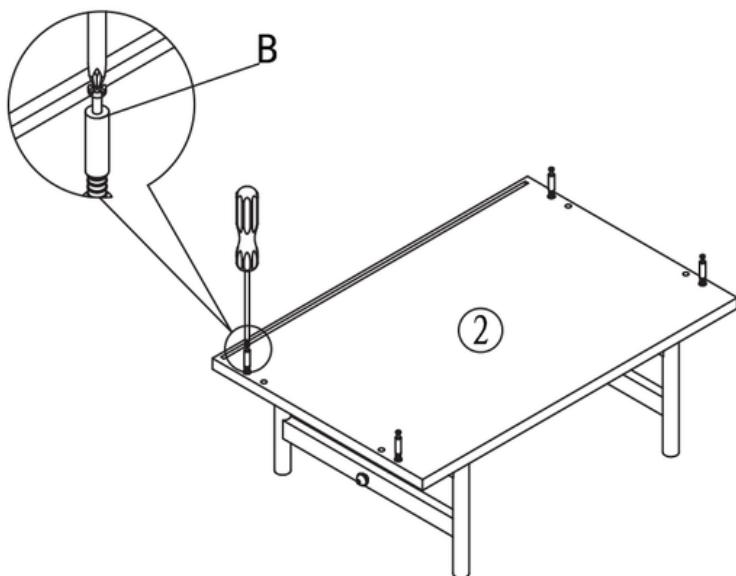

5



Cx8




Bx11



E2x6




Dx18

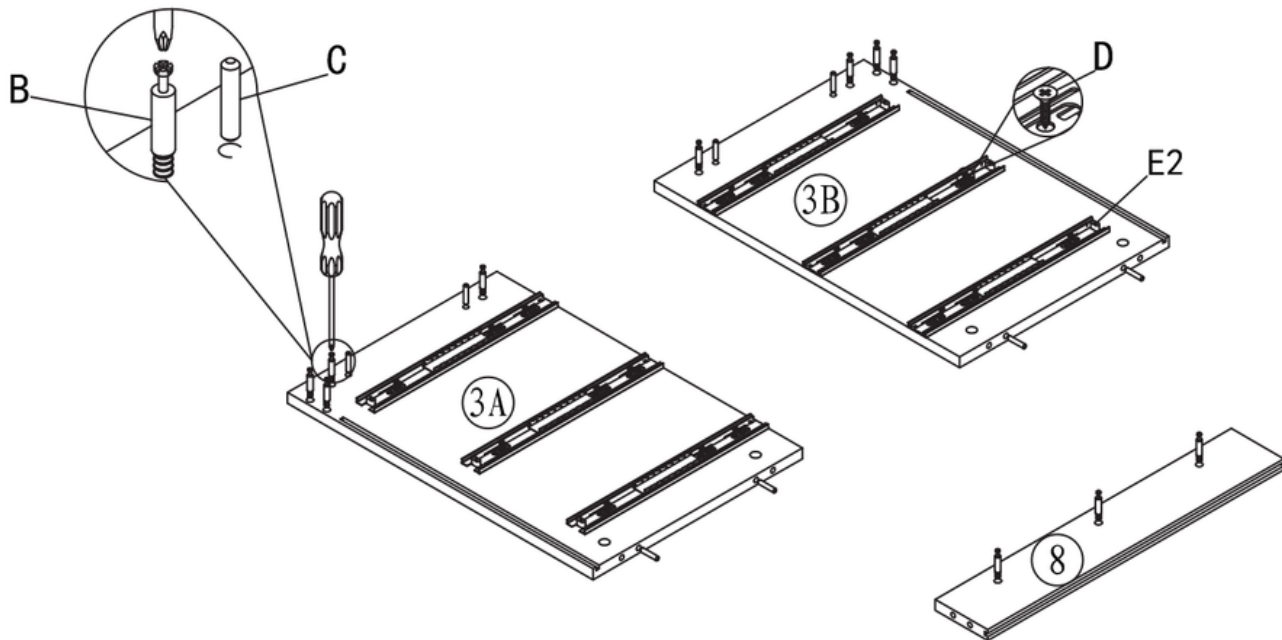

6



Ax11

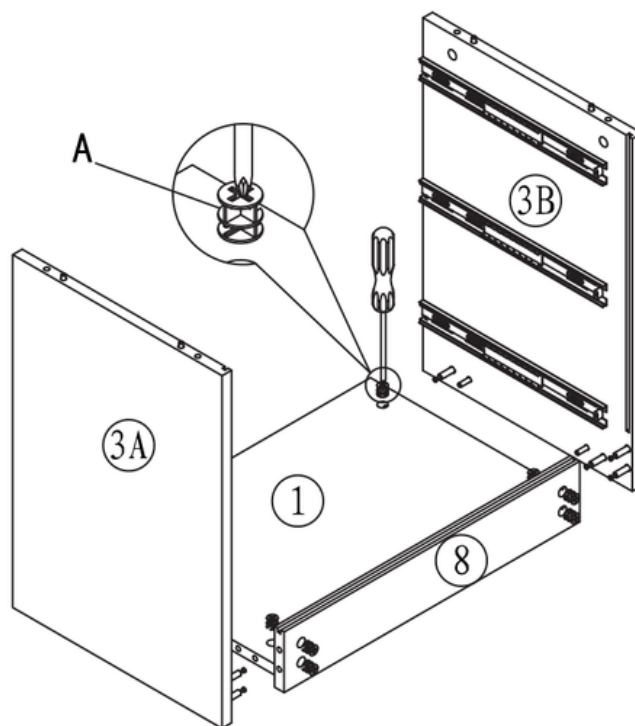


8-12

7




Ax4

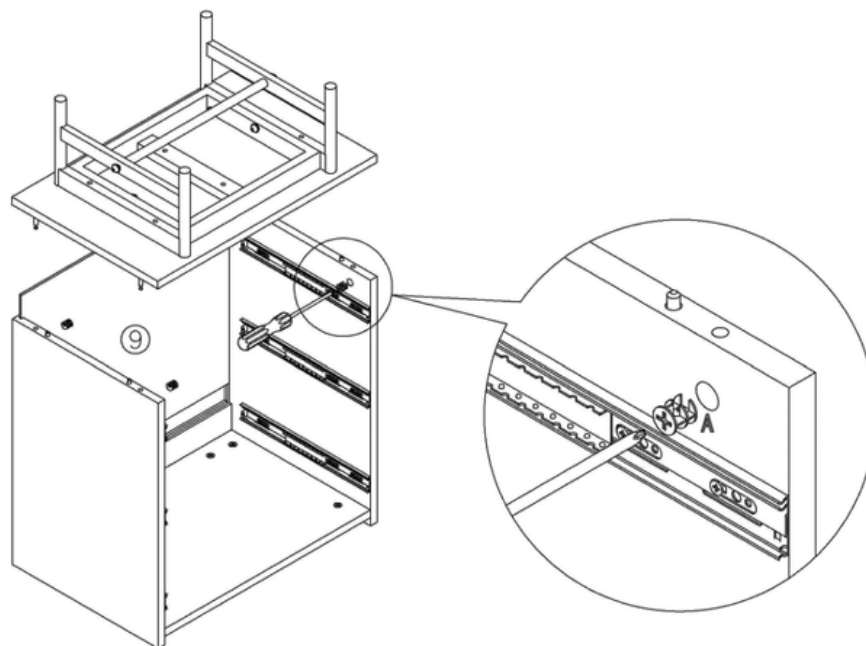

8



Px24

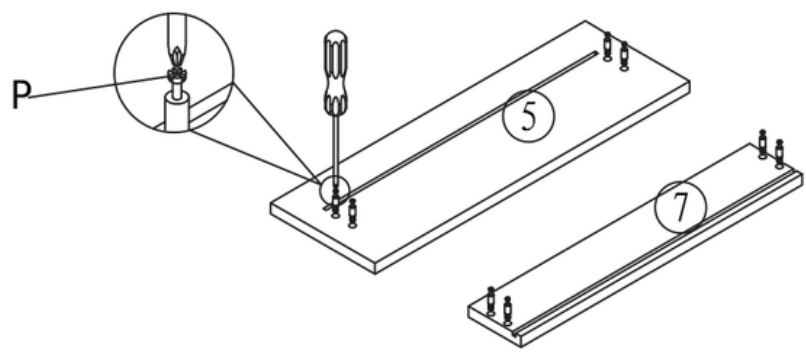


x3

9-12

9



Qx12

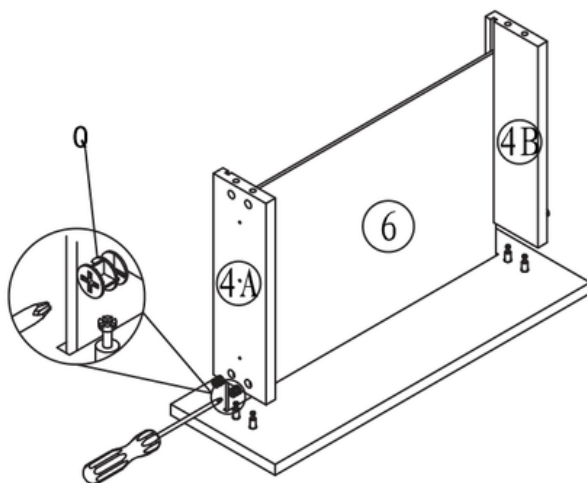


x3

10



Qx12

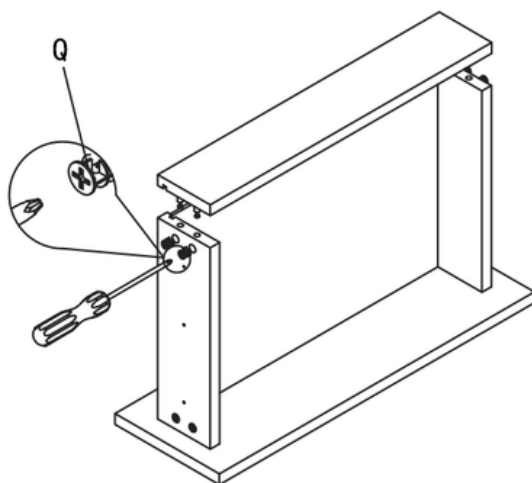

x3

10-12


11



Dx18




E1x6

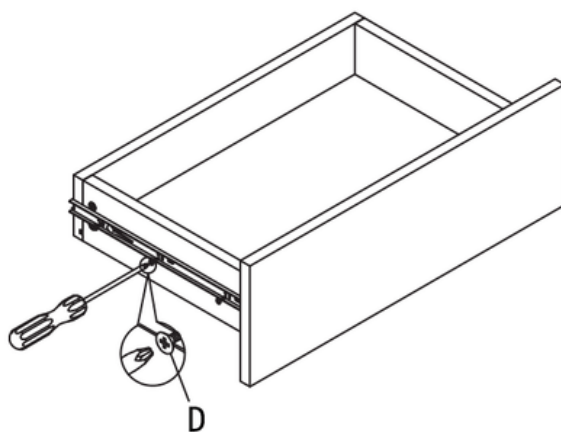

x3

12

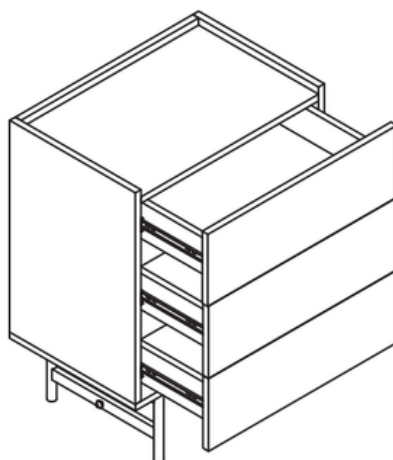

11-12


13




Dx8



Ix8

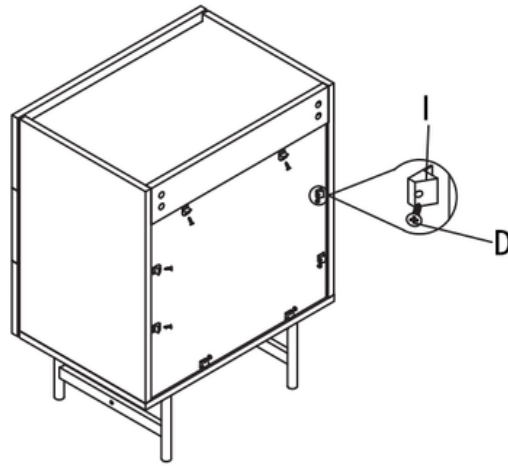

14

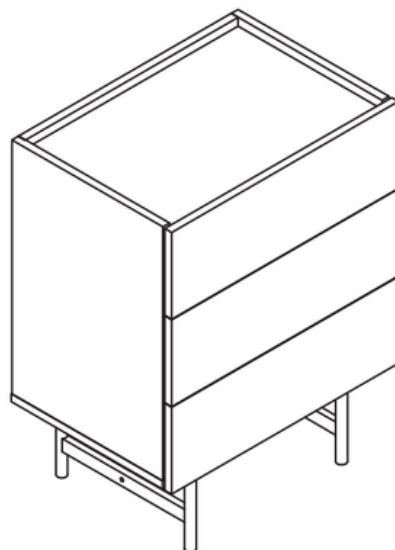

12-12

MANUFACTURED BY
VALYOU FURNITURE® HONOLULU, HAWAII

CUSTOMER SERVICE:
SERVICE@VALYOUFURNITURE.COM

FOLLOW US:
@VALYOU FURNITURE

