


# HOW TO MEASURE THE OPENING OF YOUR CABINET & ORDER THE CORRECT INSERT

There are 4 pieces of information that you will need in order to ensure that you order a properly fitting Dream World Acrylic Cabinet Insert for your sewing cabinet.

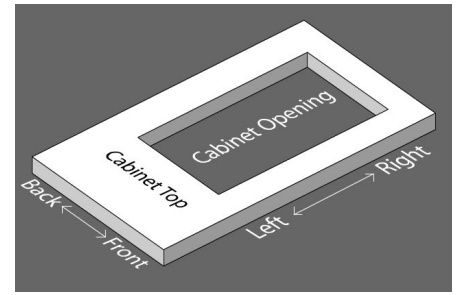

## 1) The Brand & Model of Your Cabinet

If you do not know the **Brand** of your cabinet, please choose "Custom Made/Unknown" from the drop-down menu:

If you know the **Brand** but do not know the **Model**, please leave the "Model" field blank.


Cabinet Brand \*

✓ -- Please Select --  
Alphasew  
Arrow  
Bernina  
Custom Made/Unknown  
Delta


## 2) Whether or Not Your Insert Will Need a Lip

A **Lip** is a part of an **Insert** that rests on the **Cabinet Top**.

To determine if you need a **Lip** on your **Insert**, look down into your **Cabinet Opening**.

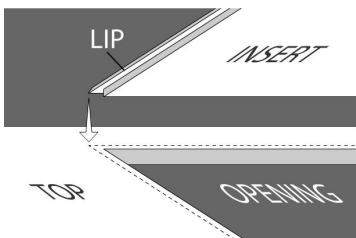

If down in the opening there is a **Ledge** (or perhaps just **Corners**) on which an insert could rest  $\frac{1}{4}$ " below the **Cabinet Top**, then your insert **DOES NOT NEED A LIP**:

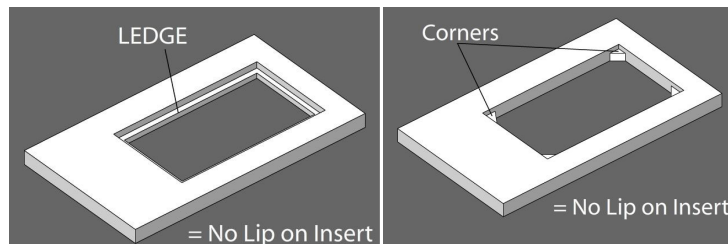


If, however, your **Cabinet Opening** does not have a **Ledge** or **Corners** down in it, then your insert **DOES NEED A LIP**.

## 3) The Measurements of Your Cabinet Opening

Once you have determined whether or not your **Insert** will need a Lip on it, then it is time to measure the **Cabinet Opening**:

Measure across the widest part of the **Cabinet Opening**, from **Front to Back**. Then measure across the widest part of the **Cabinet Opening** from **Left to Right**.

**When measuring, try to be as accurate as possible. Some Dream World Inserts are measured to within  $\frac{1}{32}$ ".**

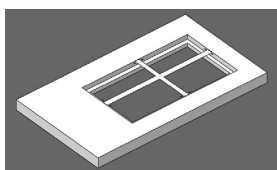

Please measure across the **Cabinet Opening flush with the Cabinet Top**. Imagine laying a yardstick (or tape measure) all the way across the Cabinet Top; the part of the Cabinet Opening that the yardstick crosses is what should be measured.

**If you already have a different Insert for your same Cabinet, DO NOT measure any pre-existing Insert to determine the measurements of your Cabinet Opening.**

However, if you do have a previous insert from Dream World for your Cabinet, look to see if there is a Serial Number etched anywhere on it. If there is, please include that number with your order. There is an "Order Comments" field in the "Payment Information" step of the checkout process where you can enter the Serial Number.

VISA MASTERCARD DISCOVER

Credit Card Number \*

Expiration Date \*

Month Year

Card Verification Number \*

Where did you hear about our web site?

Order Comment

## 4) Information About Your Machine

You will need to know the Make and Model of your machine, and whether or not you plan to use a Knee Lift with the machine.

A Knee Lift is an angled bar that can be inserted into a sewing machine (usually the front). You can tap the bar with your knee to raise and lower the presser foot. The reason we need to know this is because machines with Knee Lifts attached usually need to be positioned differently on the cabinet's lift than machines without an attached Knee Lift, usually brought more forward and to the left so that the Knee Lift does not bump into the lift or anything else that might be below the cabinet. Because of this, Dream World cannot use their standard placement on machines that have an attached Knee Lift; they must re-position and reset their templates, which is why there is a \$15 charge for machines that will be using a Knee Lift.