

Add-a-Fuse

Alpha Patch Harness

USER MANUAL




Install your Alpha Cradle using Add-a-Fuse patch harness. It draws power from the vehicle's fuse box with the Alpha Cradle installation becoming Plug 'N Play. Therefore, reducing installation time.


Here are the steps:

1 Remove the fuse panel on your car and find an appropriate fuse that will be on the 'accessories/ ignition' circuits. Things like the cigarette lighter/ 12V accessories circuit would be perfect.


2 Remove the existing fuse and place it in the slot as shown below.

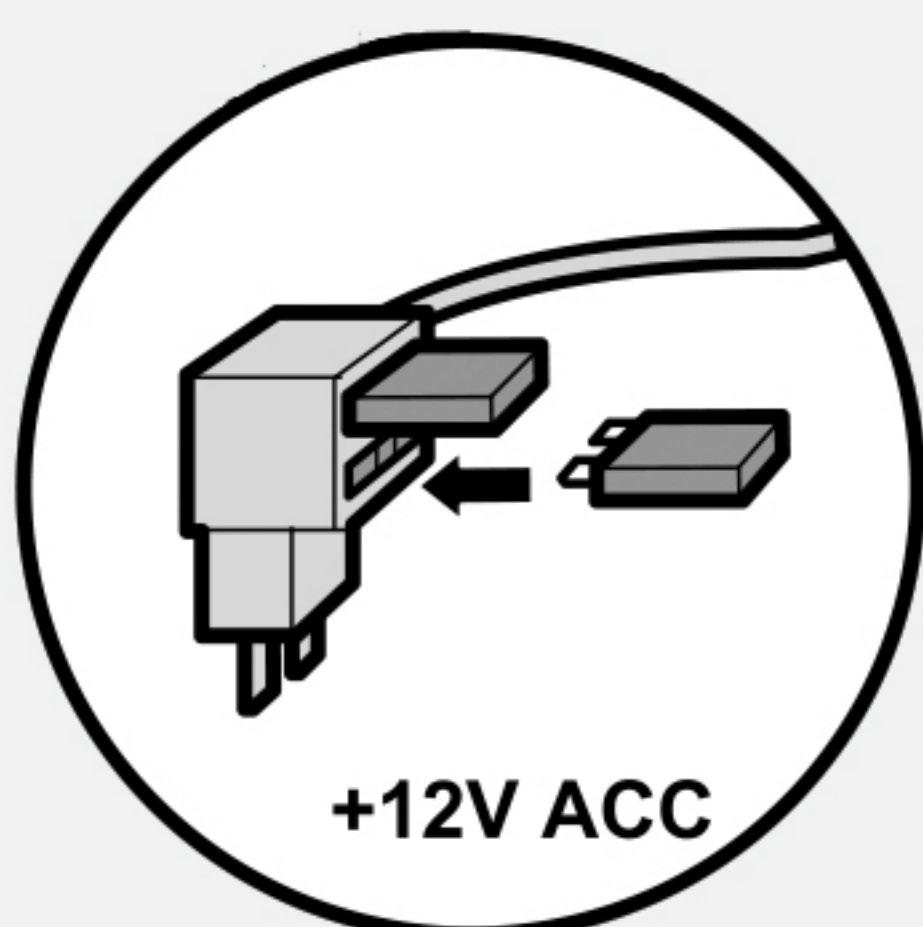

3 Insert the Add-A-Fuse into the now spare spot.

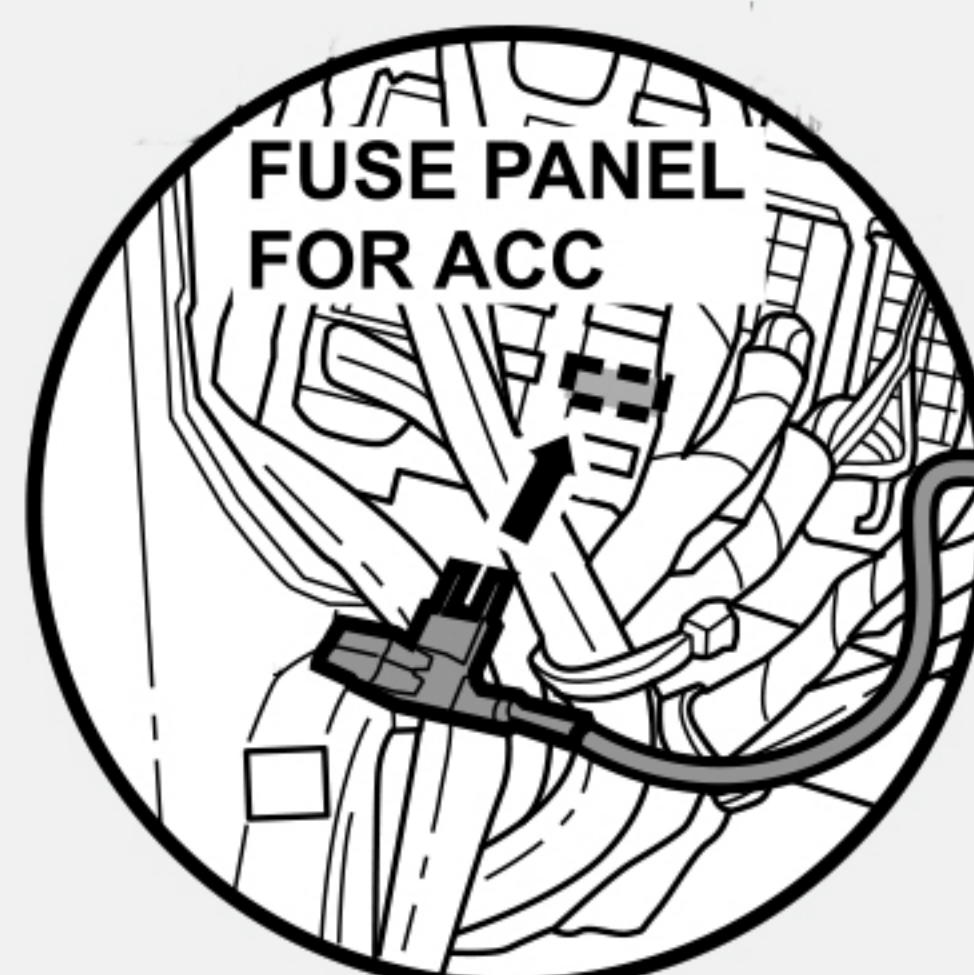

4 Connect the steel circle to a ground on your car. Normally a metal screw nearby will suffice.

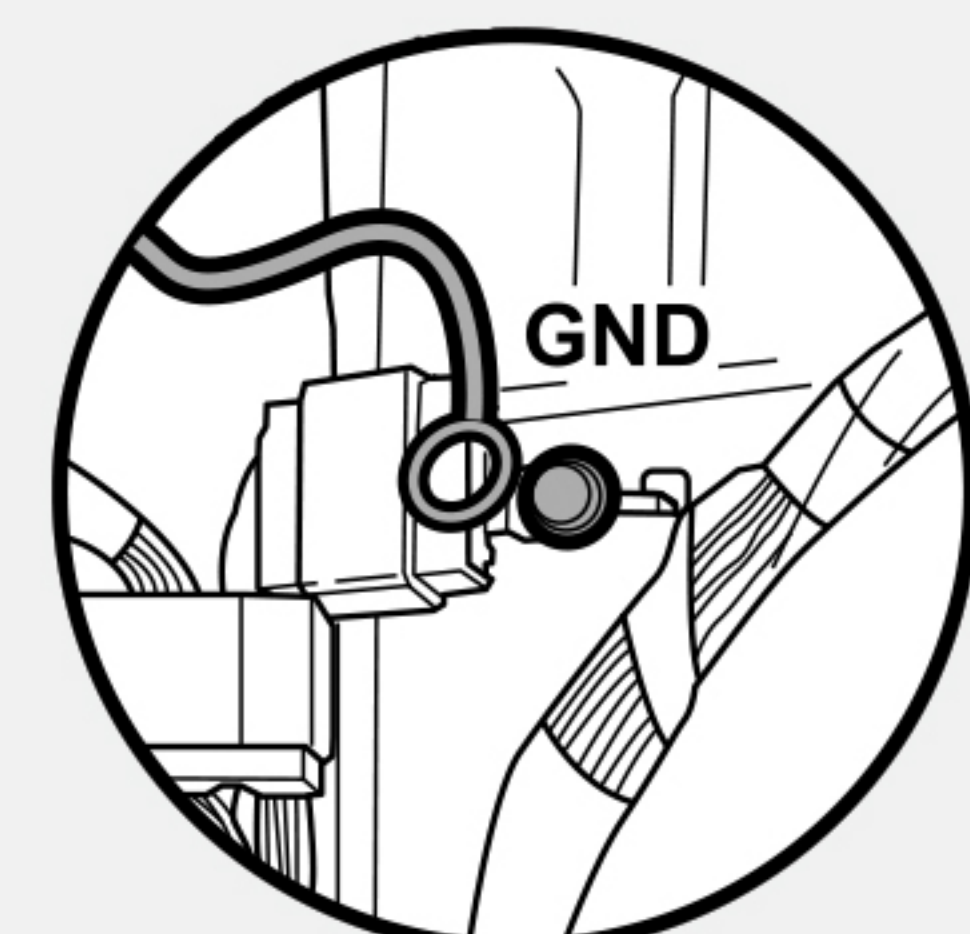

5 Connect to the Strike DC/DC converter and then plug in your device. Turn on your accessories for the car to check if it works.

6 Replace the fuse panel.