
# Shade Weave

# **Installation Instructions**

V0922

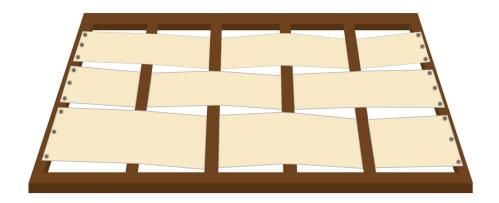

#### TIME TO INSTALL:

10 Min approx. per panel

#### **NOTES:**

Please read instructions before beginning the installation.

Using the QR code below, watch our installation guide video, or visit our FAQ page at www.shadesailscanada.com/faqs







# **TOOLS REQUIRED:**

You'll need:

- Ladder
- Drill (7/16")
- Allen key (3mm or 3/16")
- Pencil

# Optional:


- Tape measure
- Awl or Phillips screwdriver

#### **COMPONENT CHECKLIST:**

What should be included per panel:



1x Shade Weave



6x 5/16" Button Head Screws



6x 5/16" Flat washers



6x Threaded nut inserts

#### STEP o1:


Weave ALL panels through your pergola without attaching the ends (A) and adjust as needed to determine the spacing in between the panels. (Leave panels laying on pergola while you set spacing)


#### STEP 02:


With a pencil, mark the locations of the grommets onto your pergola for one end of each panel (B).

# STEP 03:

In your marked locations, pre-drill holes with a 7/16" size drill bit (C). Screw the threaded nut inserts into the pergola using an allen key (D).

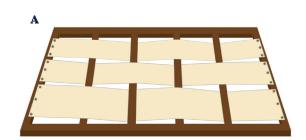


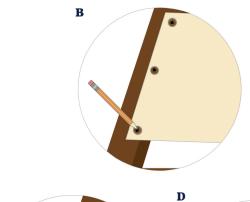

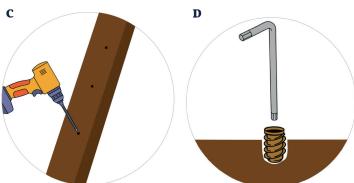

#### **STEP 04:**

Place a flat washer onto a button head bolt. Insert the washer and bolt through a grommet in one end of the panel, and through into the threaded nut that is now inserted into the pergola (E). Tighten with an allen key. This will secure your panel to the Pergola. Repeat for each grommet in one end of each panel.

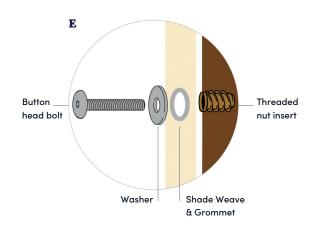

#### STEP 05:

Tension the panel, making sure it is tightly woven through the pergola by pulling on the opposite end. Mark the grommet positions (step 02) and repeat steps 03 and 04 so that both ends of the panel are secured to the pergola. Now you can relax and enjoy the shade!

# **Adjusting Panel Length:**

You'll need gloves and a piece of scrap wood. Roll the long end of the panel over itself until the desired length is reached (F).


Mark the position of where you will make your new holes, making sure they are lined up with the grommets. Place the scrap wood underneath the panel to avoid damage to your structure. Using a sharp tool like an awl or a Phillips screwdriver, pierce through the fabric (G).


Repeat steps 04 and 05.

Your Shade Weave is now ready for many years of use.



Please continue reading for product care, maintenance and warranty information.

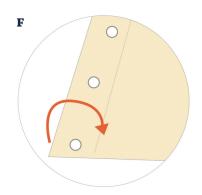

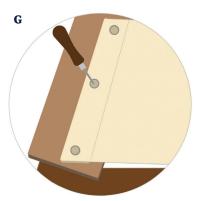

#### PRODUCT CARE & MAINTENANCE

# To remove your Shade Weave for winter storage:

Shade Weaves are not designed to handle snow loads and must be taken down before the snow begins to fall to avoid damage. Unscrew your Shade Weave (leaving the wood inserts in the pergola for the next season) clean, dry and store away. Note: Store in dry, rodent free location.

# **Cleaning your Shade Weave**

Cleaning of your Shade Weave can be done by washing it down with a garden hose while in place, or taken down and scrubbed with a moderately stiff broom using a mild detergent.

When installing Shades Weaves, be sure to keep them away from barbecues, light fixtures, heating units, vents, or any sharp objects which might damage your Shade Weave.

#### **Limited warranty**

Our Shade Weave warranty lasts for a period of 12 months from the date of purchase, against defects or damages caused to the product due to faulty materials used in the manufacture of the product and/or faulty workmanship in the manufacture of the product. This warranty applies when the product is used under normal conditions and for its intended use.

Our fabrics are warrantied for 10 years against UV degradation. In the event of a warranty claim, please contact Shade Sails Canada Inc, in writing, immediately on discovery of suspected product failure.

#### Please note:

Since the customer is installing the Shade Weave, there is no warranty against any damages which may occur to the product due to improper handling of the product or improper installation procedures employed by the customer.

# Thank you for choosing Shade Sails Canada.

We hope you enjoy your Shade Weave, proudly made in Revelstoke, BC, Canada. Our team appreciates reviews and feedback.

www.ShadeSailsCanada.com info@ShadeSailsCanada.com Toll free 1-855-899-8290 222 Hwy 23 North, PO Box 2940, Revelstoke, BC V0E 2S0

# Follow & share on social media:

facebook.com/ShadeSailsCanada Instagram @ShadeSailsCanada youtube.com/c/ShadeSailsCanadaTV