300 PULL OUT FITTING

inted tcher

APPENDIX

- 1—Introduction and opening the box
- 2—Familiarisation with the parts
- 3—Runner Positioning
- 4—Adjustments

Congratulations on your purchase of our Cabinetry.

We have strived to make this from the very best materials we can whilst keeping the cost as low as possible.

We are really pleased with the end result and hope that you will be too.

This booklet goes over the general construction of a carcase and attaching the frame, further instruction manuals are available for Drawer construction and fitting, and attaching hinges.

<u>Step 1</u>

Open the box—we find it easiest to turn the box upside down (So the top is on the floor) and then cut the Sellotape around, this will allow you to remove the entire bottom of the box. We have not used Sellotape on this part of the box to try and reduce plastics used in the packing process and to also aid recycling which we would actively encourage.

You can then see what is inside, we have used a soft foam wrapped caringly around every part.


Slowly lift this and begin to remove each part and place on the floor around you.

You will also find a box of fittings, which will include, Dowels, Screws, Magnetic catch.

<u>Step 2</u>

Separate out the parts and familiarise yourself with the components.

Below if a CAD drawing of all the parts

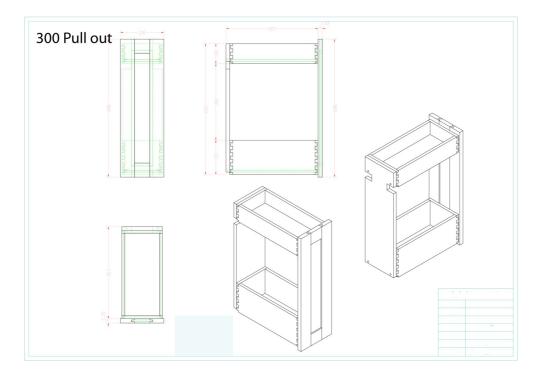



<u>Step 3</u>

Placement of runners.


See template below and pictures





Step 4

Slide in and adjust runners as needed

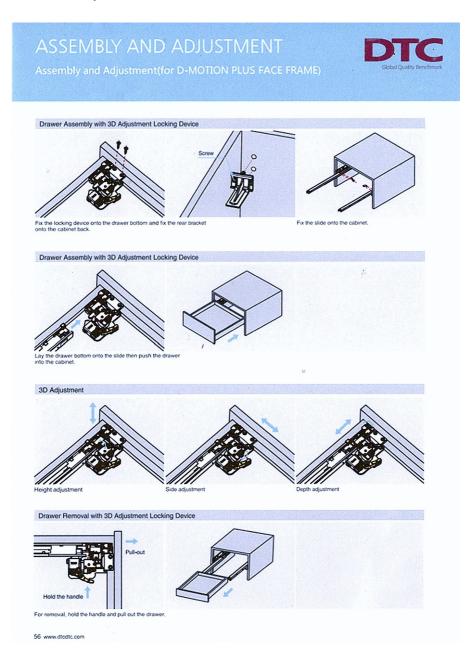

2024

Painted Kitchen Company Limited