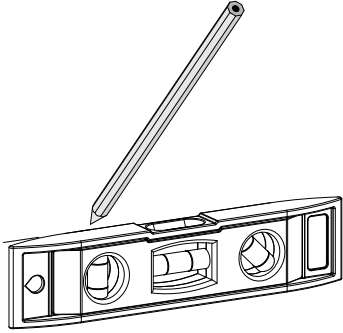
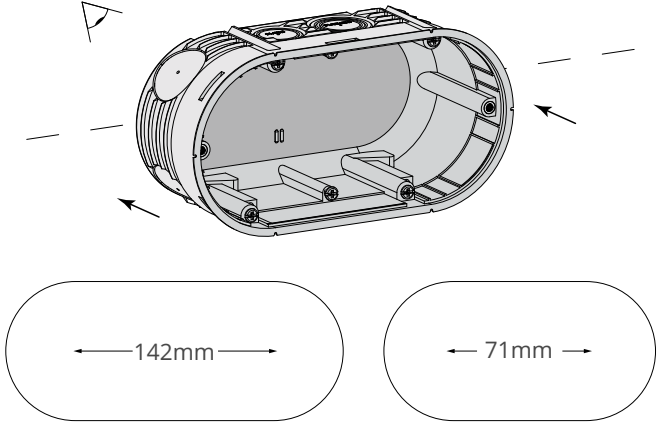
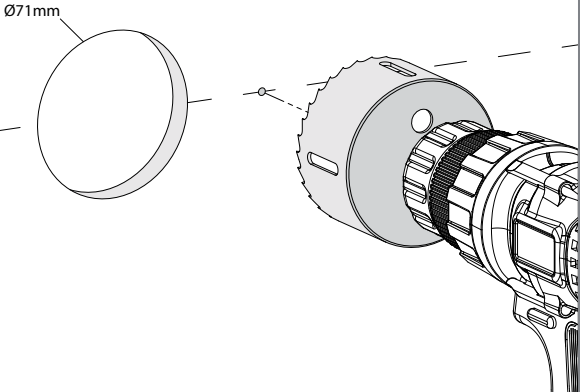
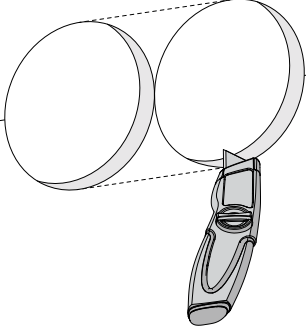
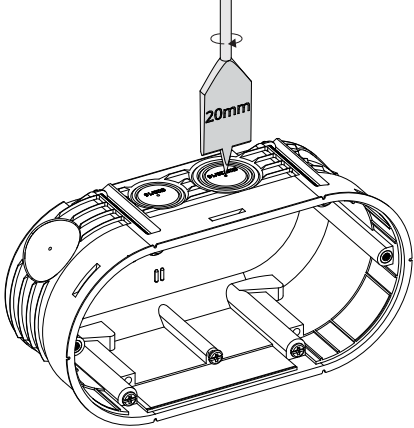
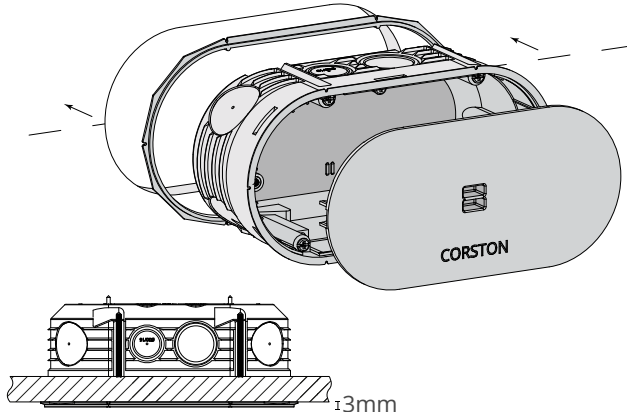
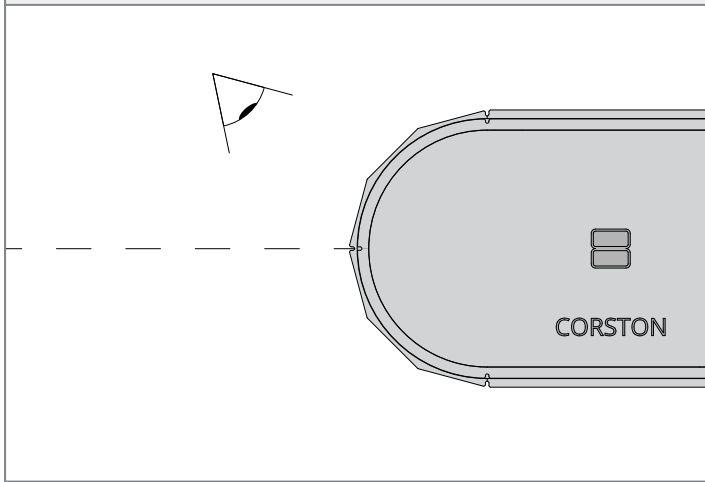
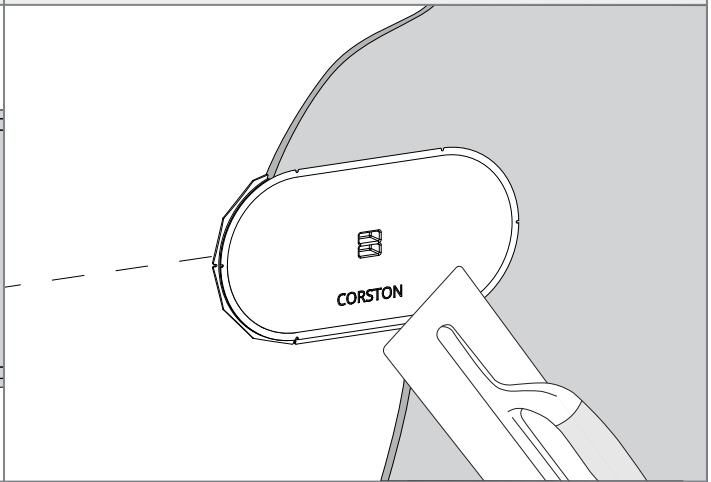
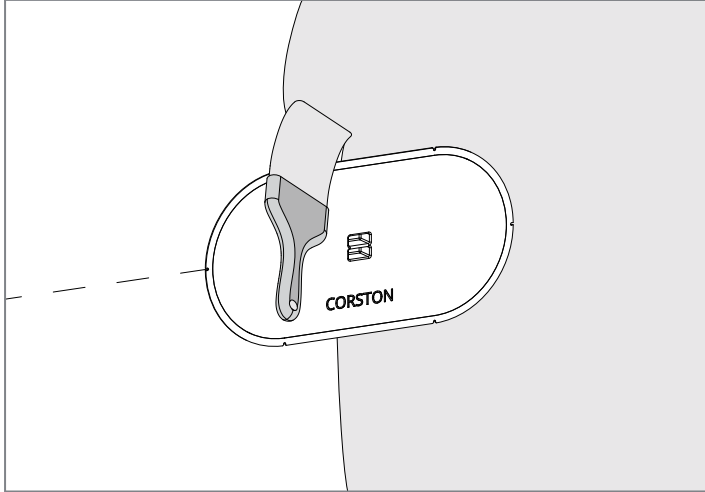
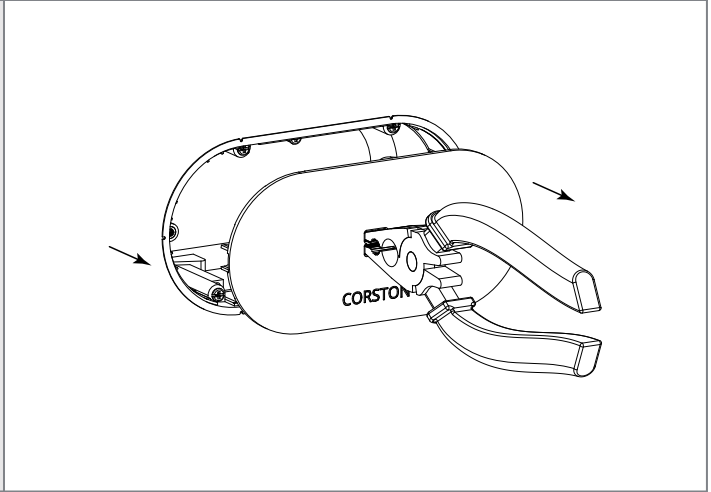
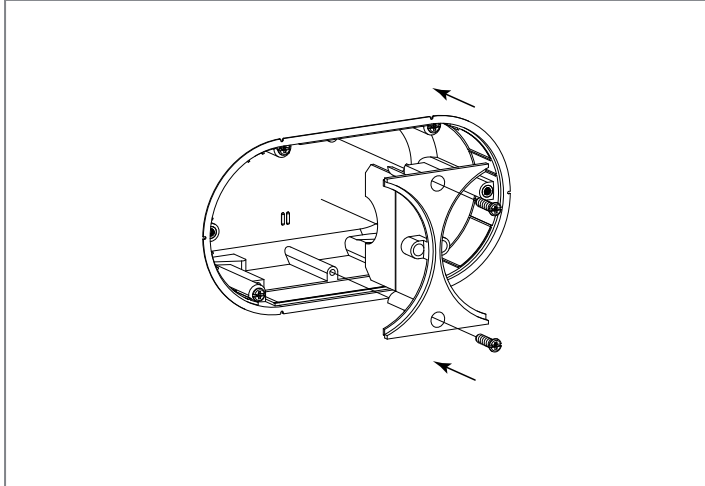
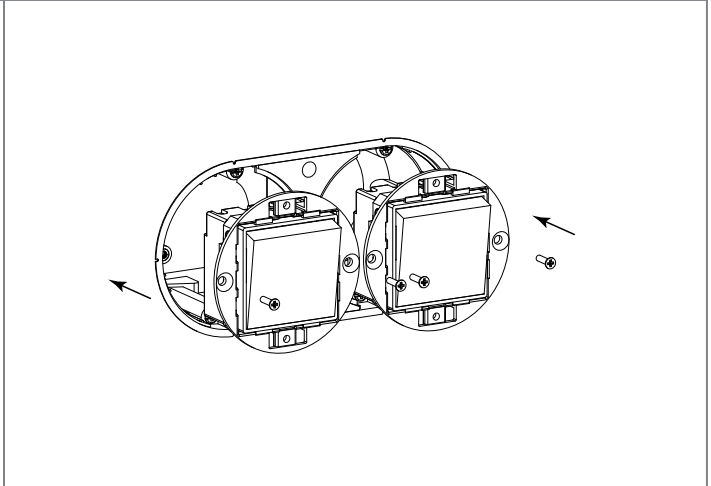


3mm Render Trim Fitting Instructions

<p>1. Draw a horizontal line on your wall, to help position your back box accurately</p>	<p>2. Use the back box to mark out hole distance</p>
	
<p>3. Drill 71mm holes using Corston holesaw</p>	<p>4. Cut excess plasterboard</p>
	
<p>5. Drill conduit holes</p>	<p>6. Install back box and render trim into wall</p>
	

3mm Render Trim Fitting Instructions

7. Ensure back box is installed level	8. Plaster wall, and ensure your back box is level
	
9. Paint wall	10. Remove back box cover
	
11. Install back box divider	12. Install chassis
	

3mm Render Trim Fitting Instructions

13. Install front plate

