

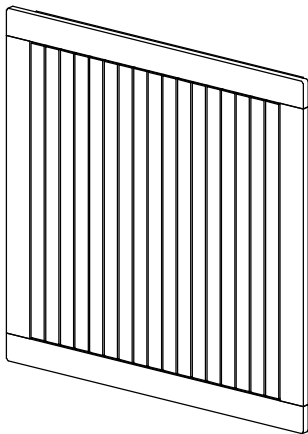


dibor


ASSEMBLY INSTRUCTION FOR Burbank Coffee Table

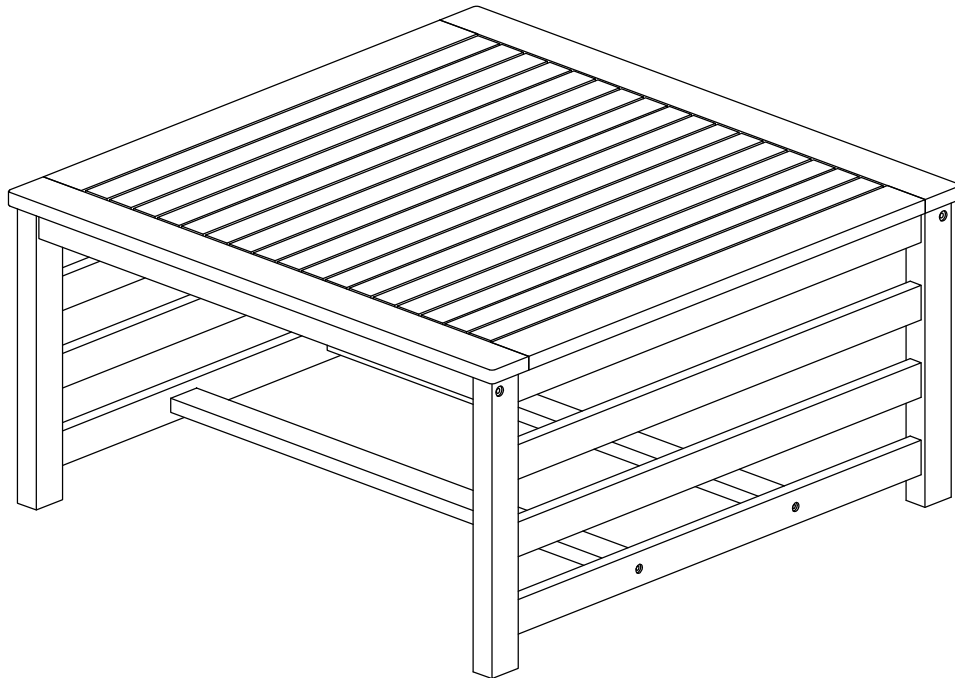


A(x1)

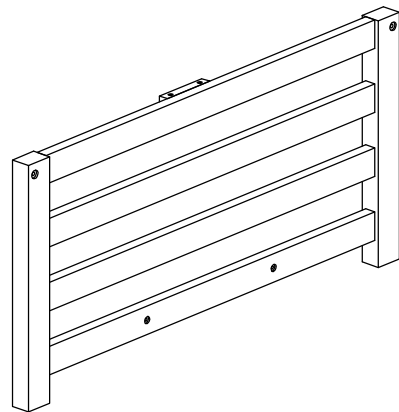

B(x2)

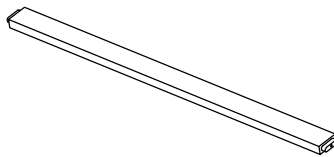


C(x2)




M6x70 mm

D(x4)



M7x70 mm

E(x4)




M4x30 mm

F(x4)




M4

G(x1)

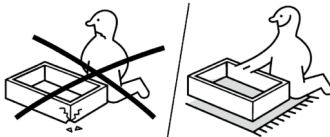



1

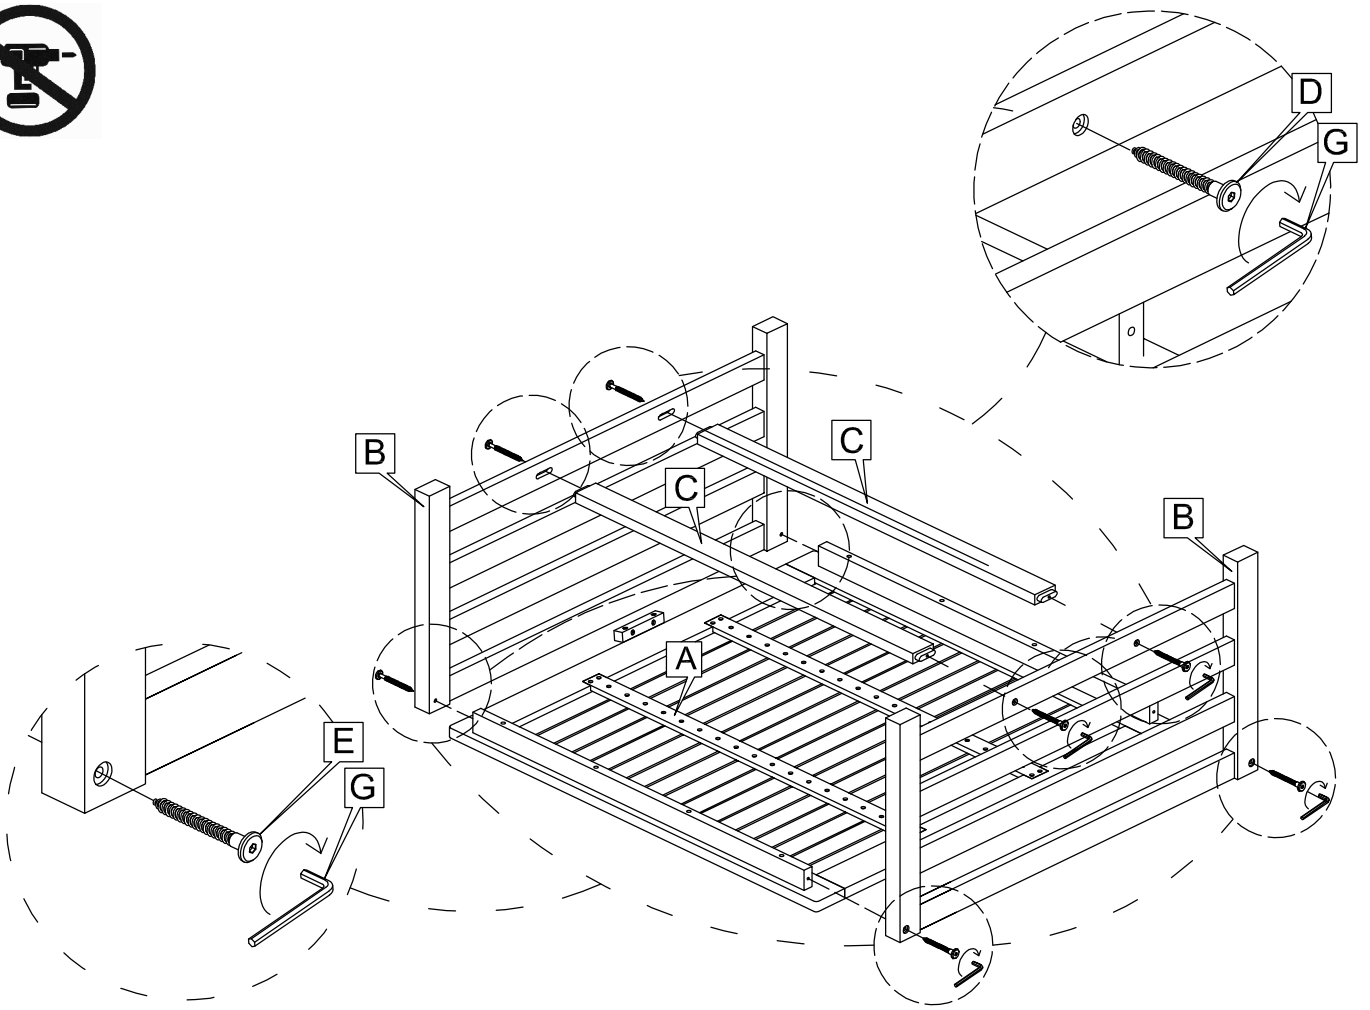

2

