




**TOWARDS CAB**

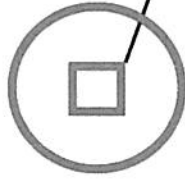

**1) CUT 4 SQUARES OUT**  
**2 - LINE UP SQUARE HOLES WITH SQUARE HOLES IN THE TAILGATE**

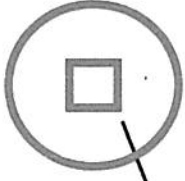

**3) USING A 6MM DRILL BIT DRILL HOLES**



**AWAY FROM TRUCK**

