





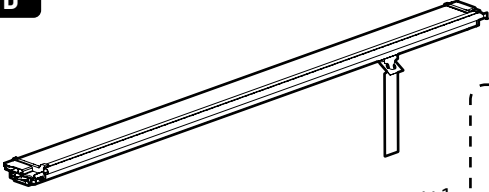

# MOUNTAIN TOP<sup>®</sup> EVOe

Installation manual





DOWNLOAD PDF

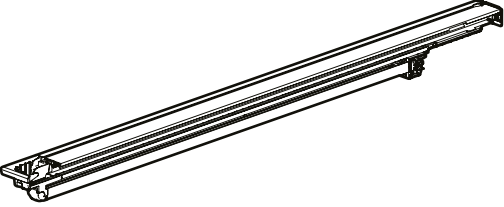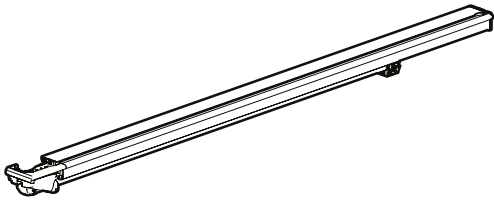
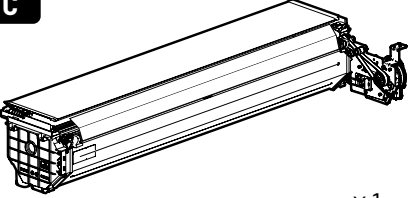










Parts





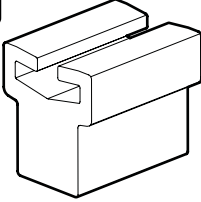
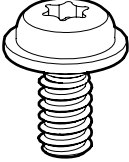
<p><b>A</b></p>  <p>x1</p>	<p><b>B</b></p>  <p>x1</p>
<p><b>C</b></p>  <p>x1</p> <div style="border: 1px dashed black; padding: 2px; display: inline-block;"> <p><b>X2</b></p>  <p>x2</p> </div>	<p><b>D</b></p>  <p>x1</p> <div style="border: 1px dashed black; padding: 2px; display: inline-block;"> <p><b>Y2</b></p>  <p>x1</p> </div>









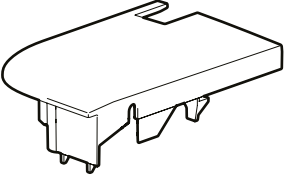
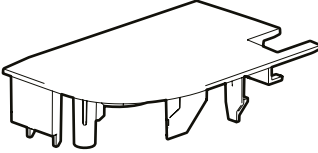
Kit


<p><b>E</b></p>  <p>LEFT x1</p>	<p><b>F</b></p>  <p>RIGHT x1</p>
--	--

Kit
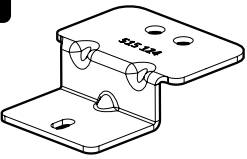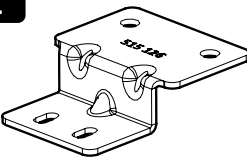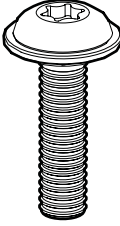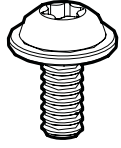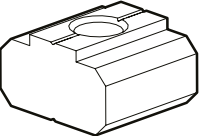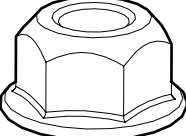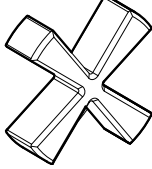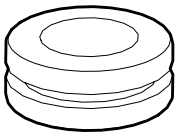
<p><b>G</b></p>  <p>x1</p>	<p><b>H</b></p>  <p>x1</p>	<p><b>I</b></p>  <p>x1</p>	<p><b>J</b></p>  <p>x1</p>
<p><b>K</b></p>  <p>Rap Cab: x 0 Double Cab: x 2</p>	<p><b>L</b></p>  <p>Rap Cab: x 4 Double Cab: x 2</p>	<p><b>M</b></p>  <p>M8x30 x 18</p>	<p><b>N</b></p>  <p>Rap Cab: x 16 Double Cab: x 14</p> <p>M6x12</p>
<p><b>O</b></p>  <p>x6</p>	<p><b>P</b></p>  <p>x6</p>	<p><b>Q</b></p>  <p>x2</p>	<p><b>R</b></p>  <p>x1</p>

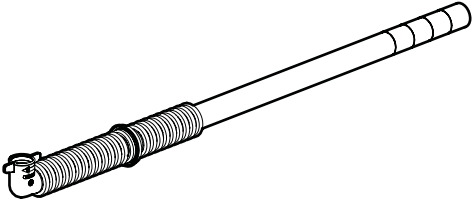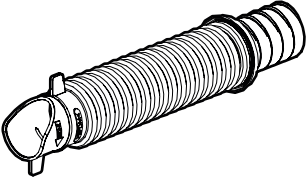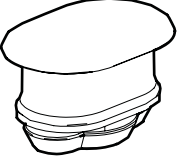
Kit			
<b>S</b>			x 2
<b>T</b>			x 2
<b>U</b>		<b>V</b>	
x 2	M6x30	x 2	
<b>W</b>			x 5
<b>X</b>			x 5
	M6x16		

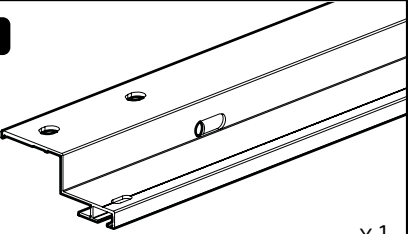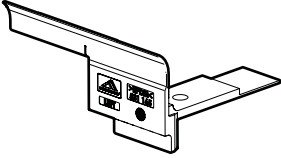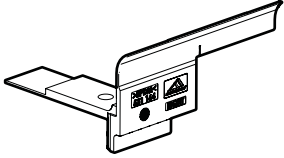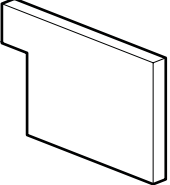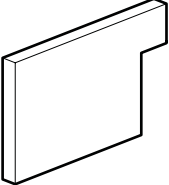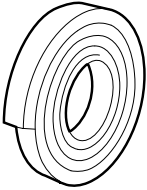Kit			
<b>A2</b>			x 1
<b>B2</b>			x 1
<b>C2</b>			x 1
<b>D2</b>			x 1
<b>E2</b>			x 1
<b>F2</b>			x 1
<b>G2</b>			x 1
<b>H2</b>			x 2
6x25mm			
<b>I2</b>			x 1
6x10mm			
<b>J2</b>			x 2
M5x14			

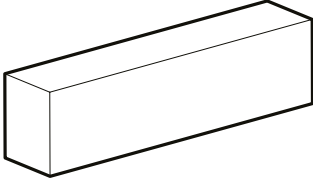Kit	
<b>K2</b>	
20x25x100mm	x 2


LED Kit

M2

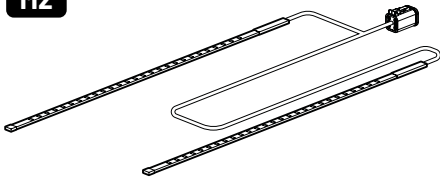


x1

N2

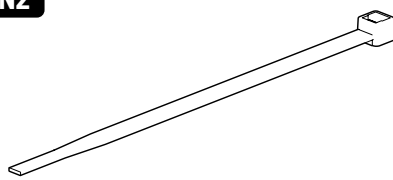

x6


O2

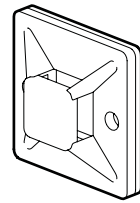

x6

Power supply kit

P2

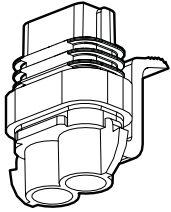


x1

Q2




x1

R2

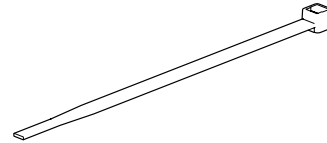

x6


S2



x1


Kit

T2

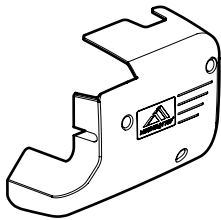

x1


U2



M5x10

x3

V2

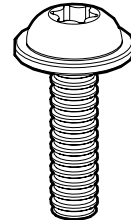


M6x20

x2

Kit


W2

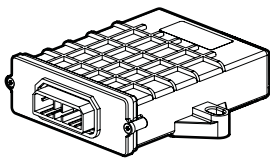

x1

Kit


Z2

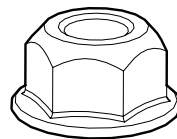

M6


x2

Z3

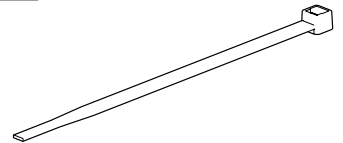


x10

Kit

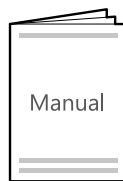

Manual

x1

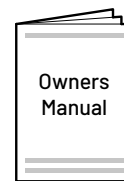
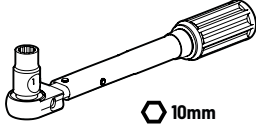





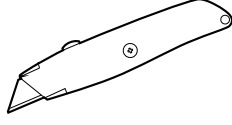

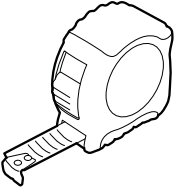
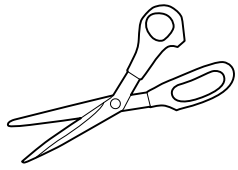





Owners  
Manual


x1



## Tools needed

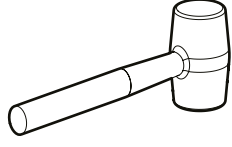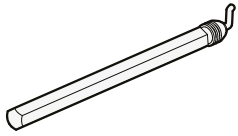 Ø3.5 + Ø10 MM	1 - 25 Nm  10mm T20, T30, T40	 Rust protection Rostschutzmittel Anti-rouille Anti roest	 SUPER GLUE (CA)	
		 SEALER		 H <sub>2</sub> O
				 LOCTITE 243

## Applying rust protection

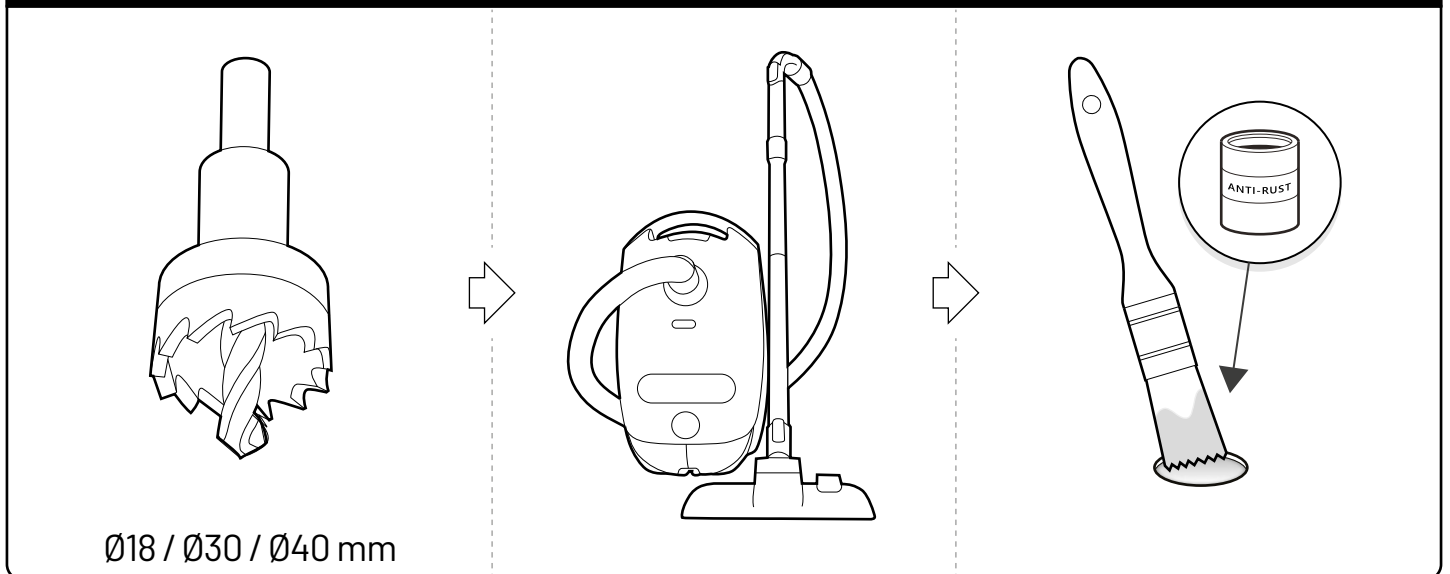





**If sheet metal is scratched during installation,  
apply rust protection to damaged areas**





**Tie must not be attached to AC lines  
(AC lines are the metal pipes in the engine bay)**

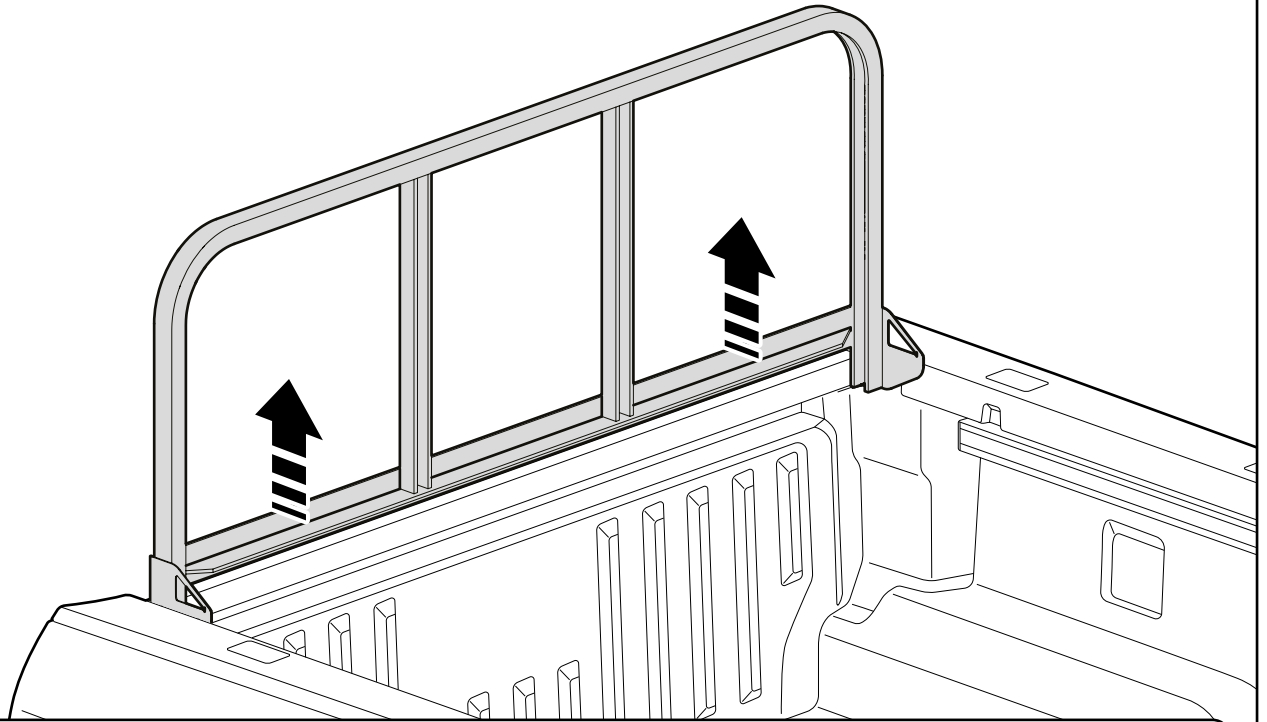


**Rollershutter not compatible with load rest bar - part cannot be re-installed once Rollershutter have been installed (store parts)**

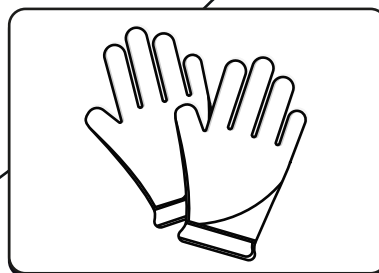


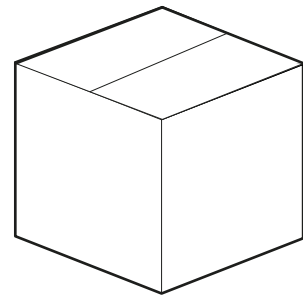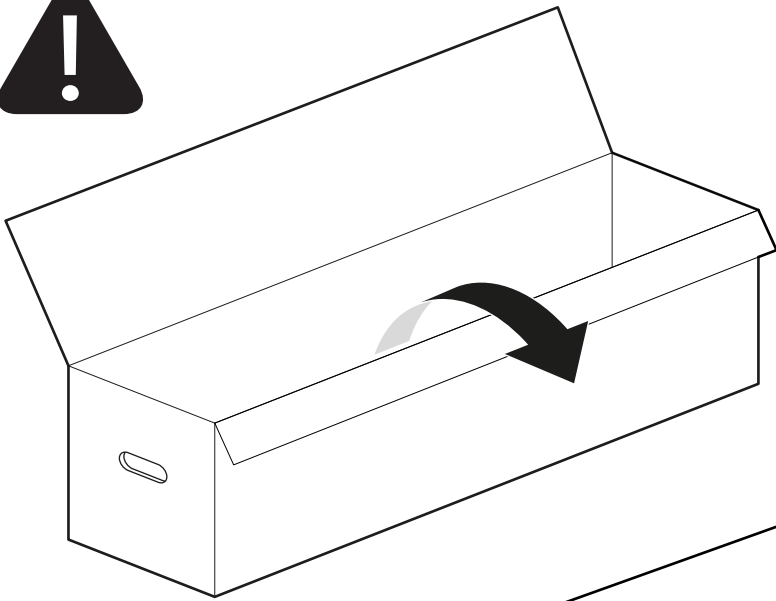


**C**

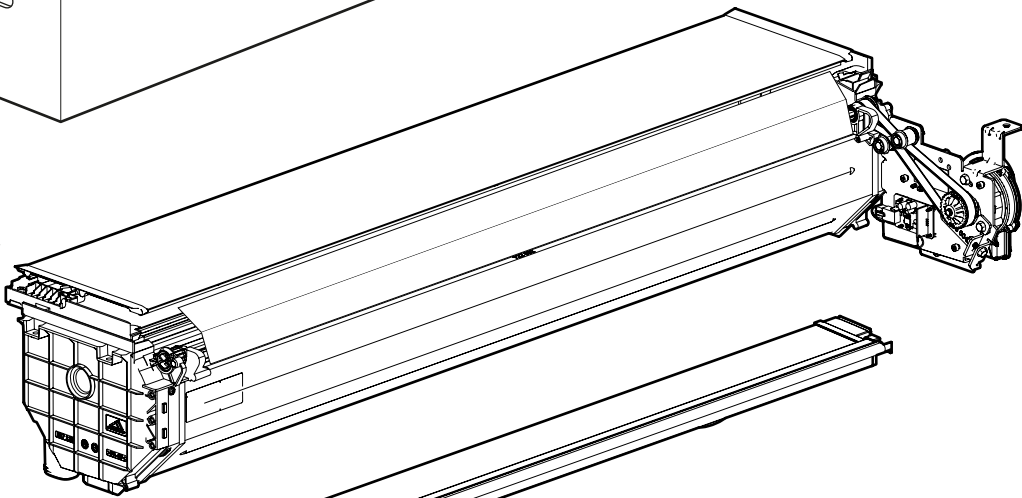


**D**

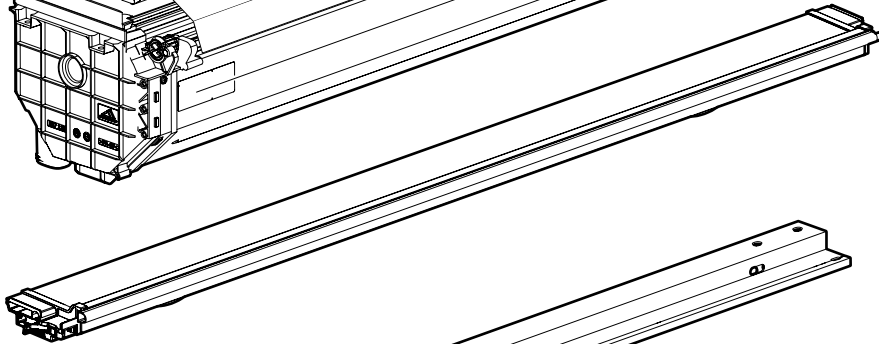


**A2**

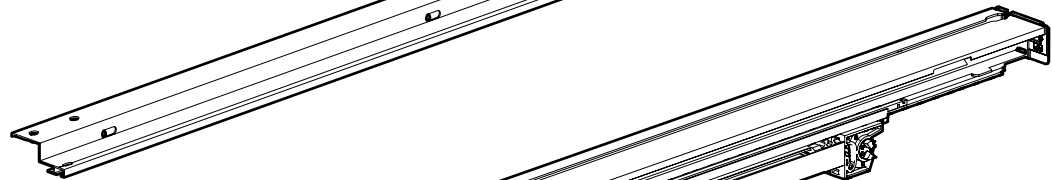


**A**

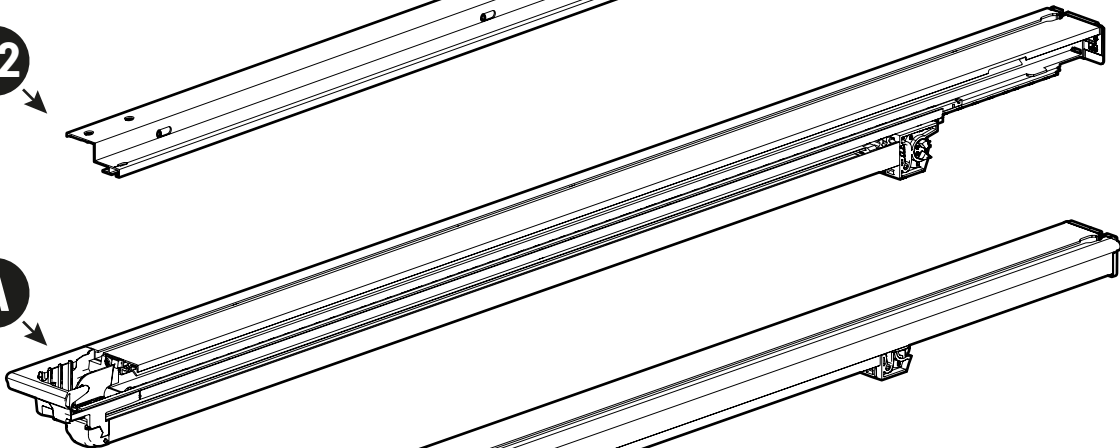


**B**

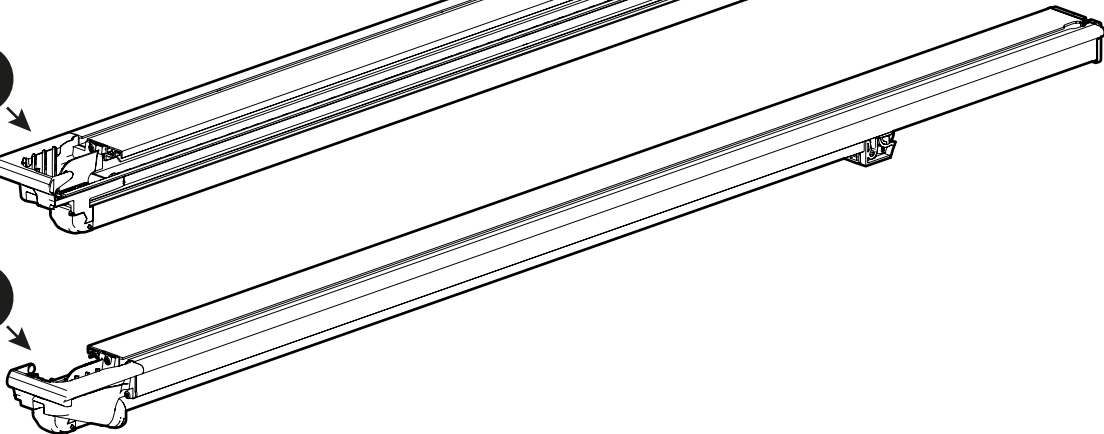


 Water & sponge




2

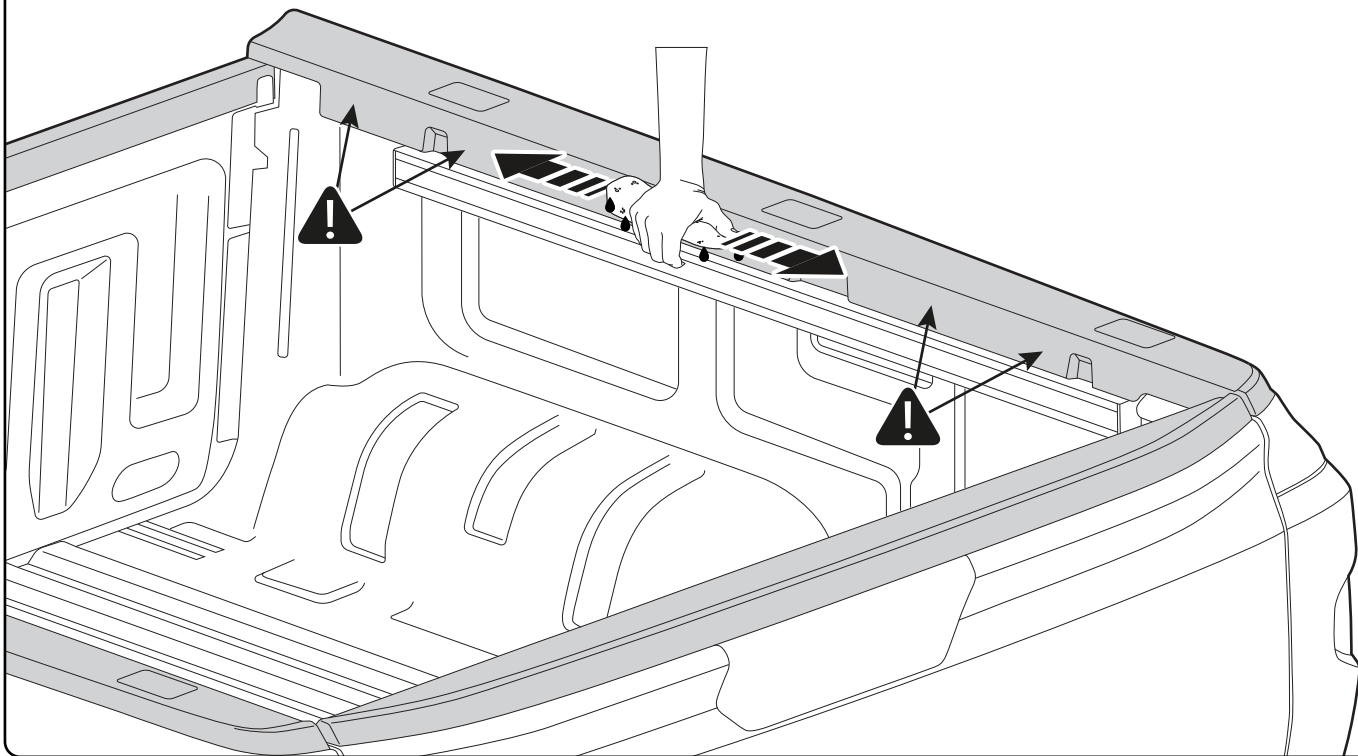

3

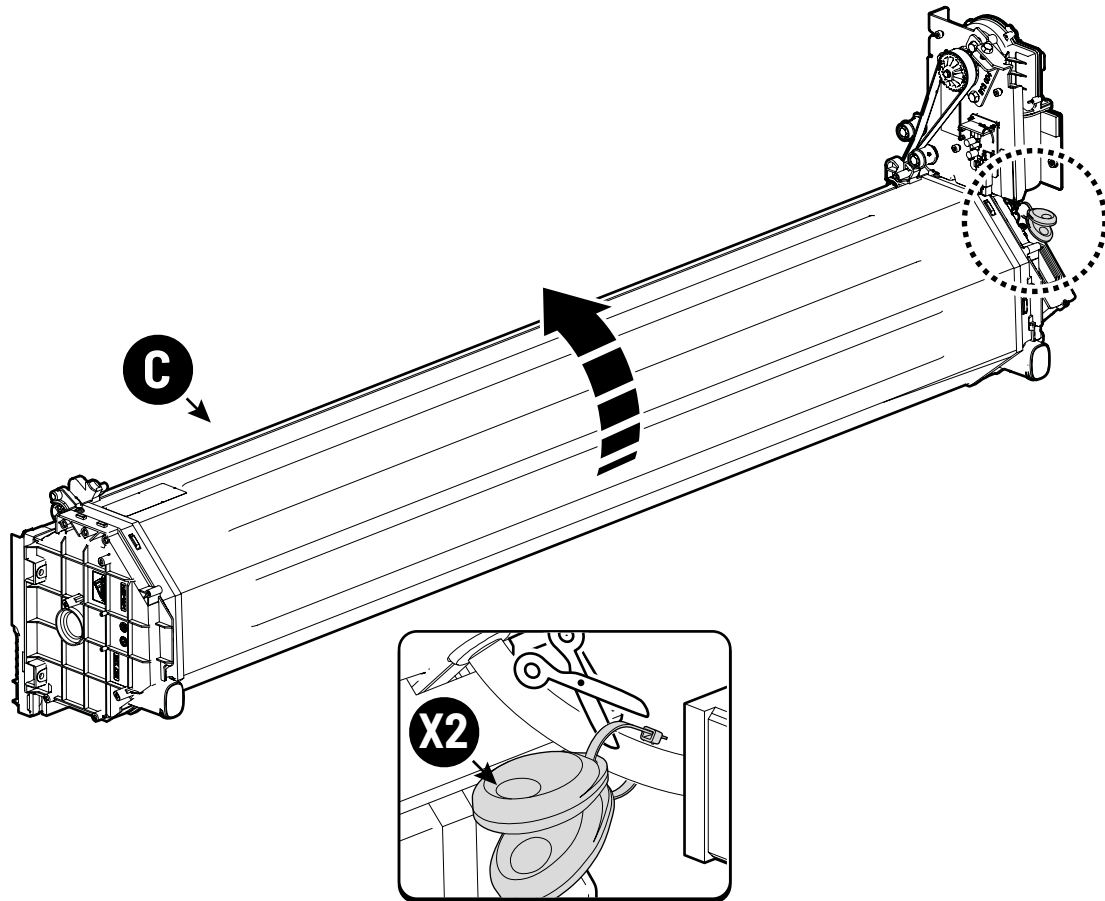


W2

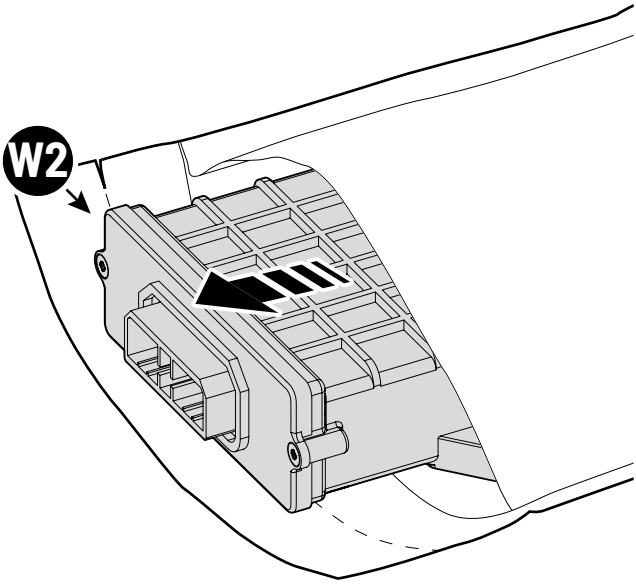

1

W2

C

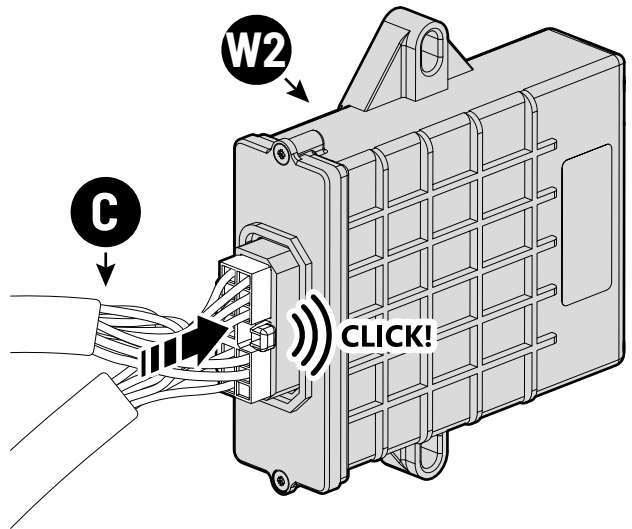

2




4mm


2,4Nm

T2

U2

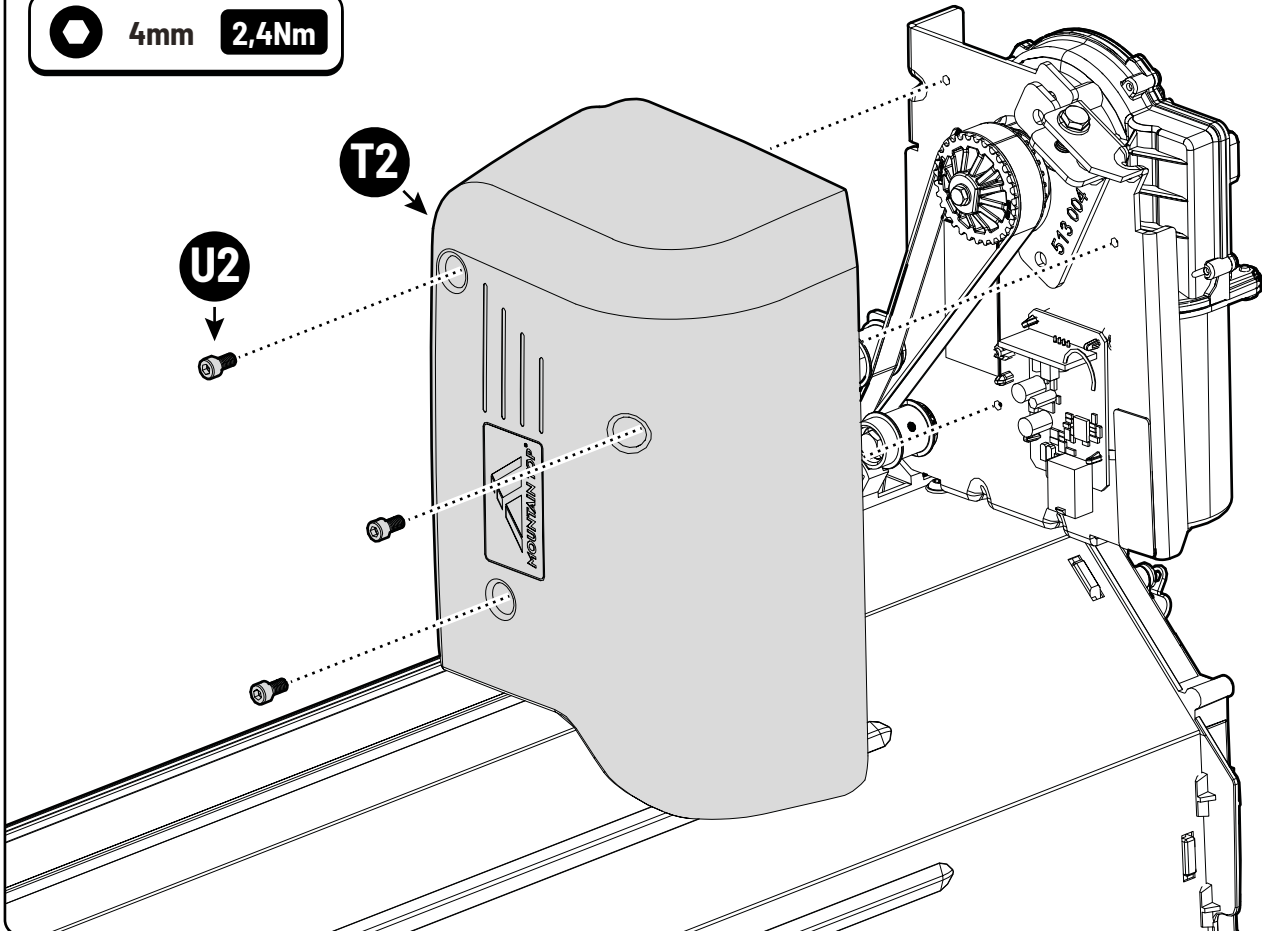




6

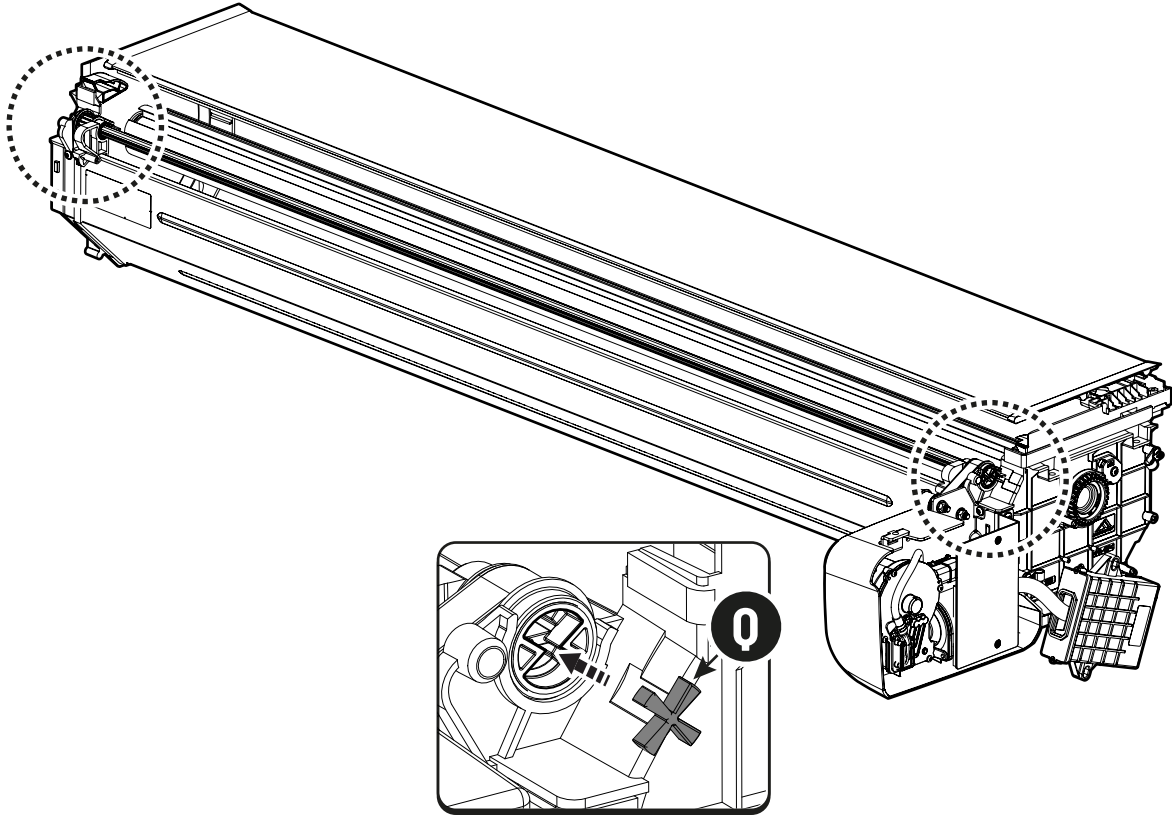



x2





7


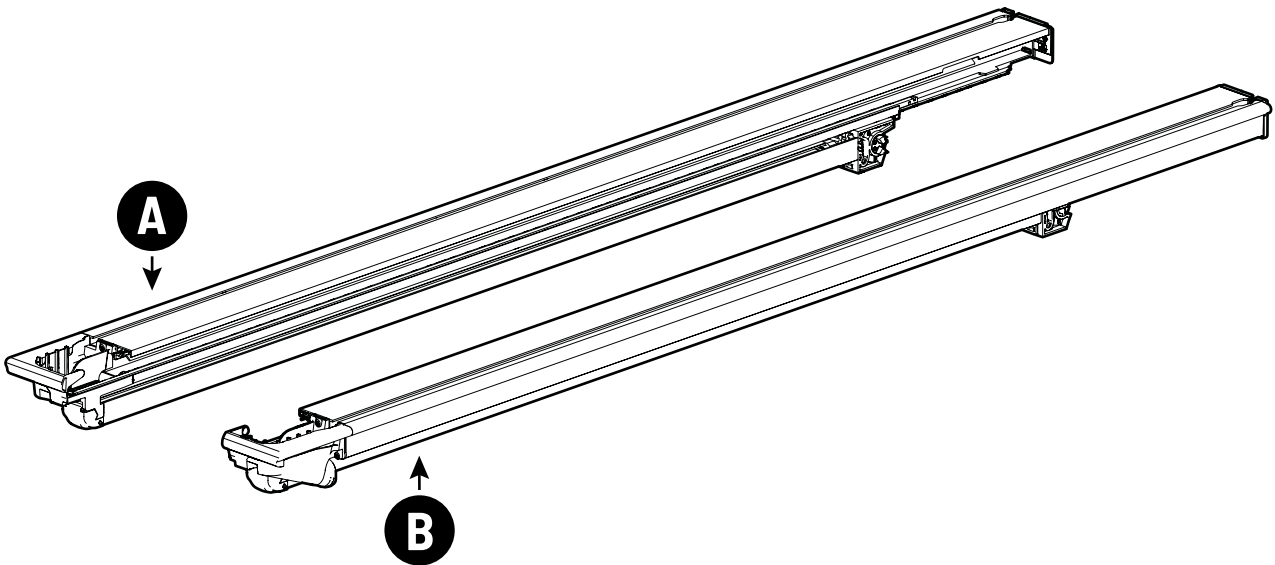


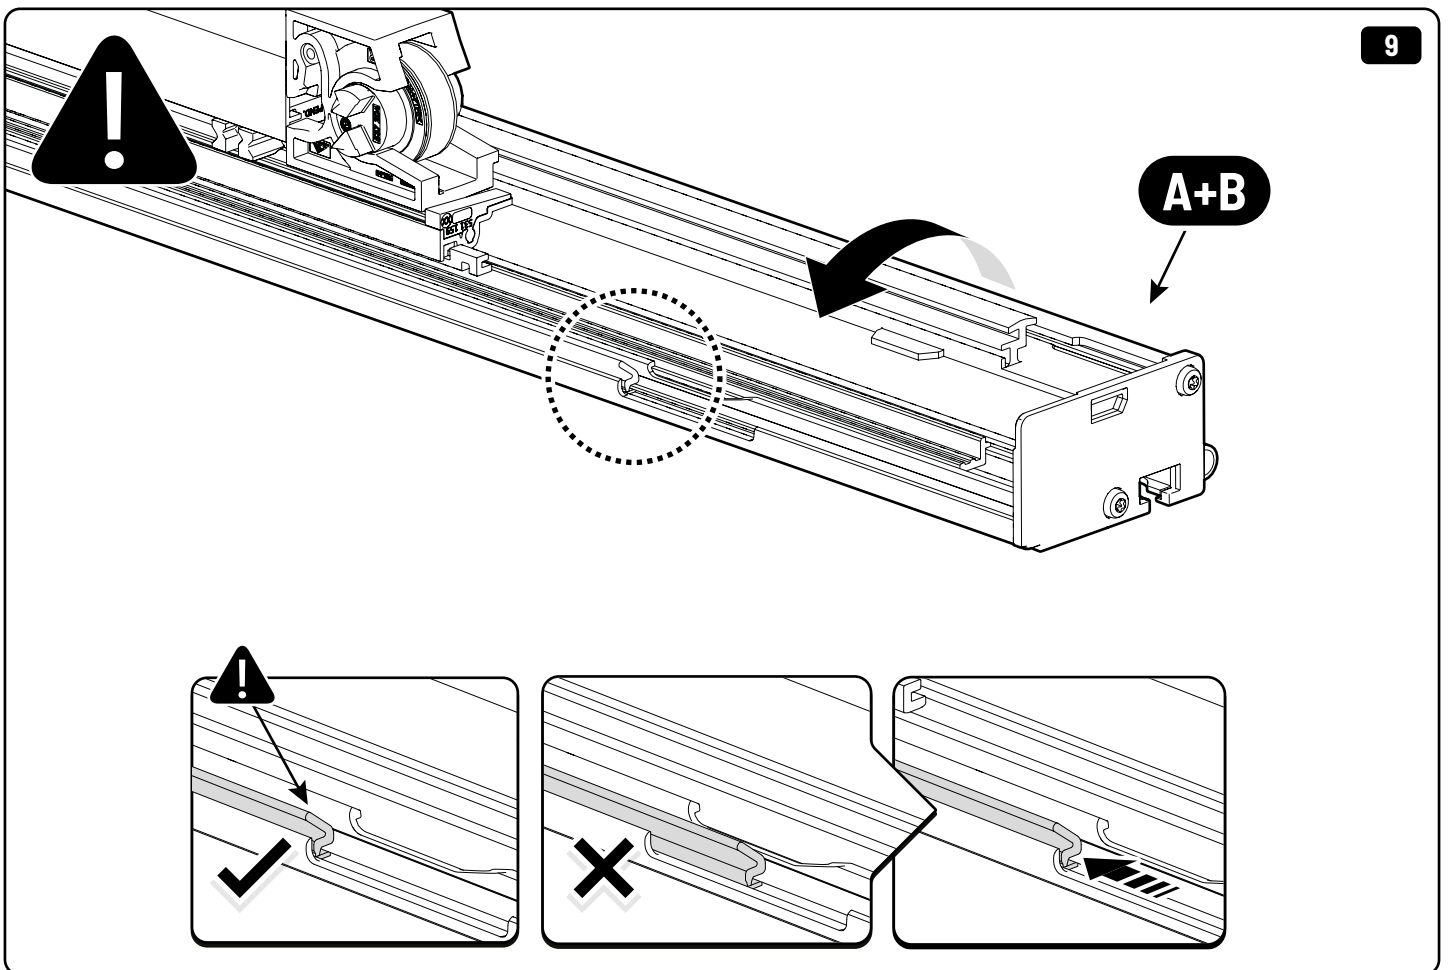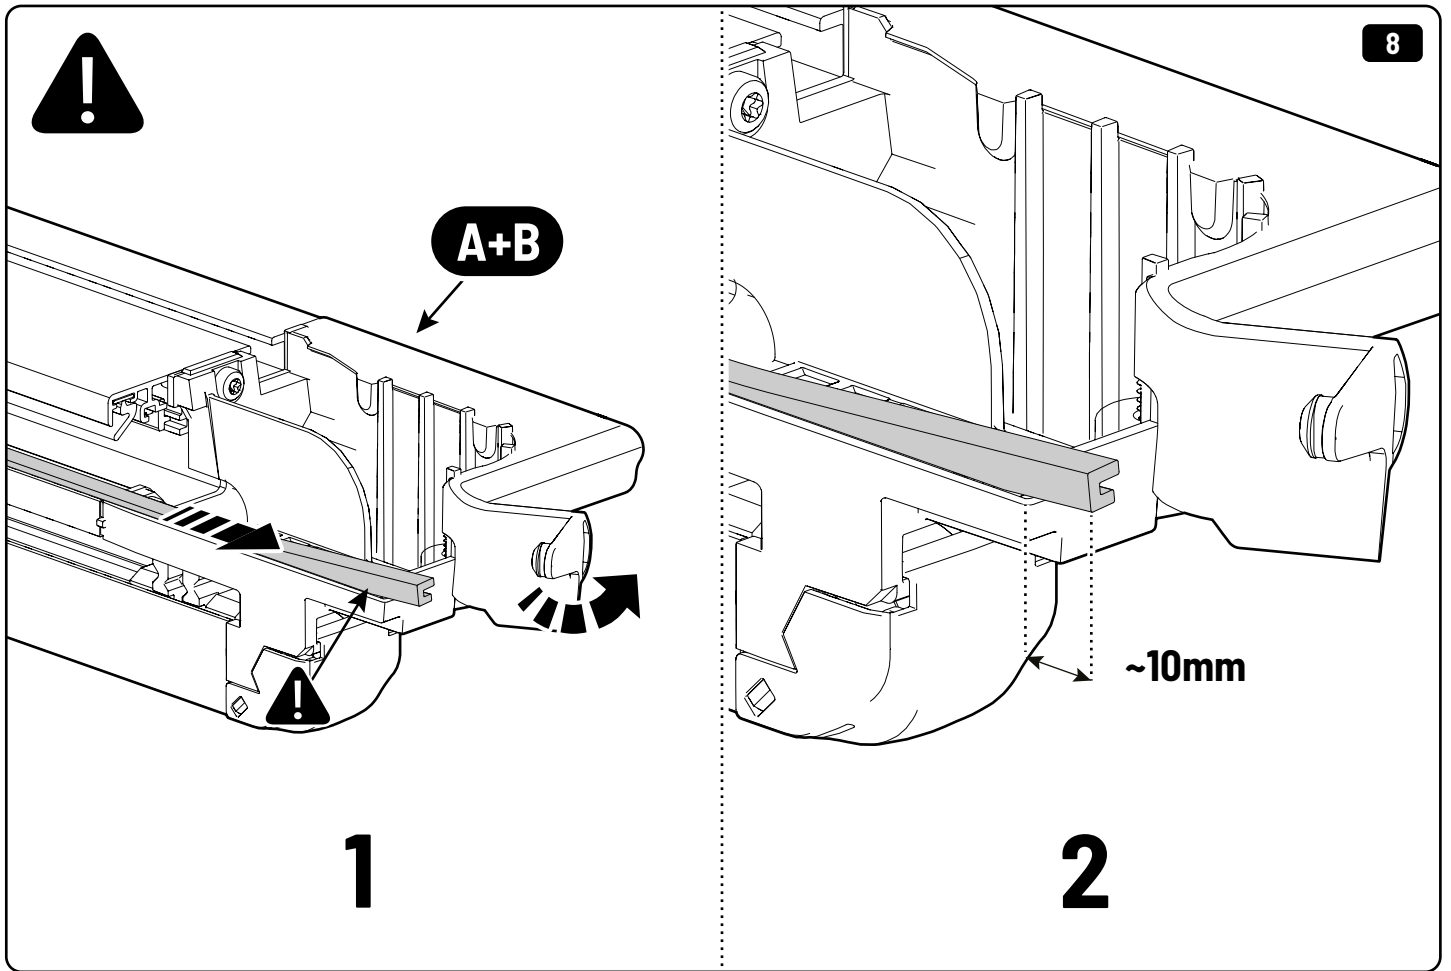




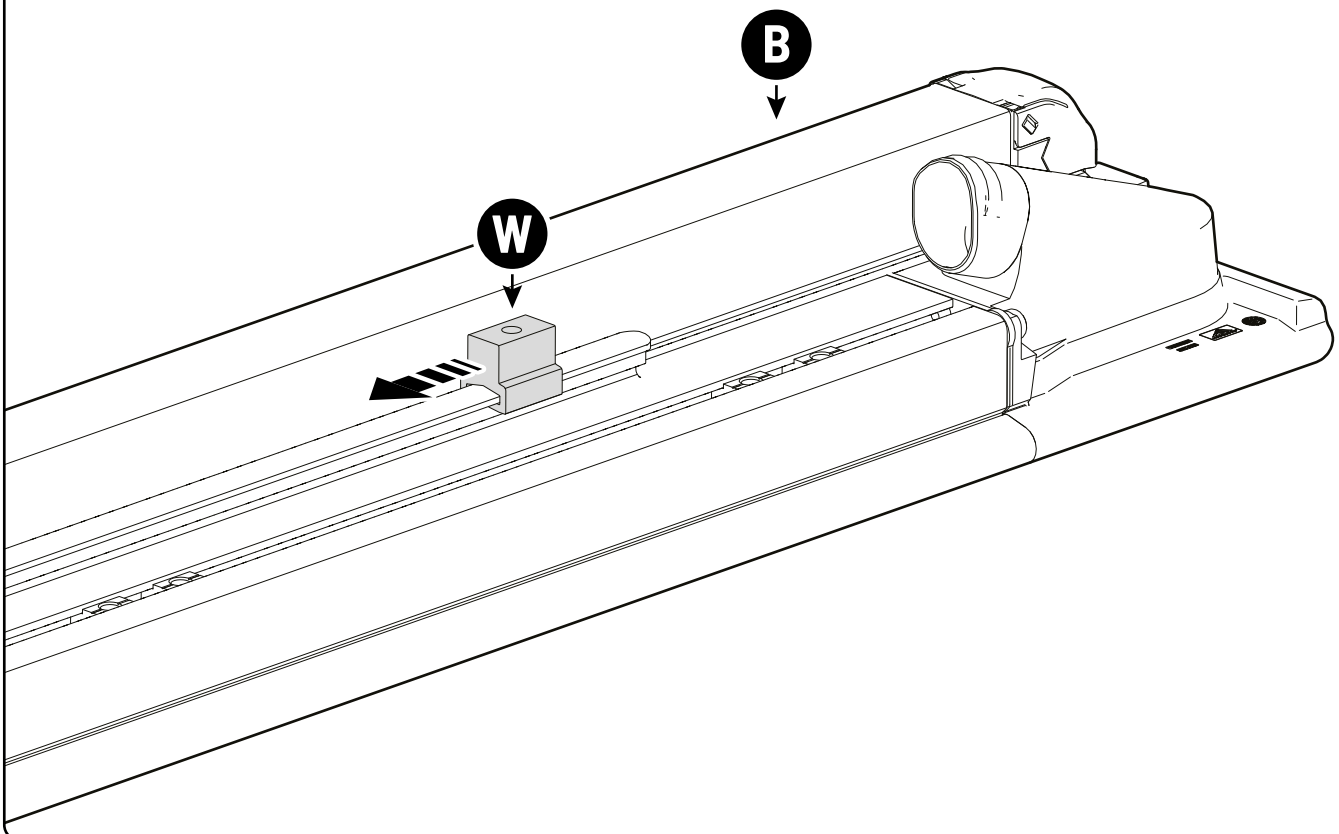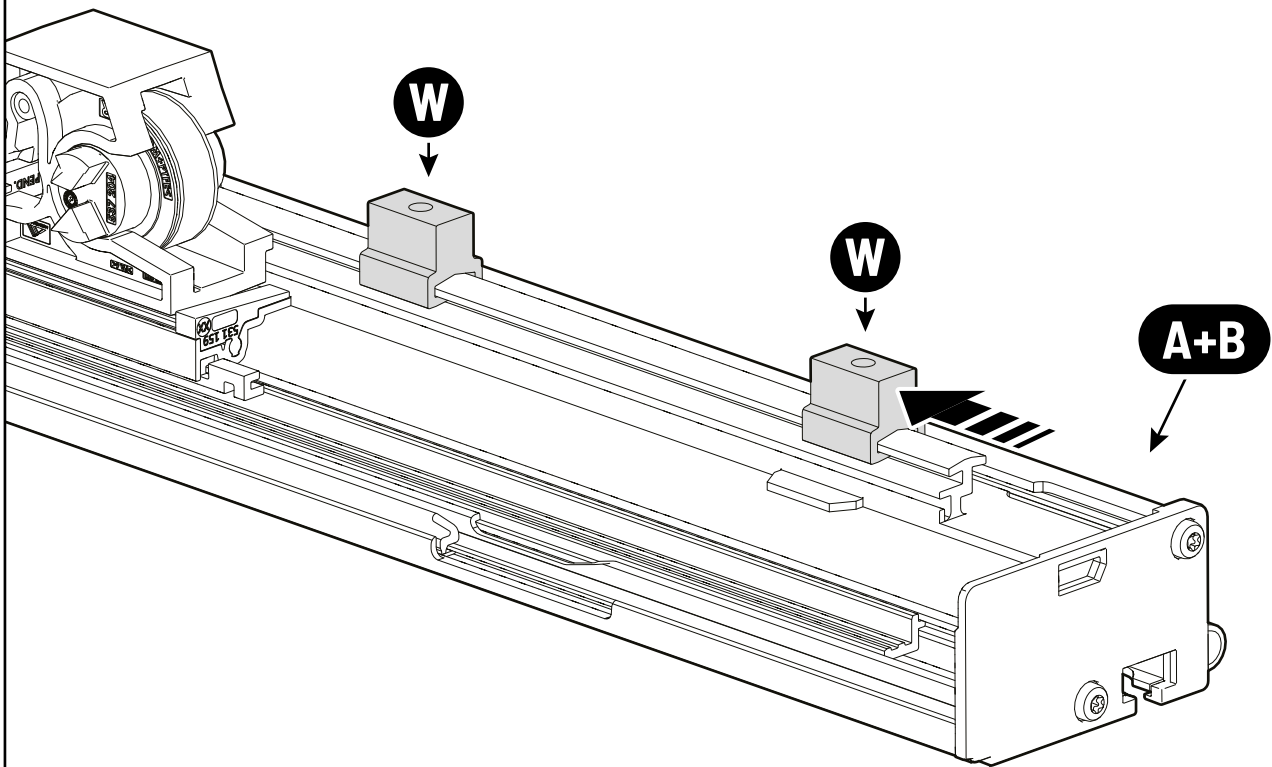


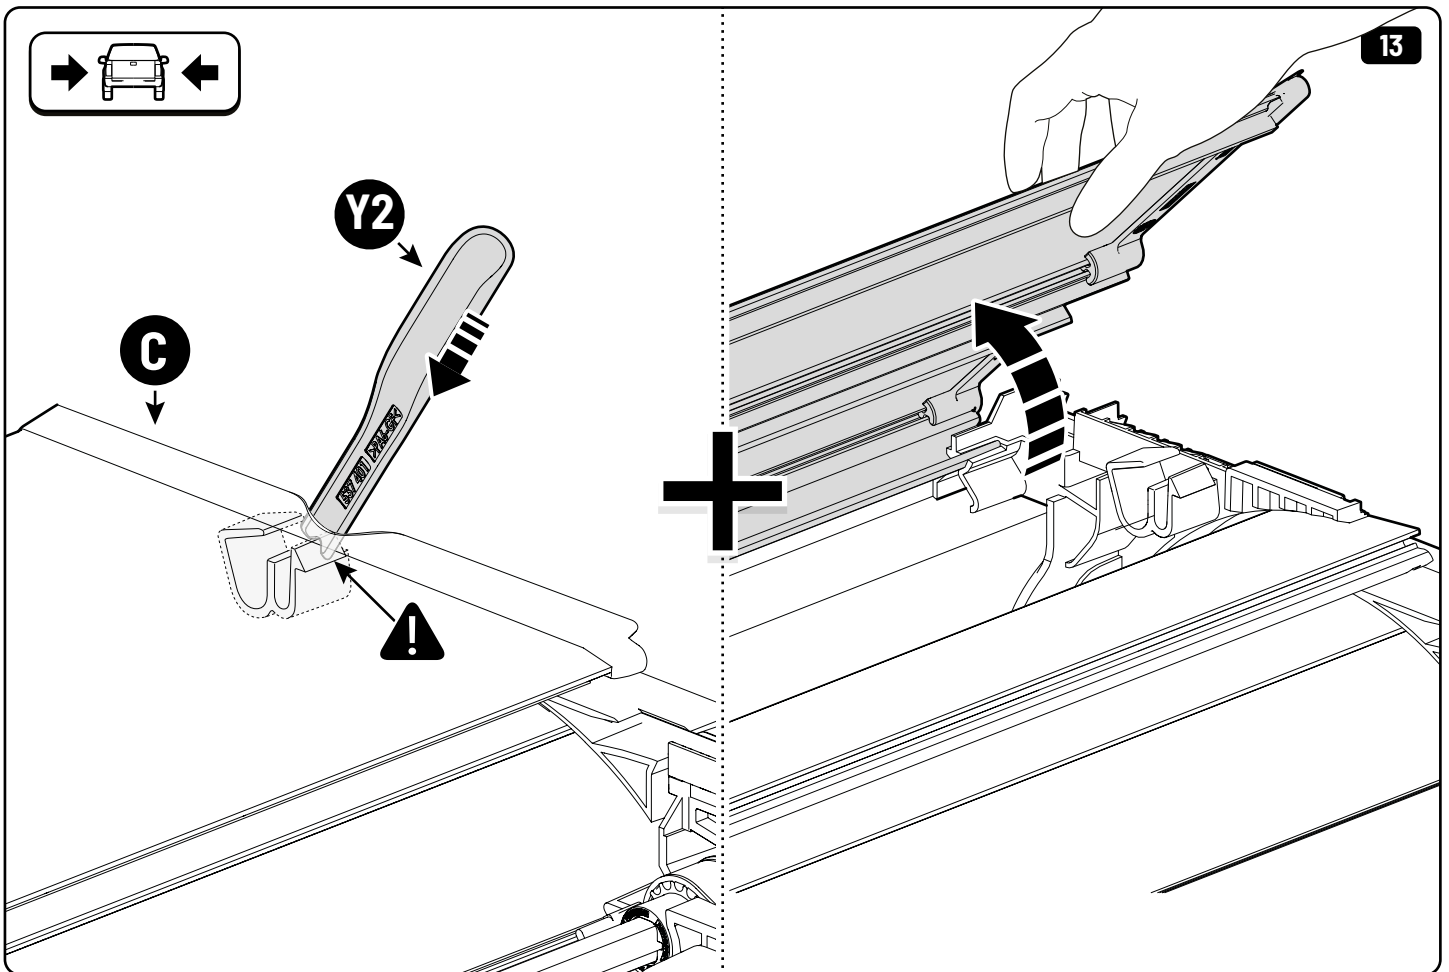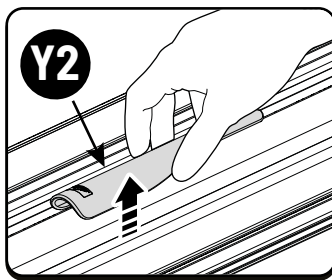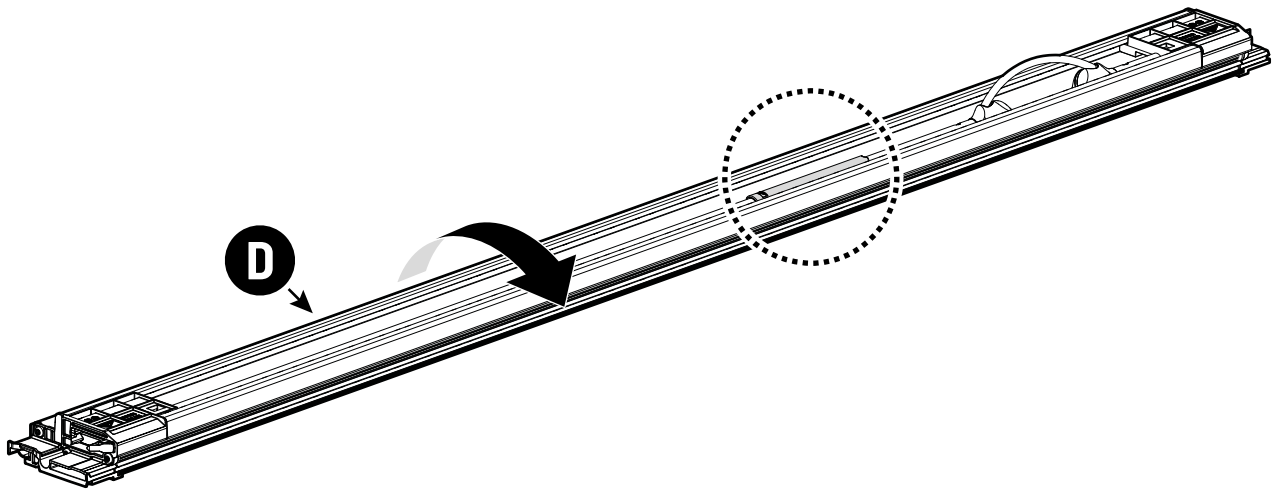

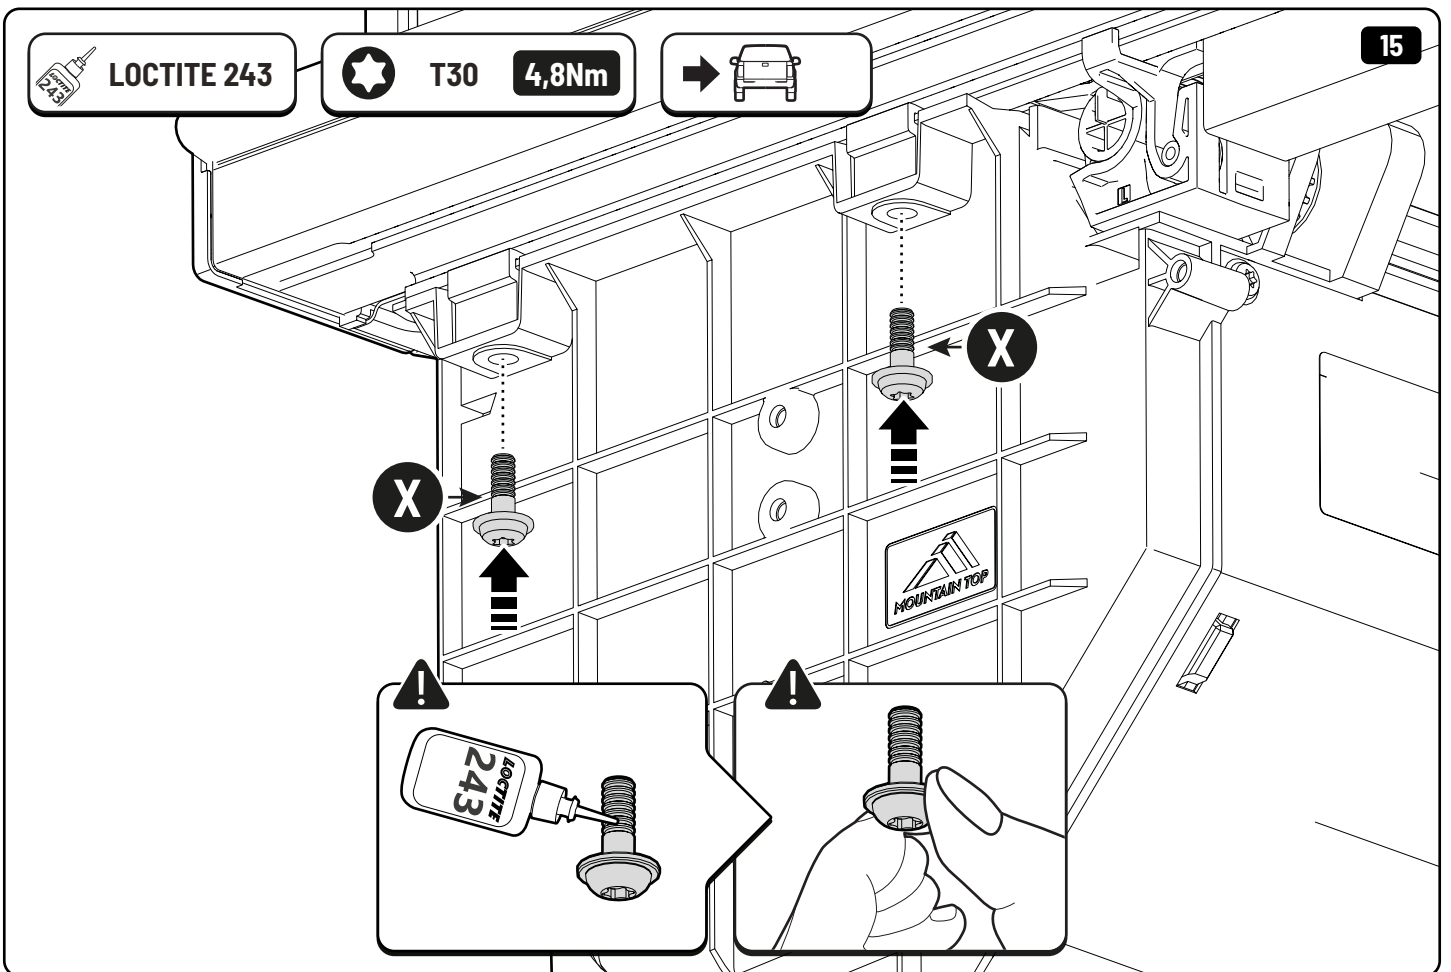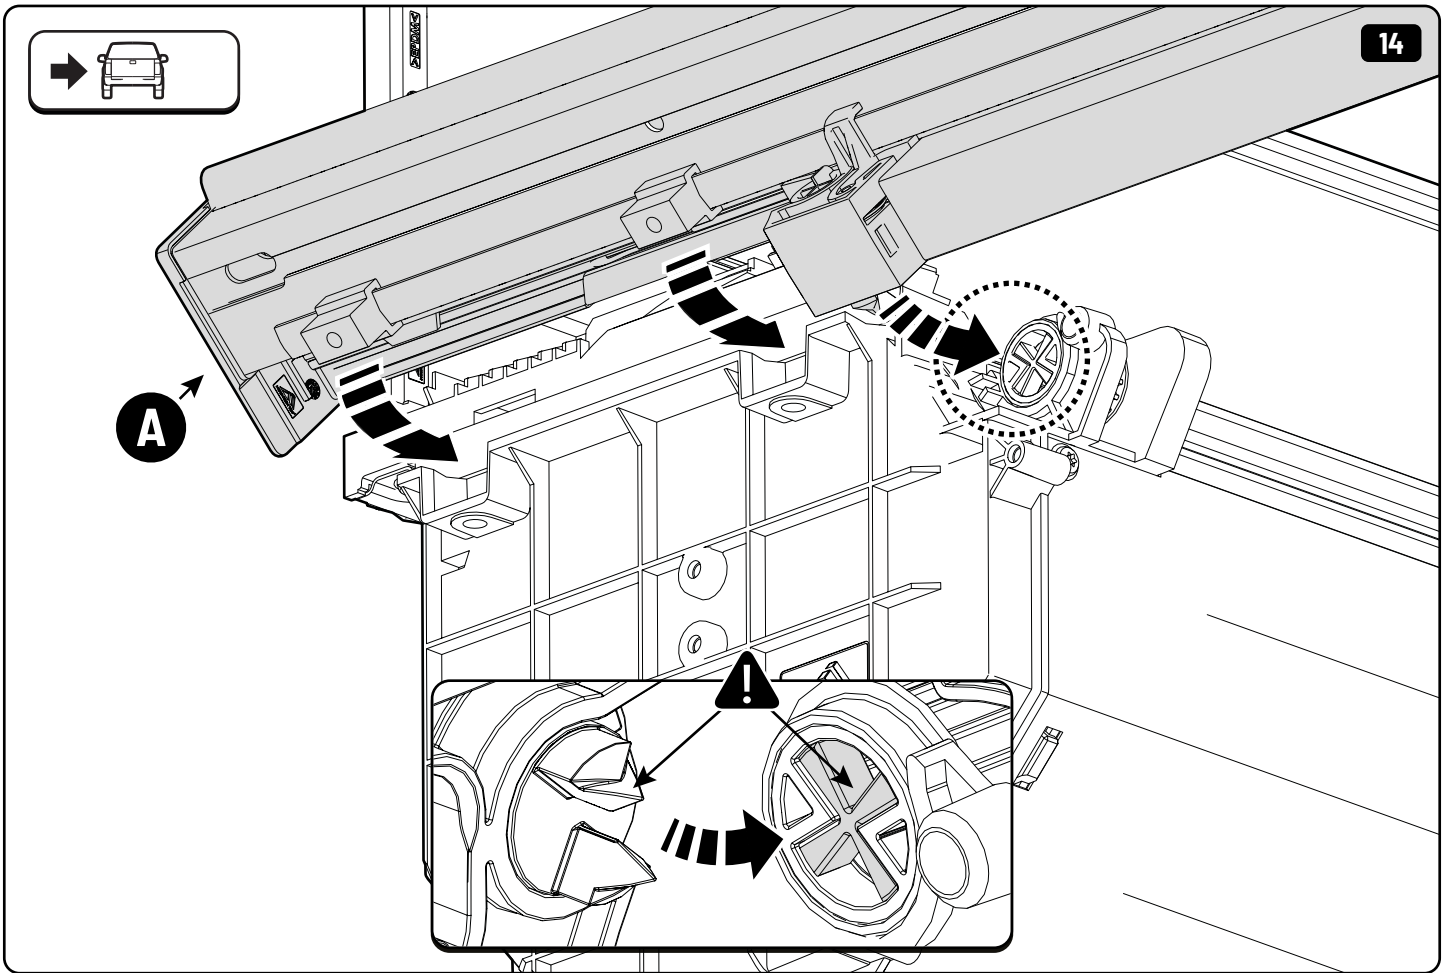






**B**  
↓


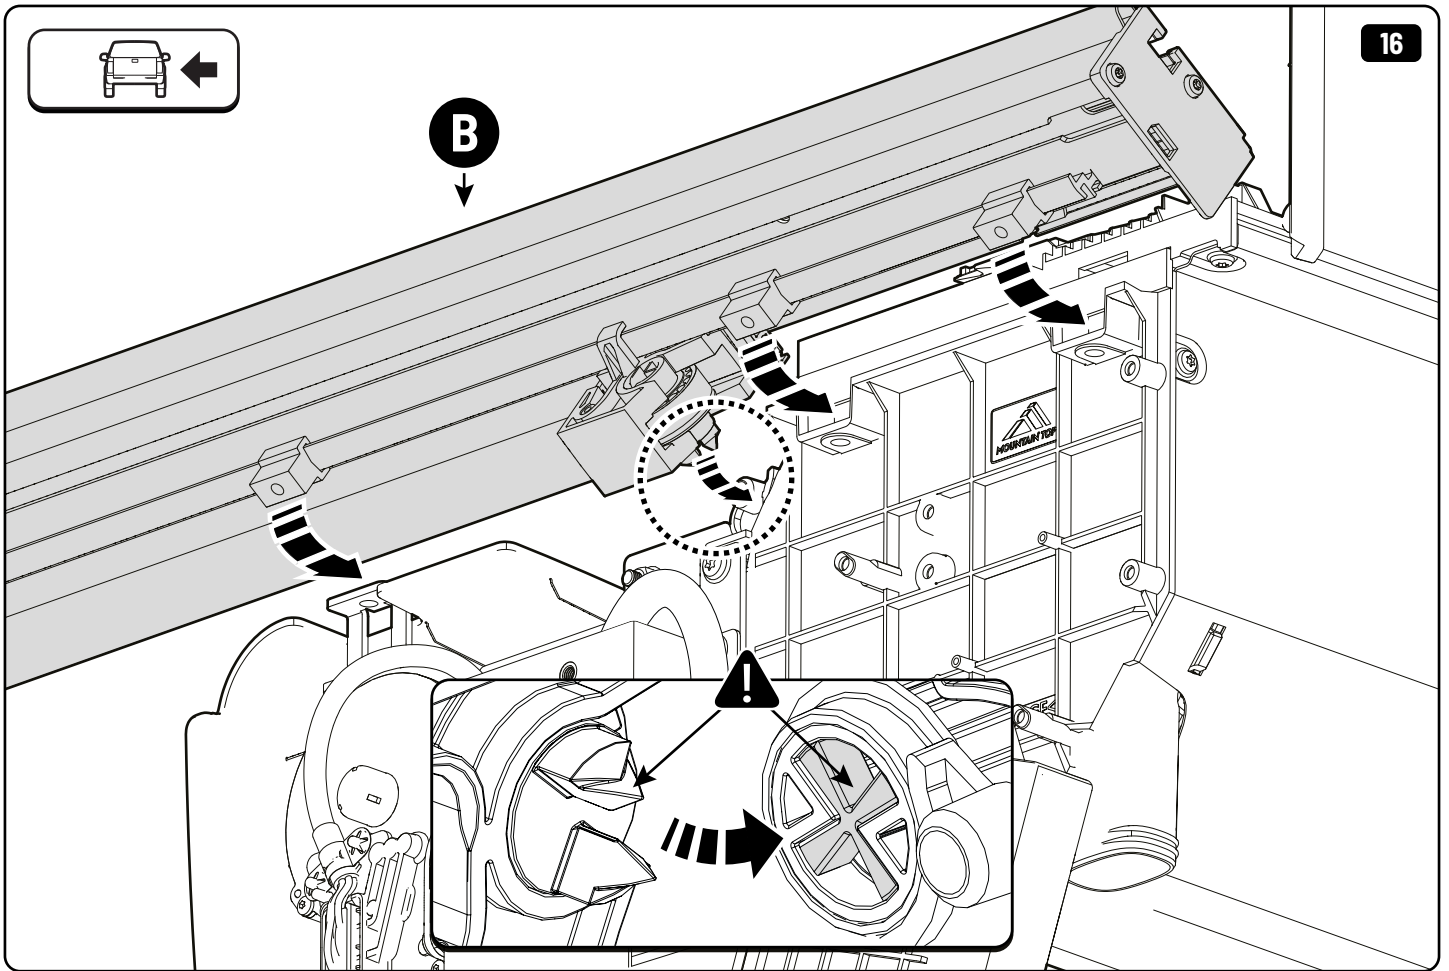




 **LOCTITE 243**

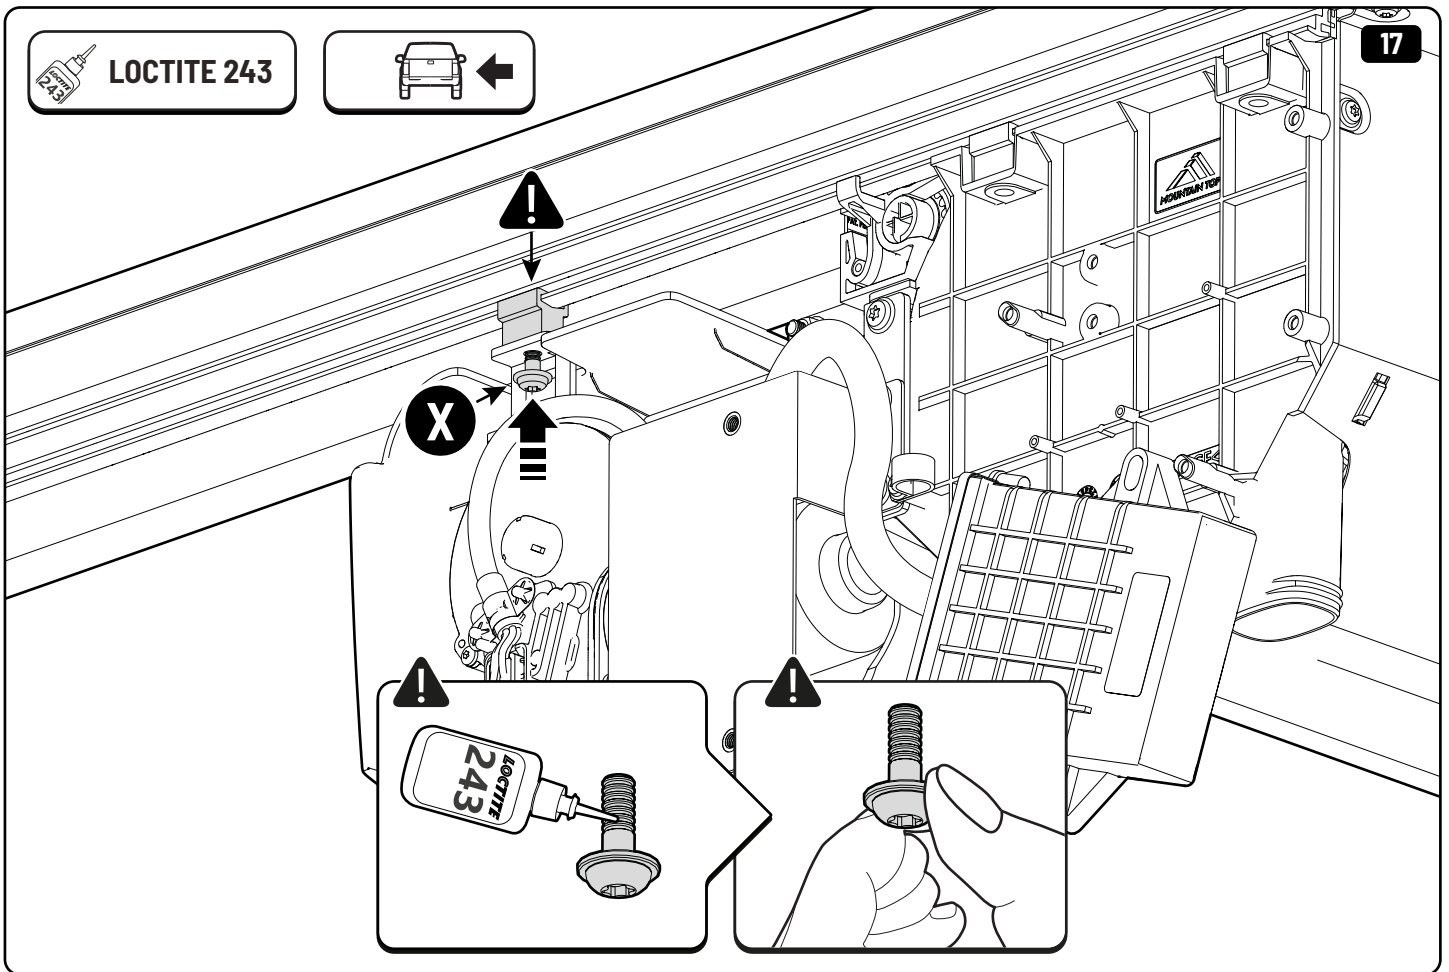

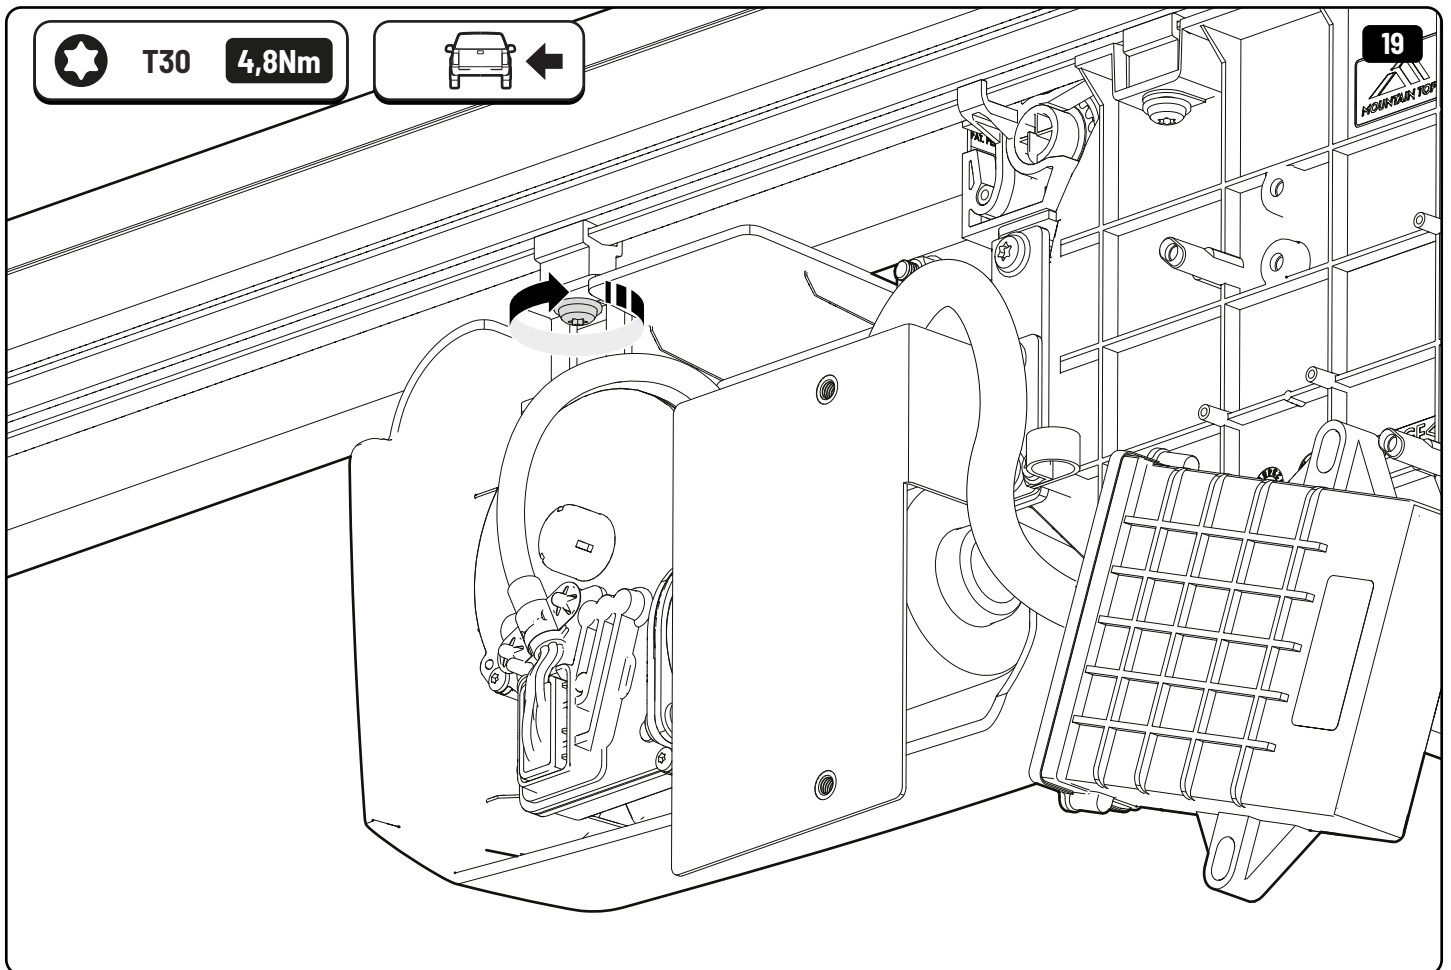
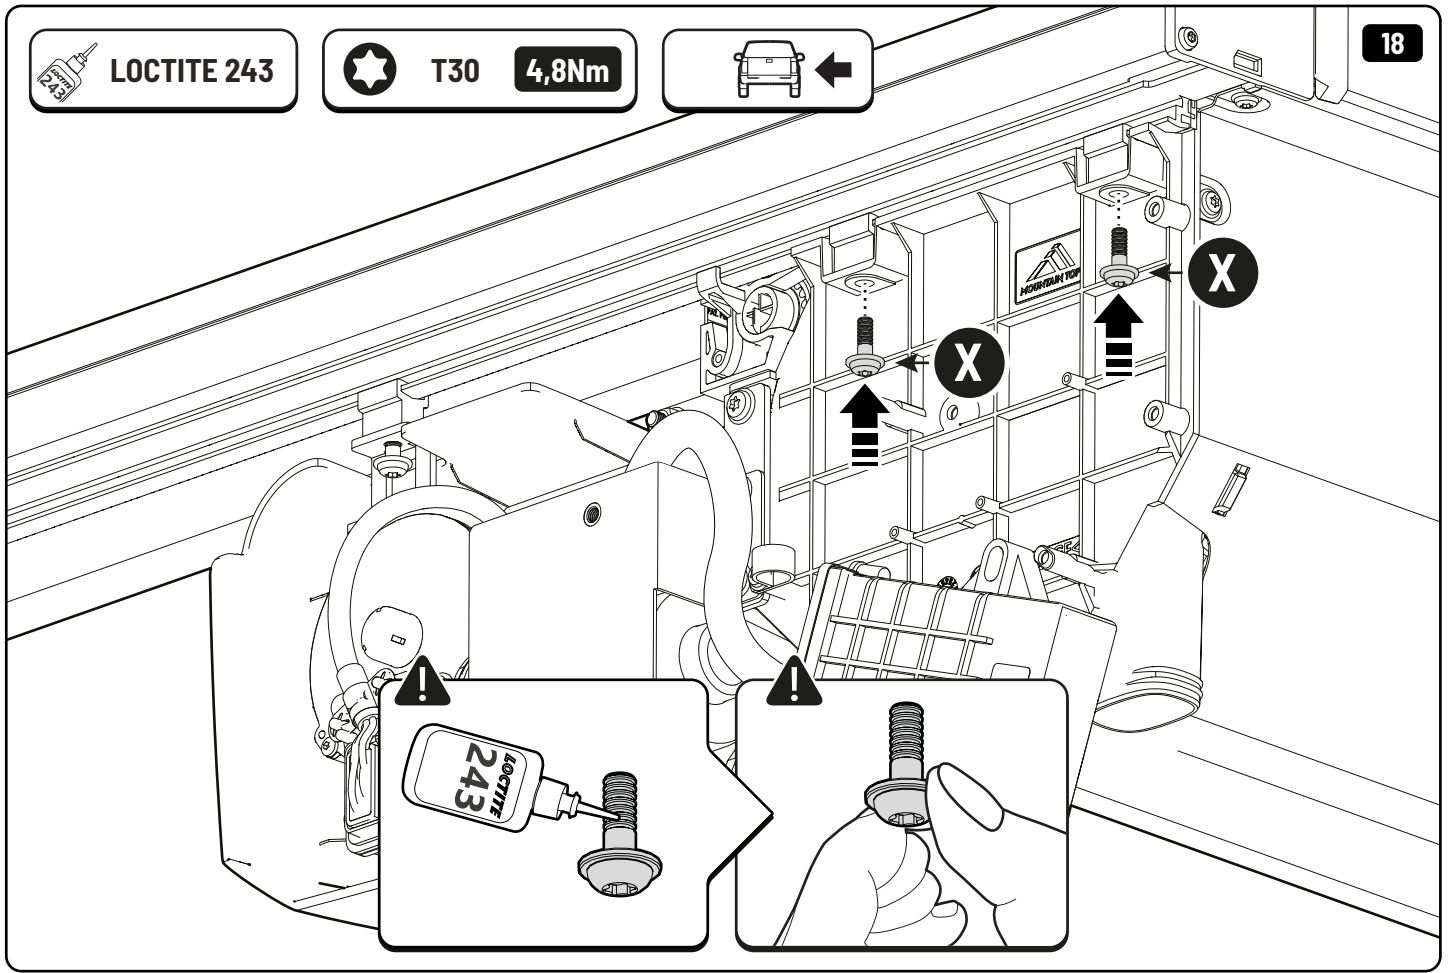





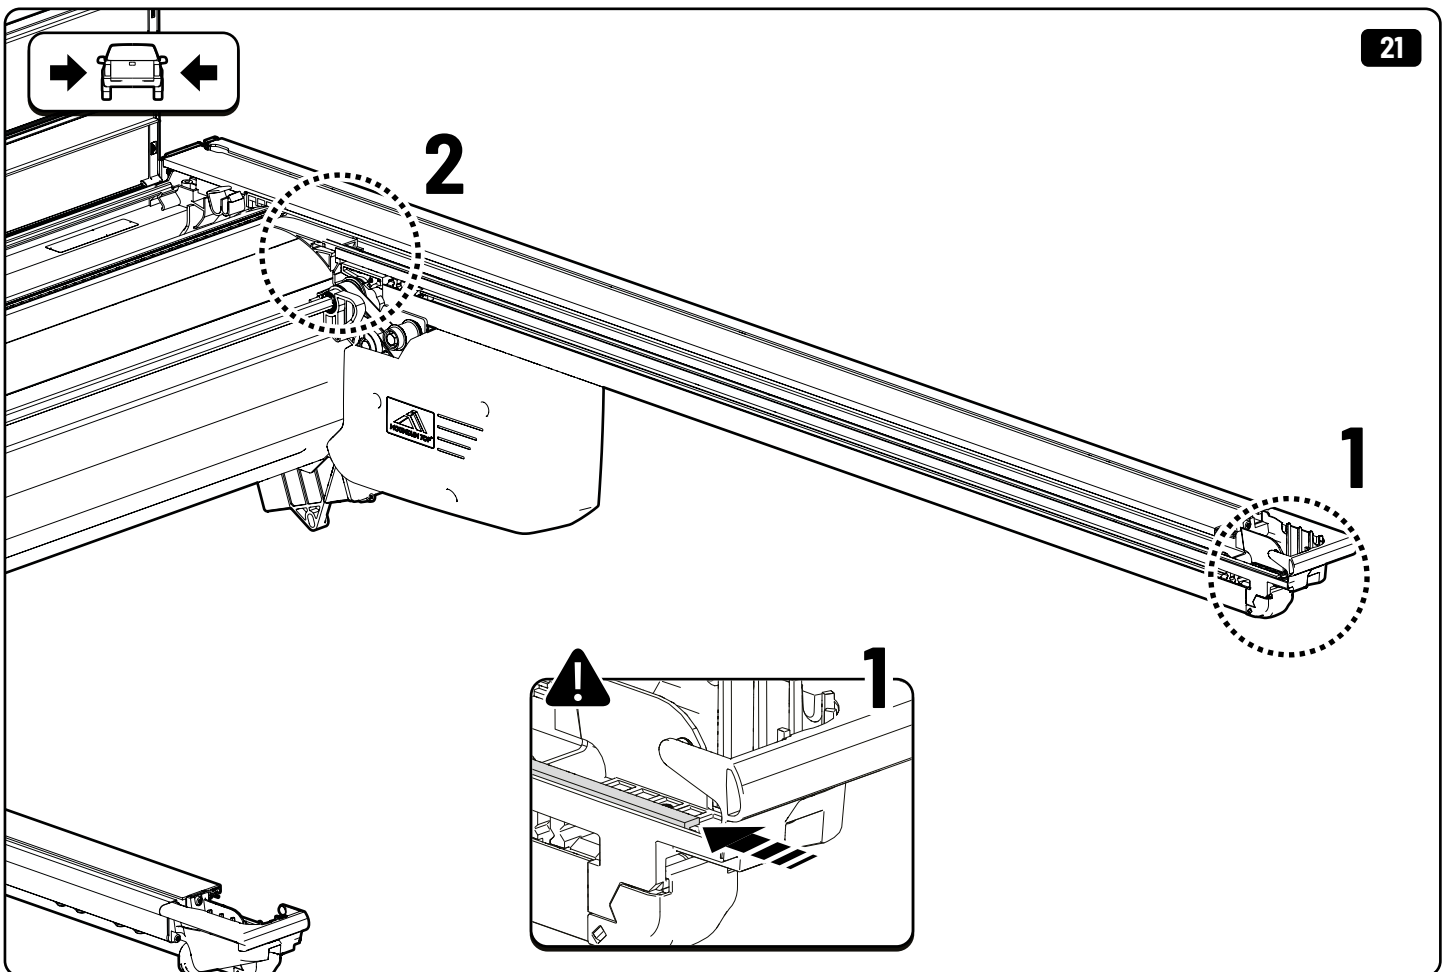
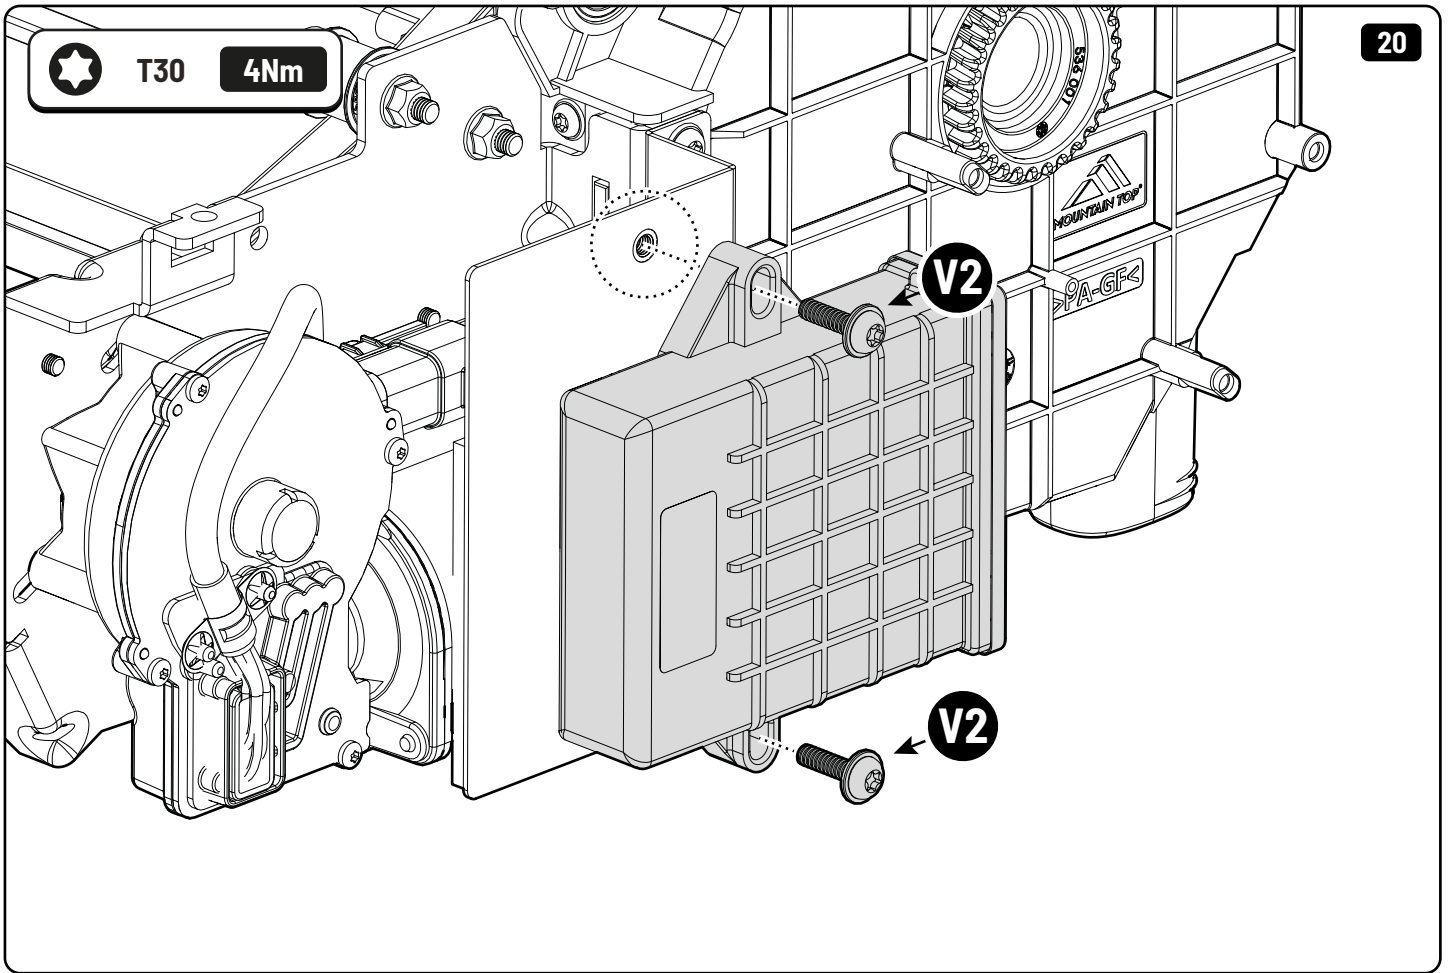


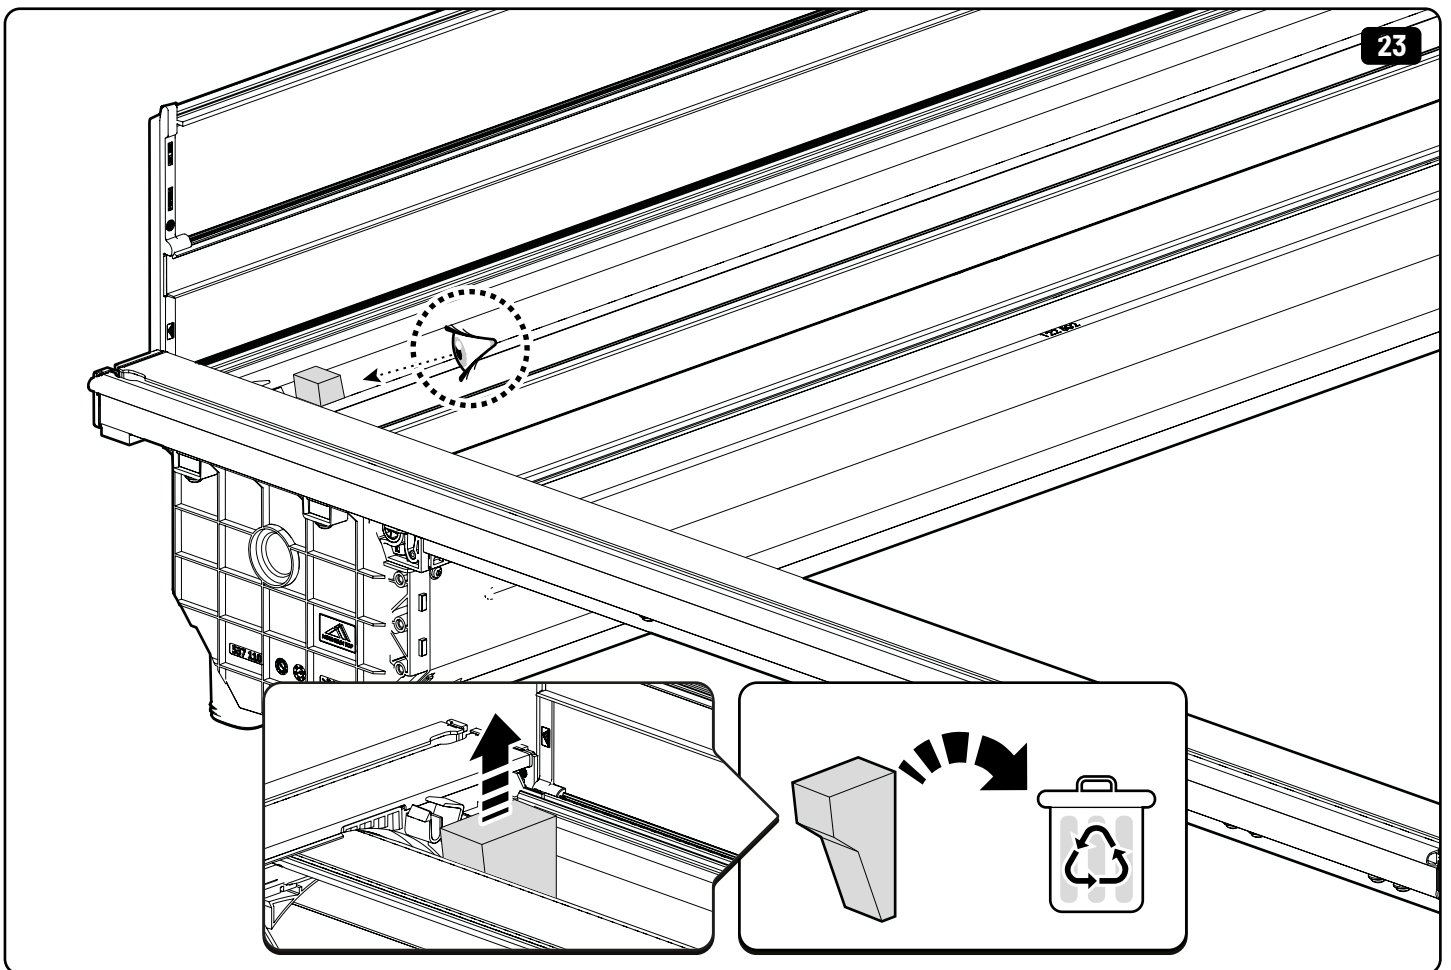
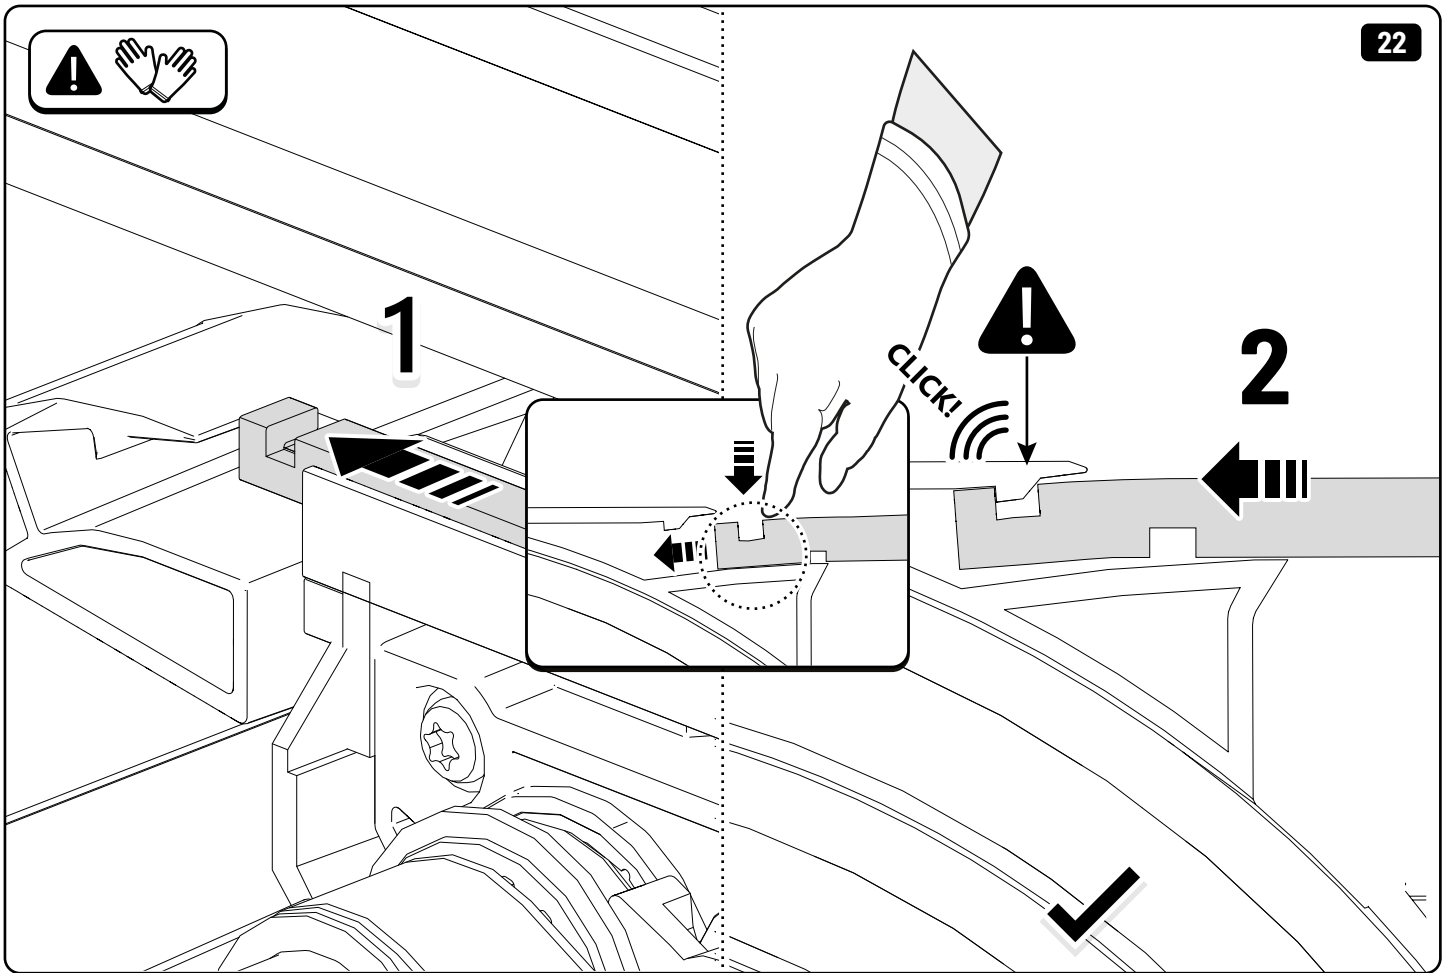





 **RAP CAB**

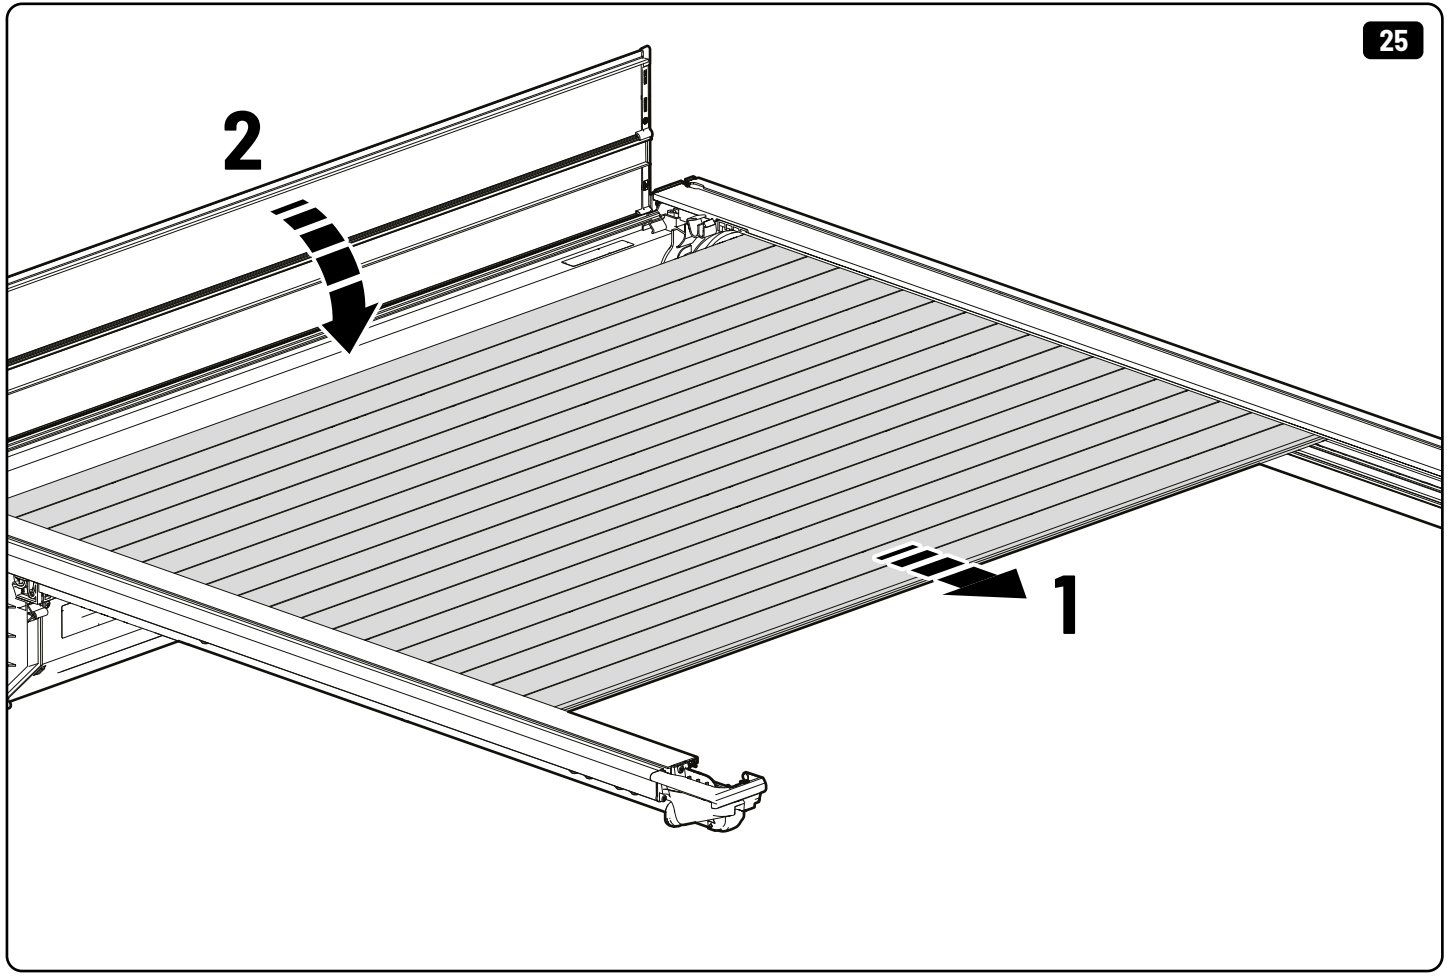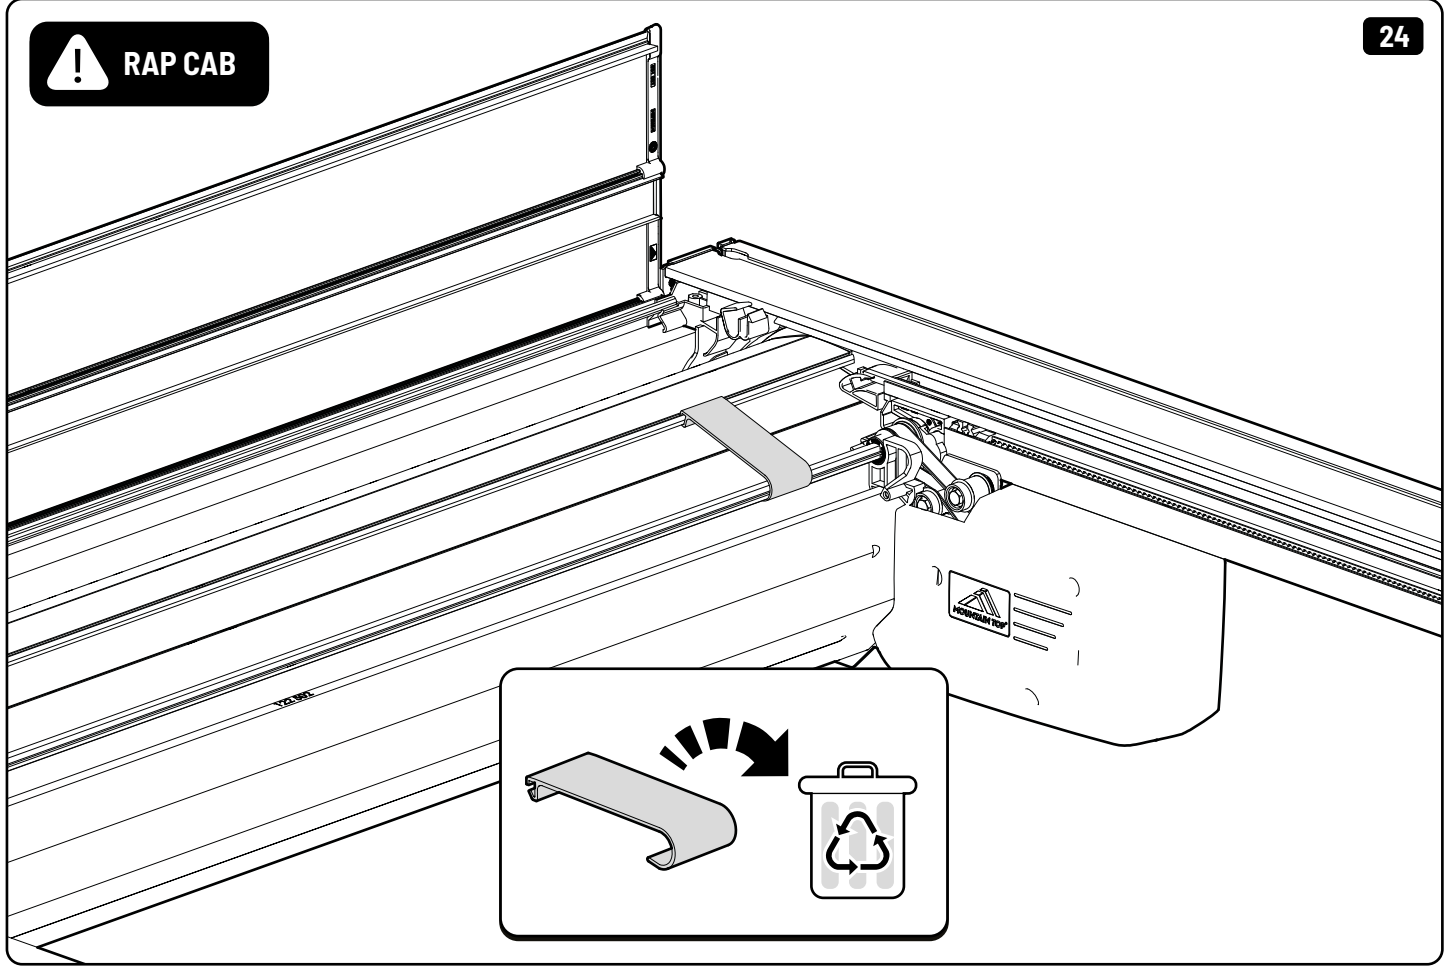






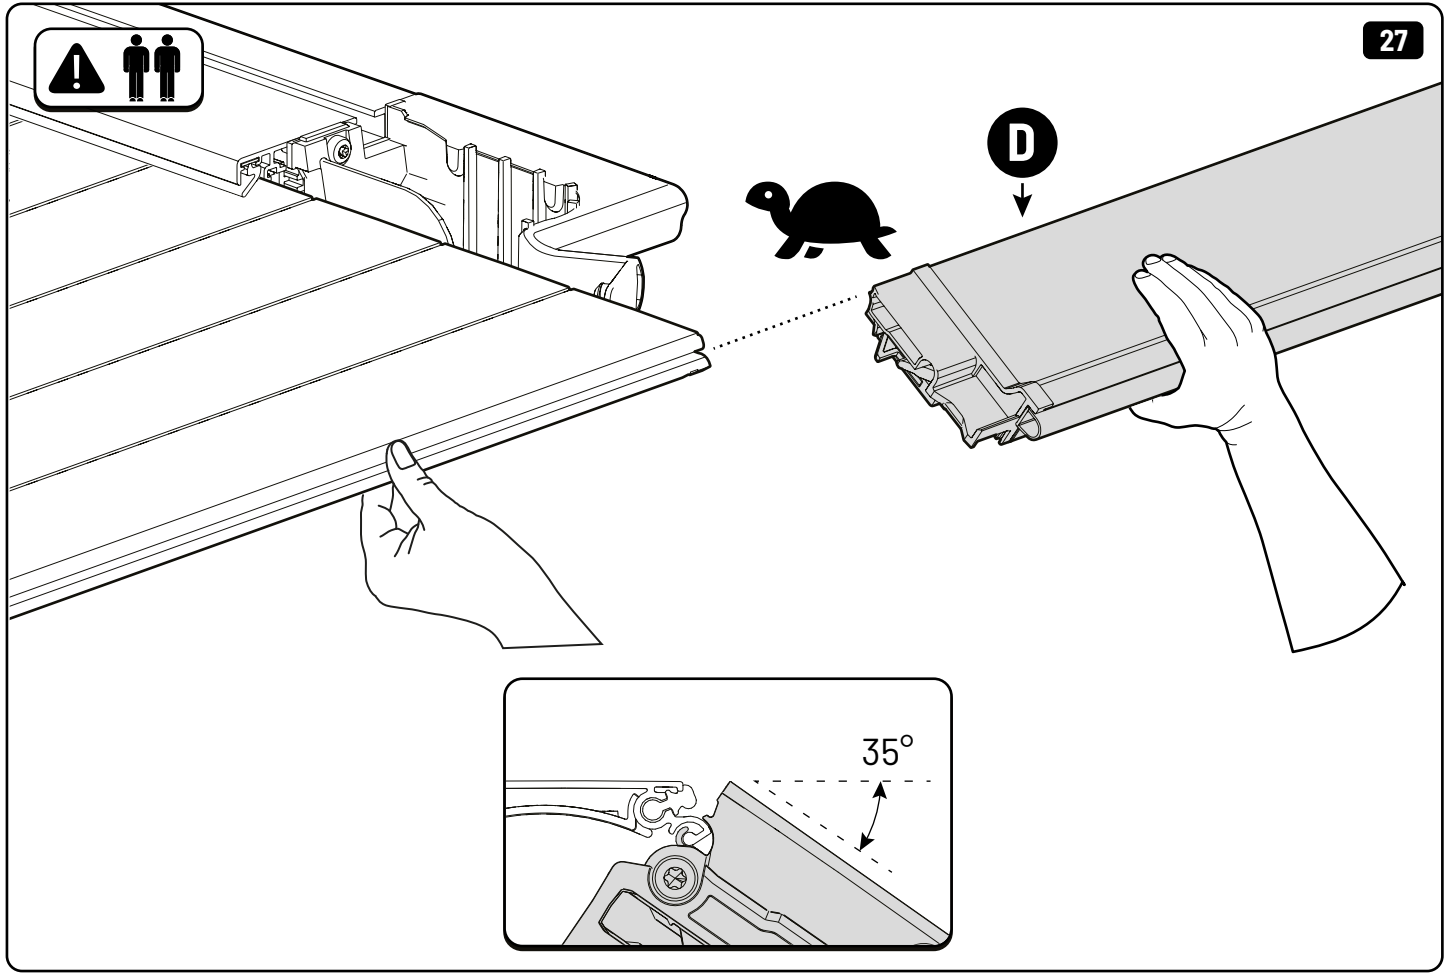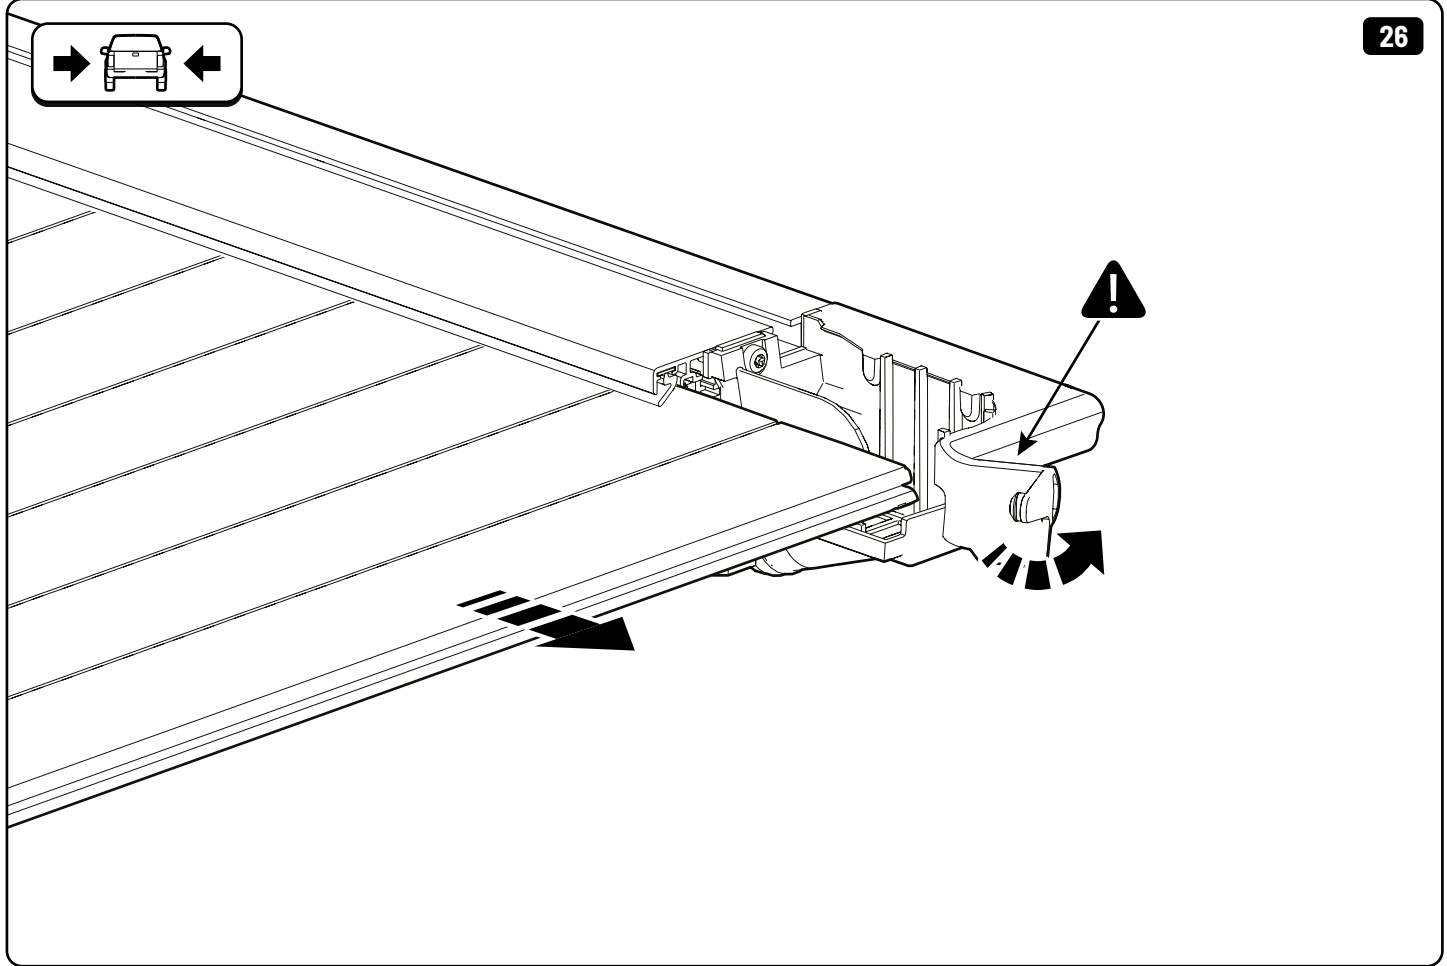



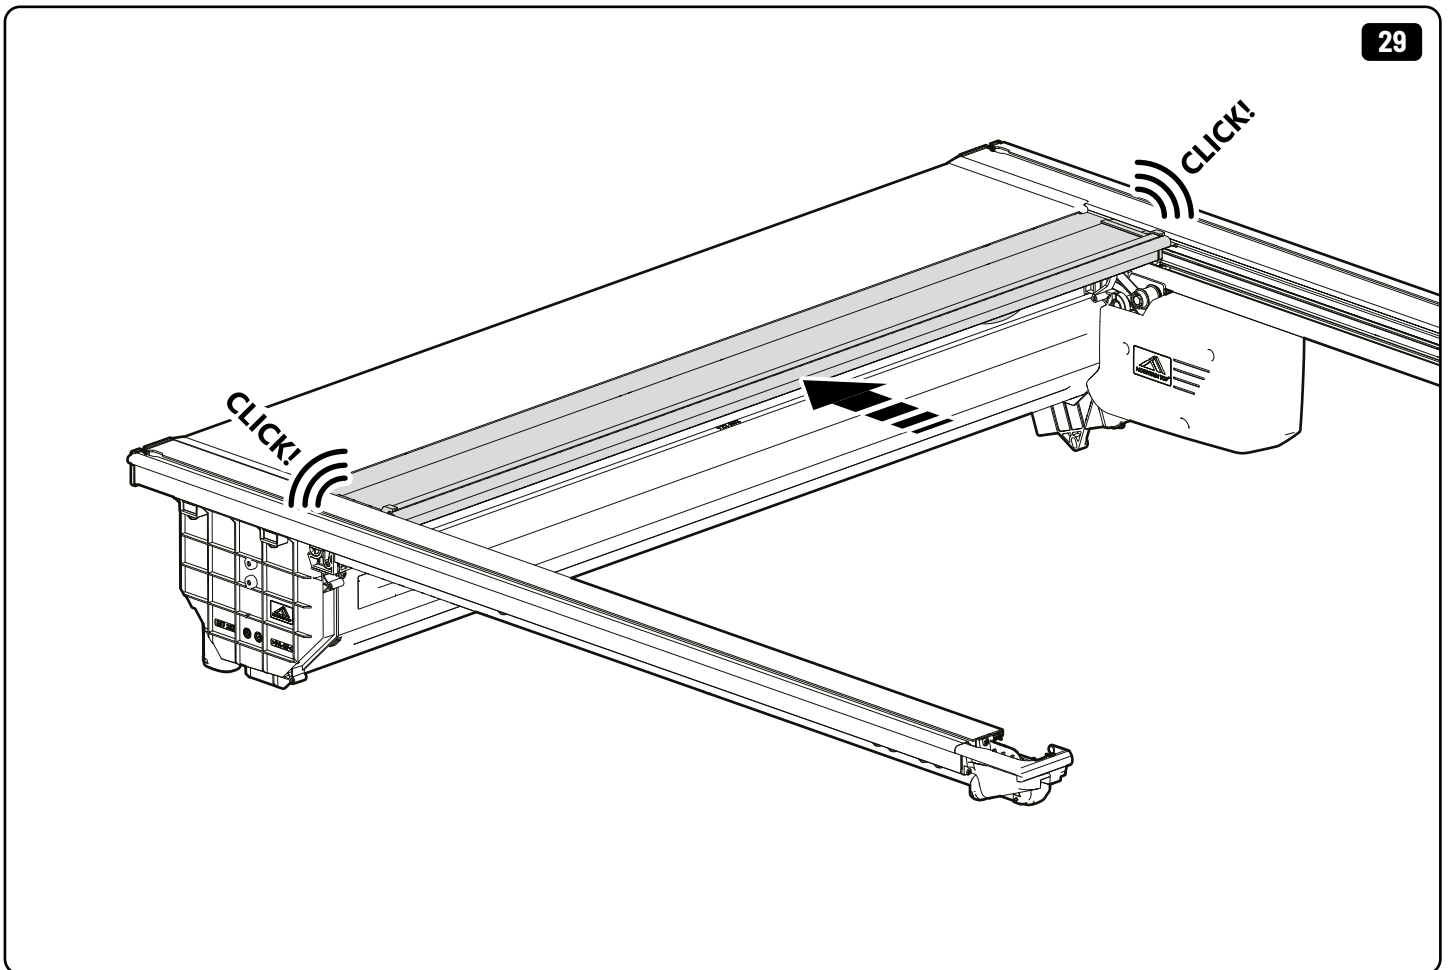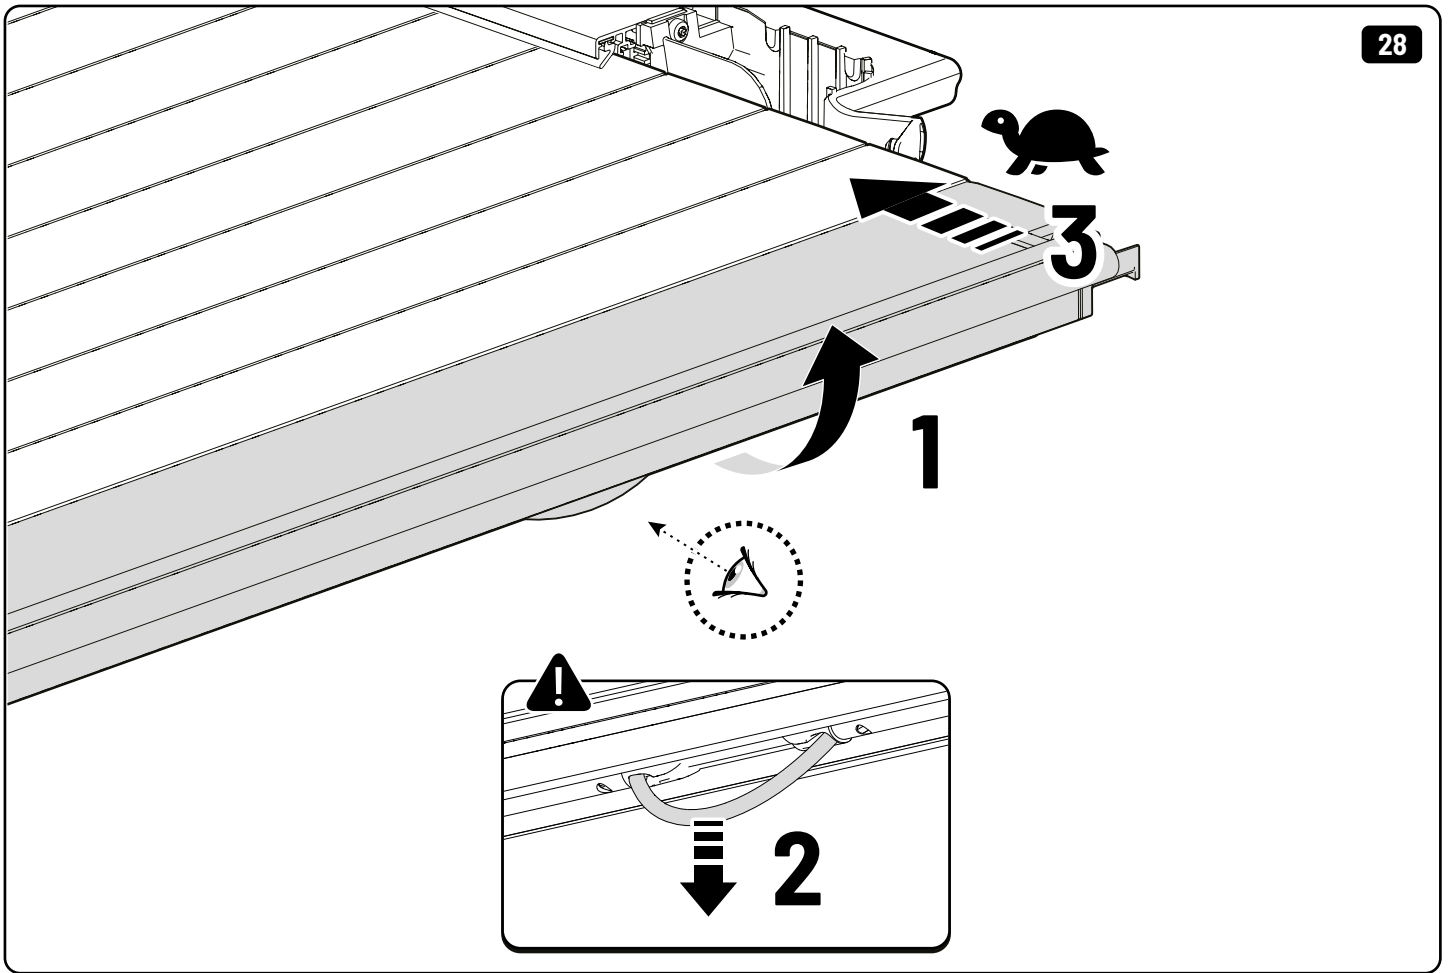

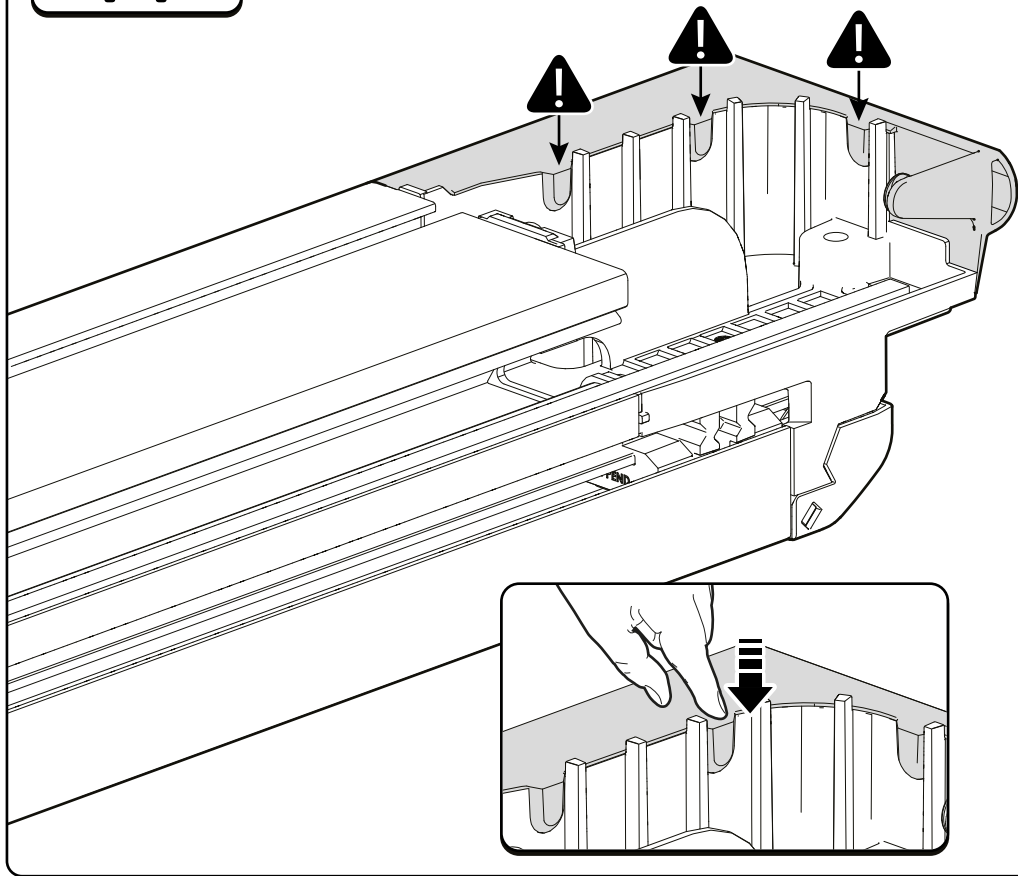




T20 2,4Nm

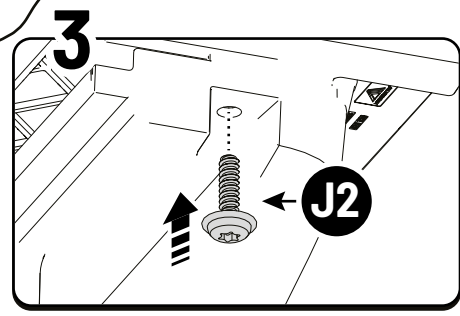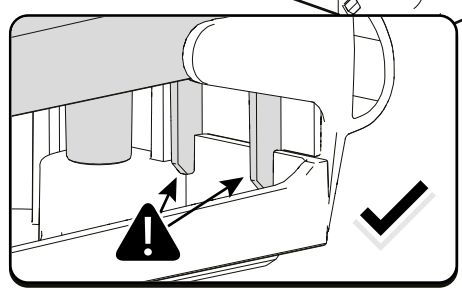
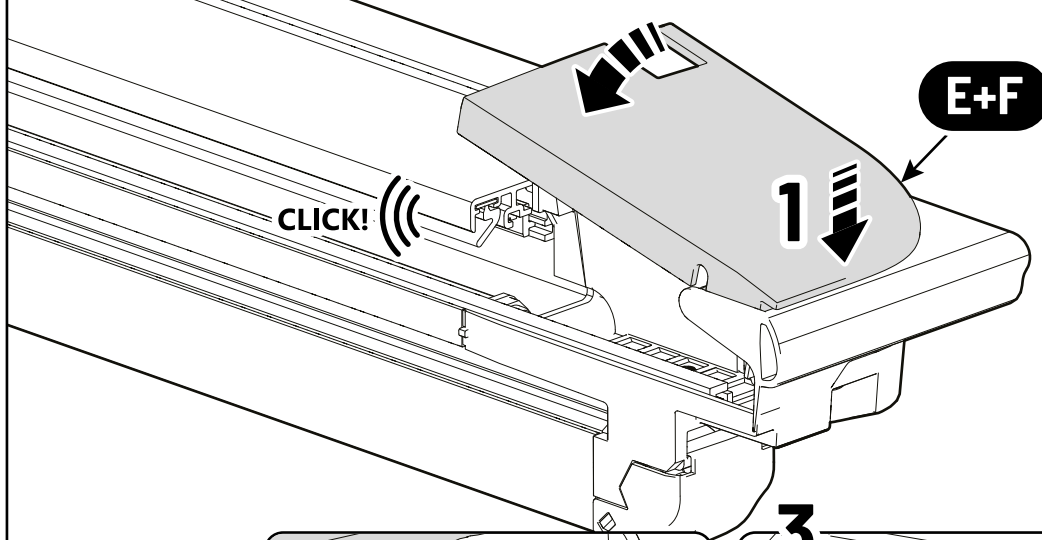



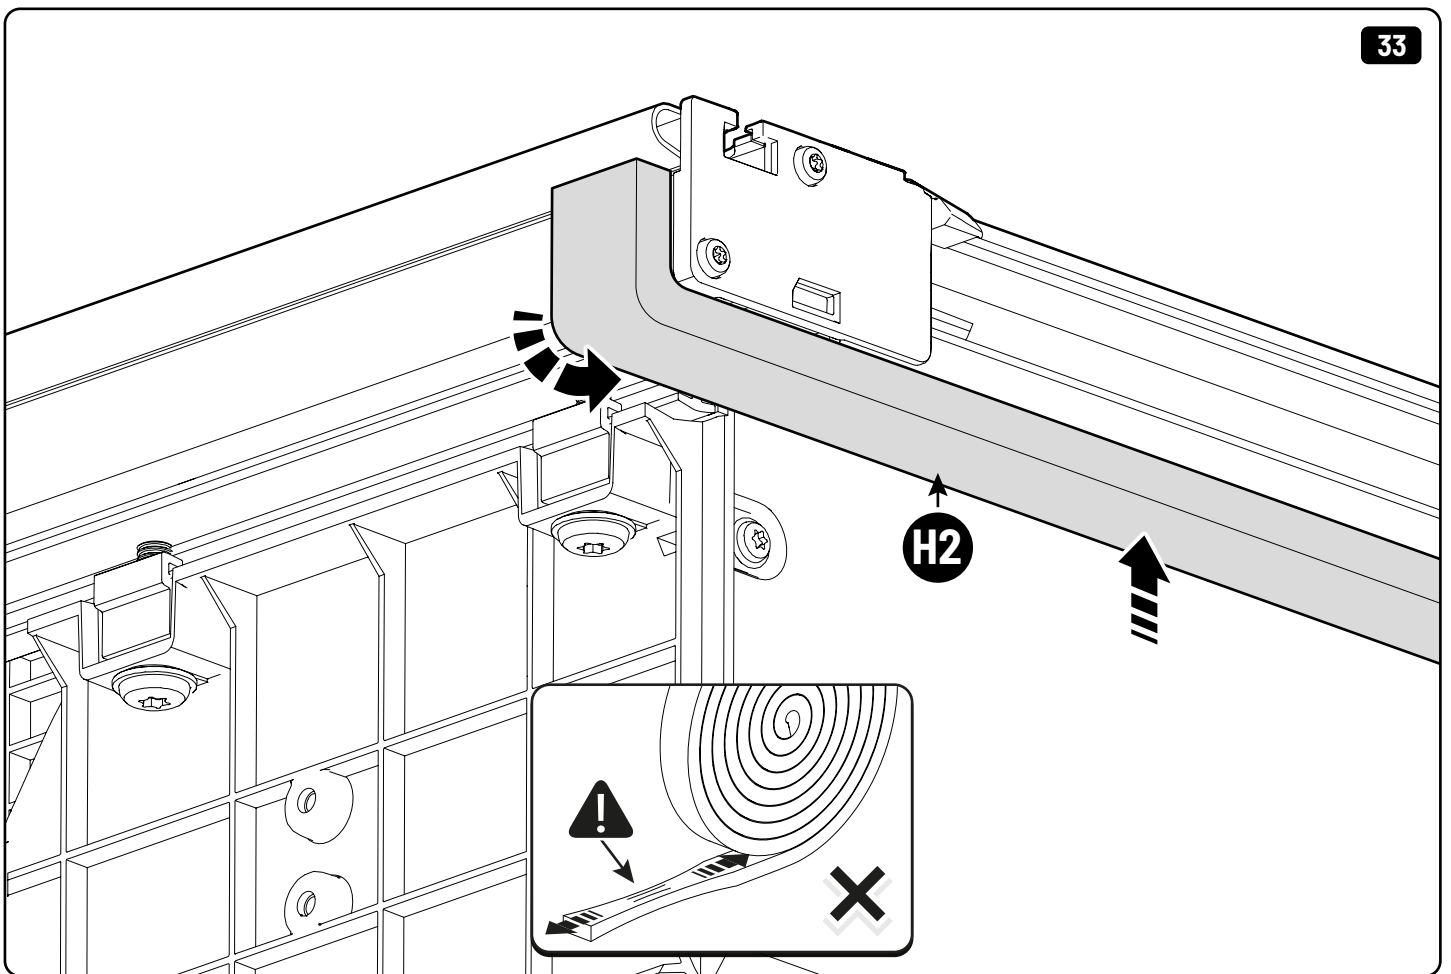
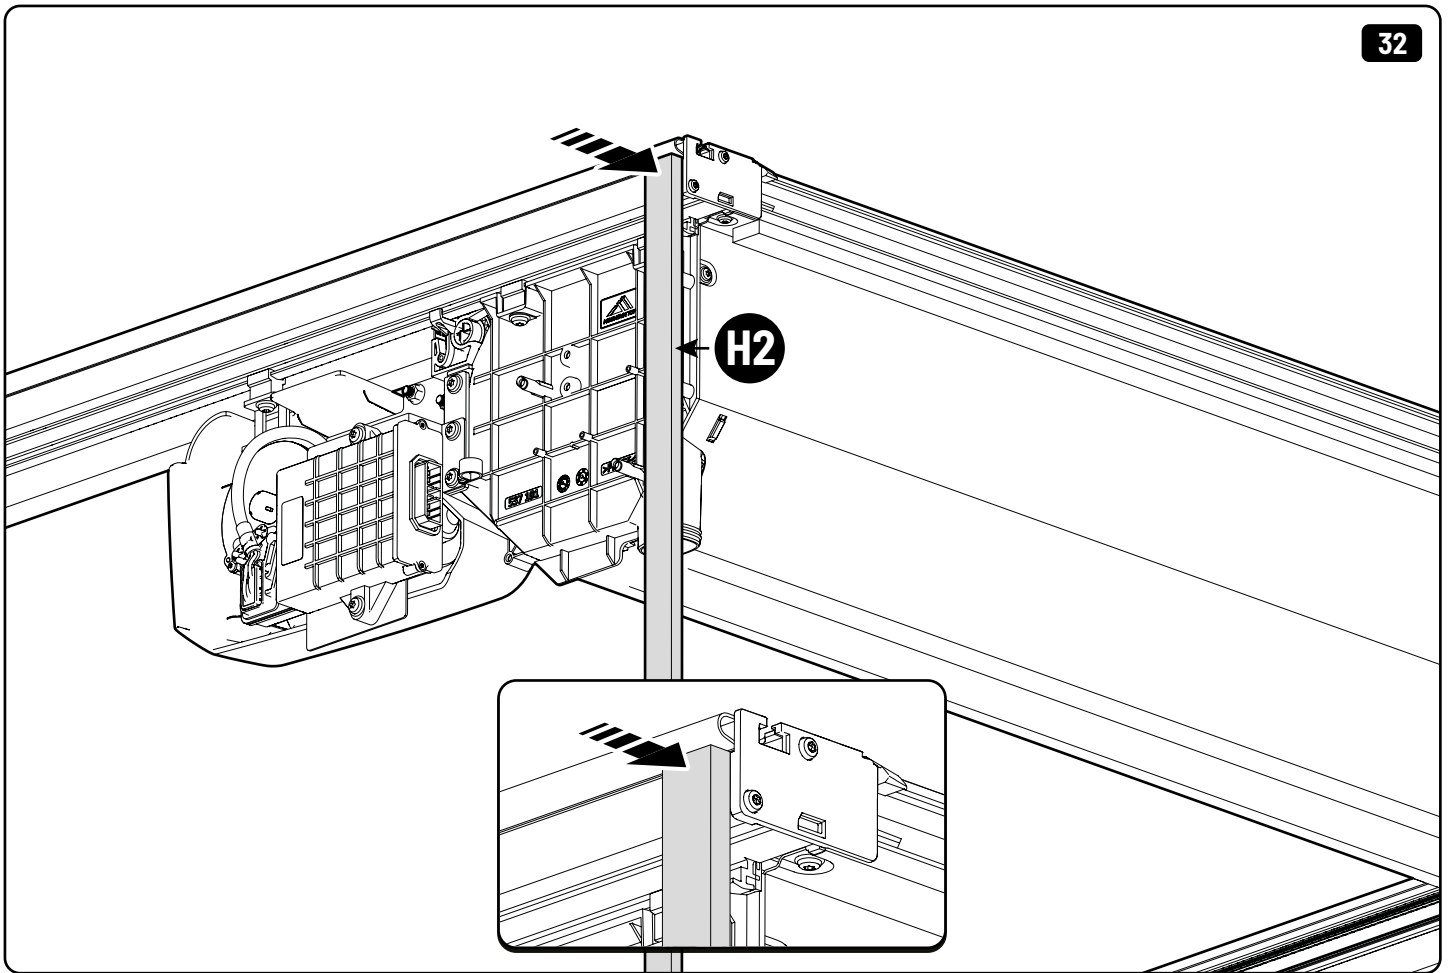


1



2

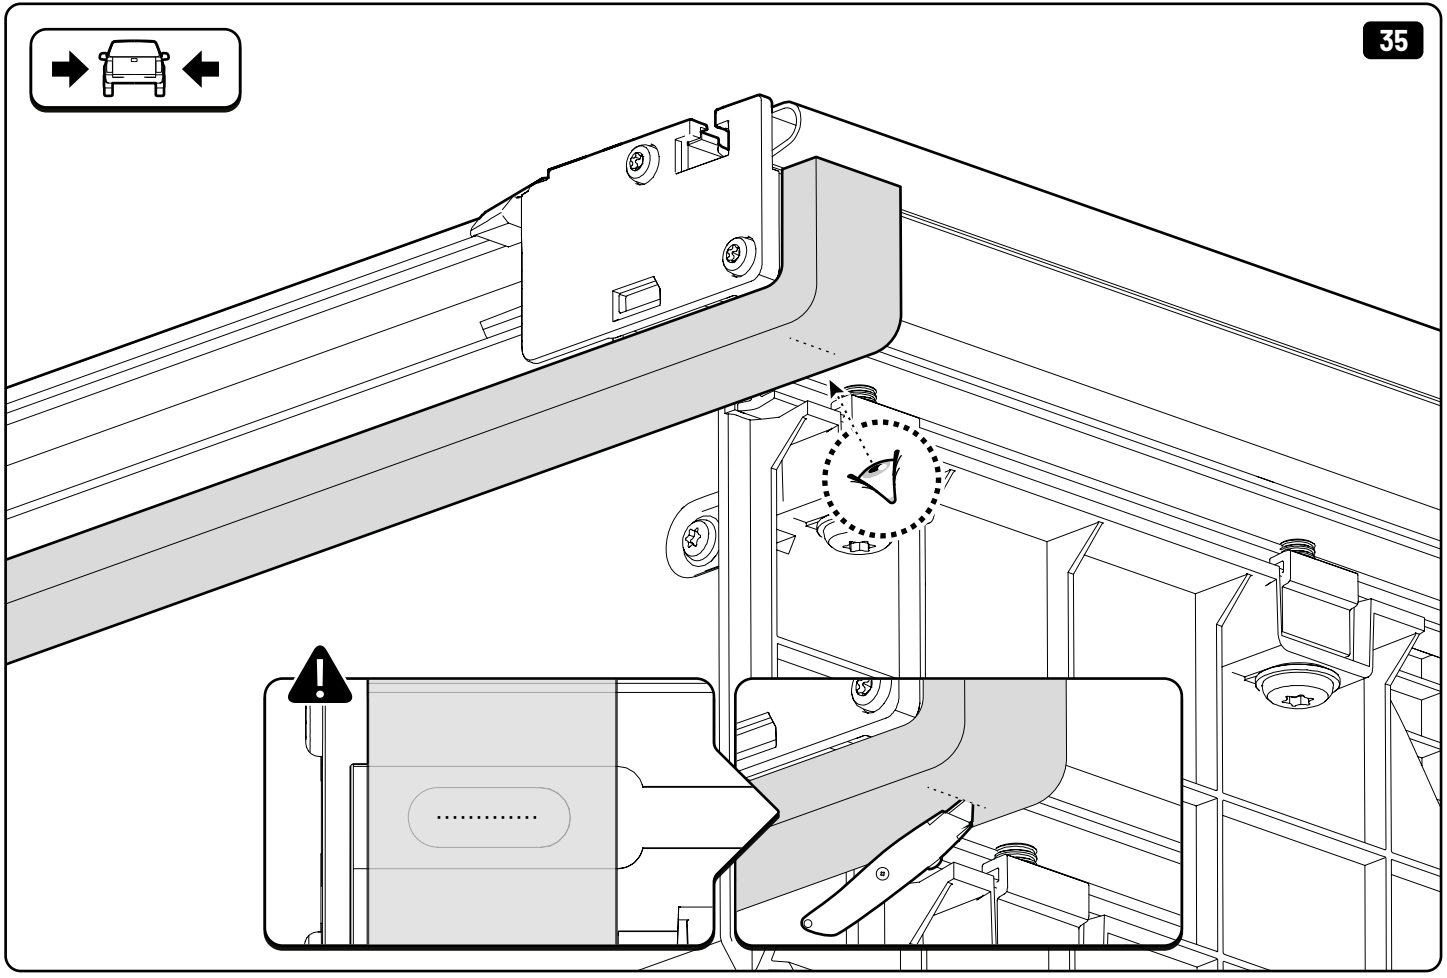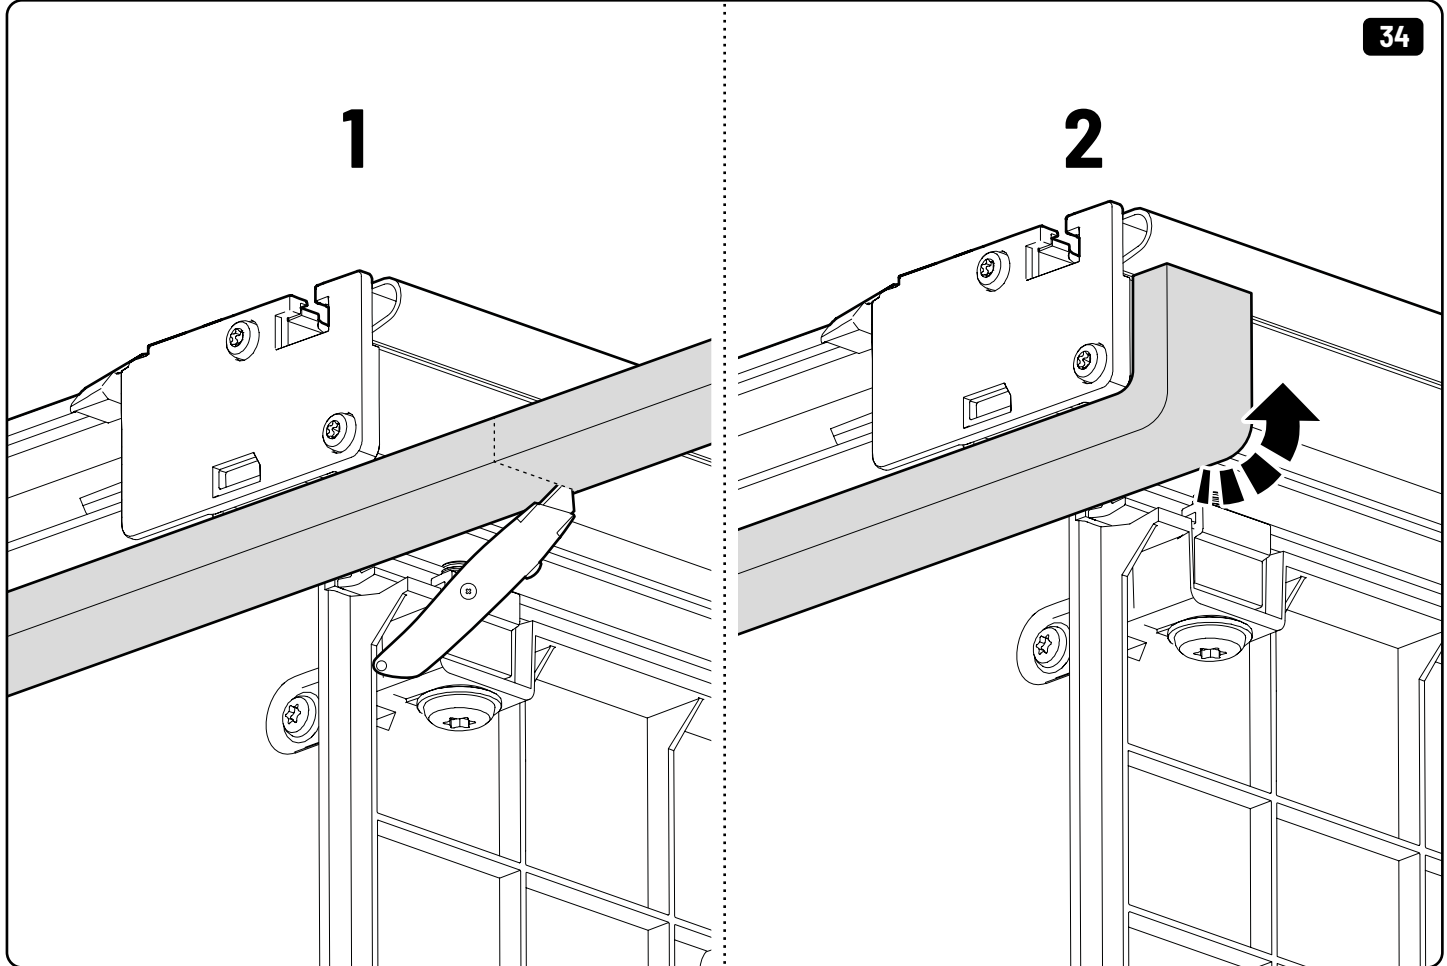

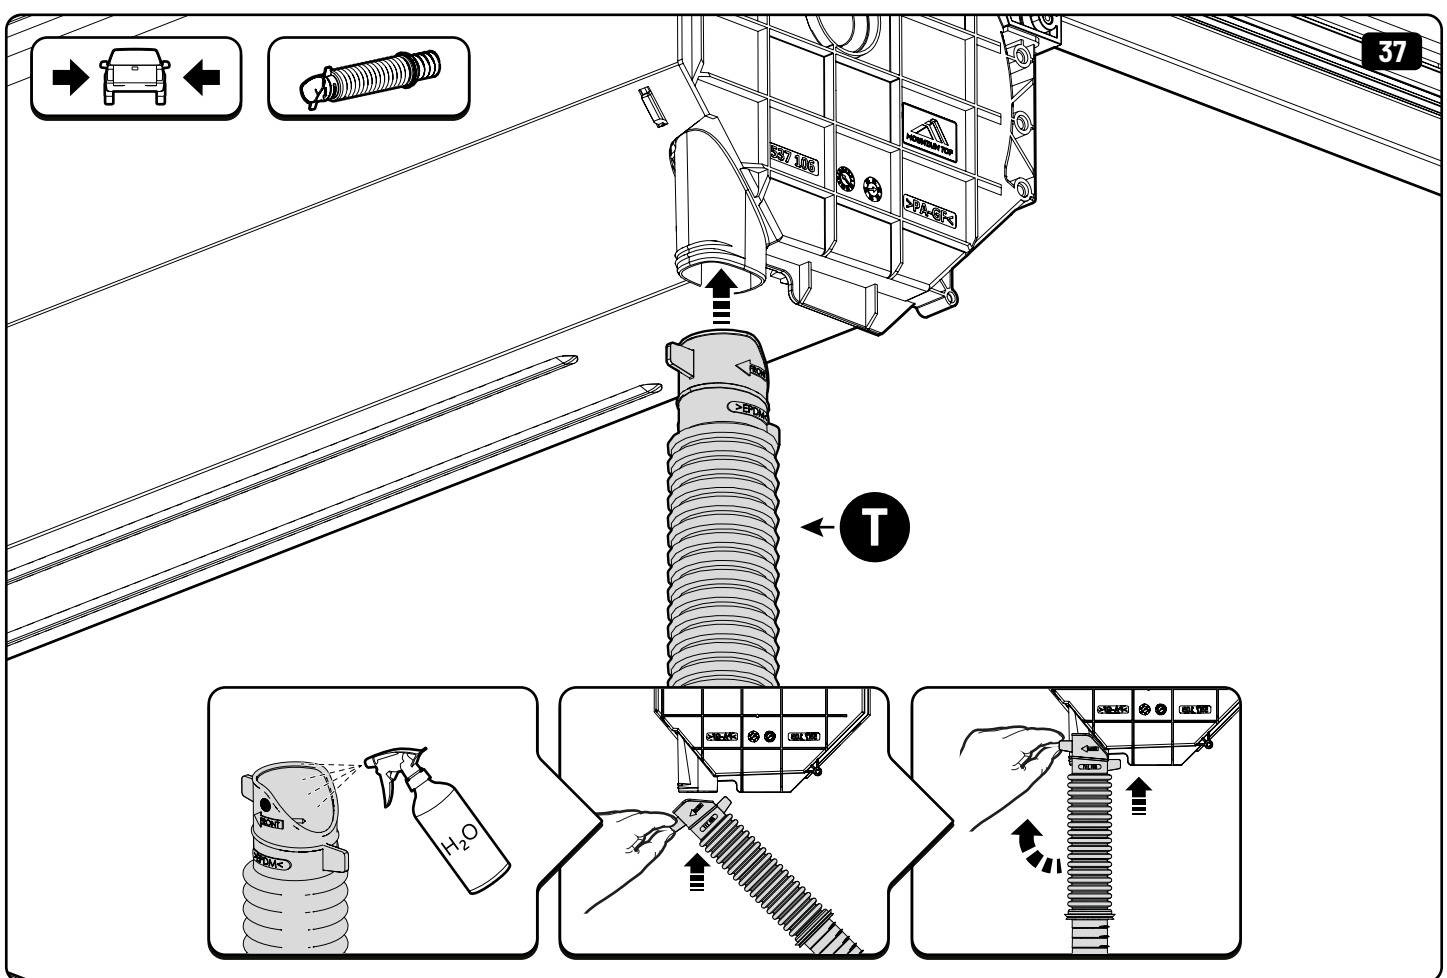
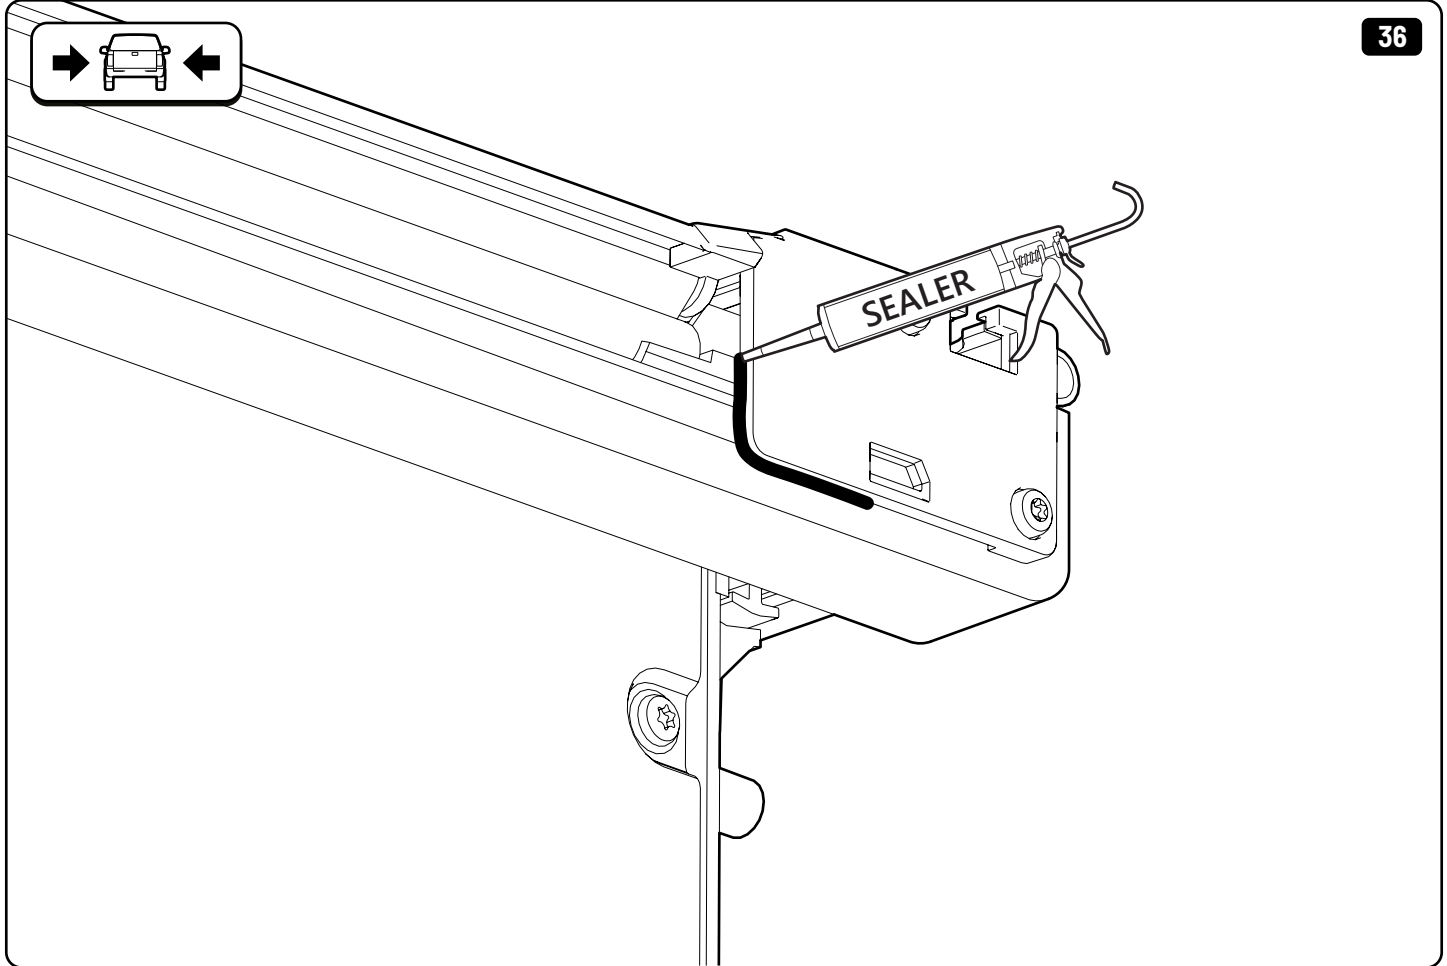


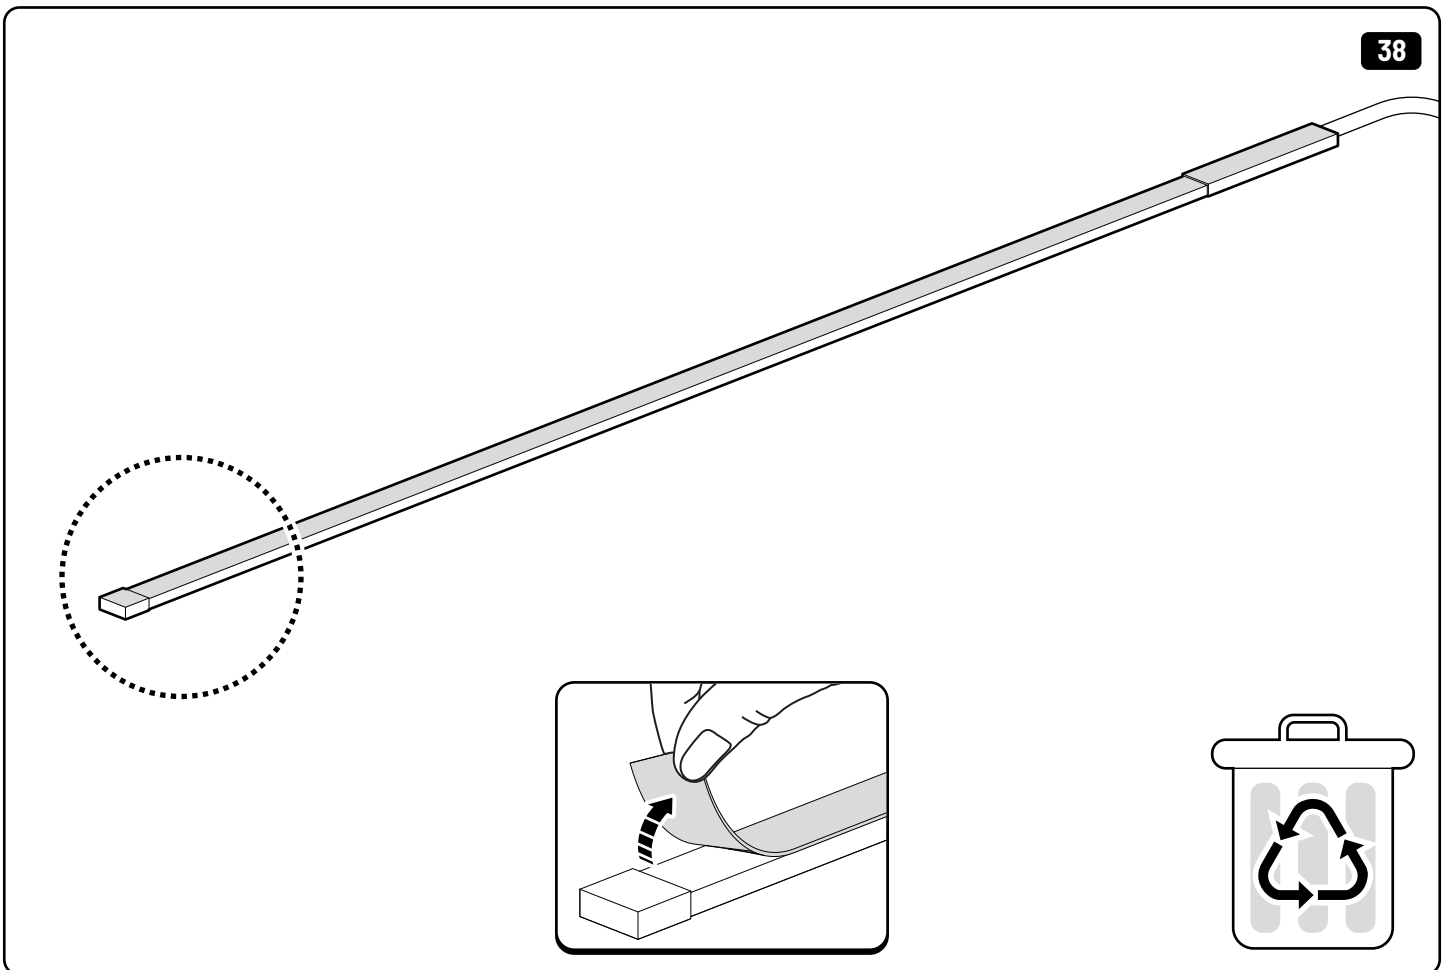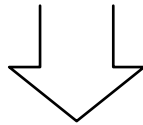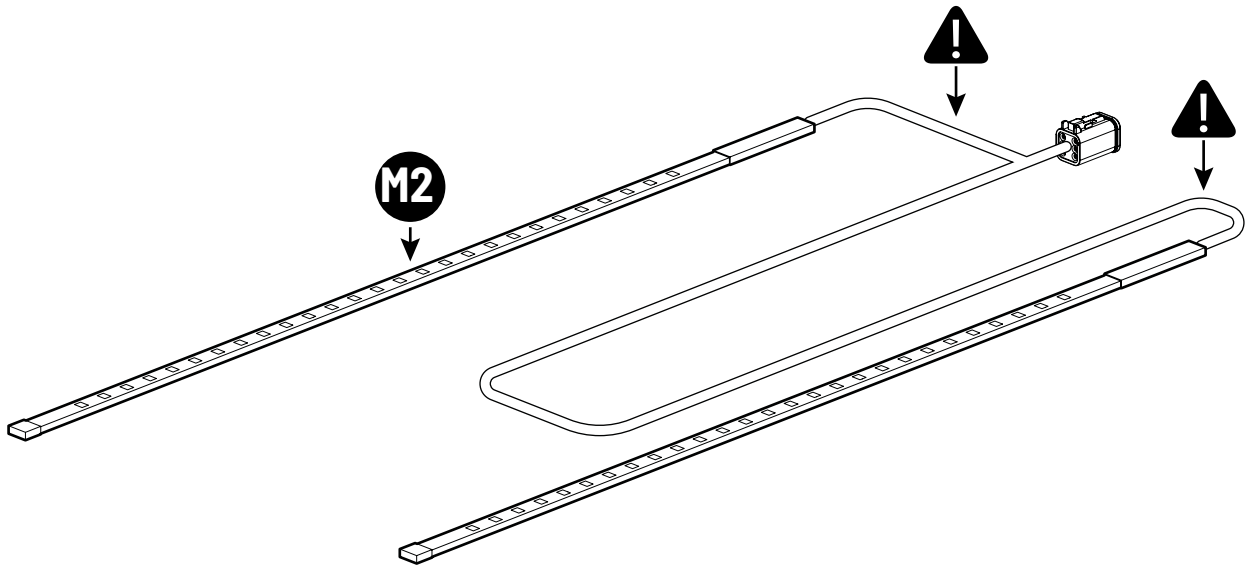





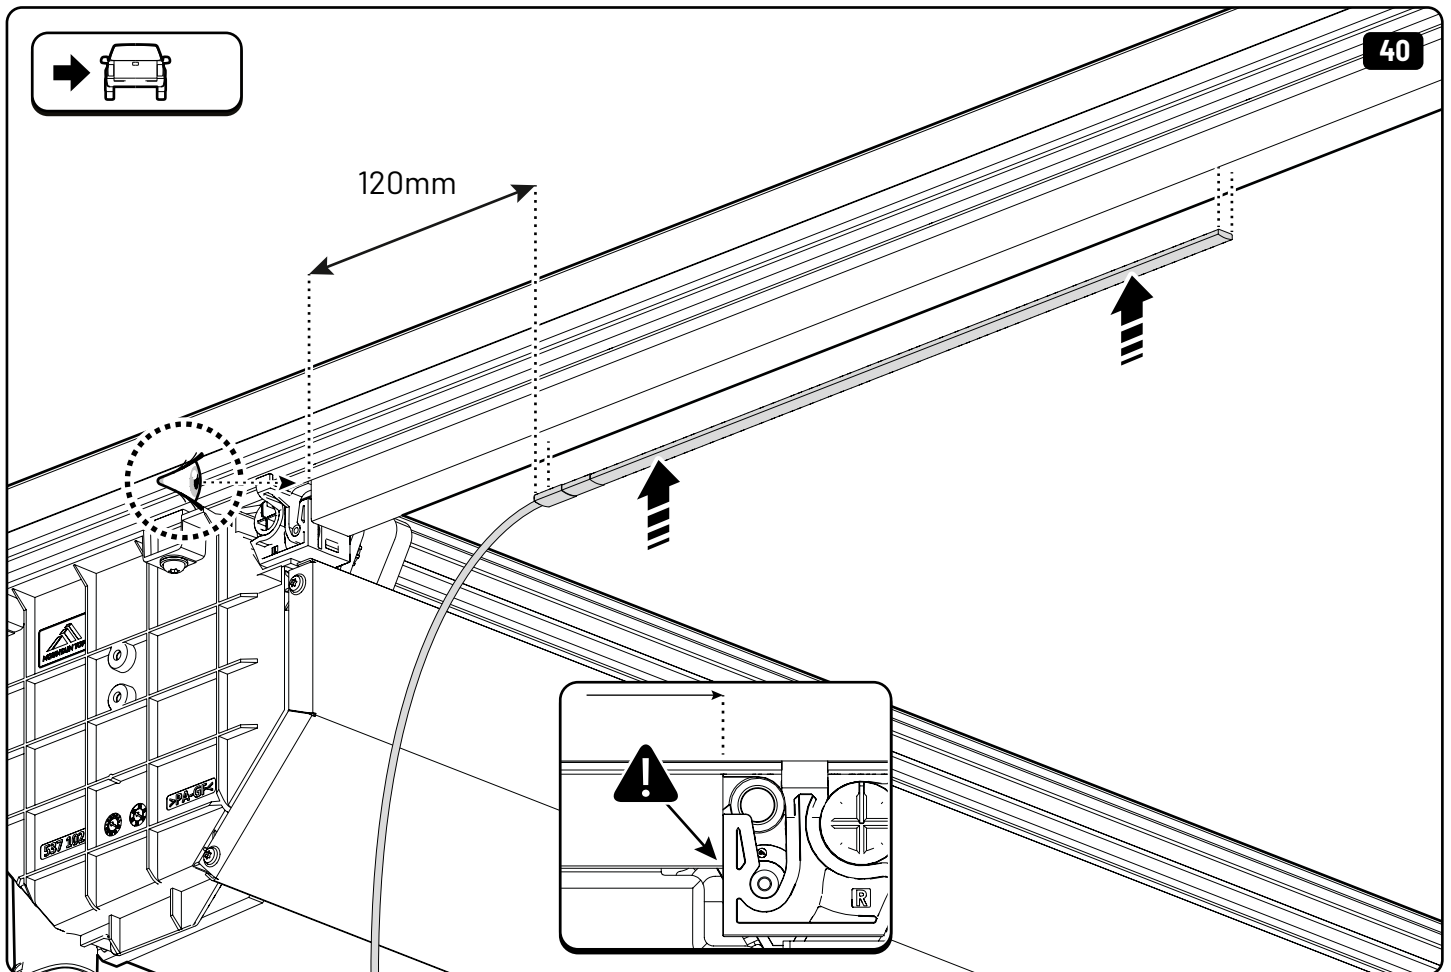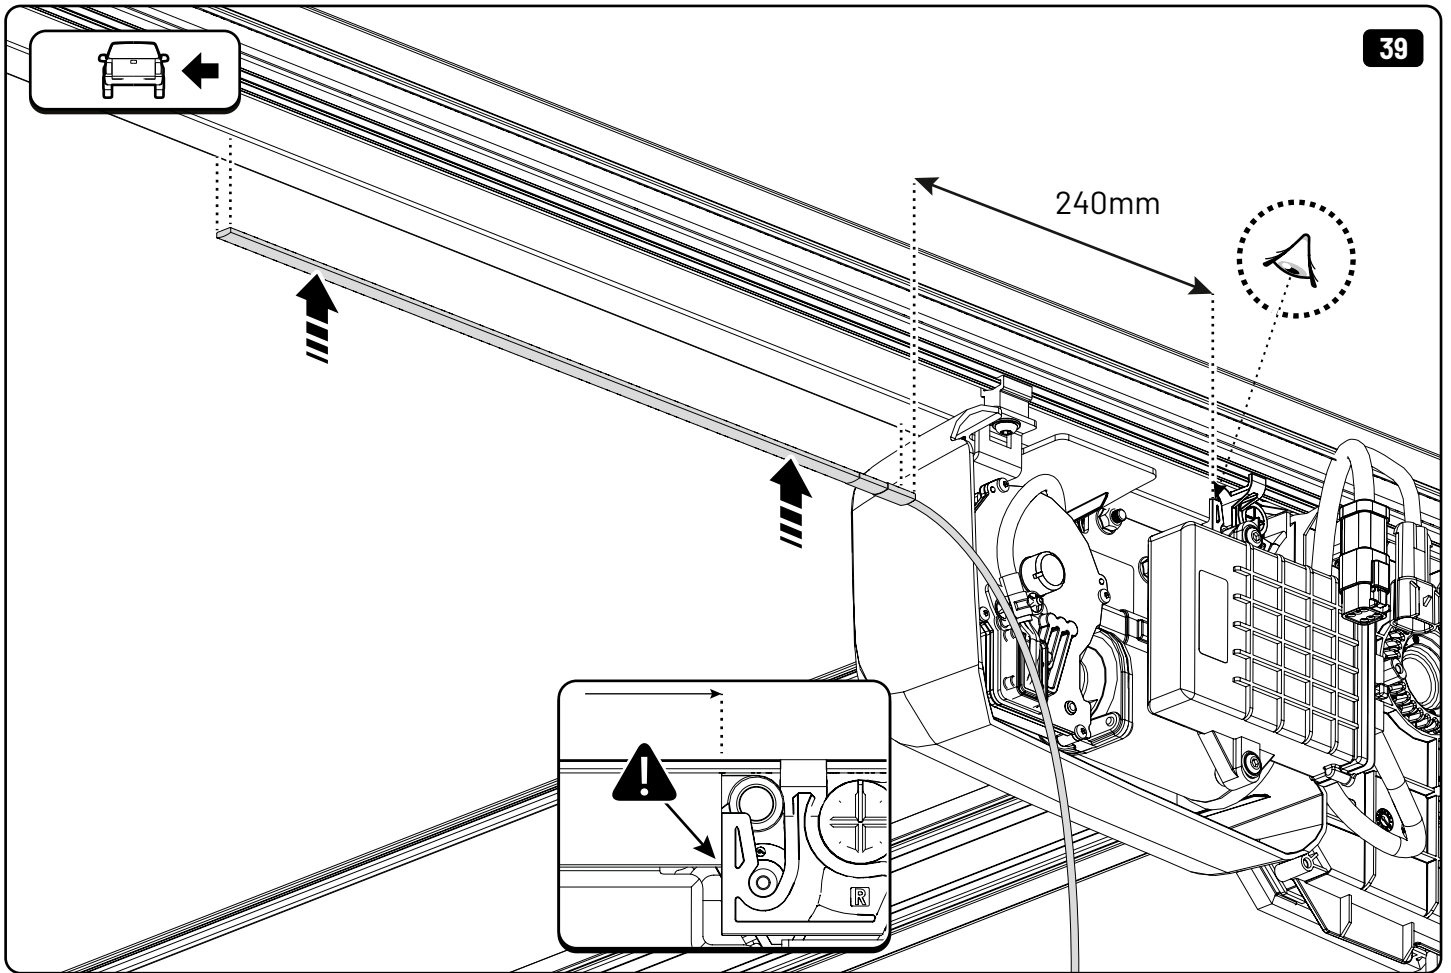



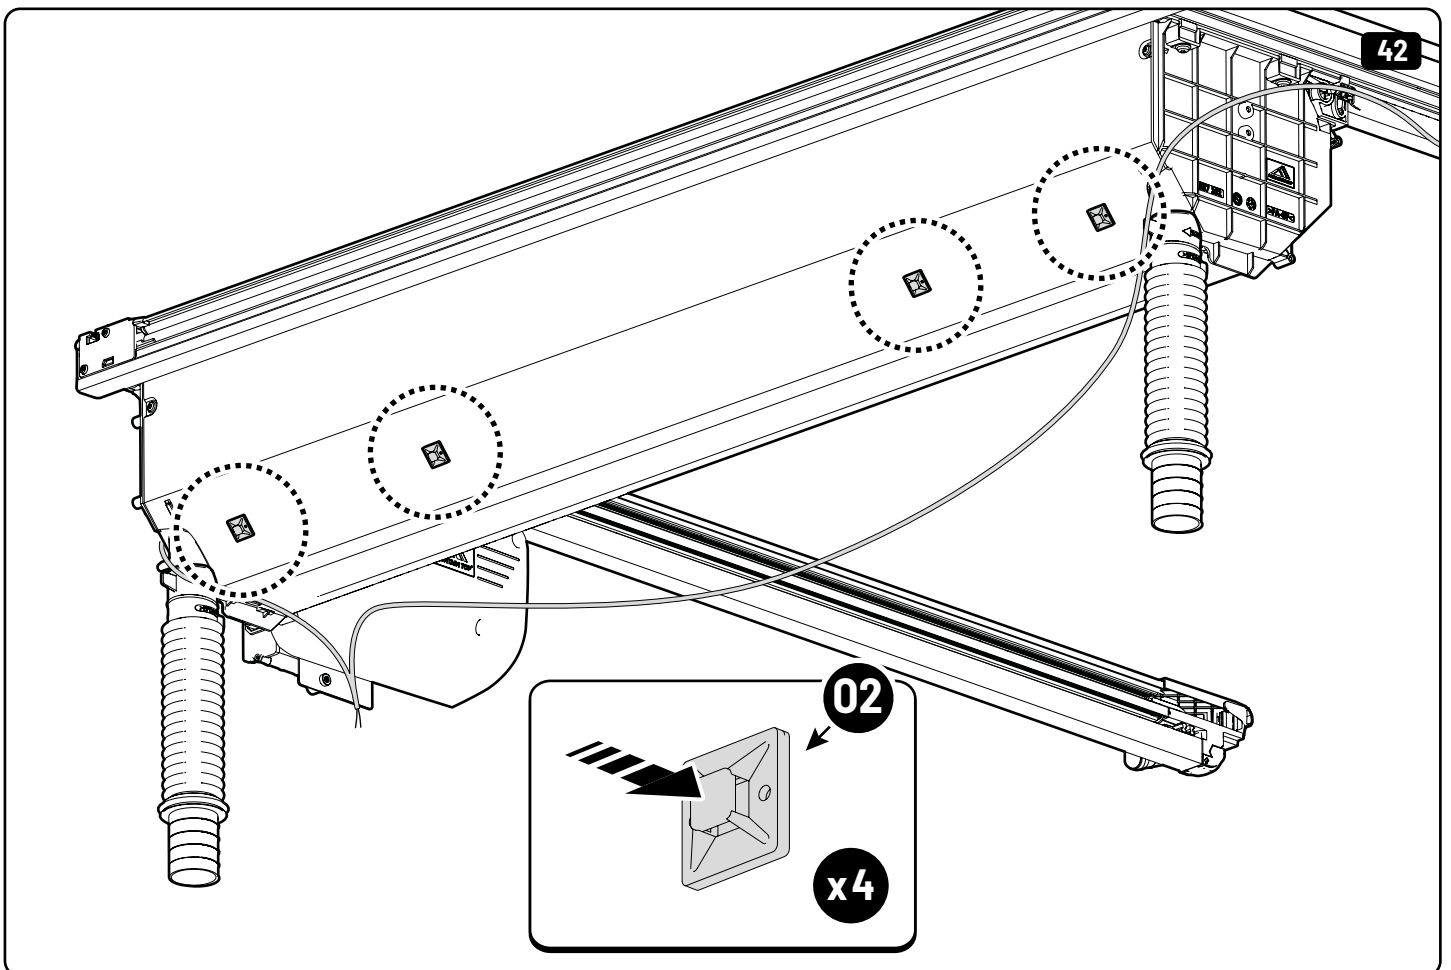
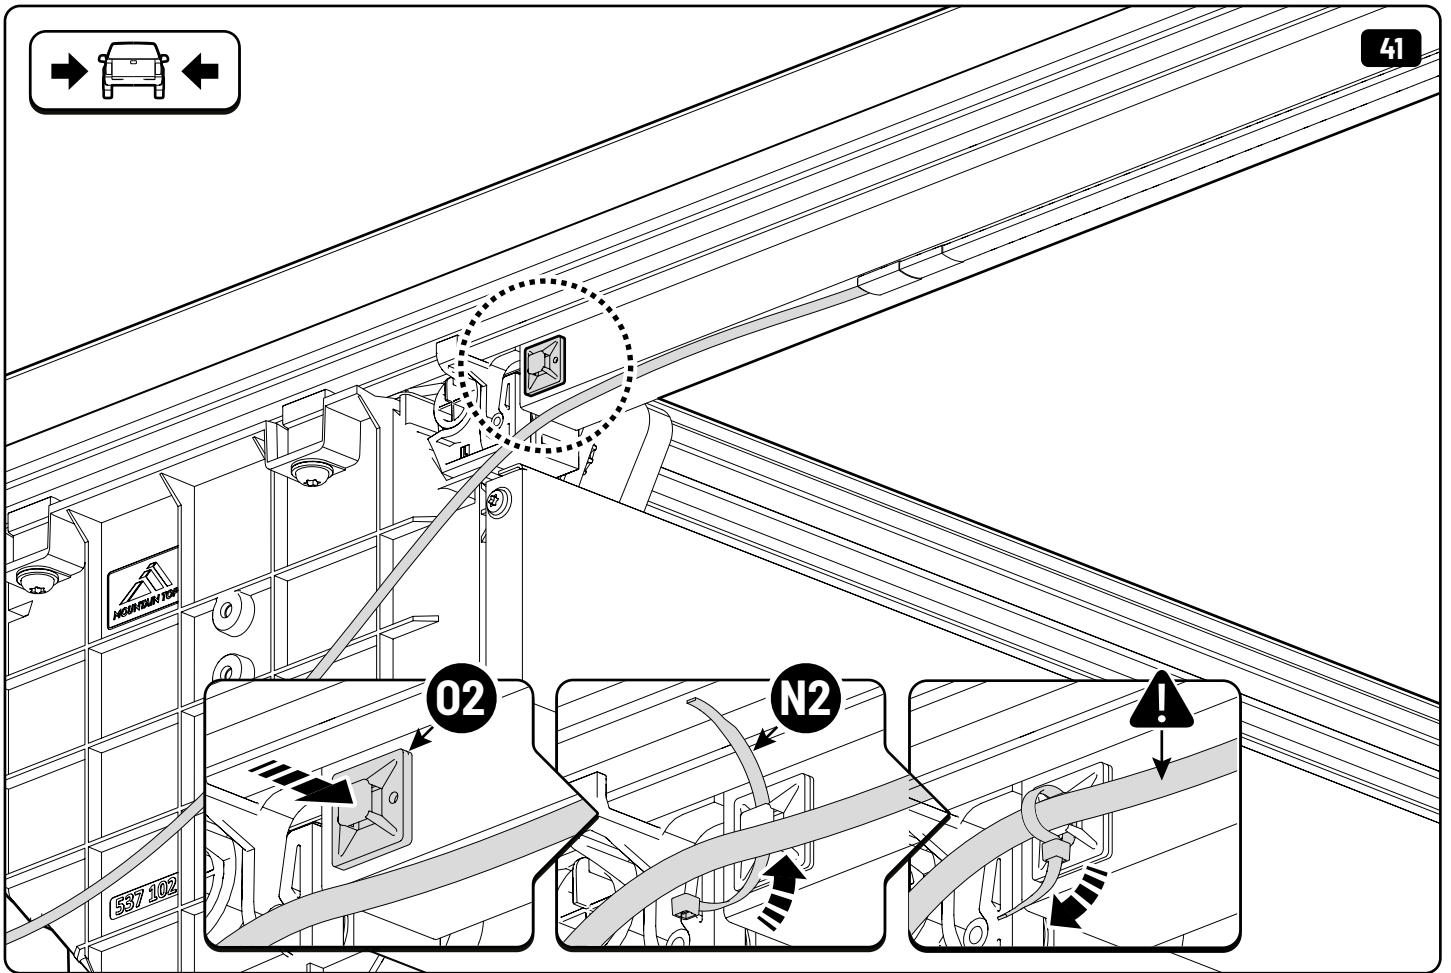


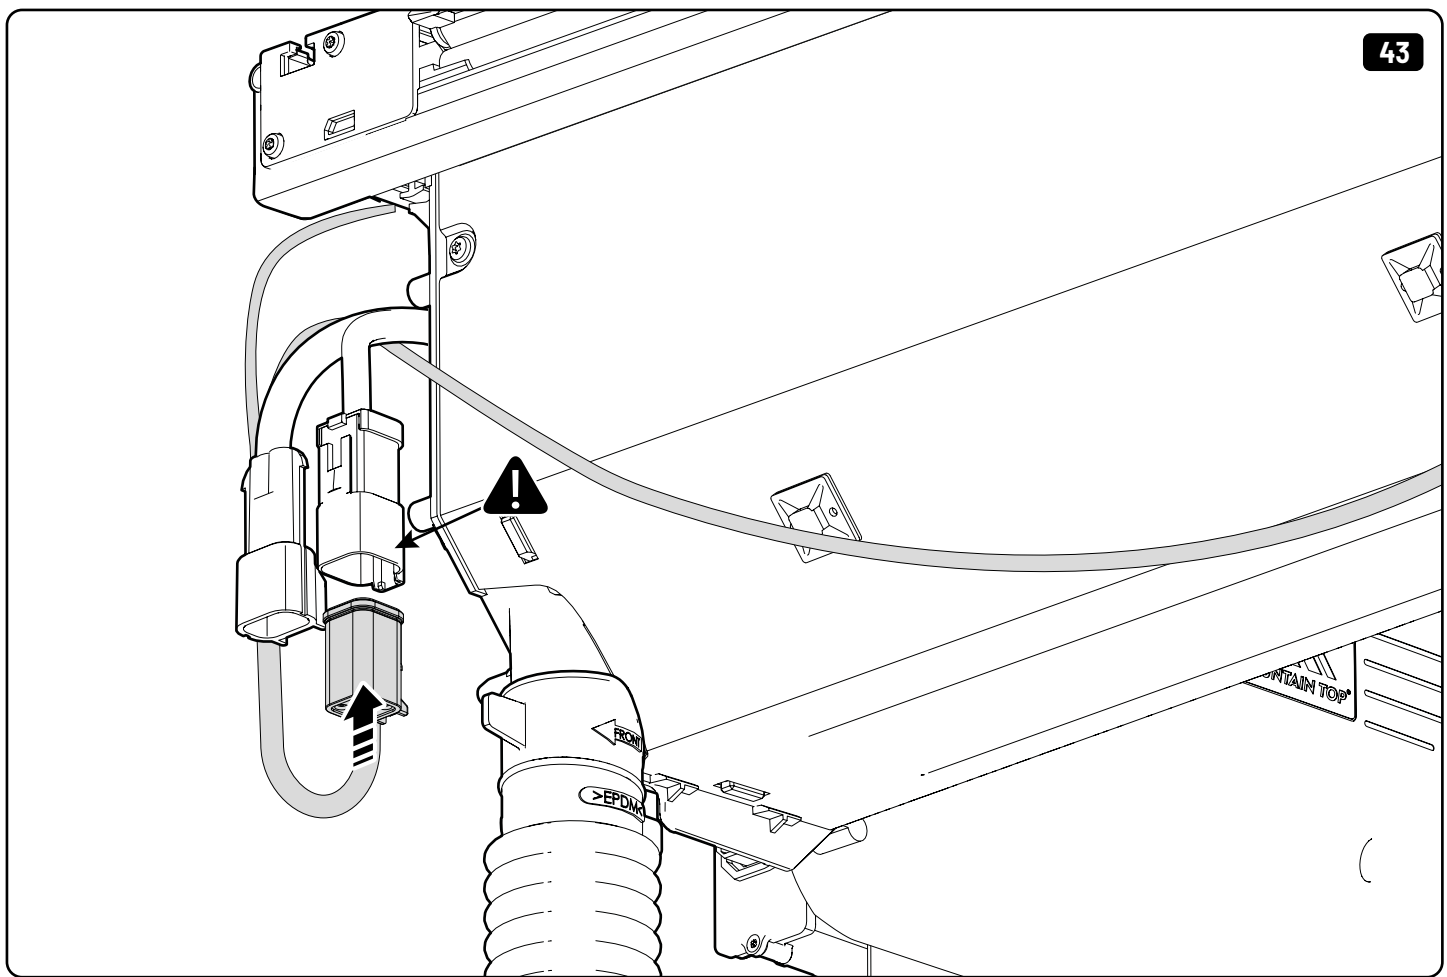


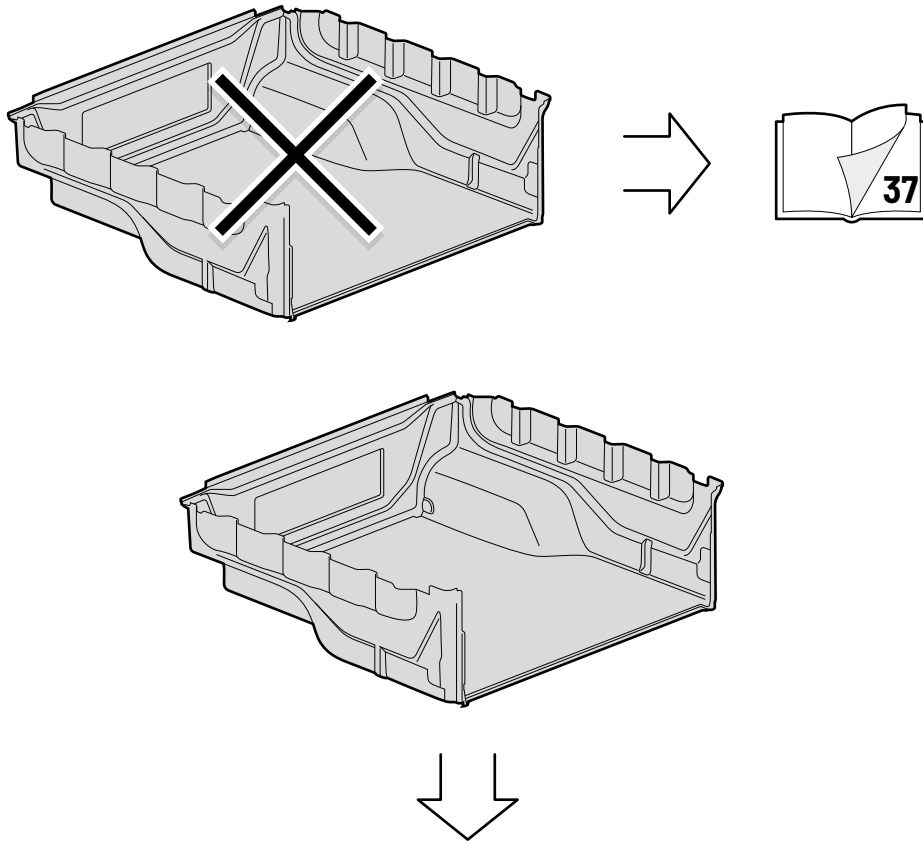


**!** ONLY WITH LINER

**44**

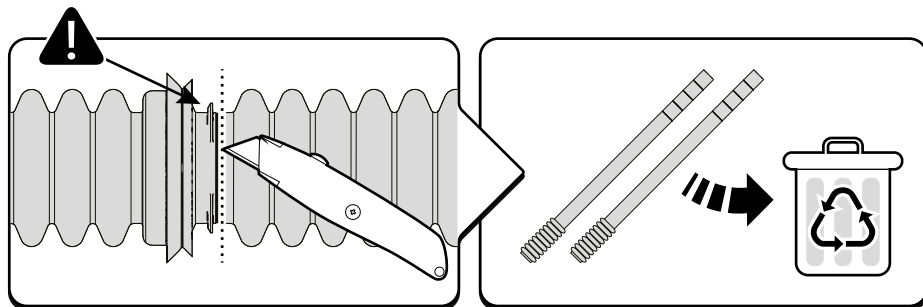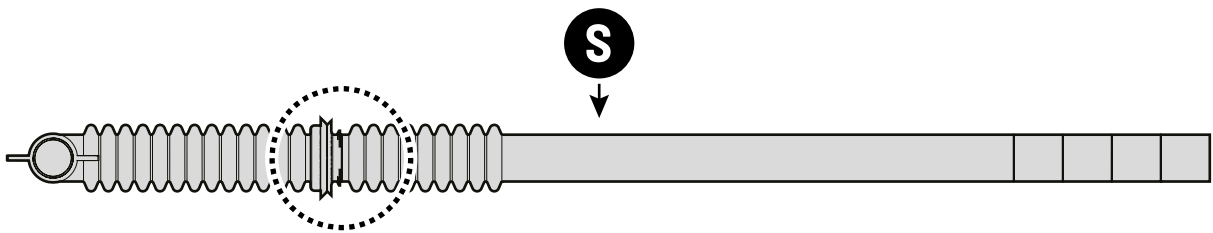


**!** ONLY WITH LINER

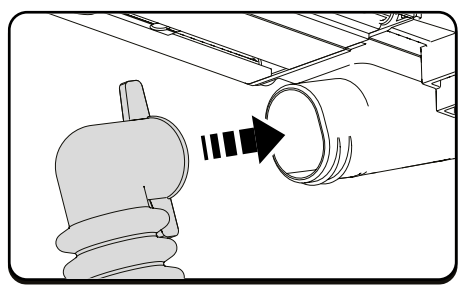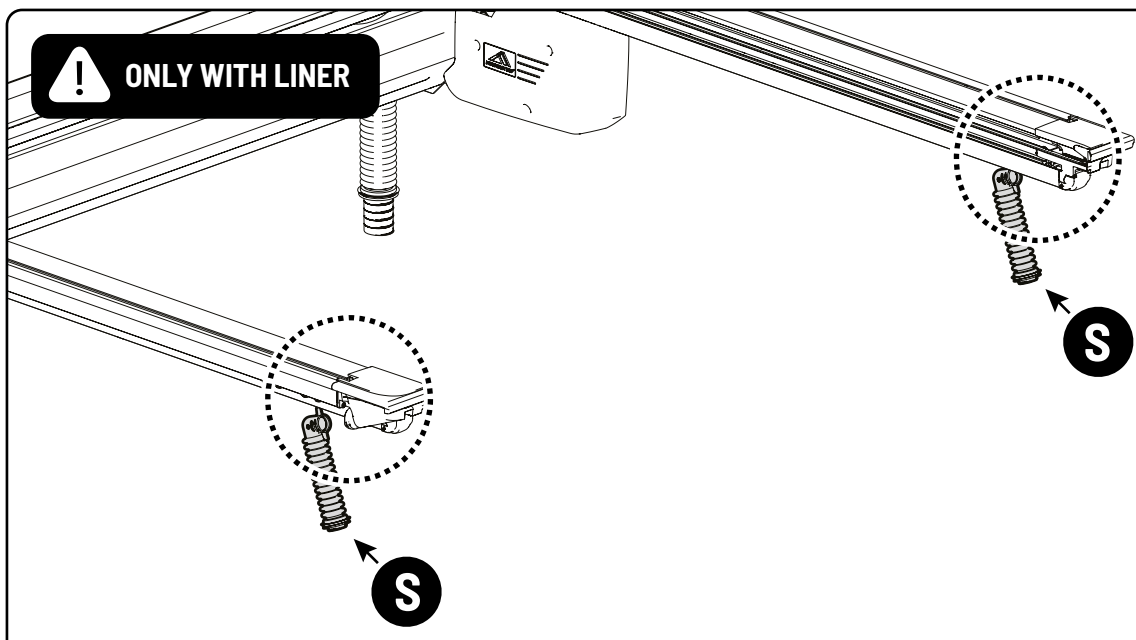

**!** ONLY WITH LINER

**!** EUROPEAN MODEL


X: 650 mm Y: 290 mm

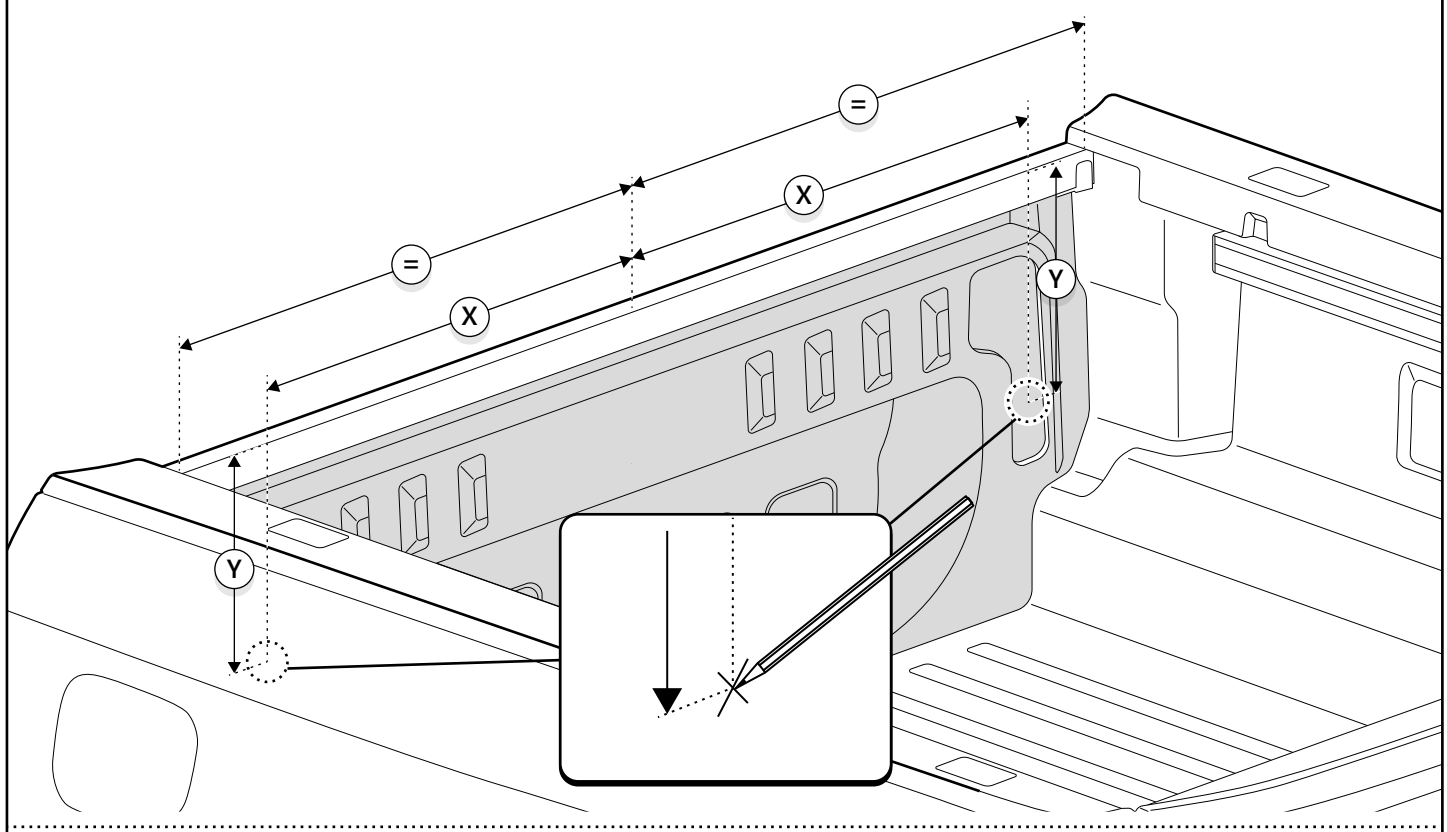

**!** ONLY WITH LINER

**!** OTHER MODELS


X: 560 mm Y: 330 mm

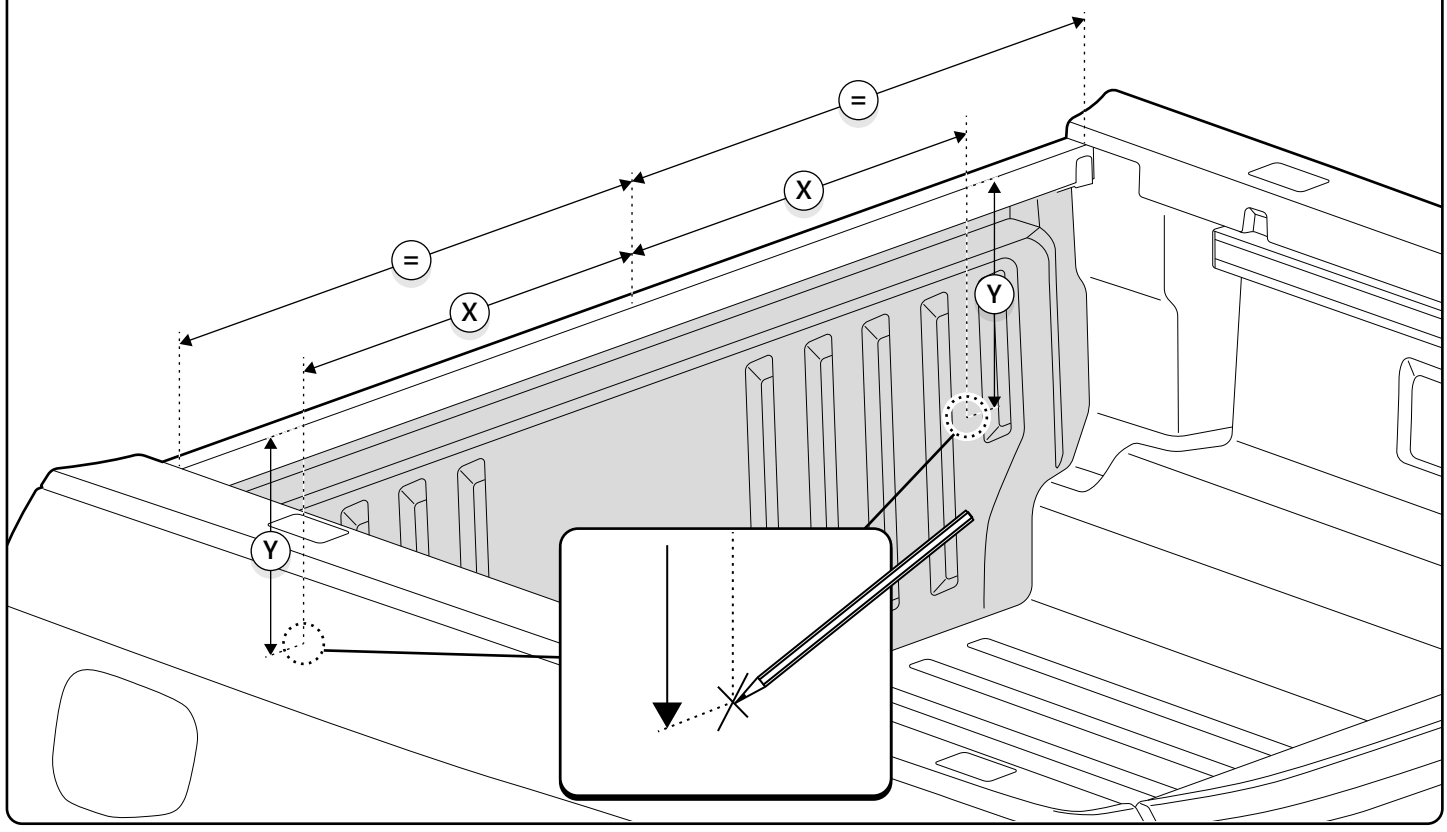


**! ONLY WITH LINER**

 **Ø 3,5mm**


 **Ø40 mm**

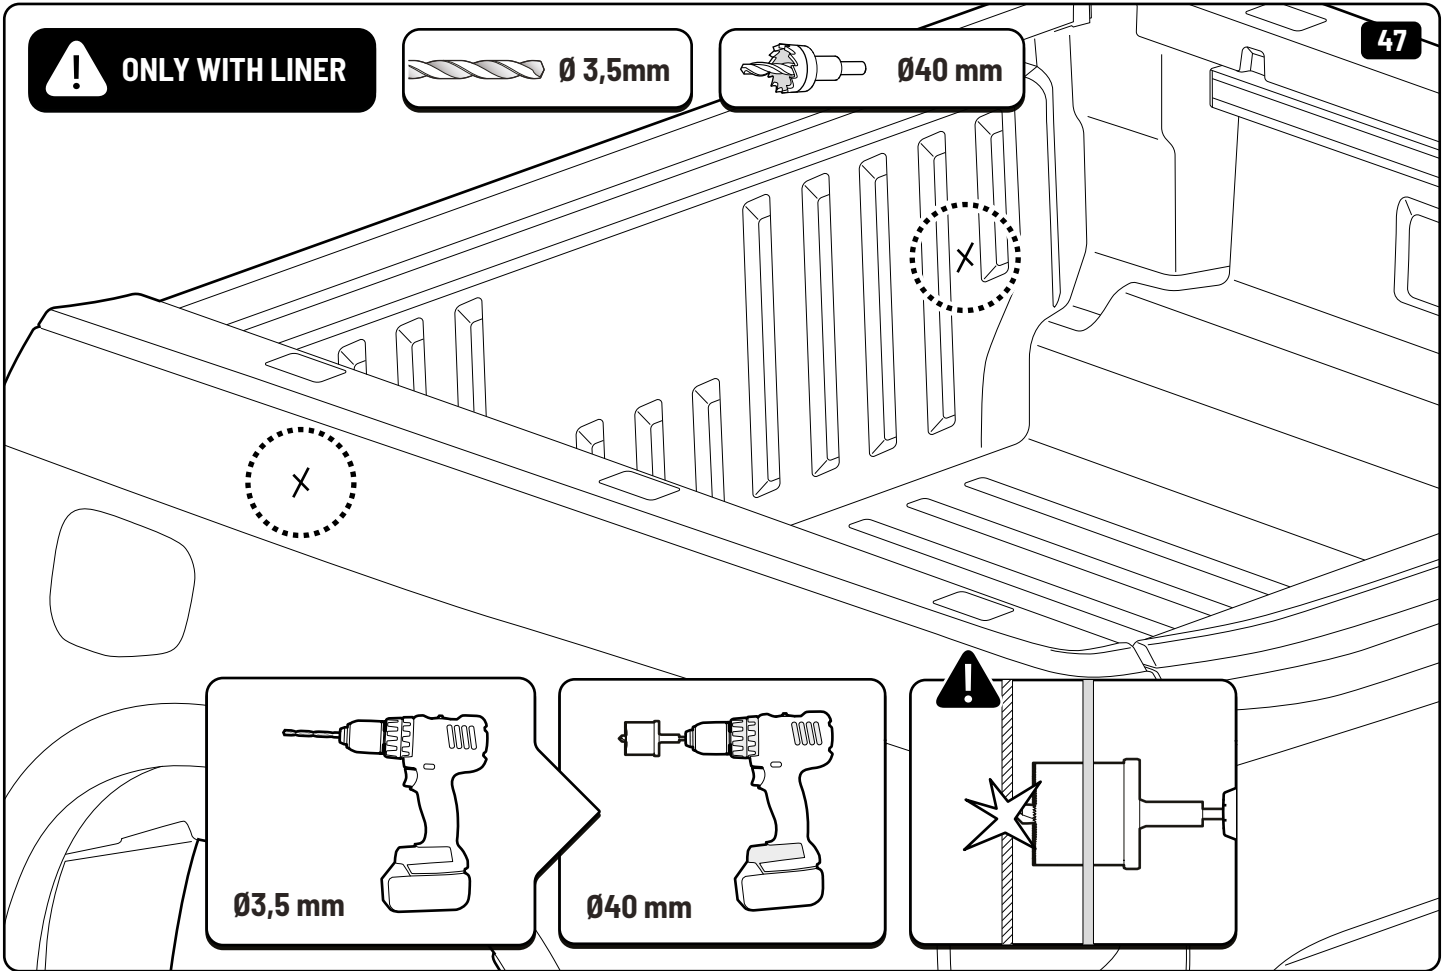





**! ONLY WITH LINER**

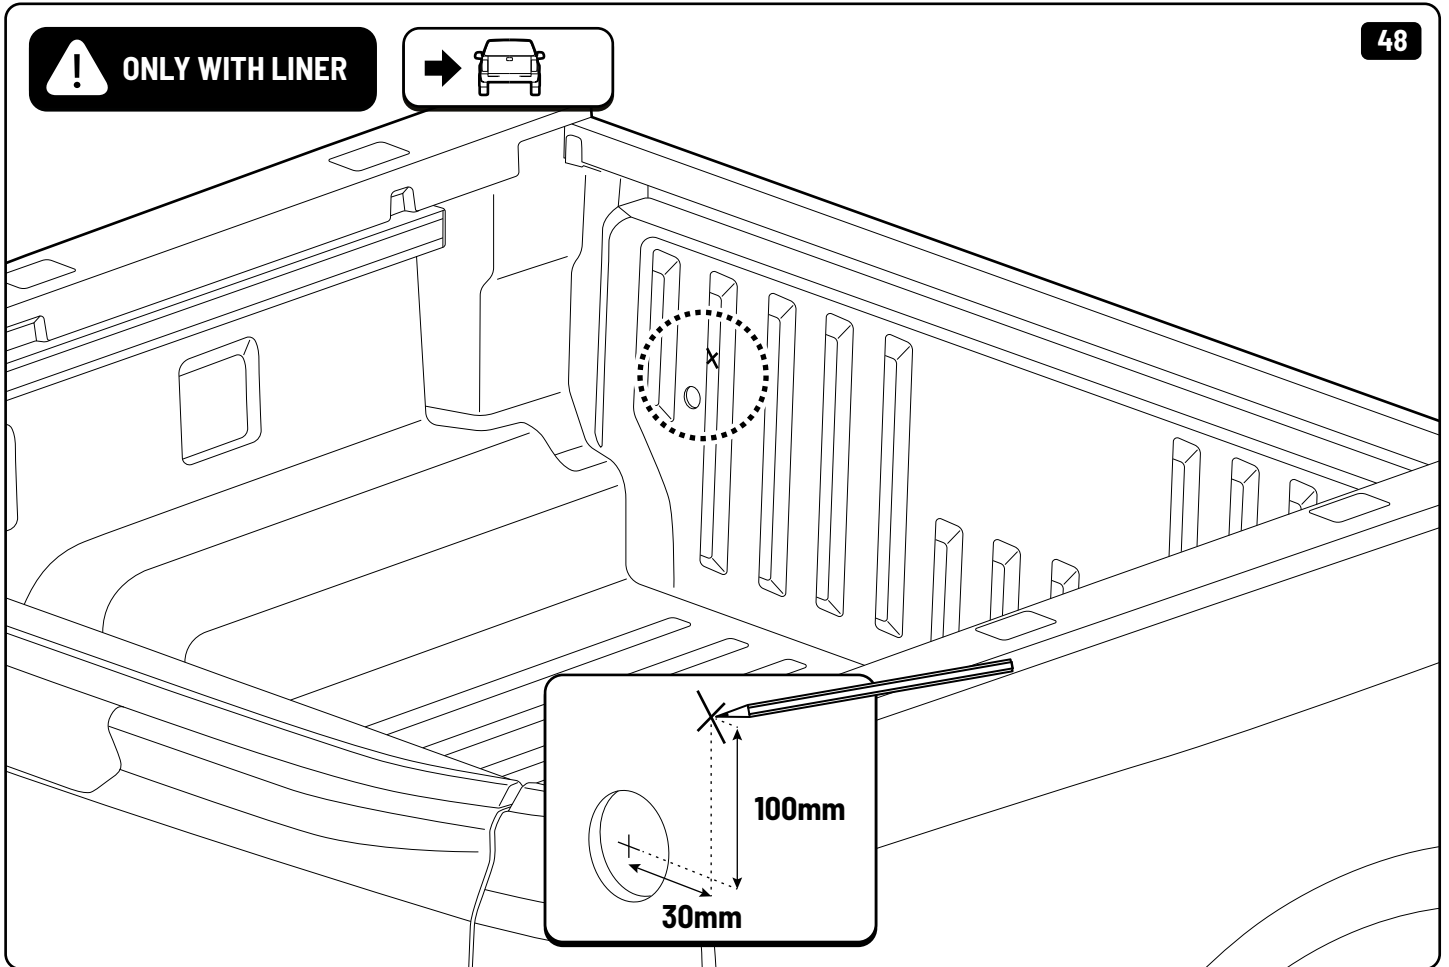


**!** ONLY WITH LINER





49

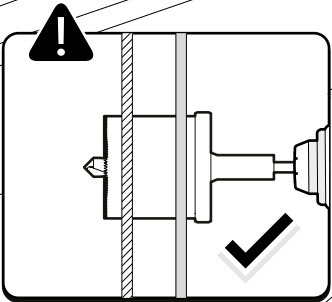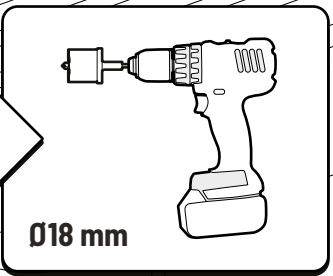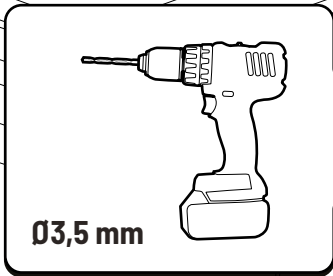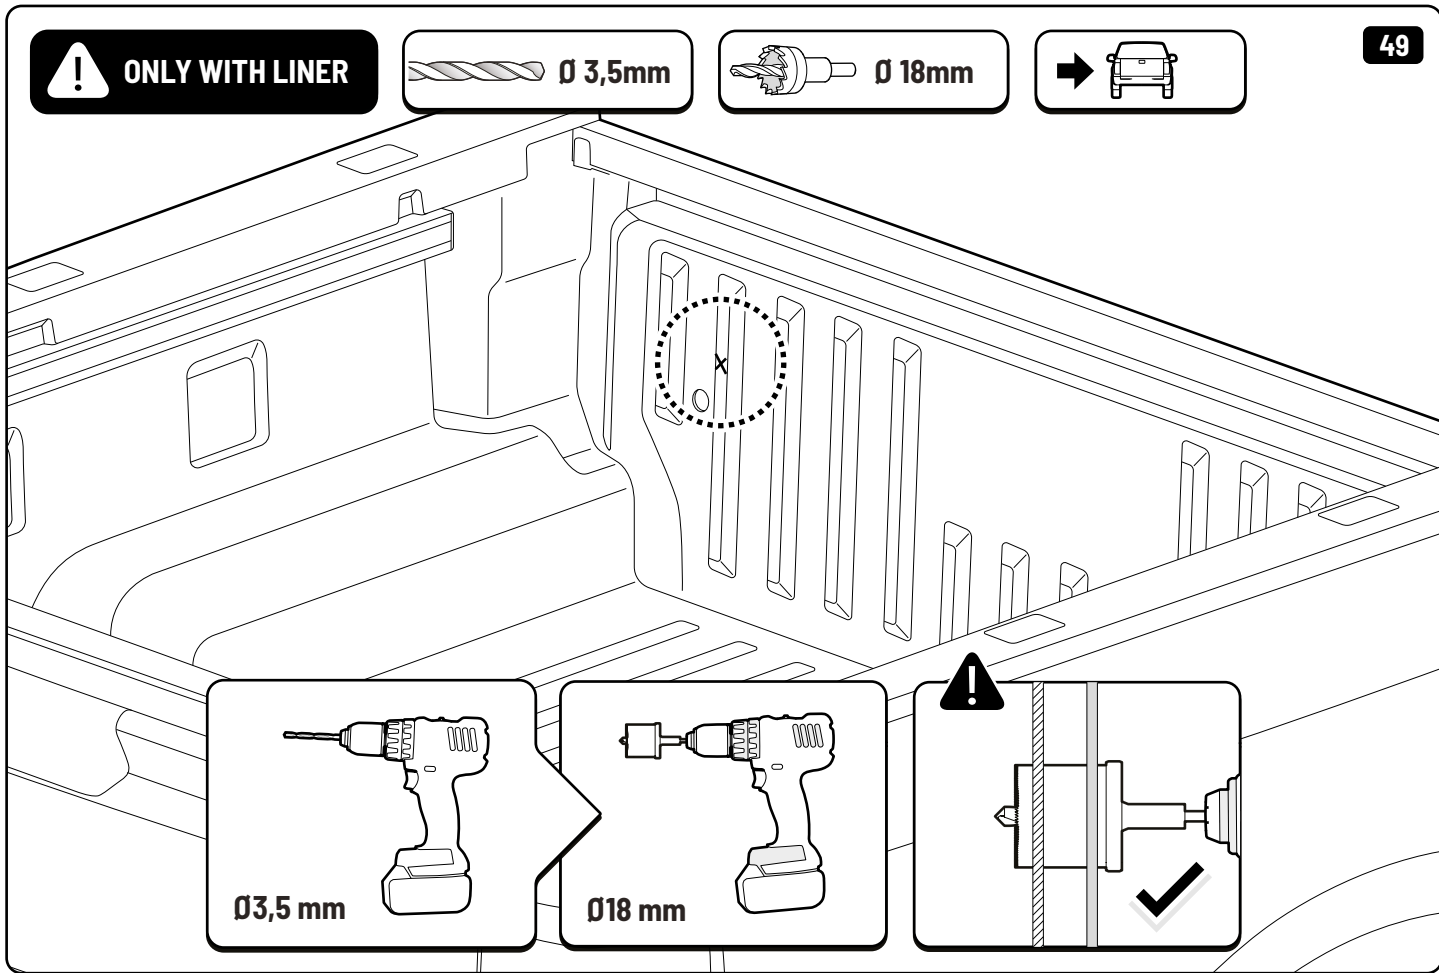

**!** ONLY WITH LINER



50

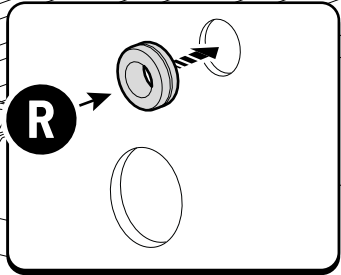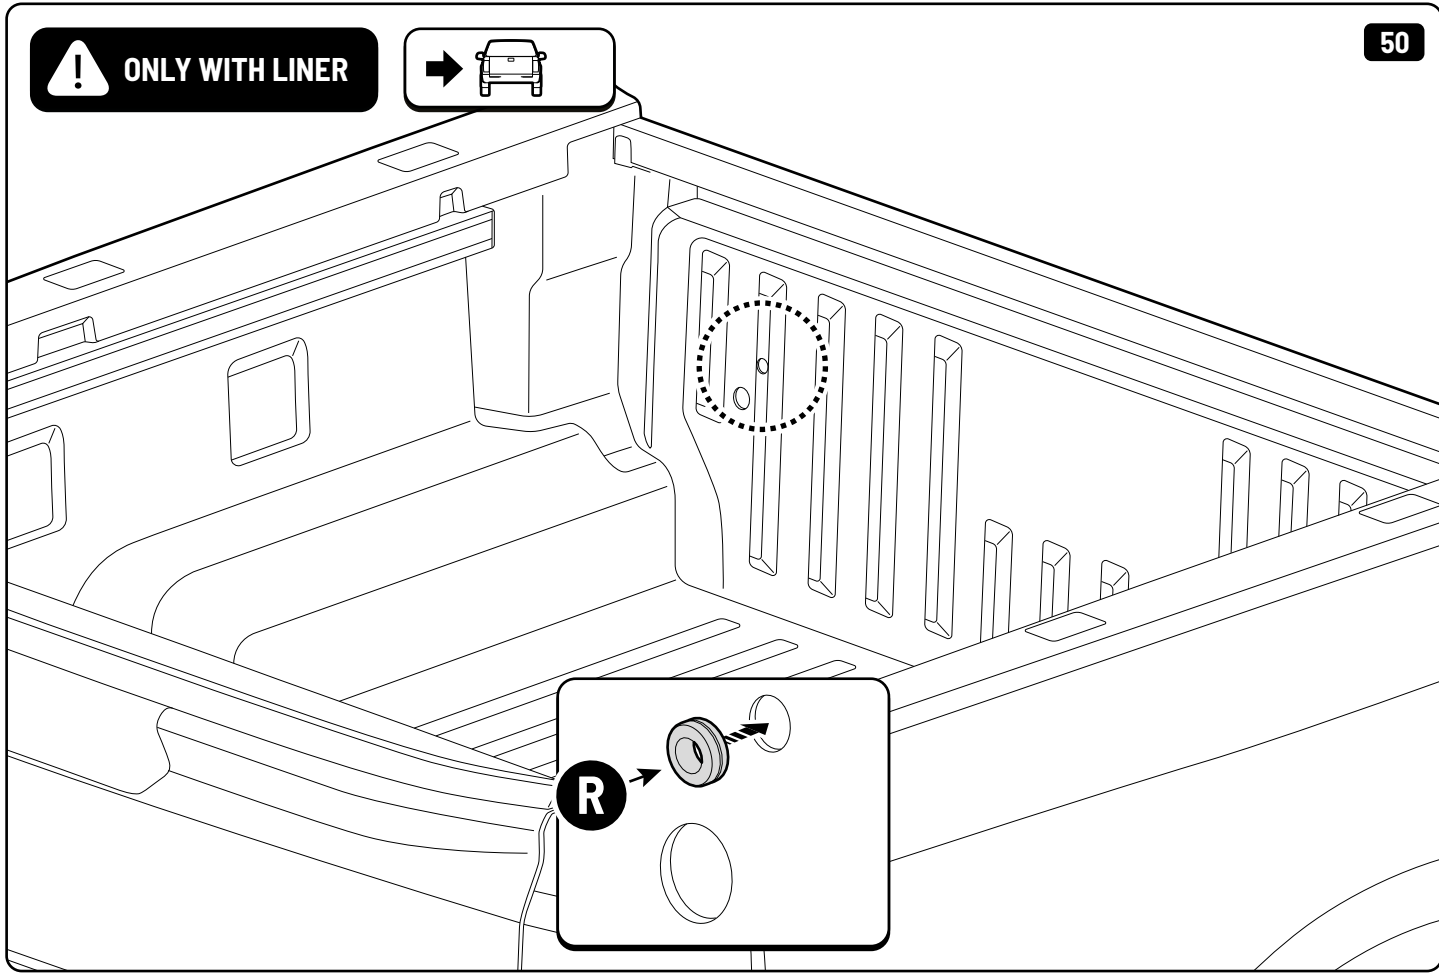




**ONLY WITH LINER**

**A: 30 mm B: 20 mm**




**51**

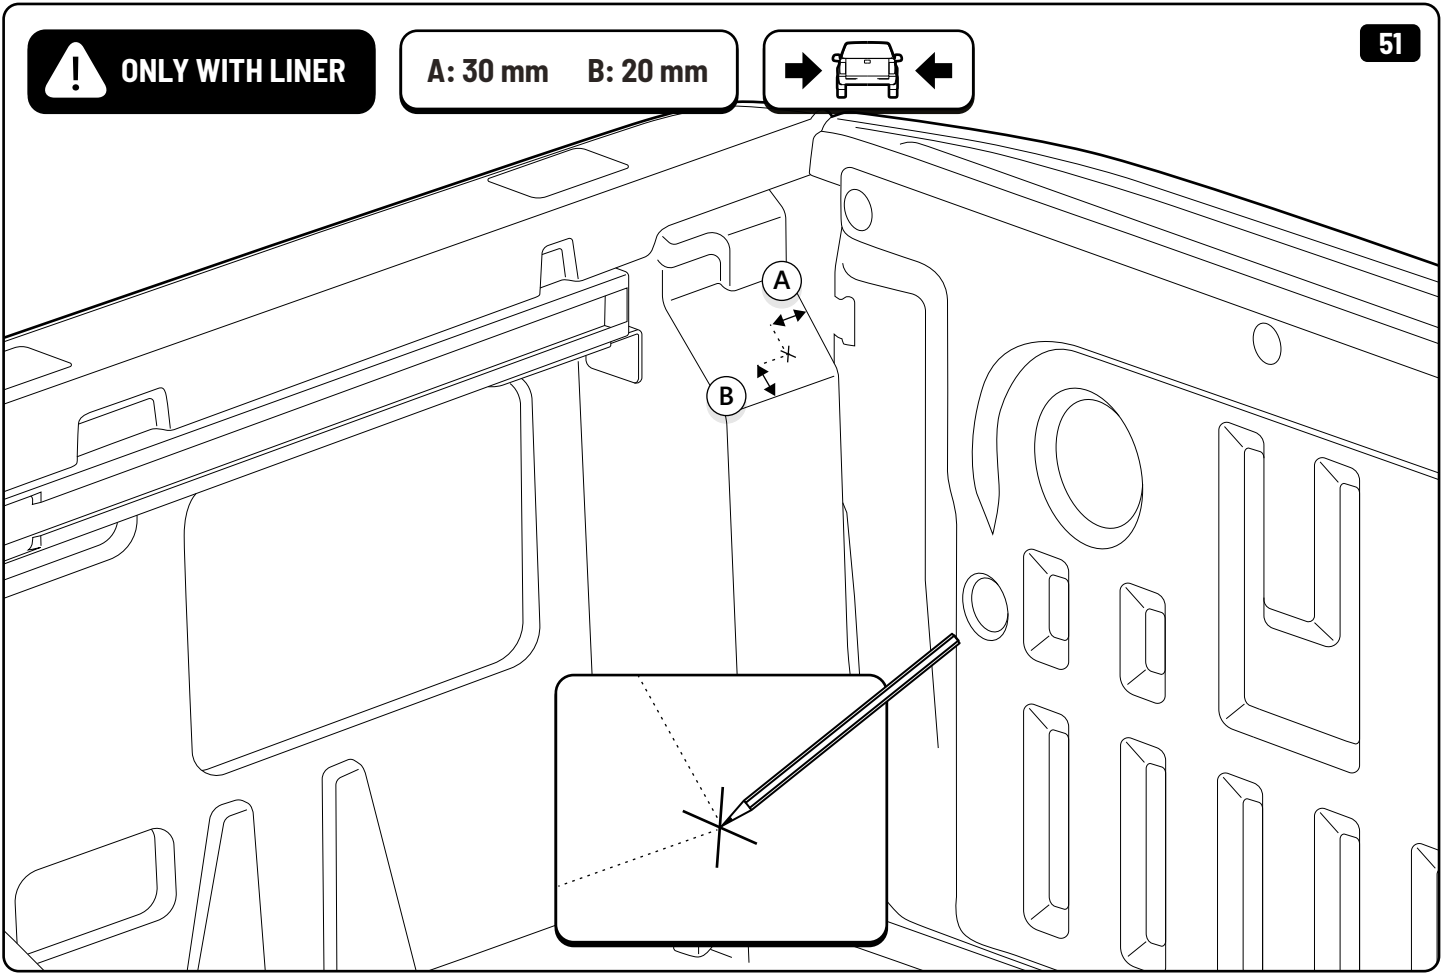


**ONLY WITH LINER**

 **Ø 3,5mm**




 **Ø30 mm**



**52**

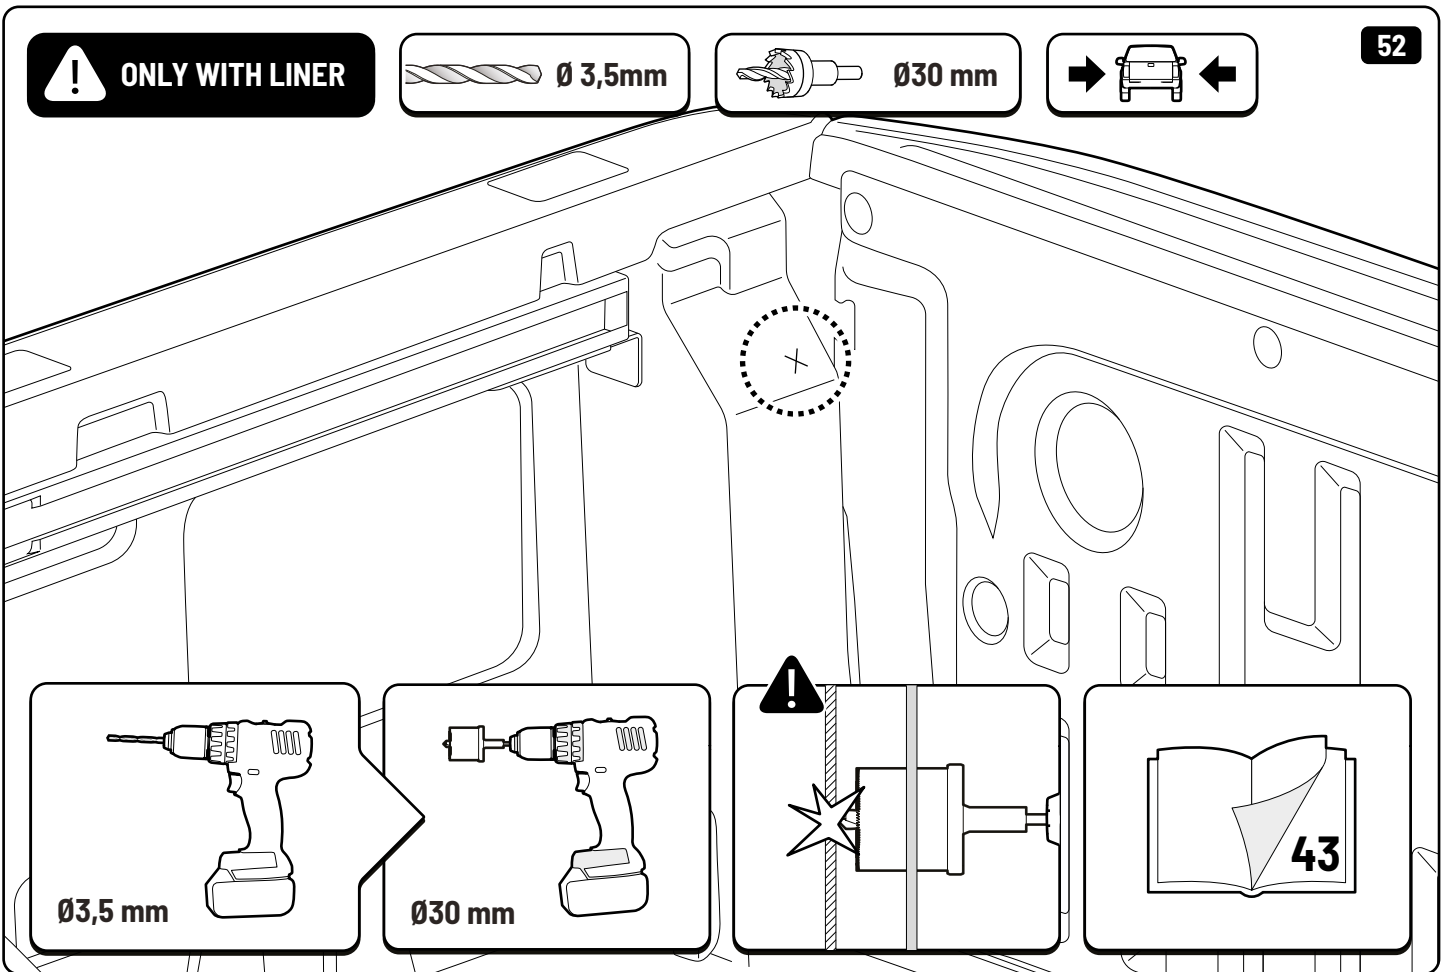




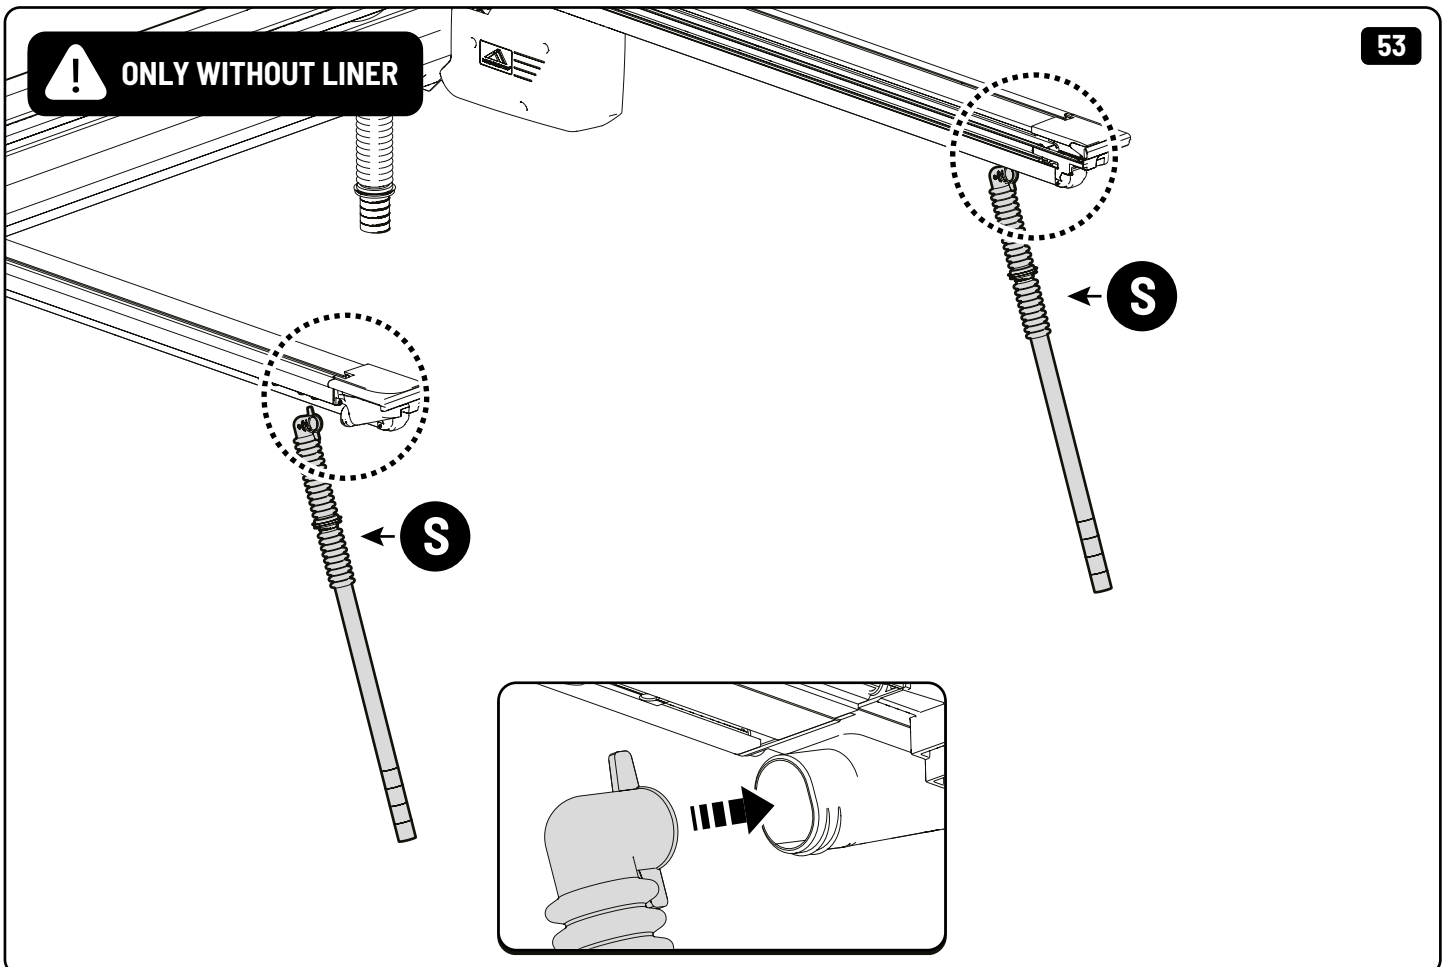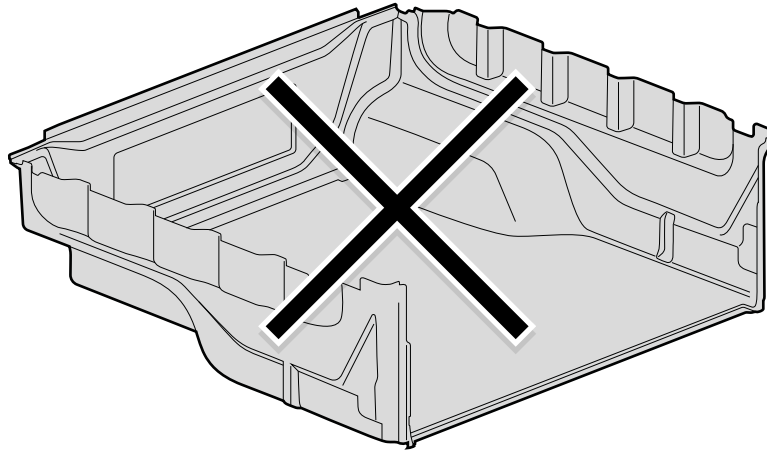

**!** ONLY WITHOUT LINER

**!** EUROPEAN MODEL


**X: 650 mm Y: 290 mm**

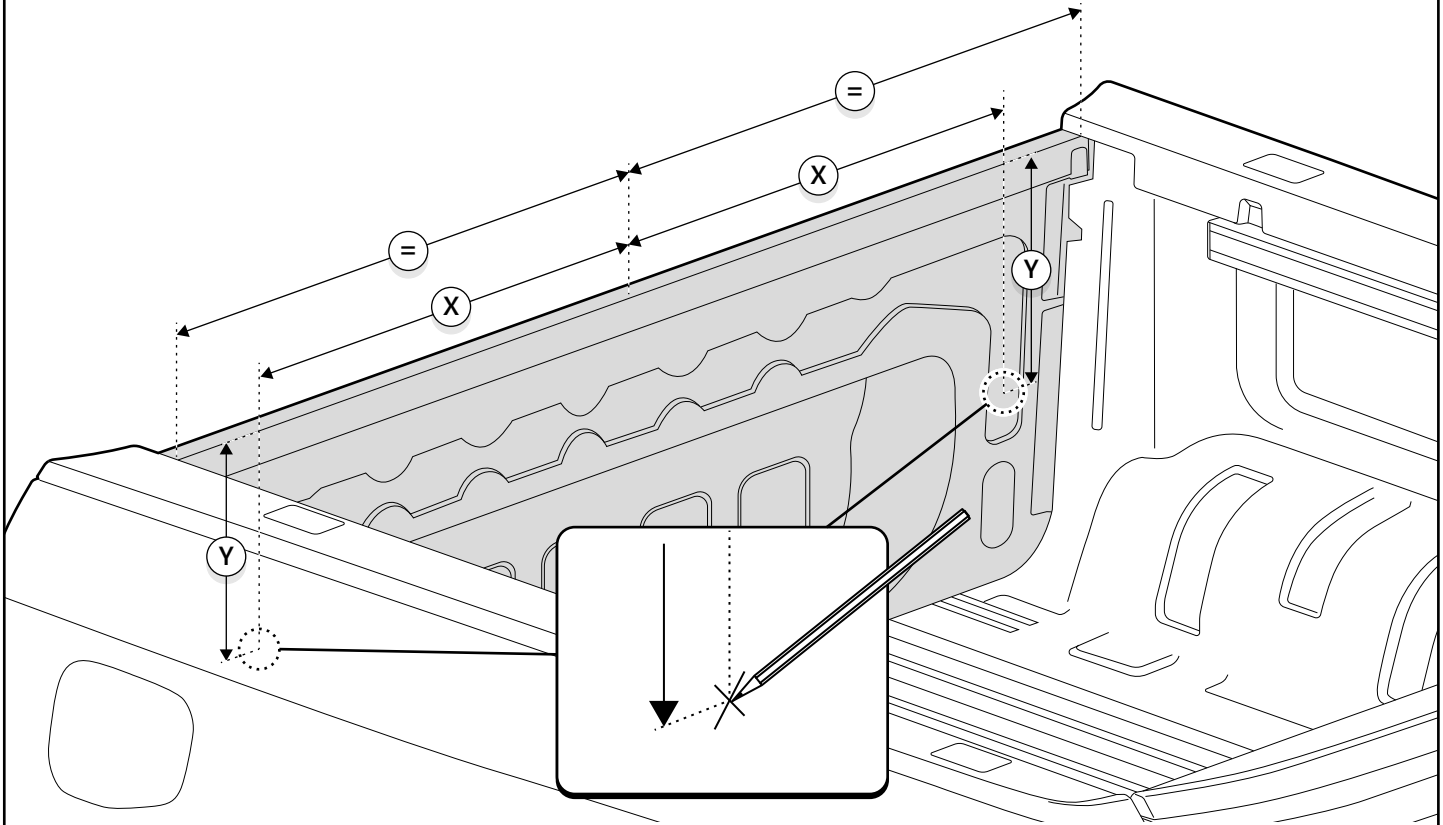





**!** ONLY WITHOUT LINER

**!** OTHER MODELS

**X: 580 mm Y: 290 mm**



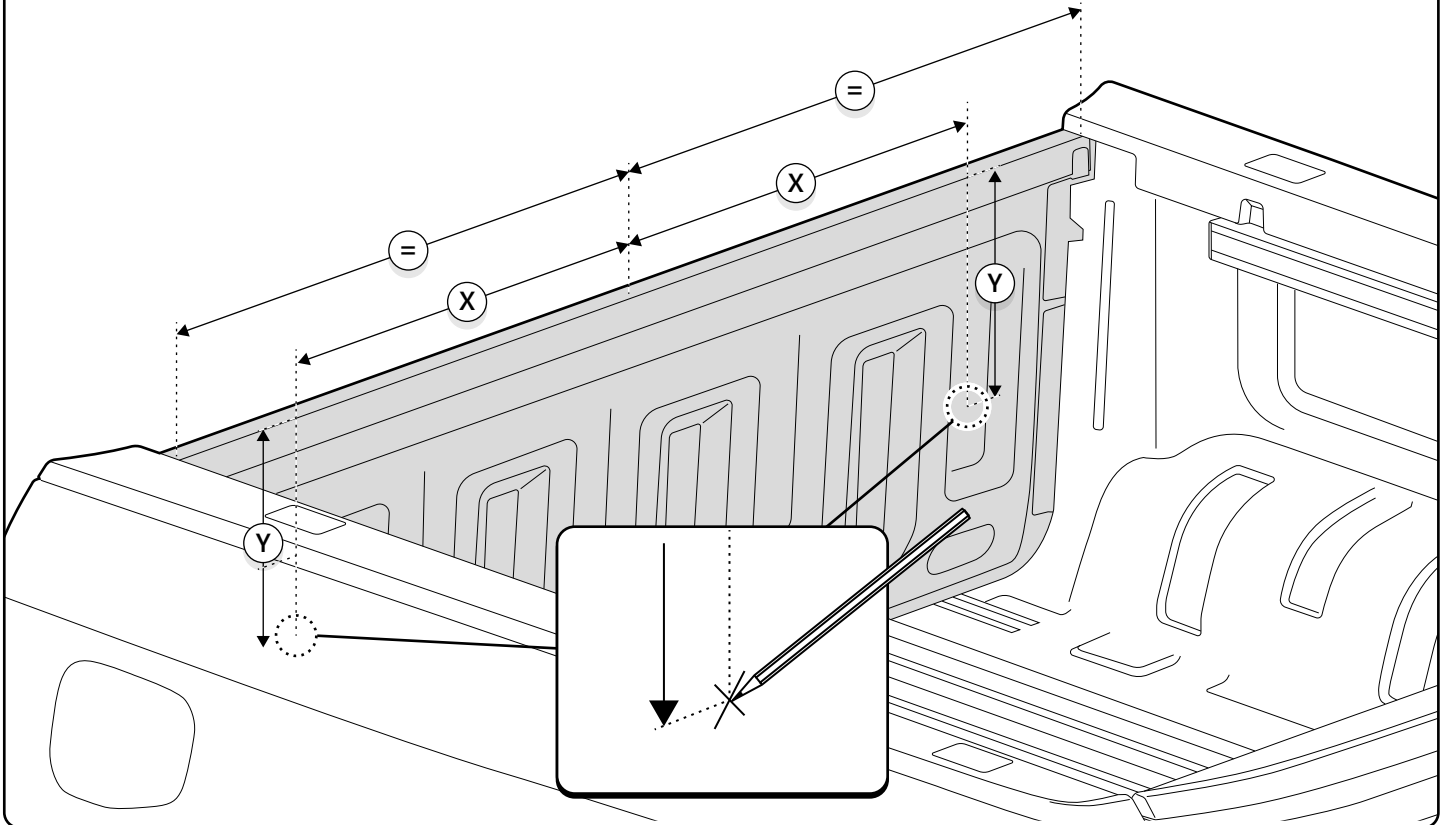


**!** ONLY WITHOUT LINER

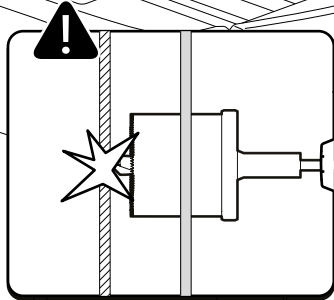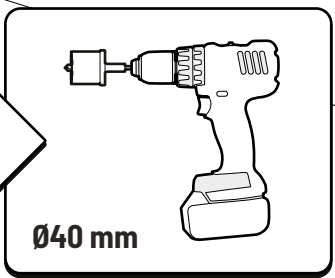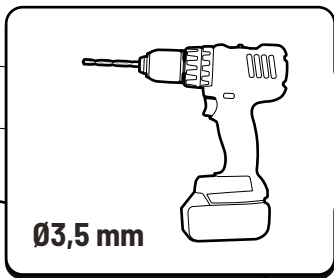
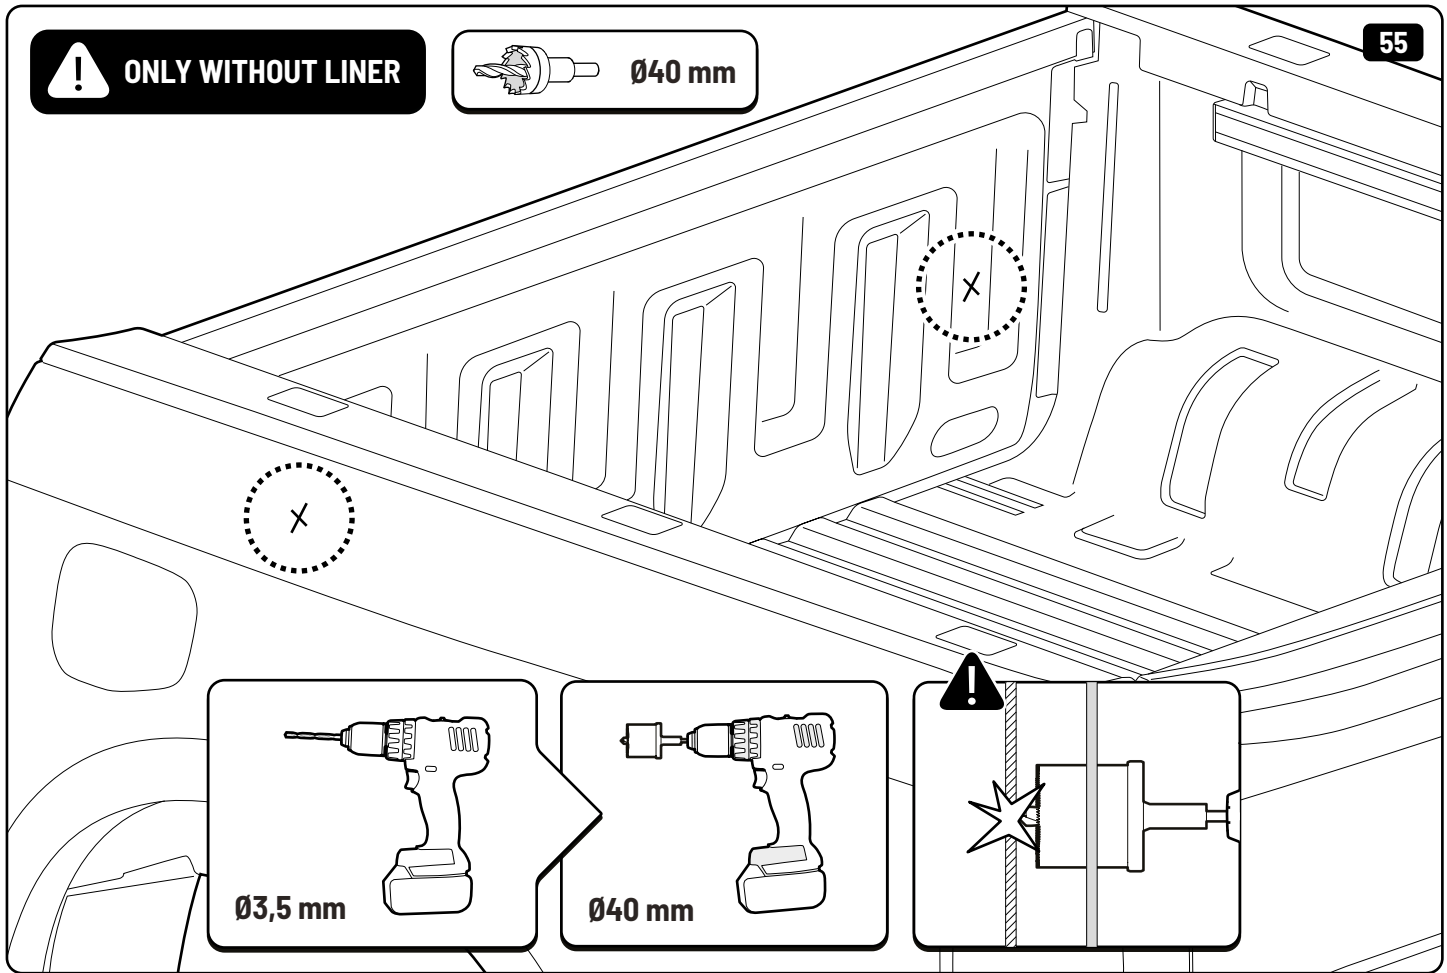


**!** ONLY WITHOUT LINER



**!** Rust Protection

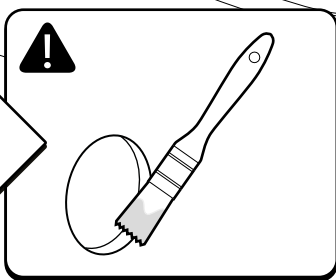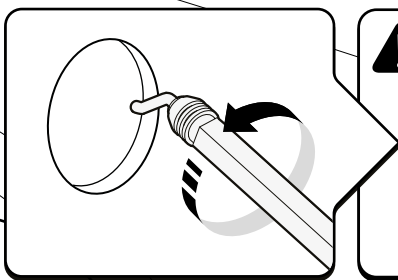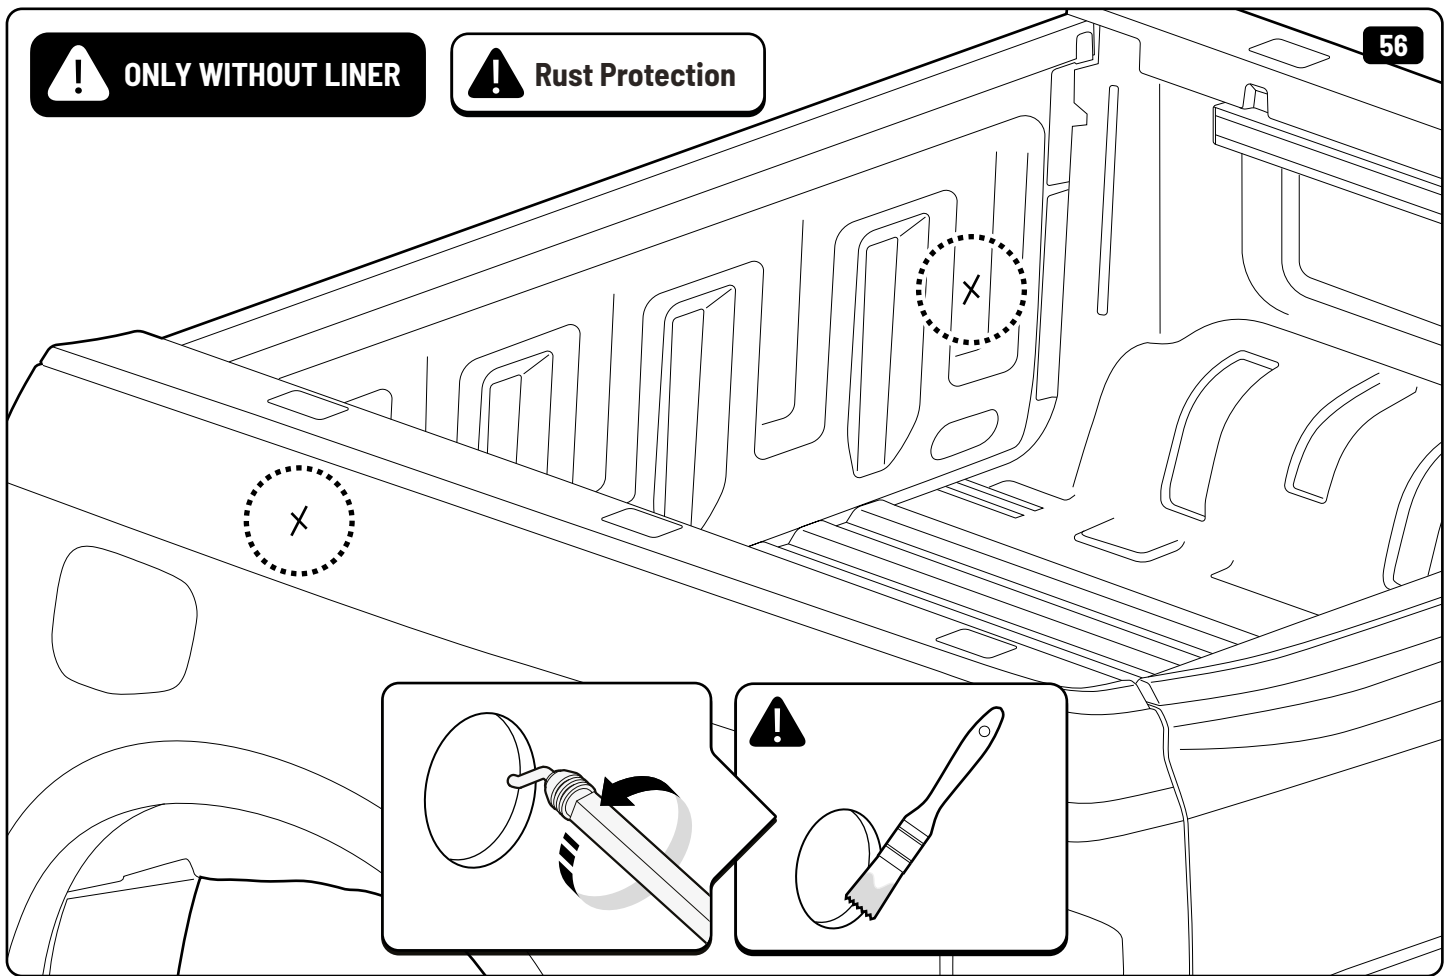


**!** ONLY WITHOUT LINER

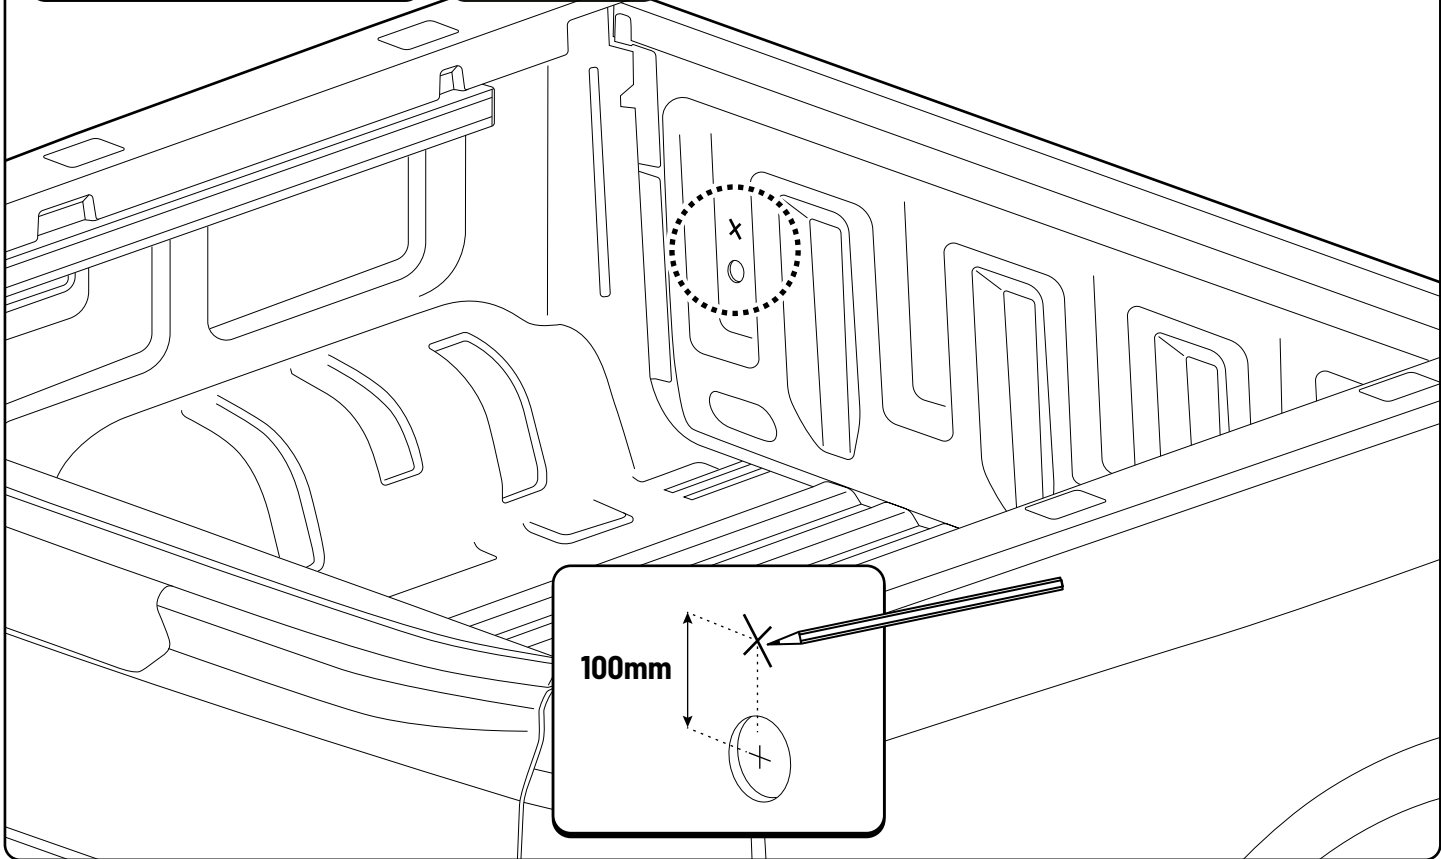


**!** ONLY WITHOUT LINER

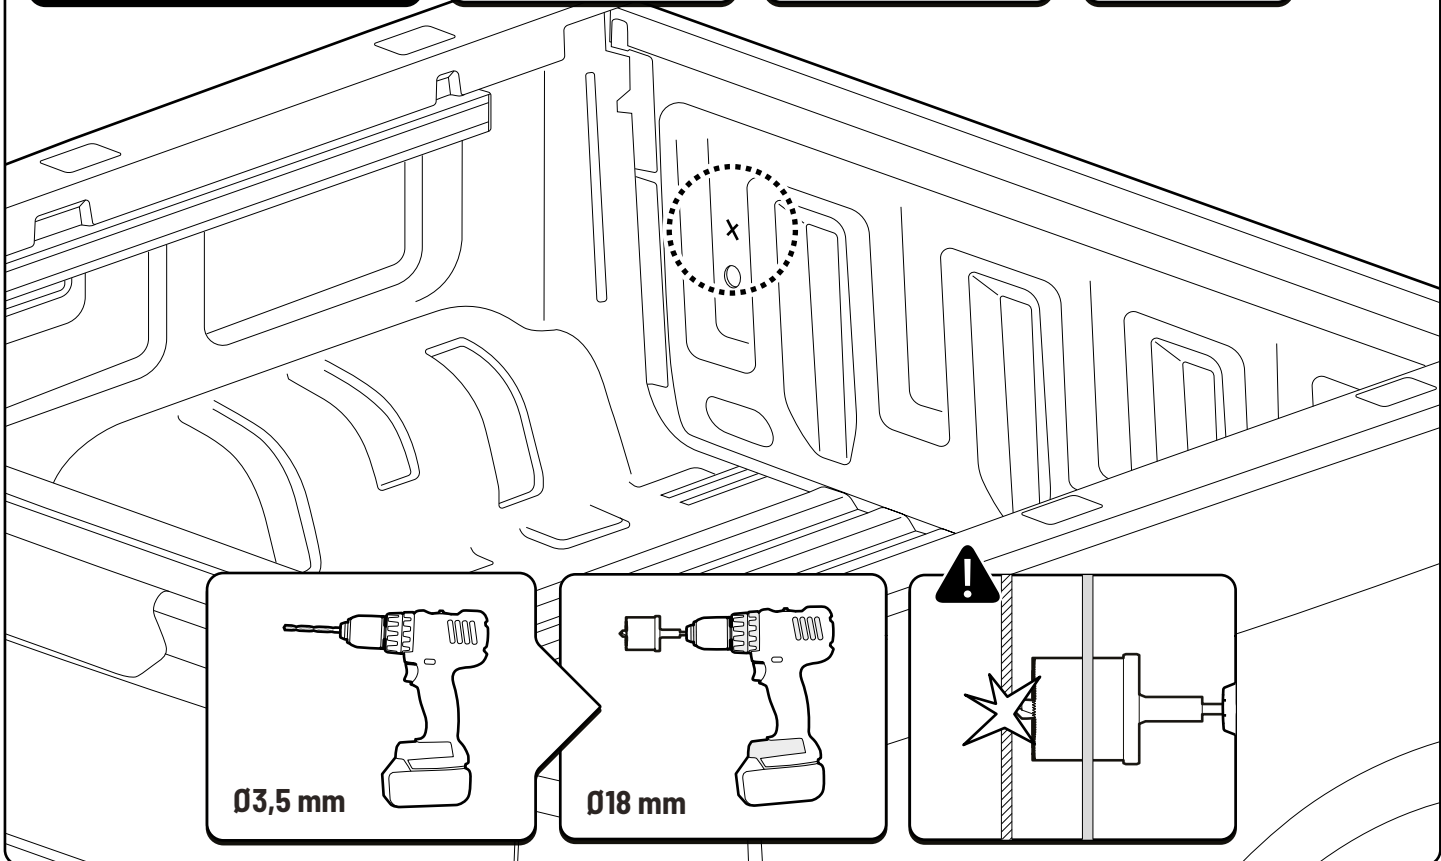

**!** ONLY WITHOUT LINER




**!** Rust Protection

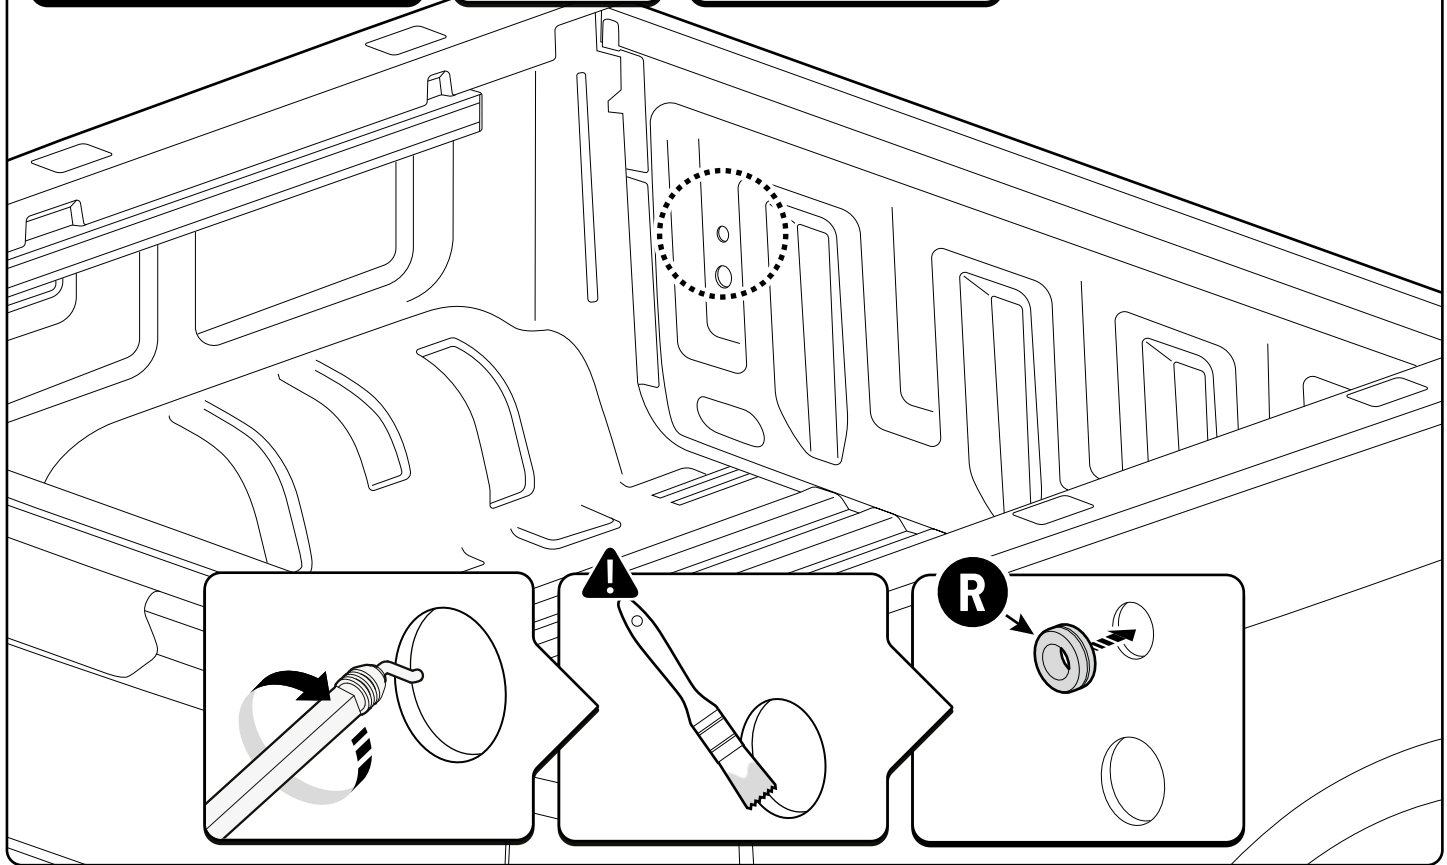

**!** ONLY WITHOUT LINER






A: 55 mm B: 380 mm

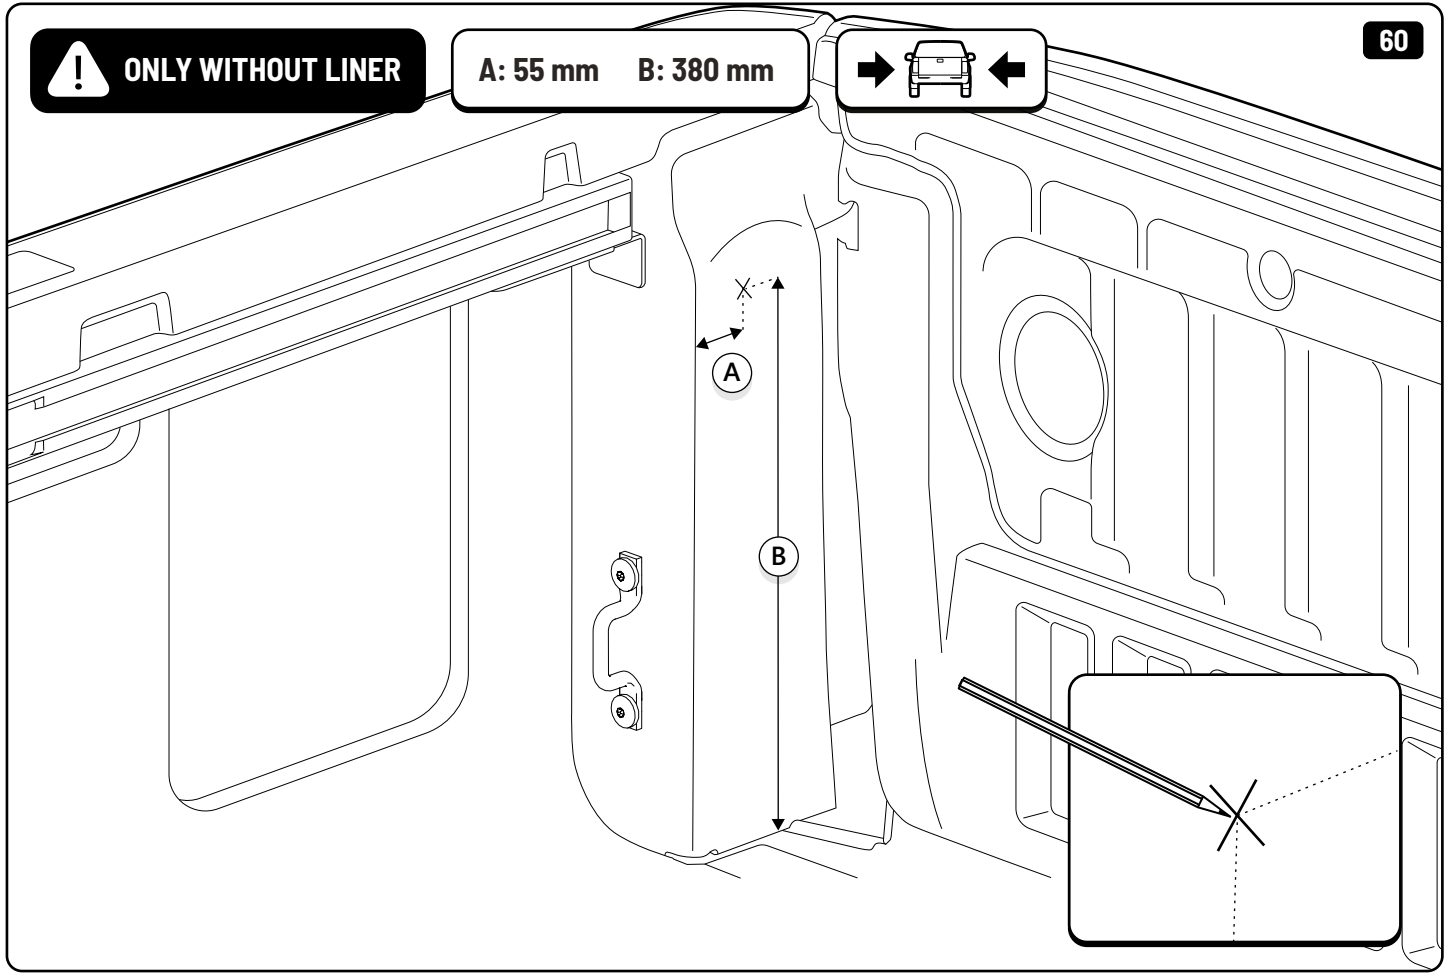








**!** ONLY WITHOUT LINER






**!** Rust Protection

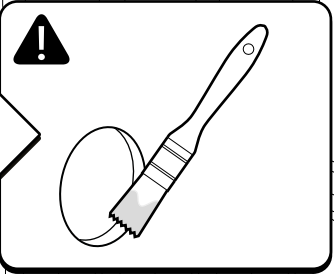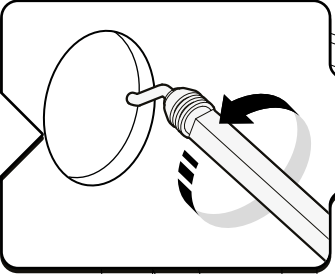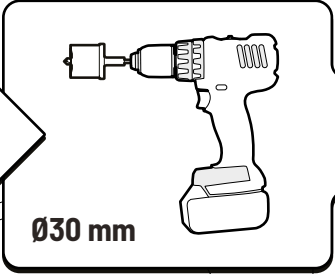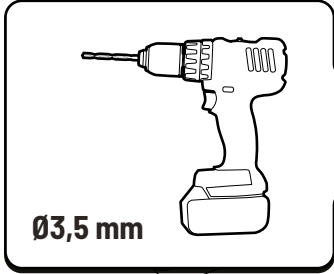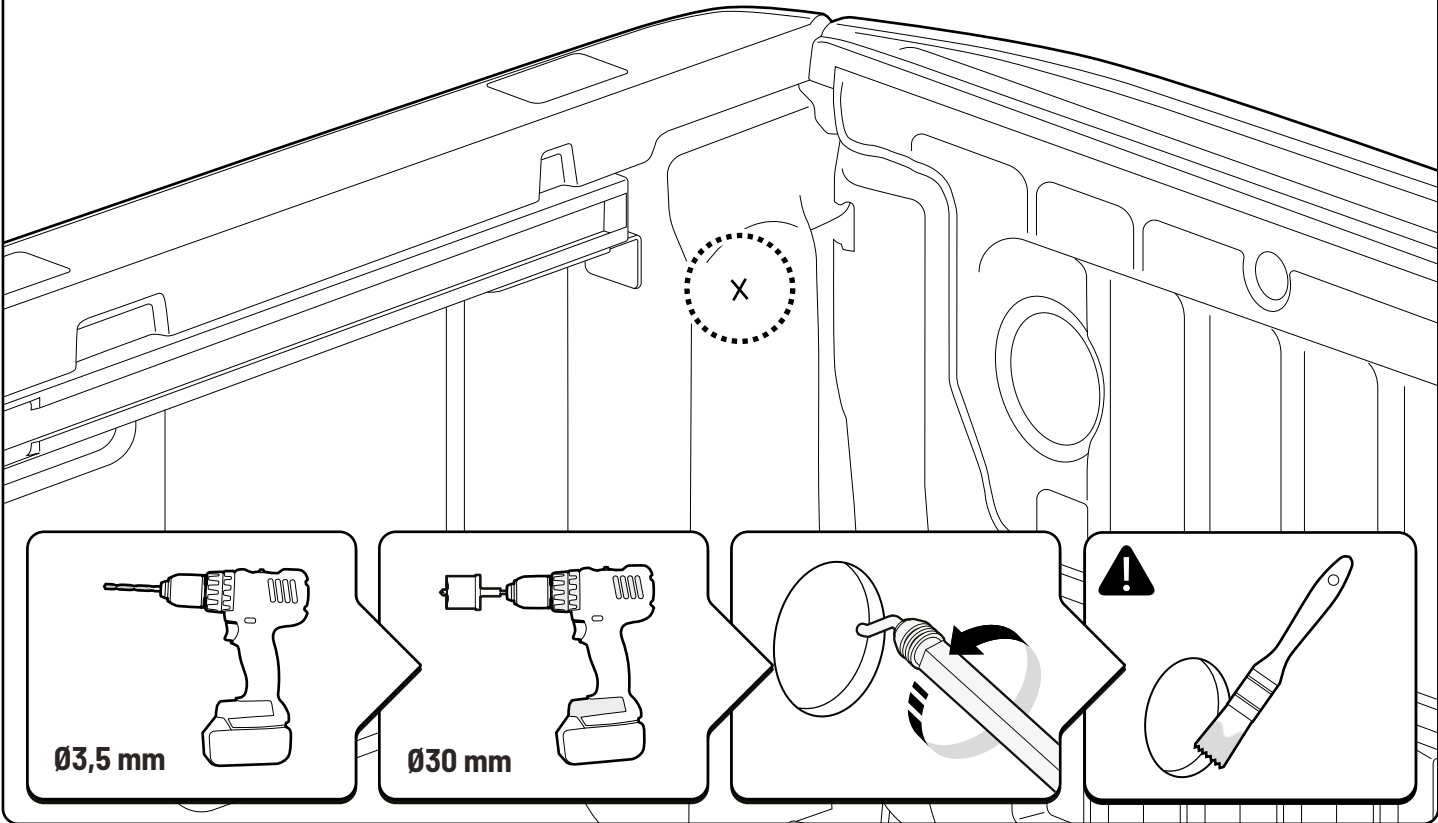


**! ONLY TO BE INSTALLED BY AUTHORIZED PERSONNEL**

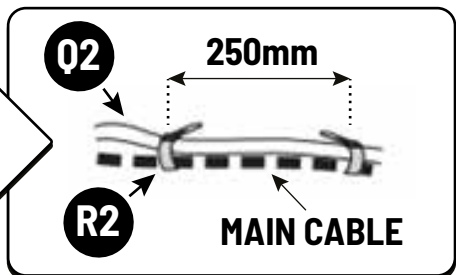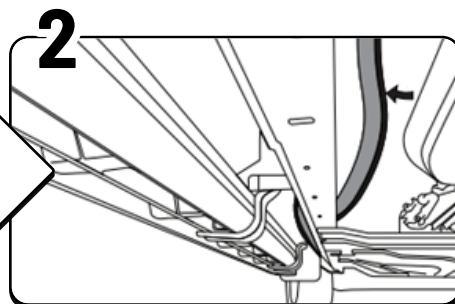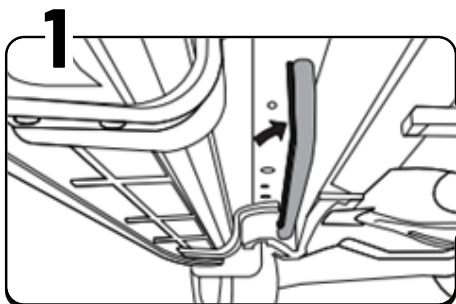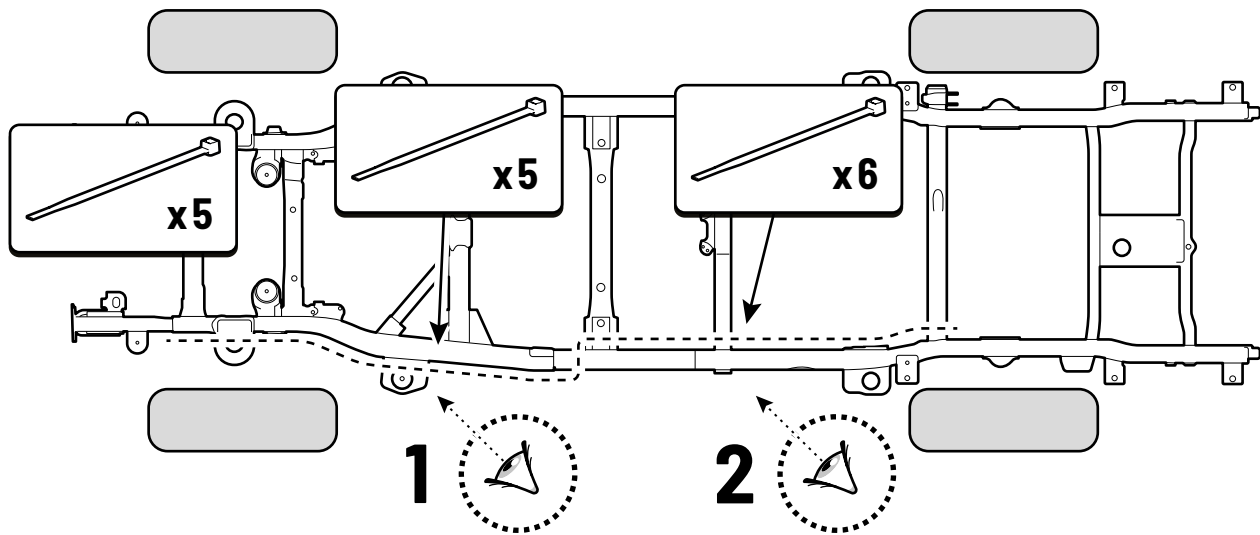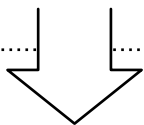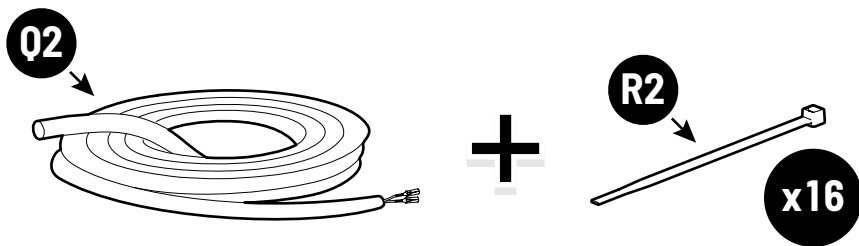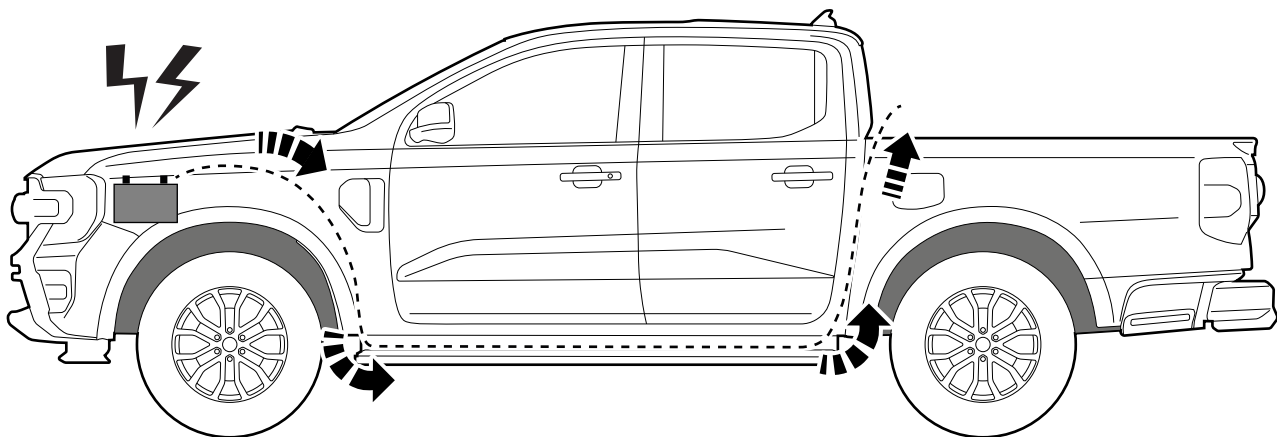


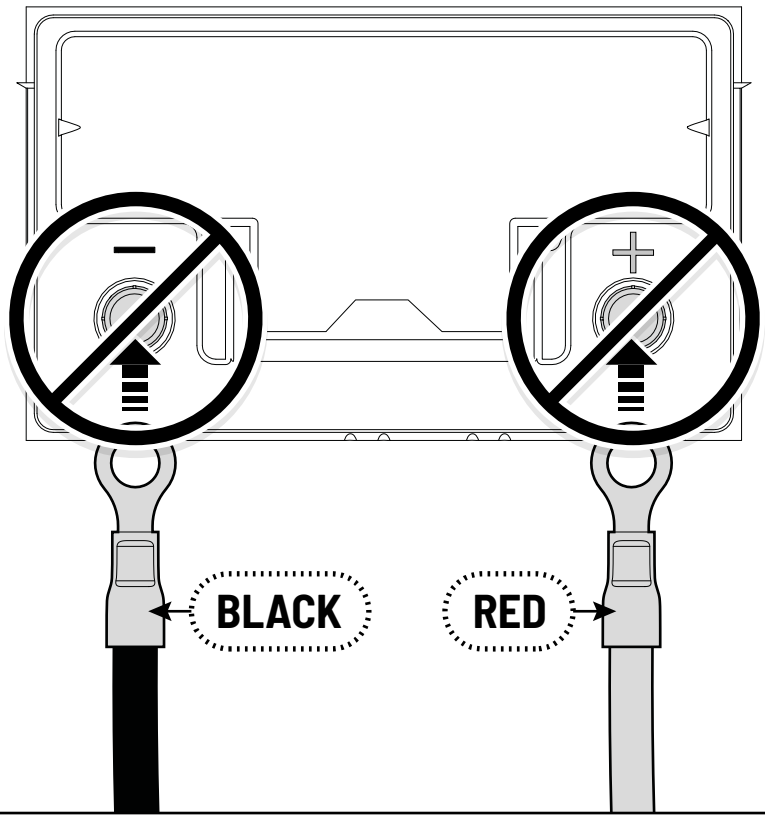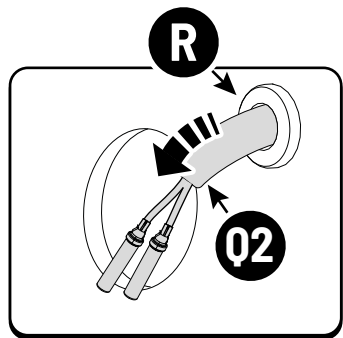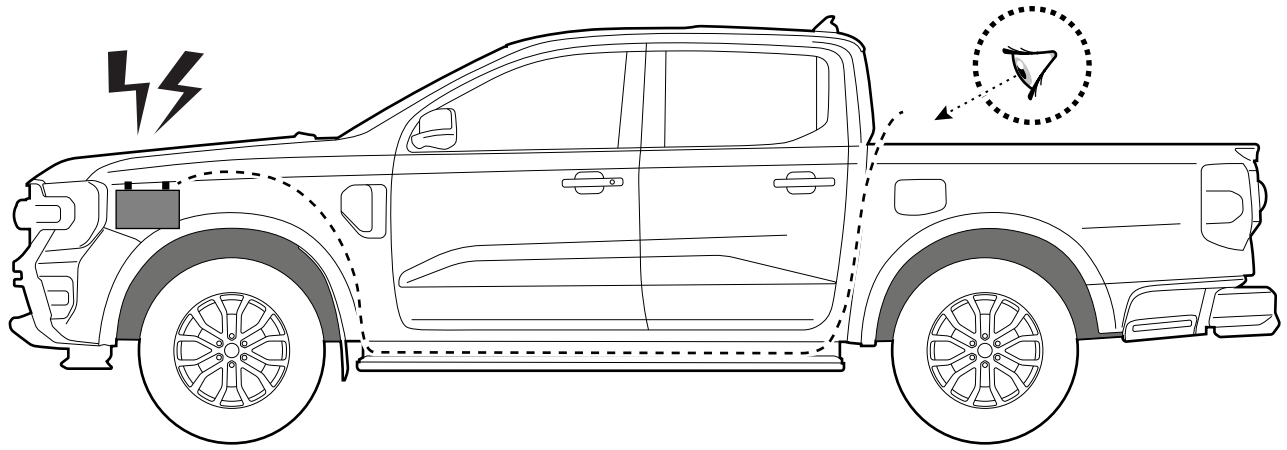




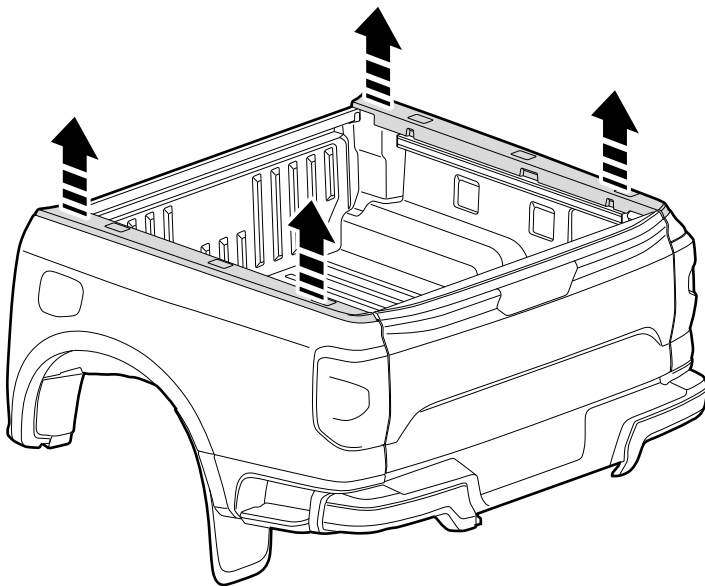

**Style / Life / Entry**

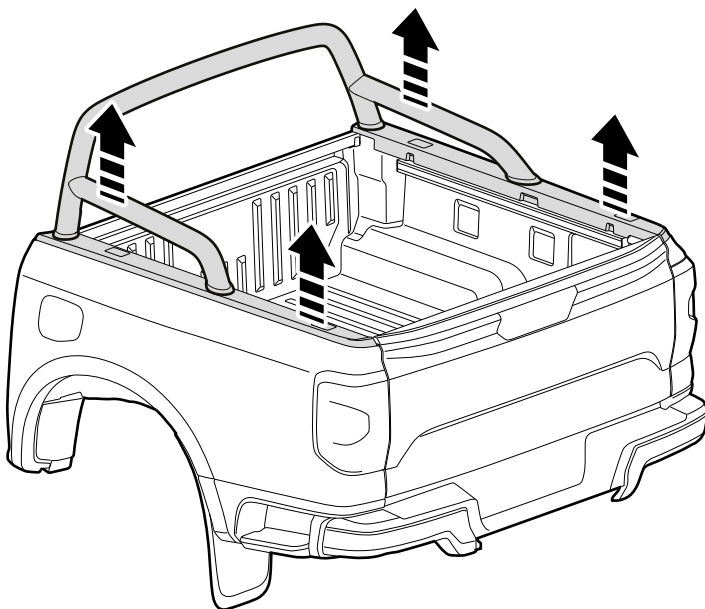


**Pan Americana**

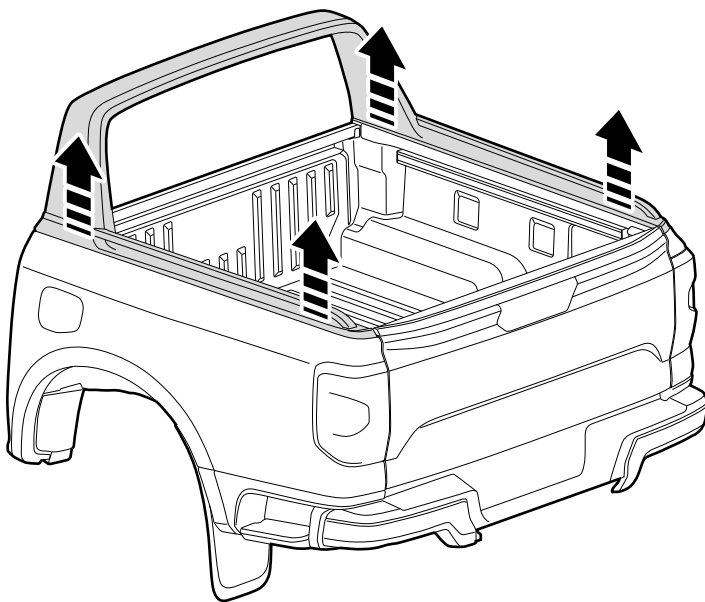


**Aventura**

**! ONLY FOR THREADED HOLES**

**LOCTITE 243**




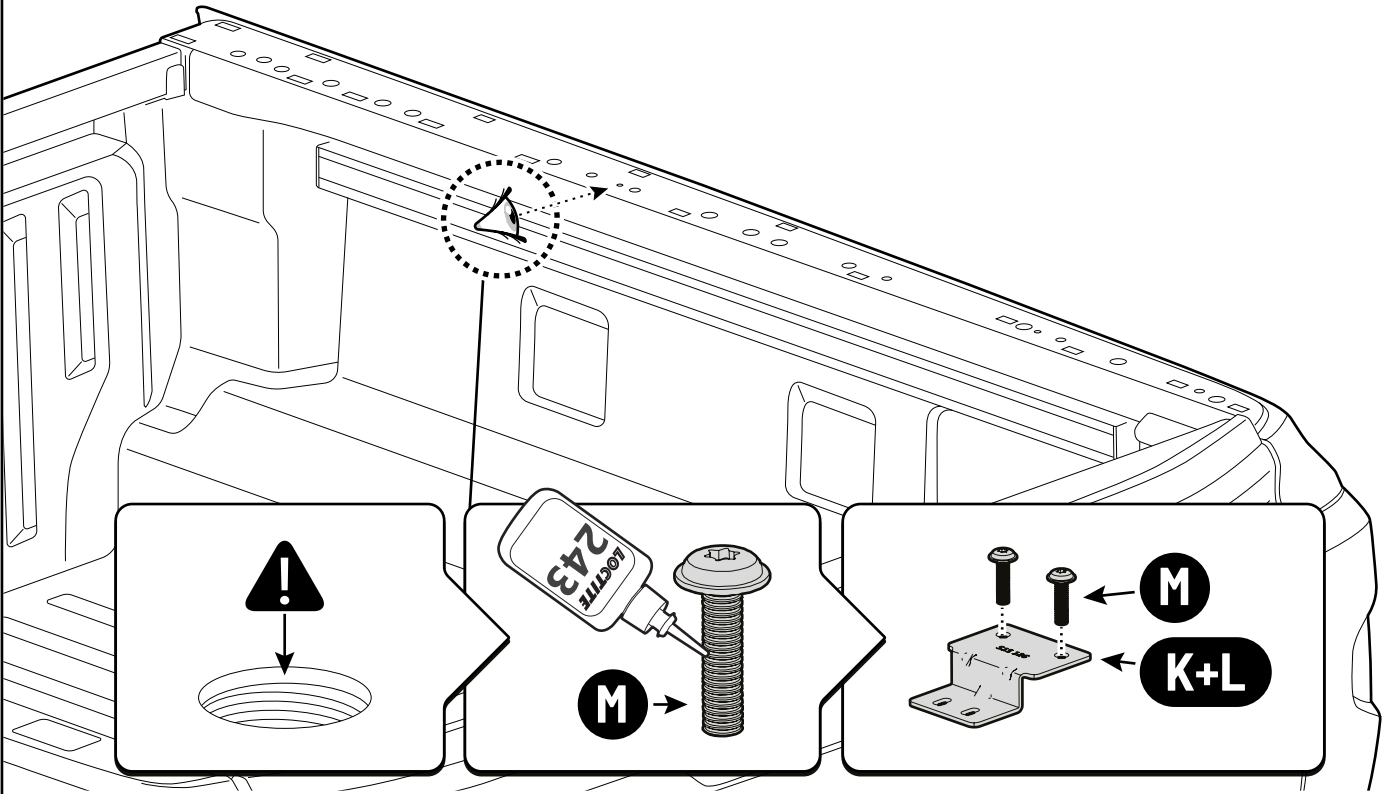


**! ONLY FOR NON-THREADED HOLES**

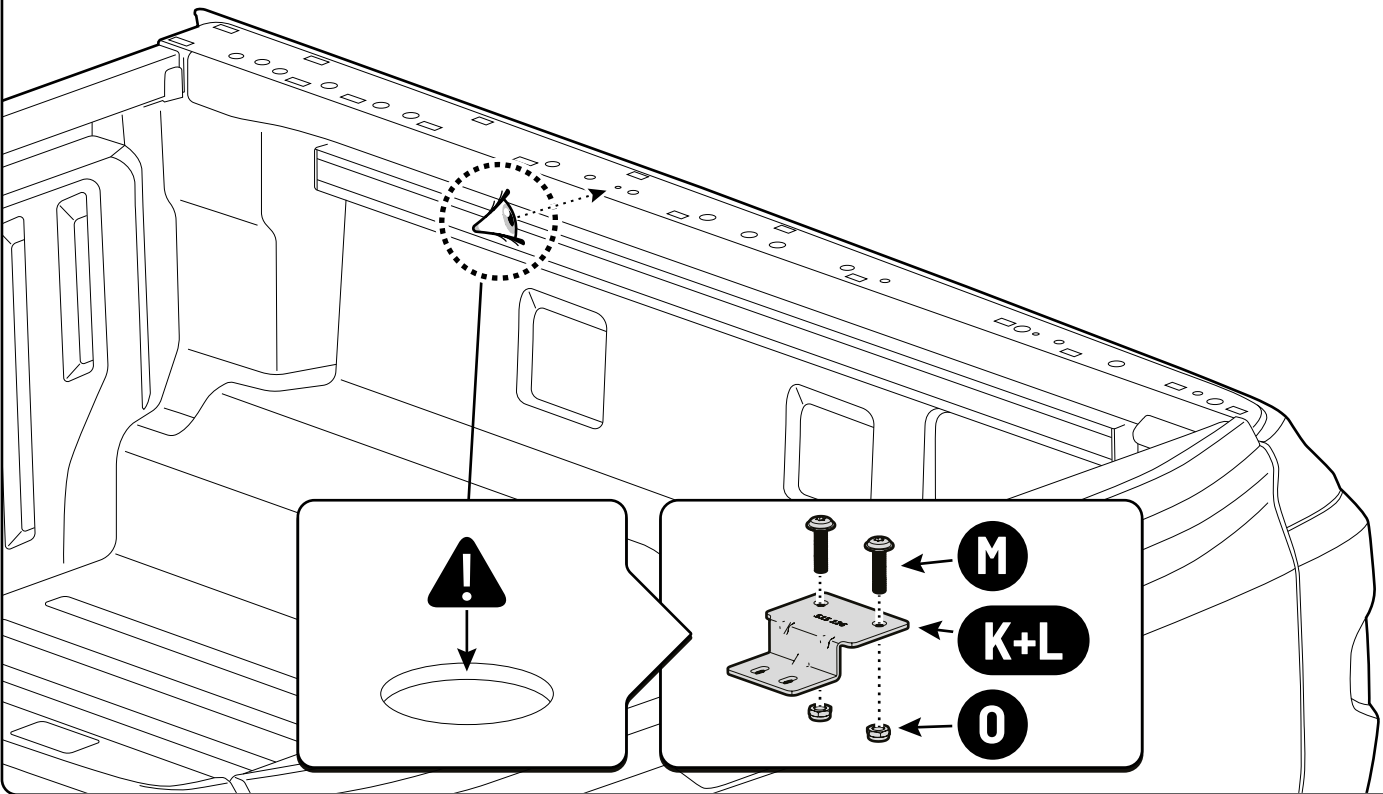





**! Style / Life / Entry - DOUBLE CAB**

T40 13 mm 25 Nm

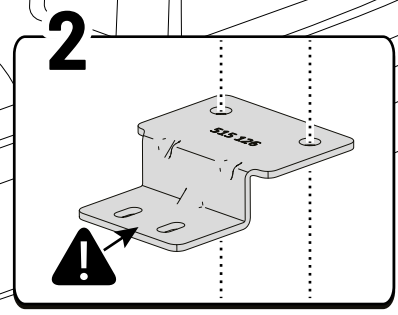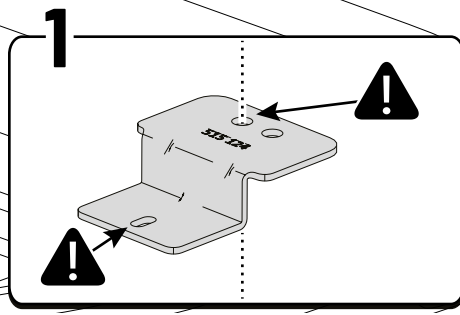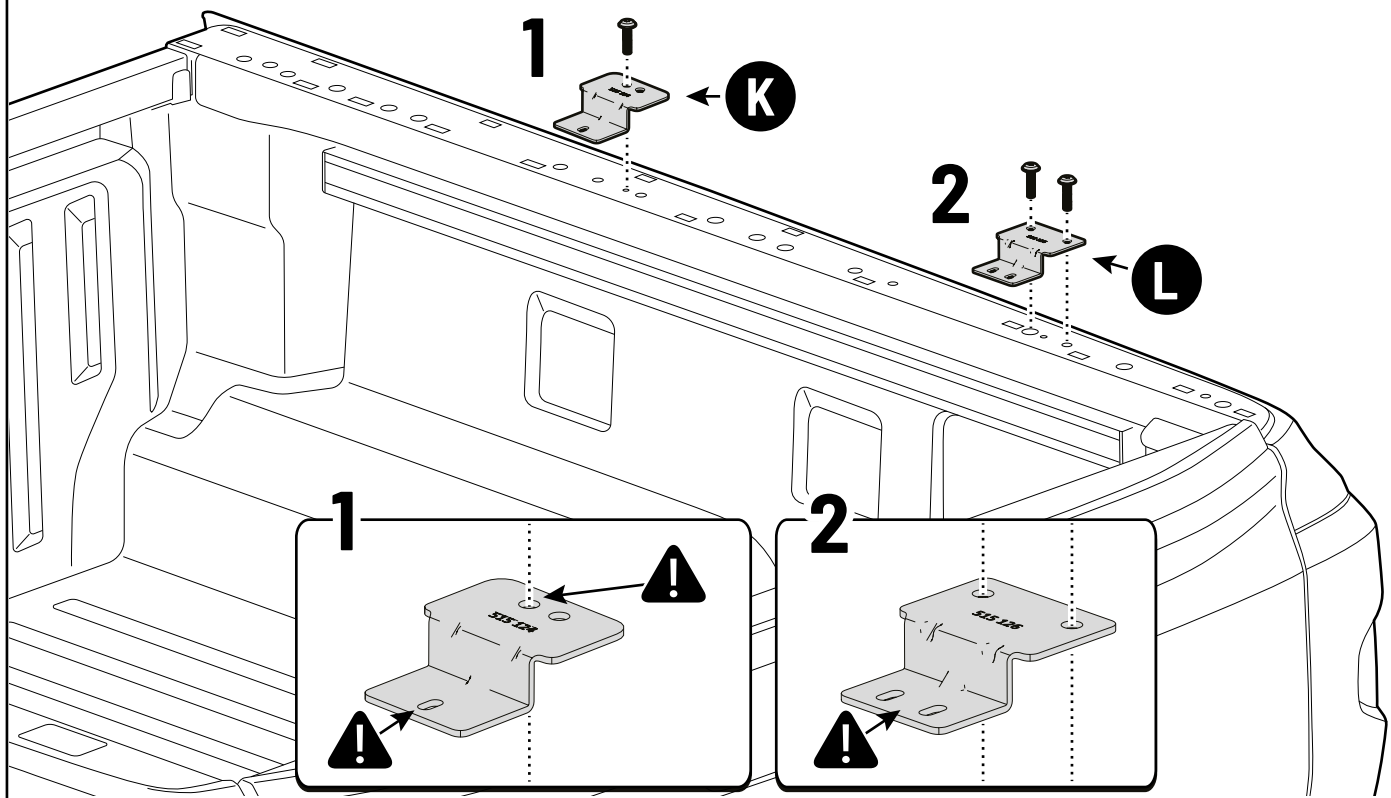



**! Aventura - DOUBLE CAB**

T40 13 mm 25 Nm

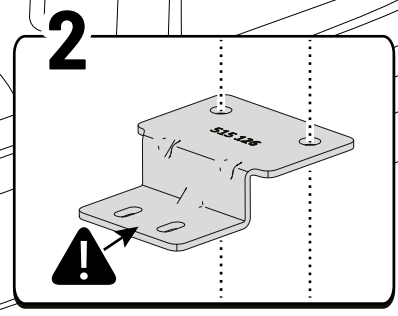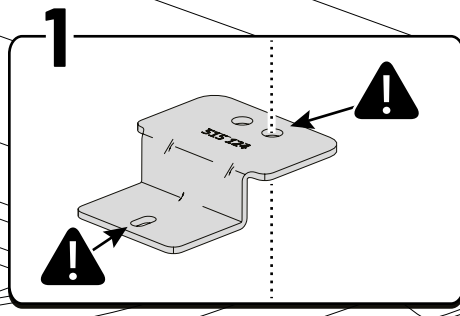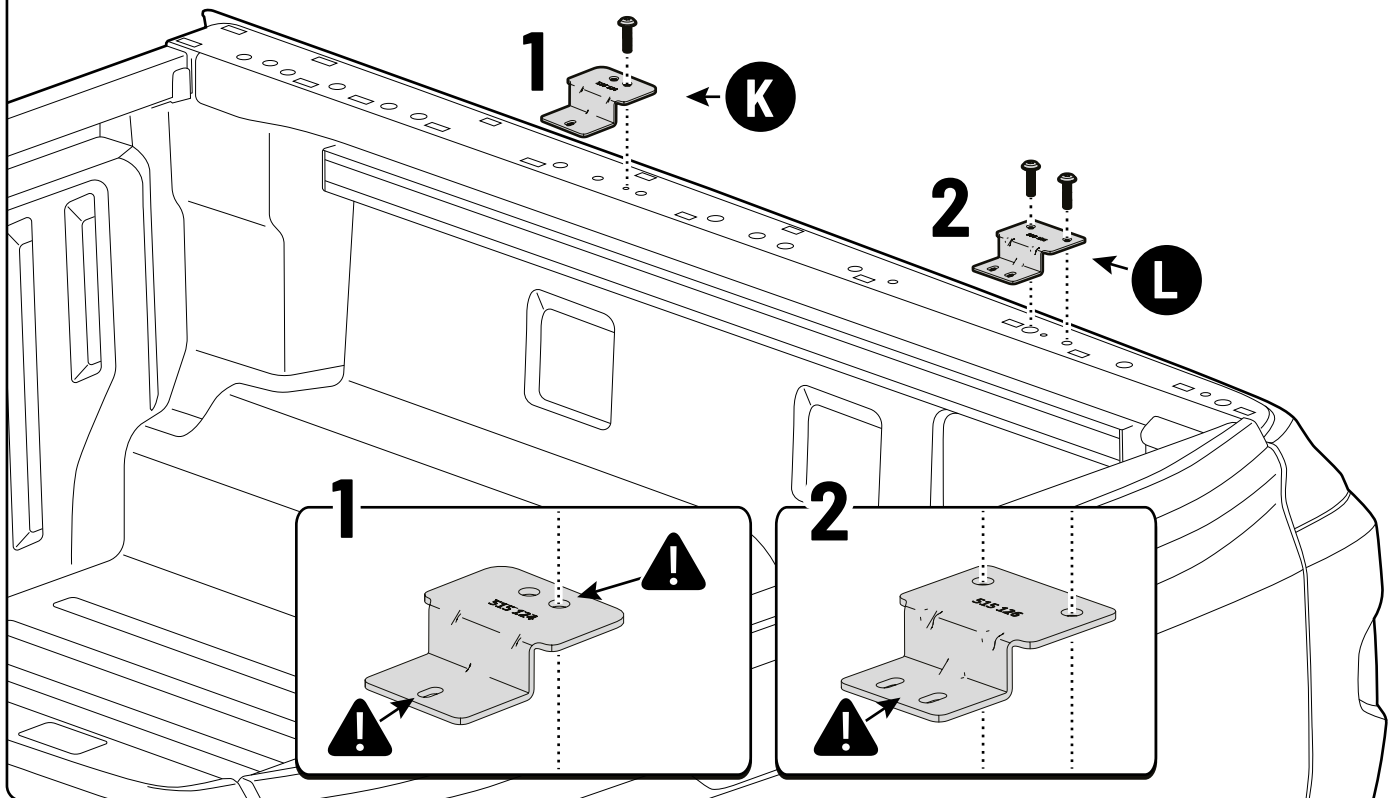



**! WITH SPORTS BAR ACCESSORY - RAP CAB**


T40 13 mm 25 Nm

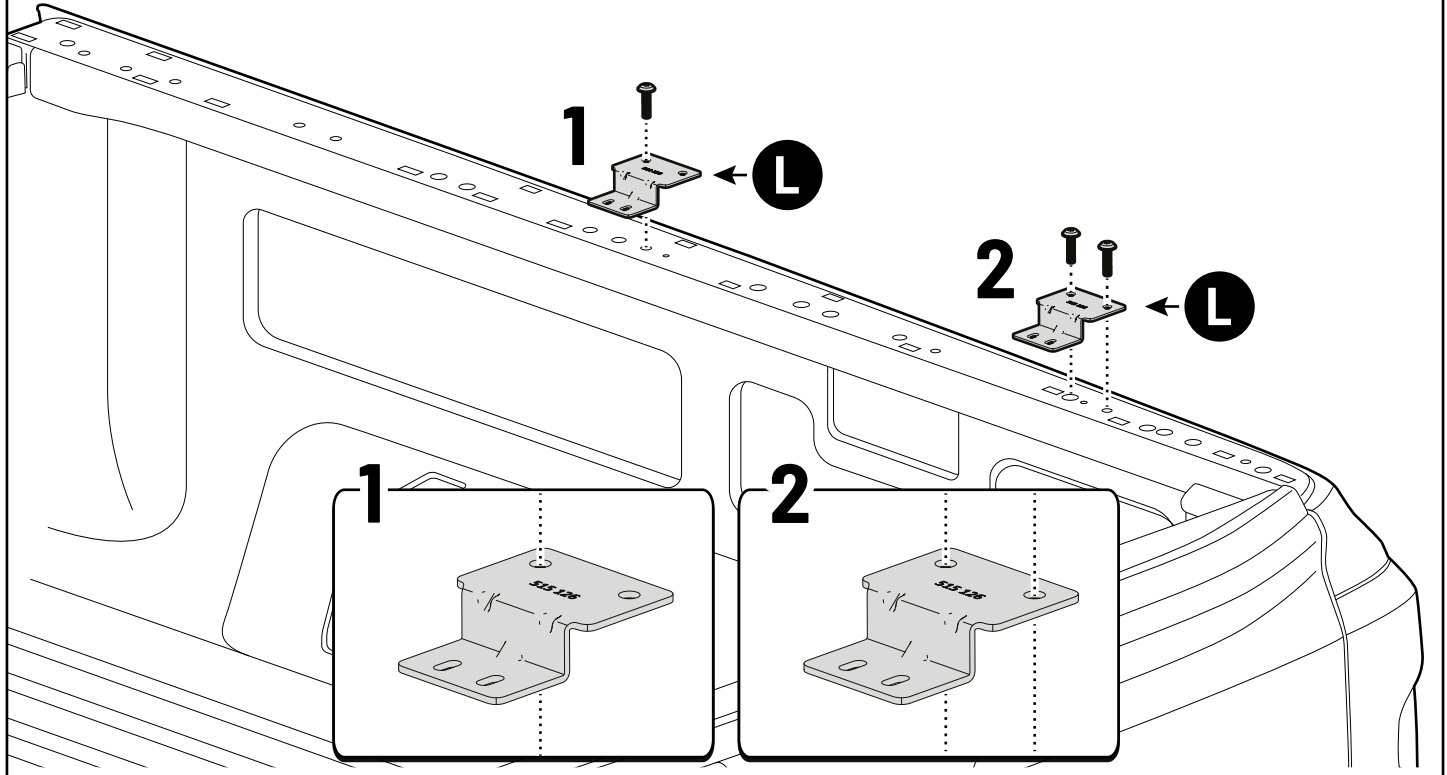



**! WITHOUT SPORTS BAR ACCESSORY - RAP CAB**

T40 13 mm 25 Nm

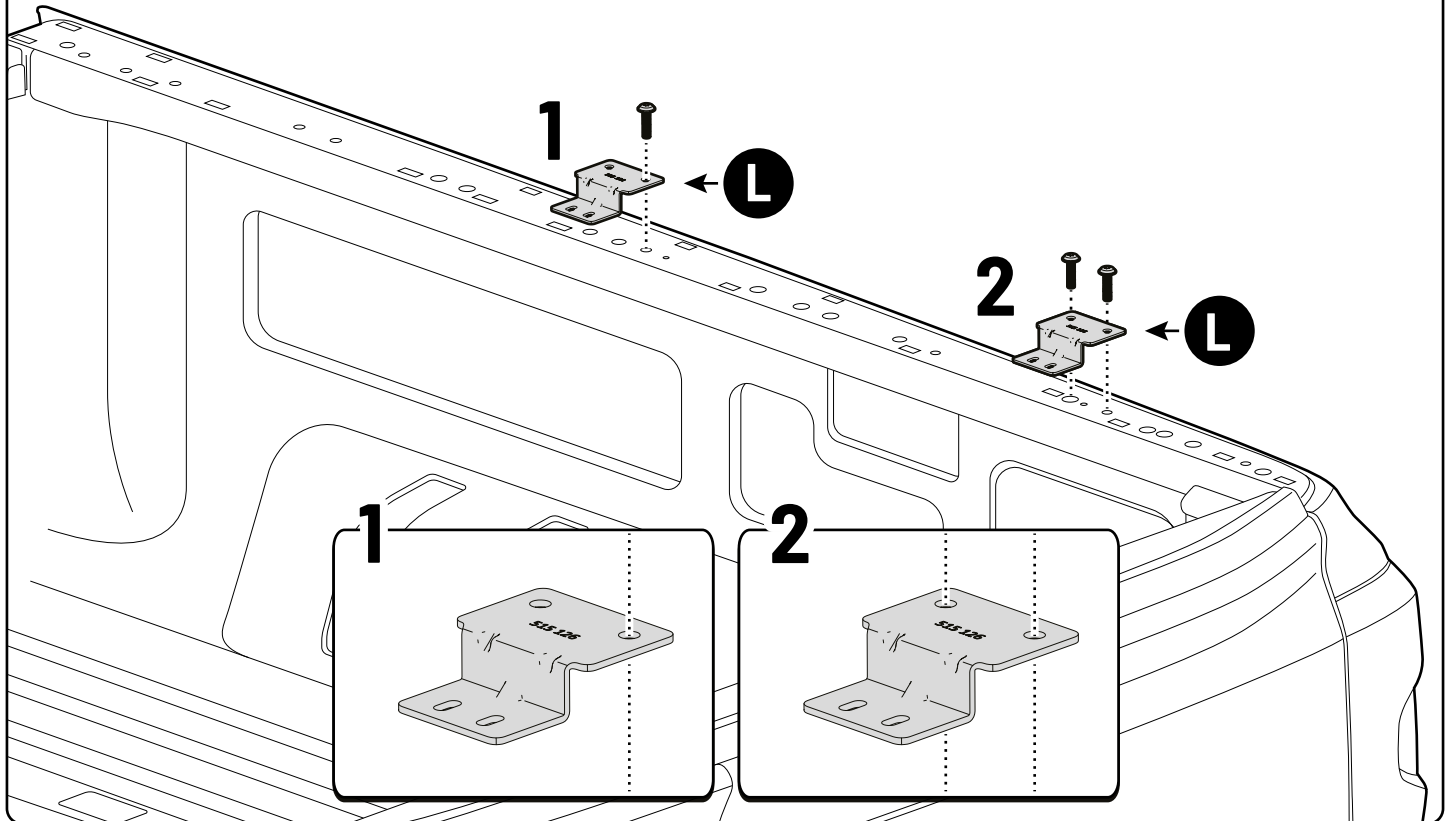





**!** ONLY FOR Style / Life / Entry

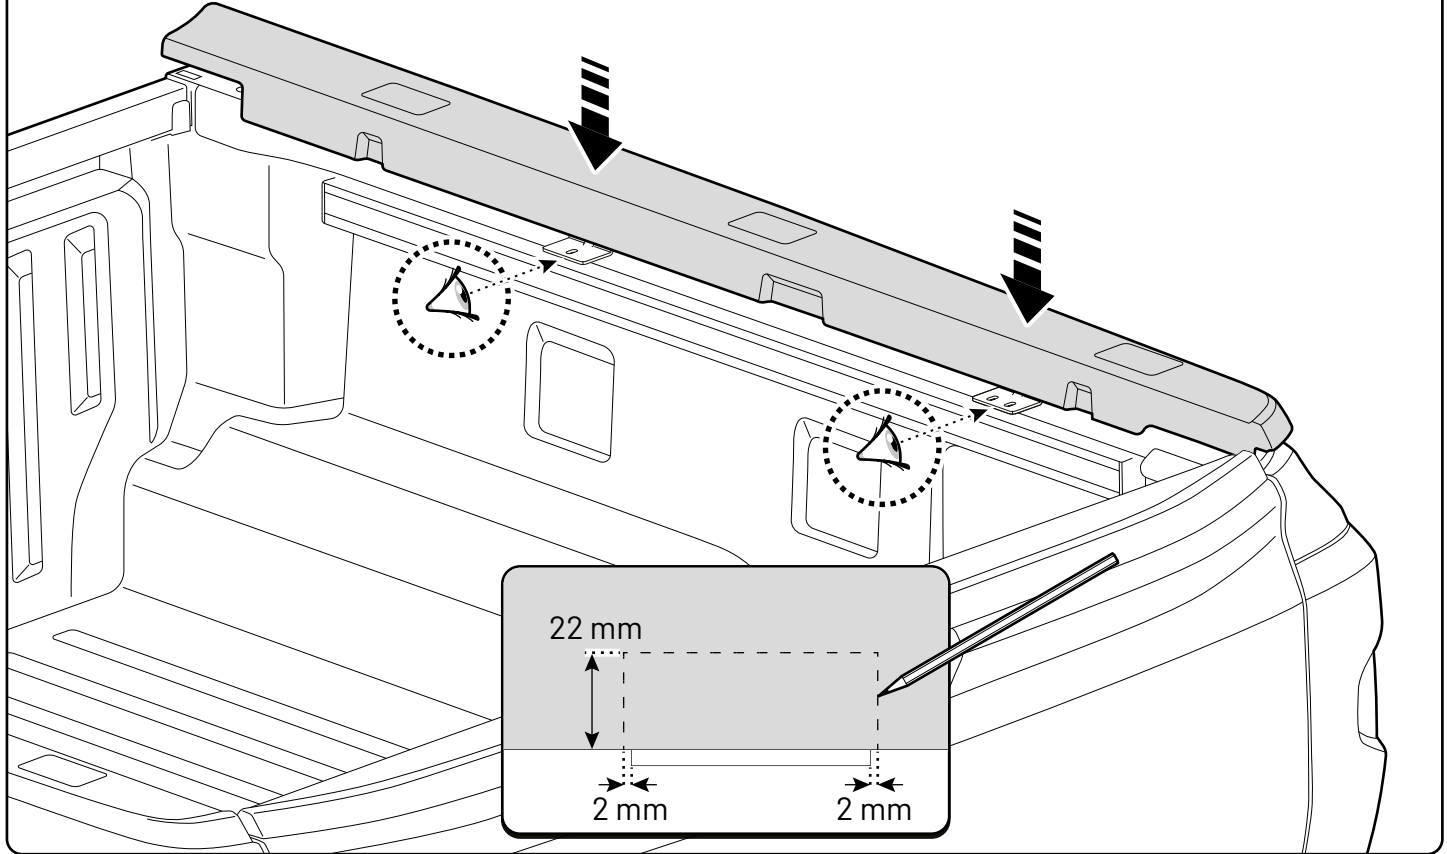


**!** ONLY FOR Style / Life / Entry










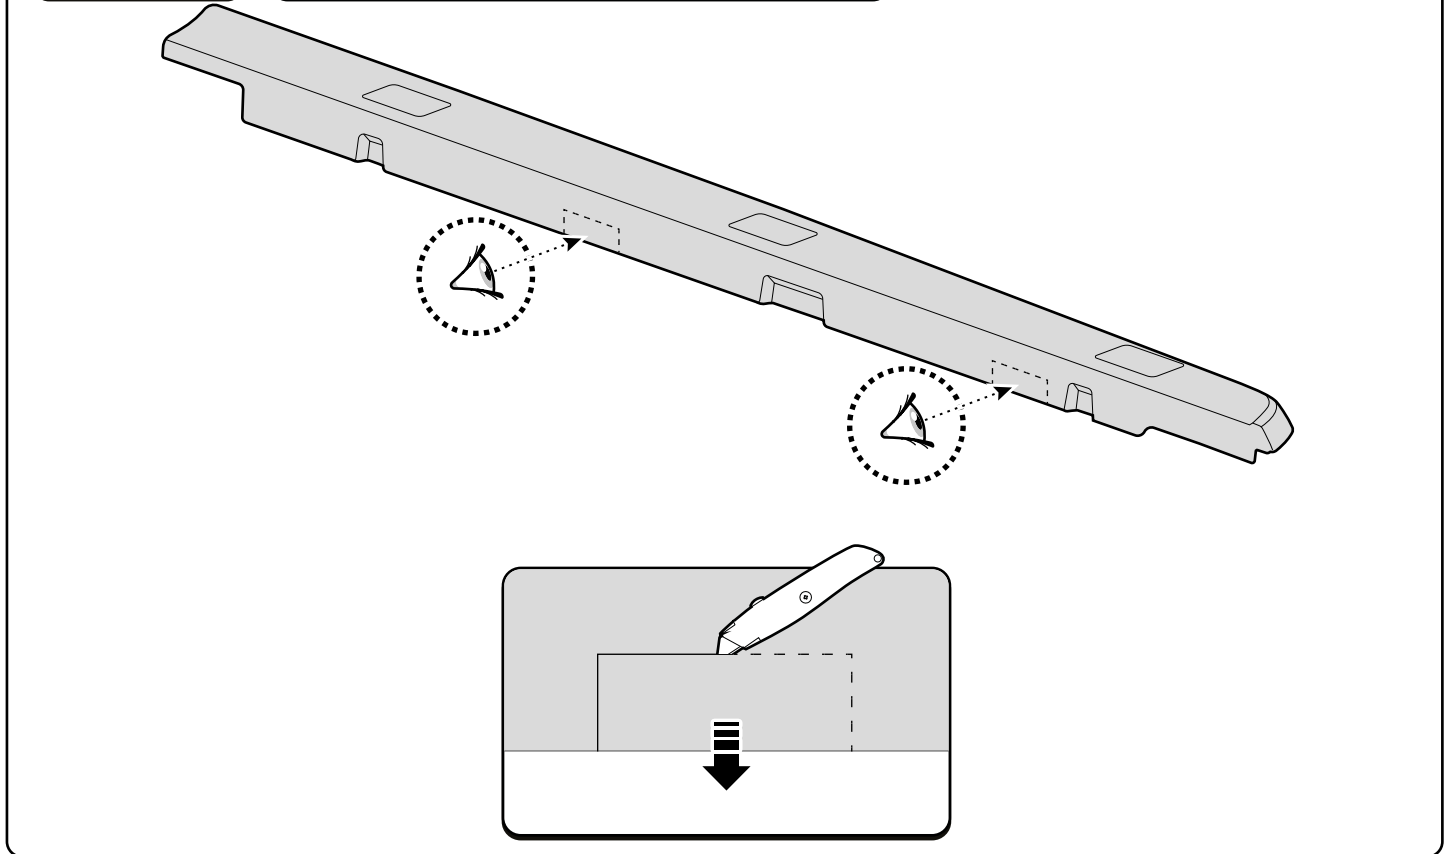



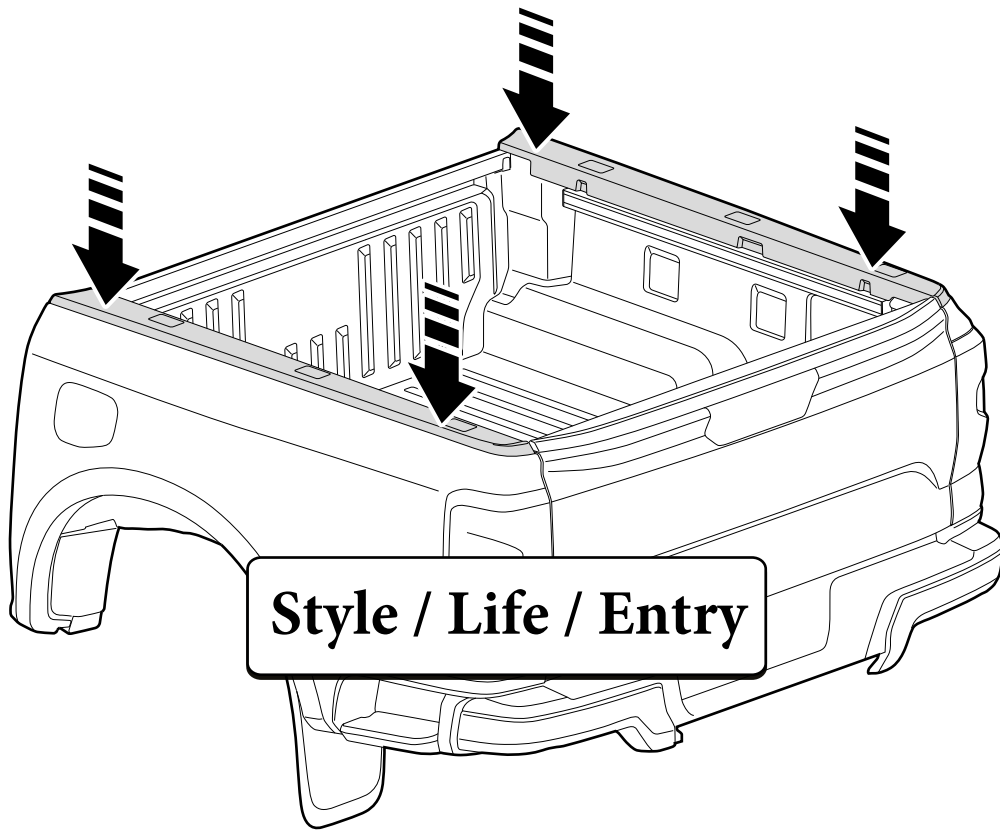


**Style / Life / Entry**


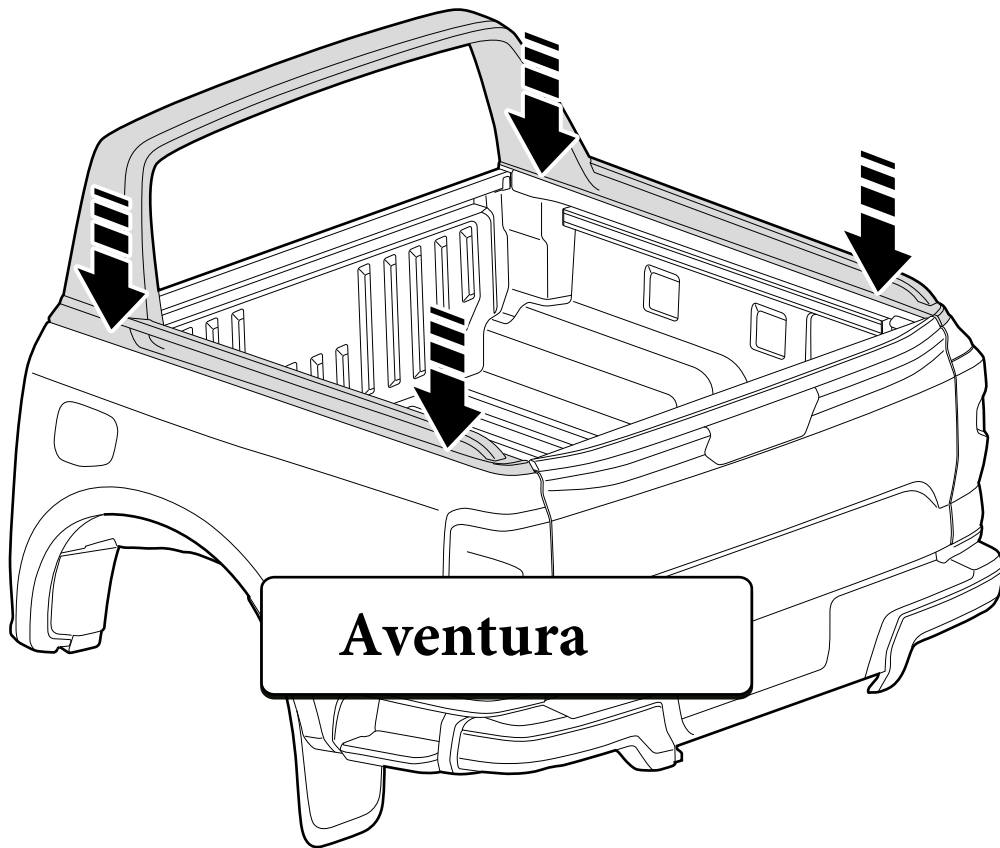


**Aventura**

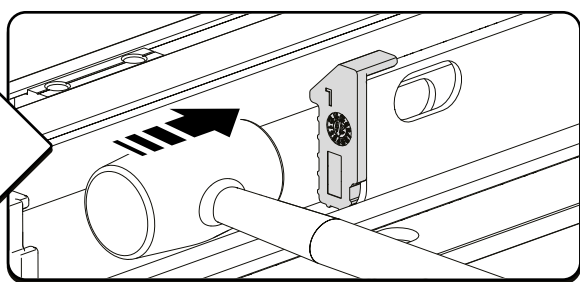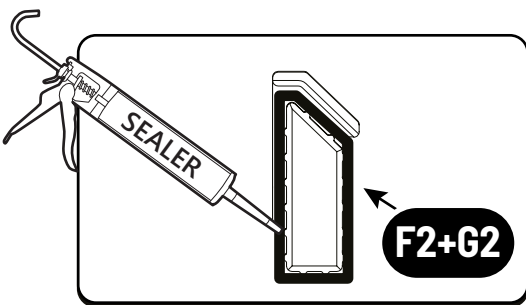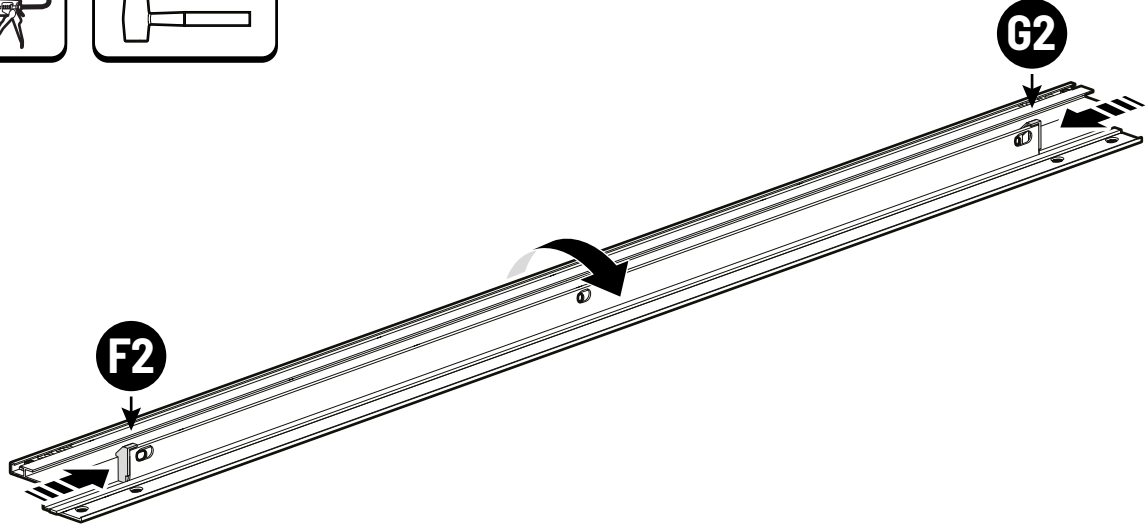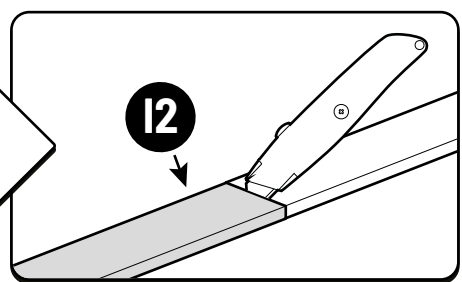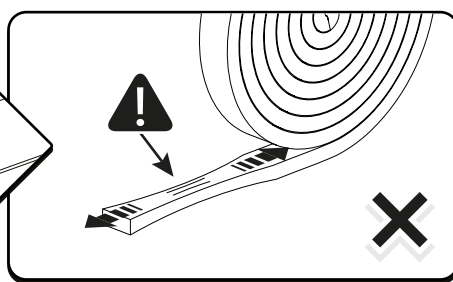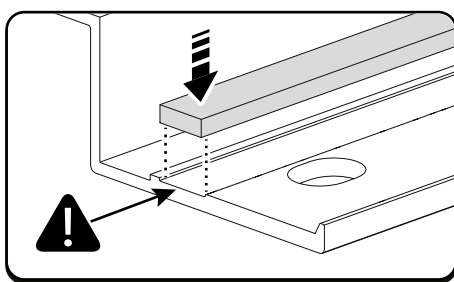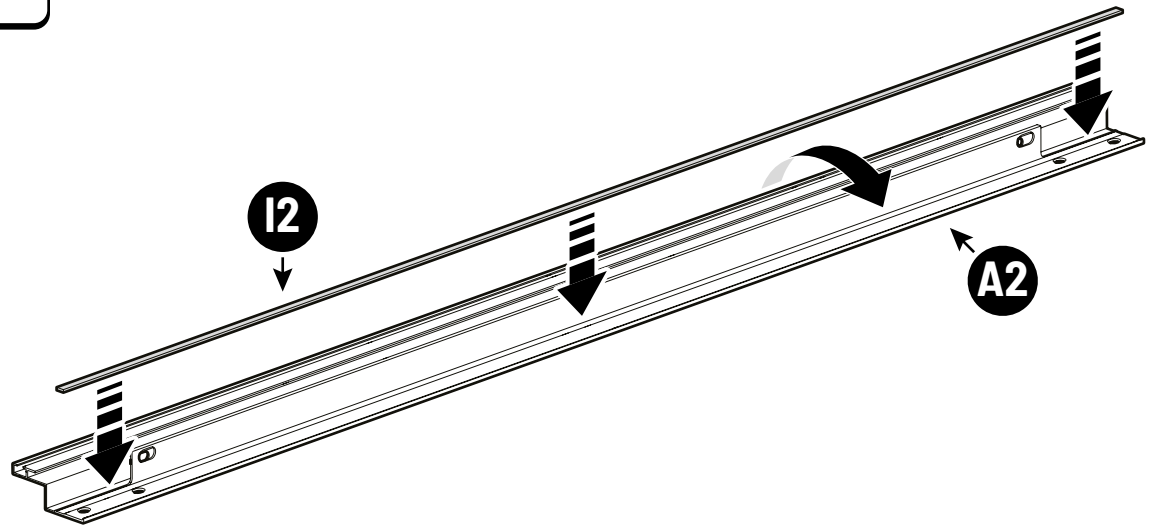

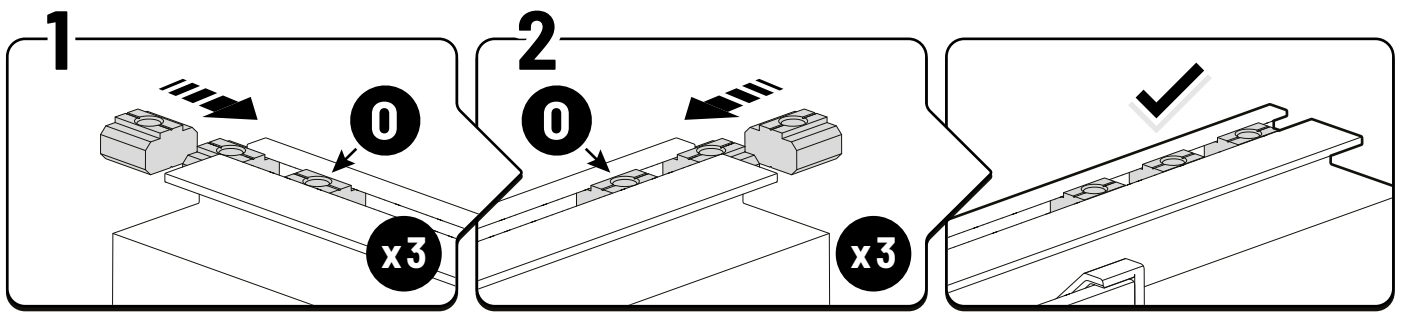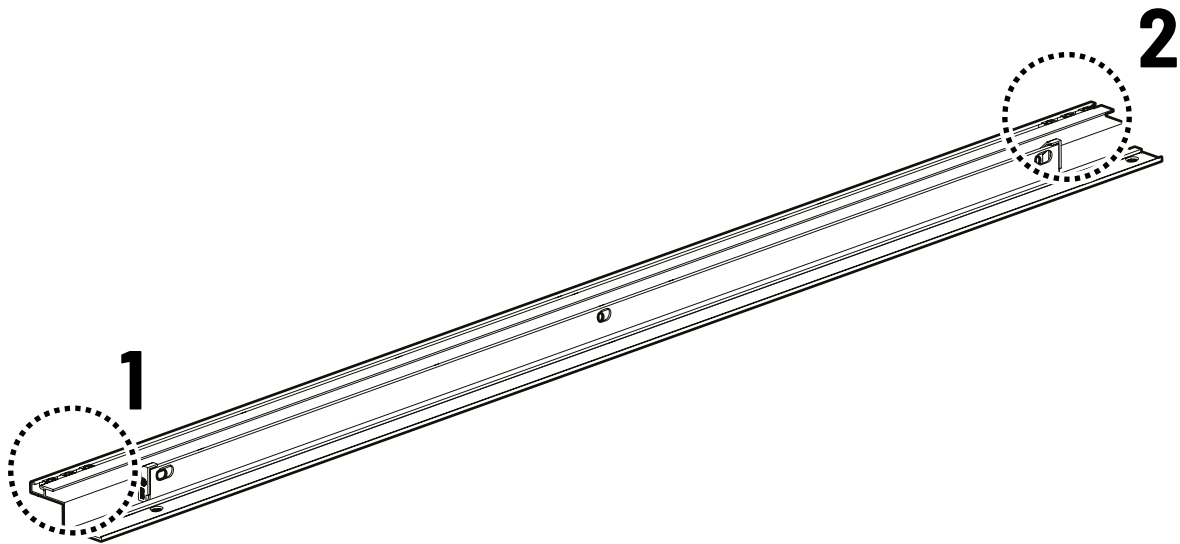

 **Super Glue (CA)**

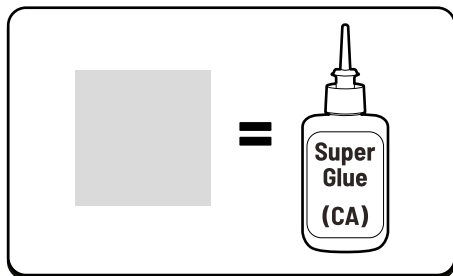
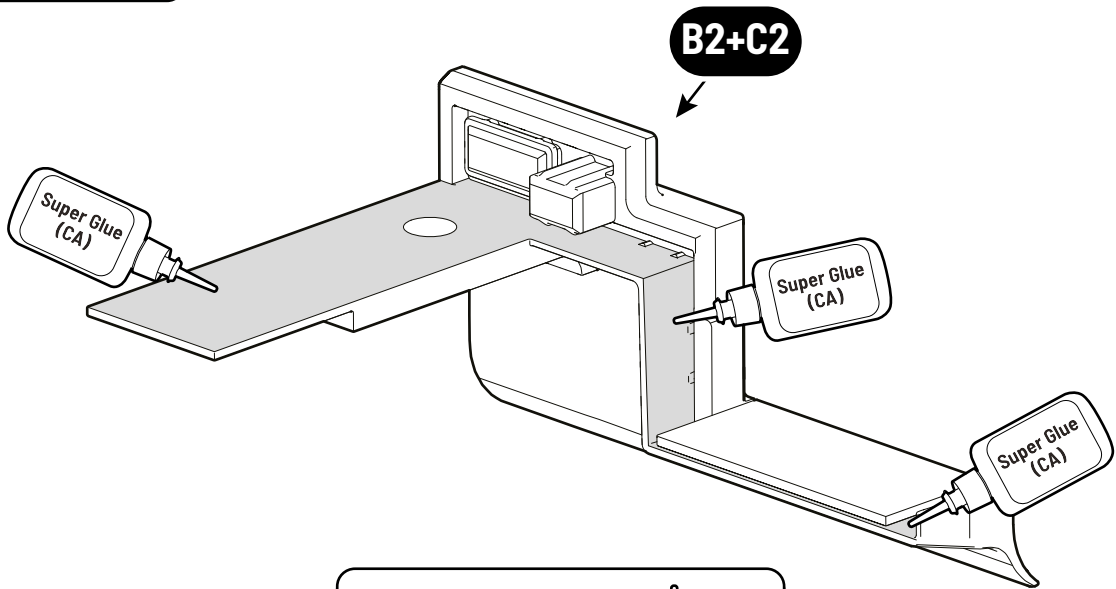


















Super Glue (CA)



76

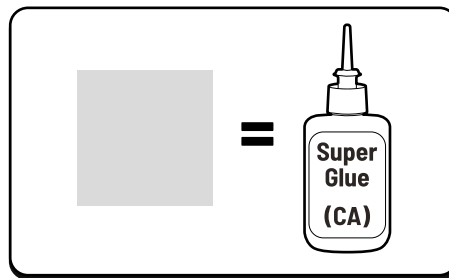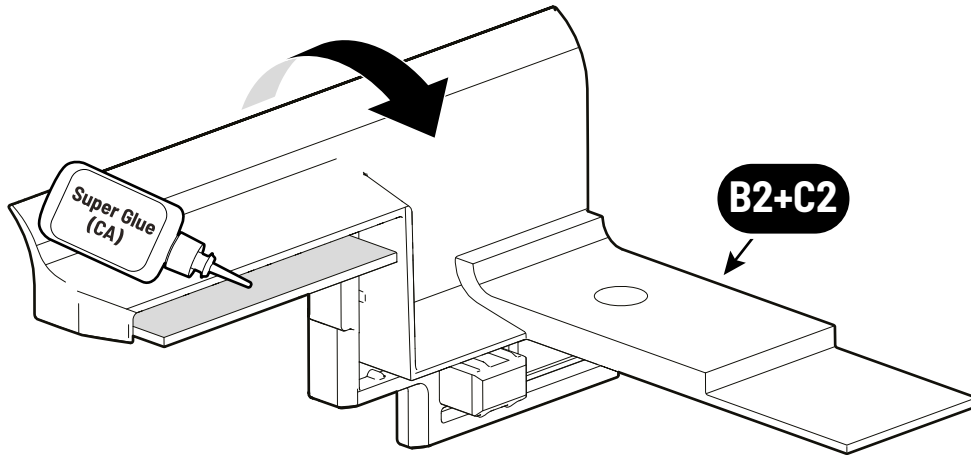


77

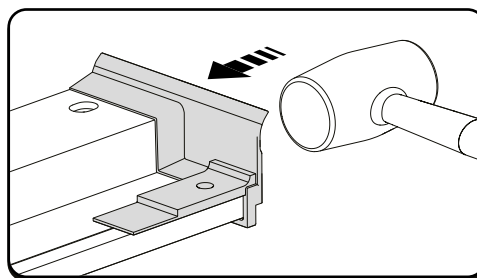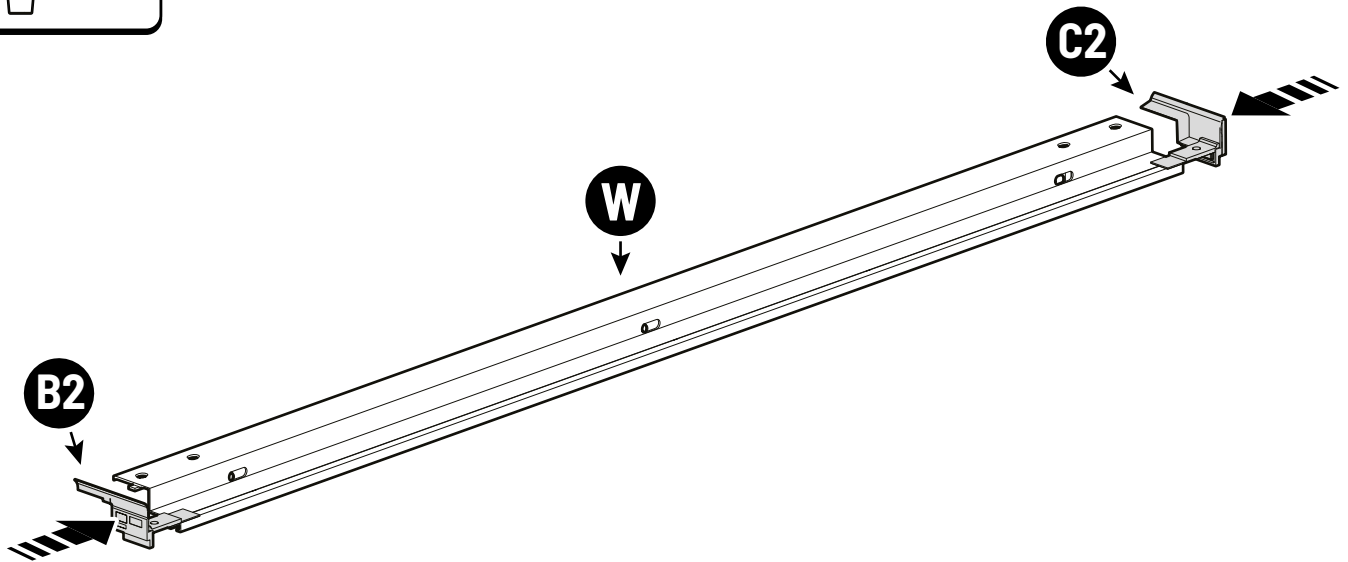

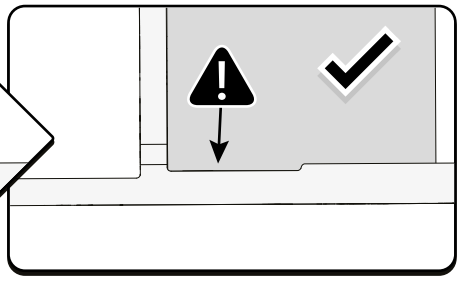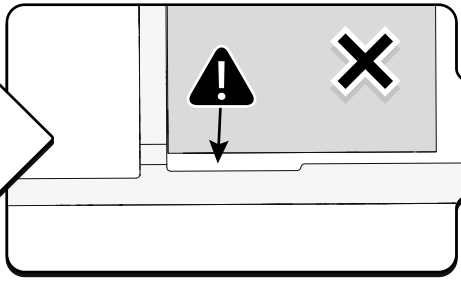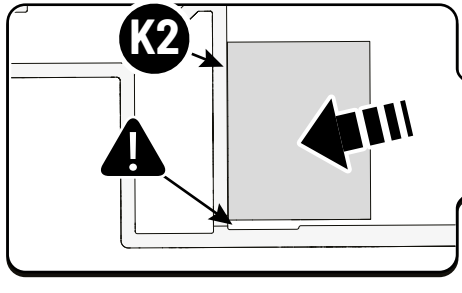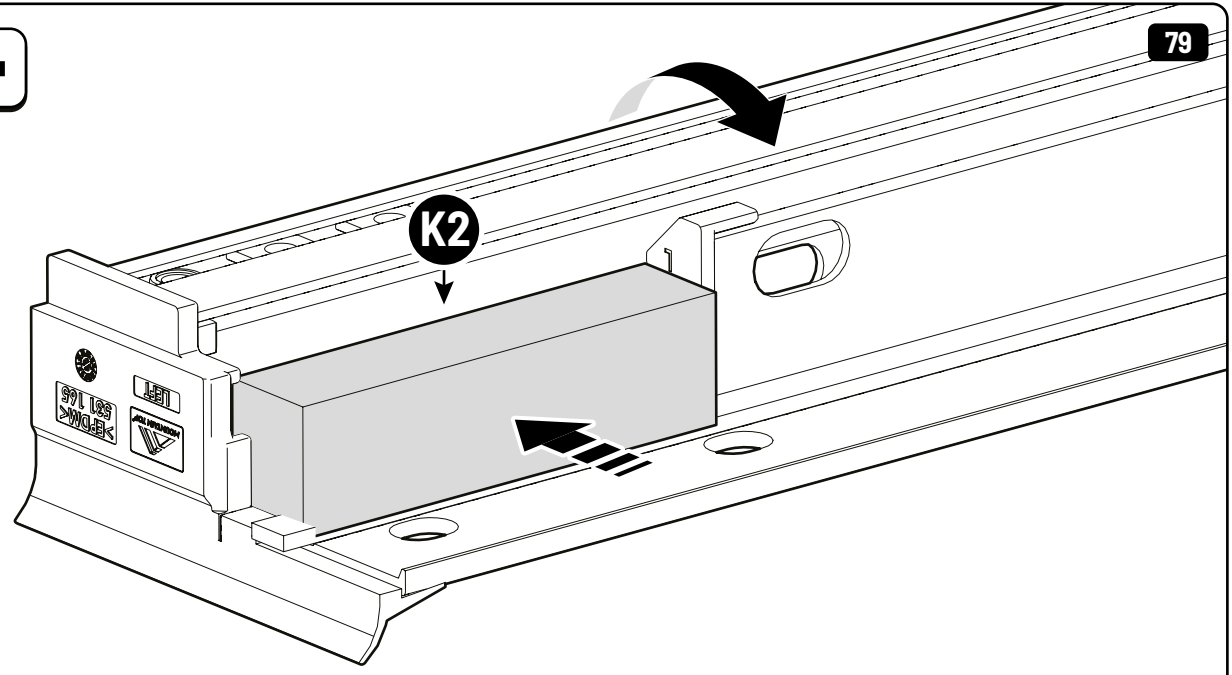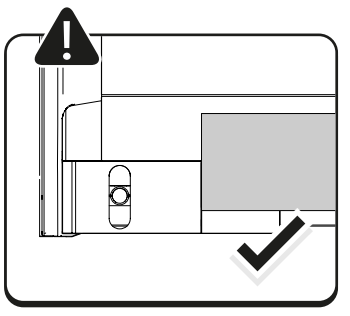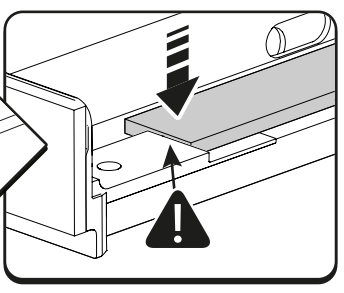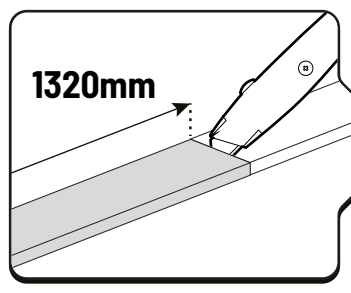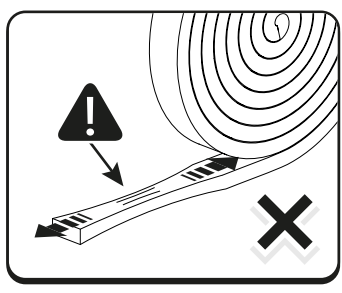
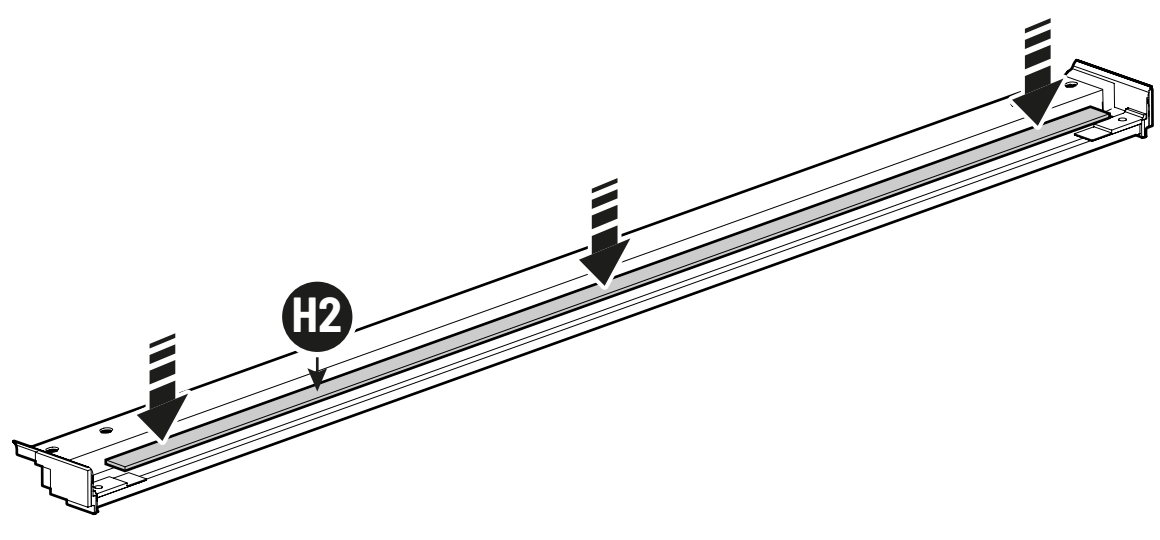



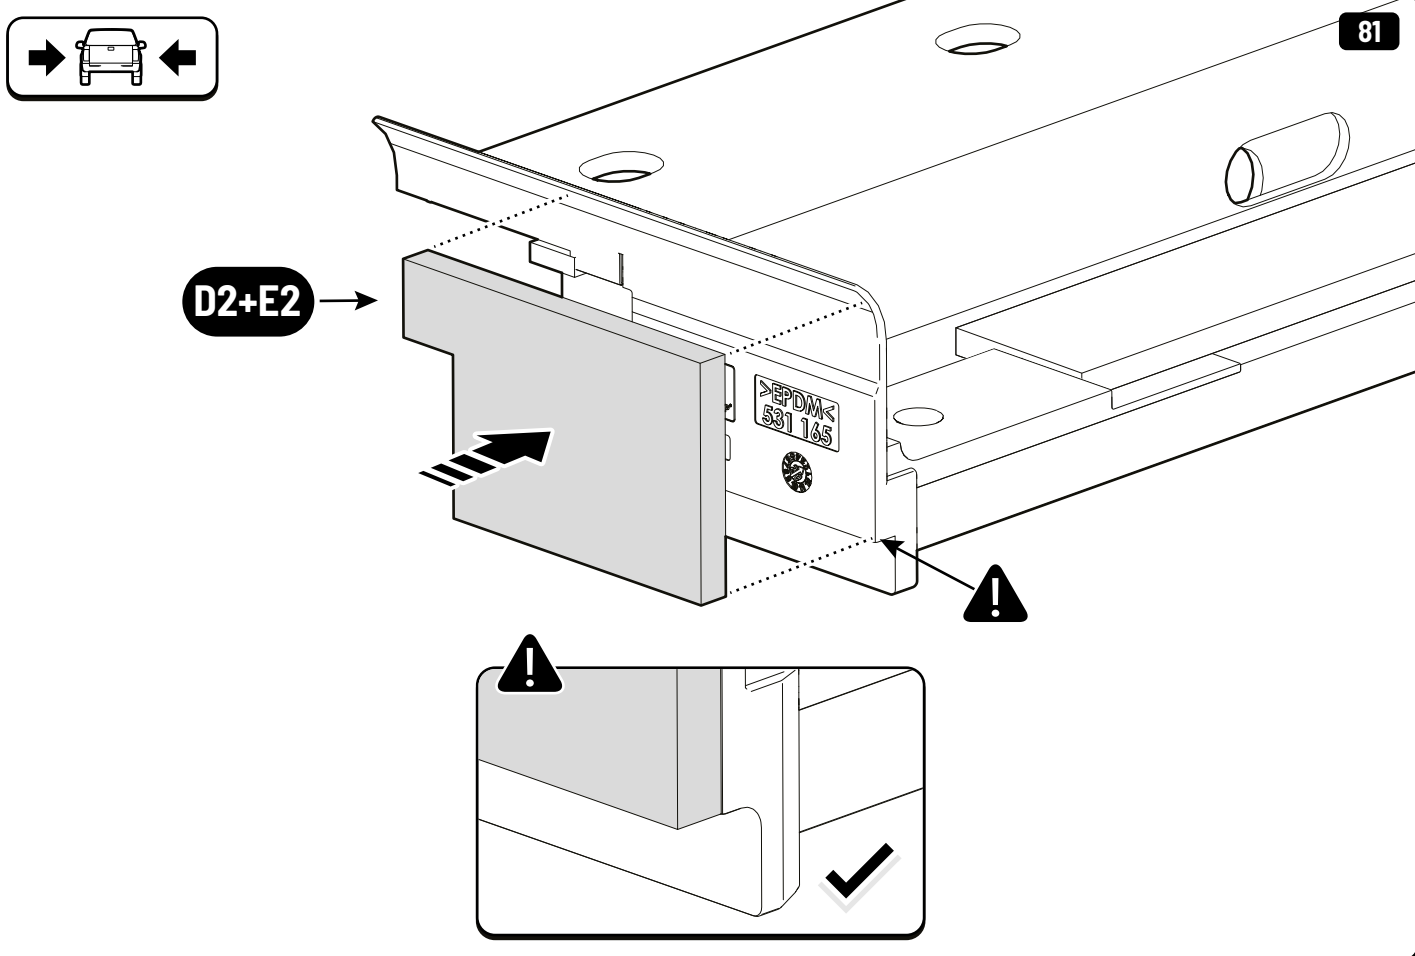
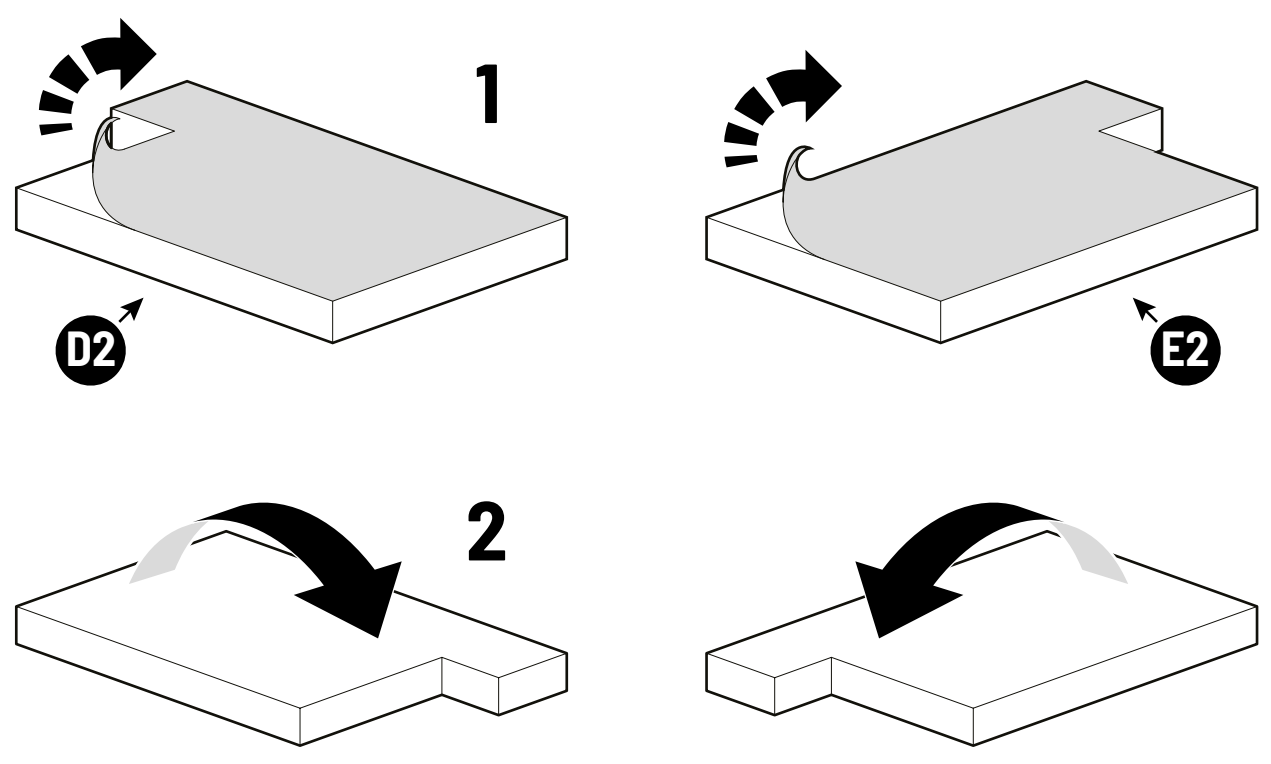





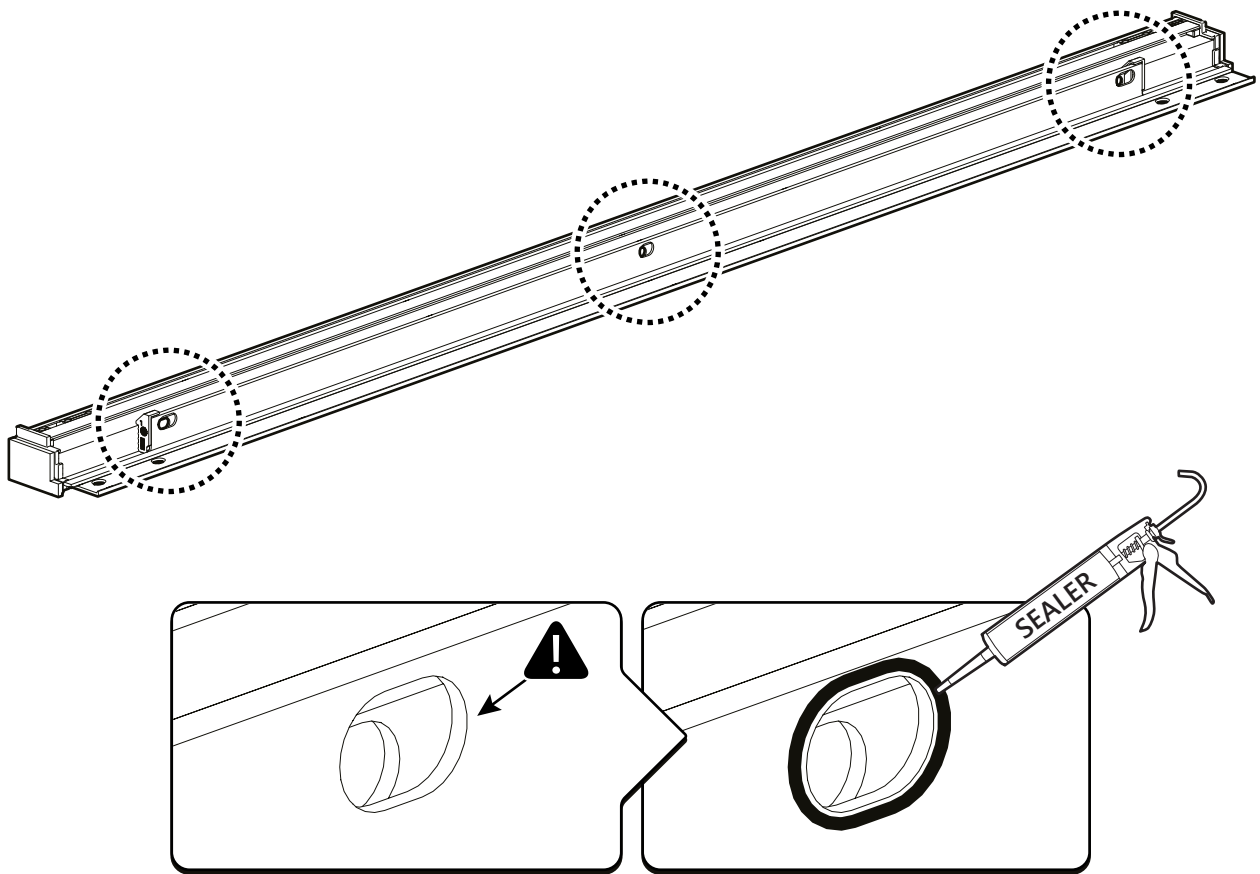







 **LOCTITE 243**



 **T40**

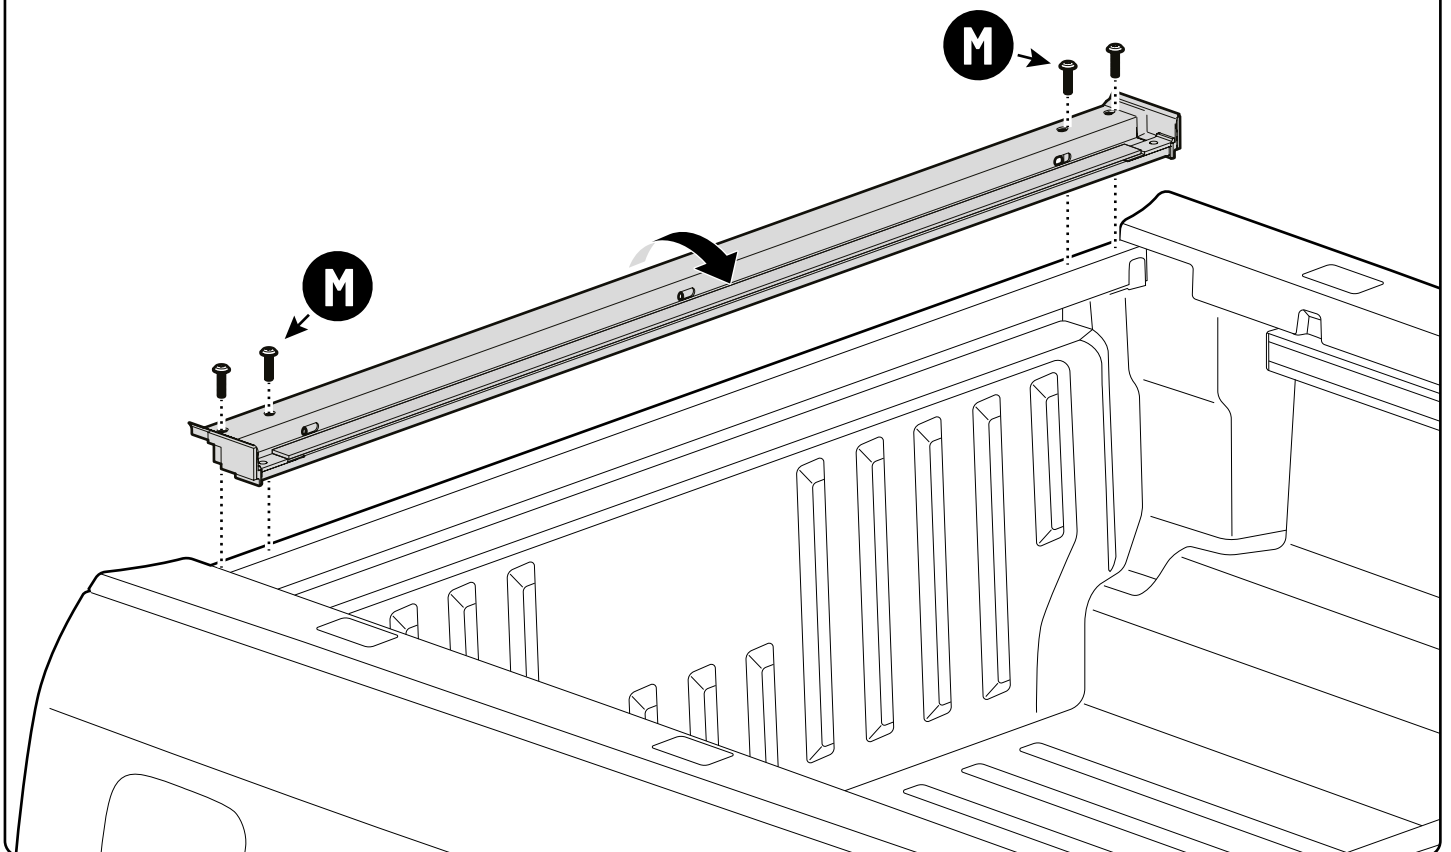

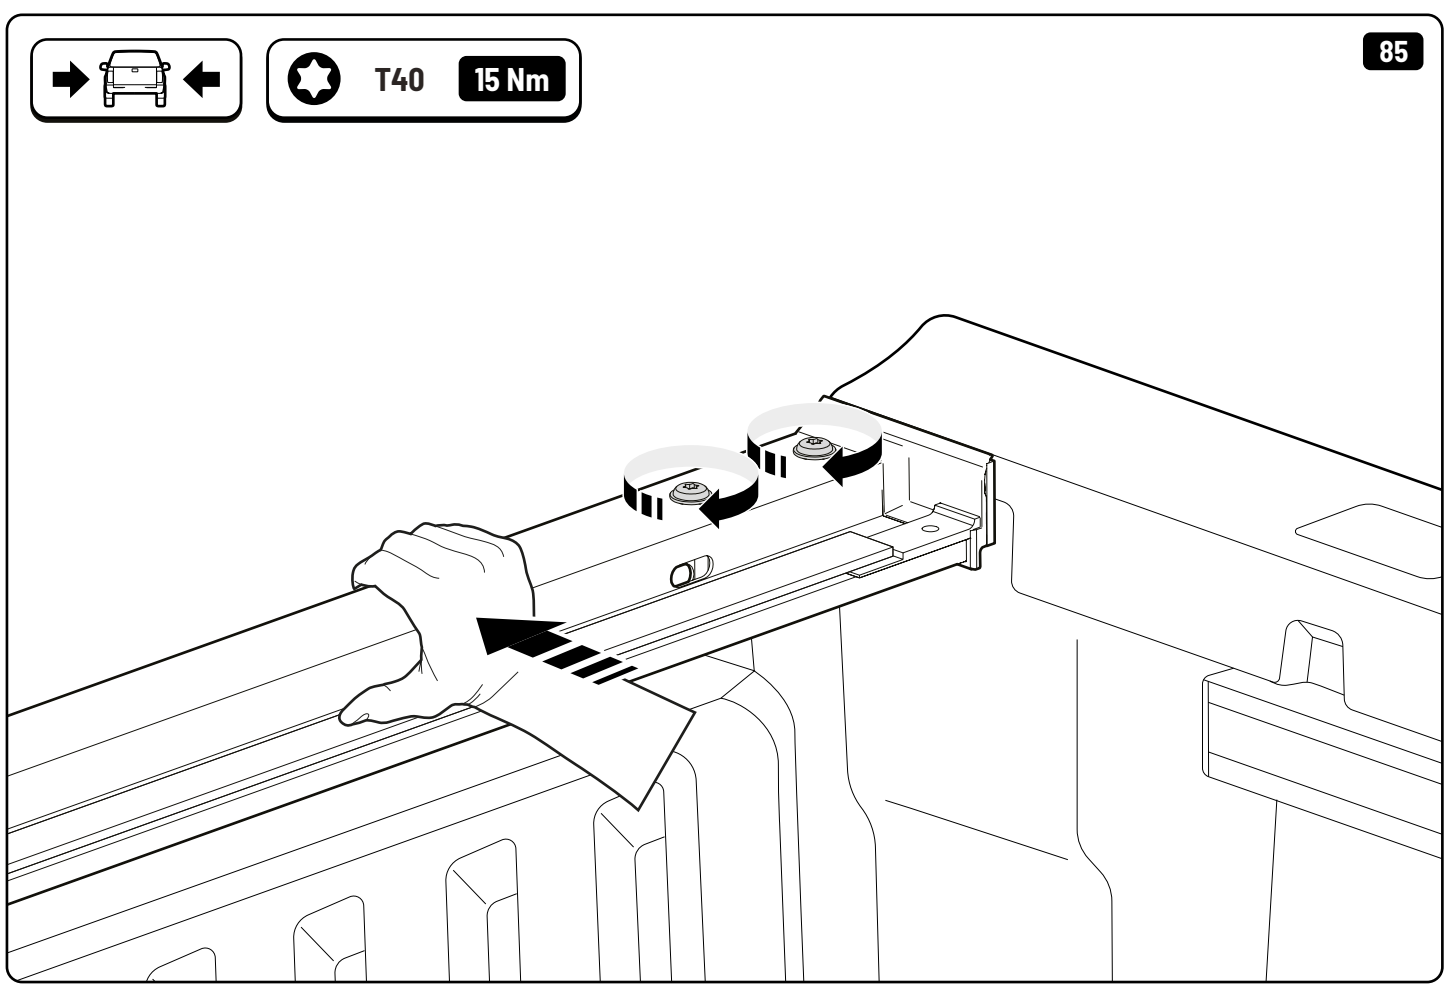
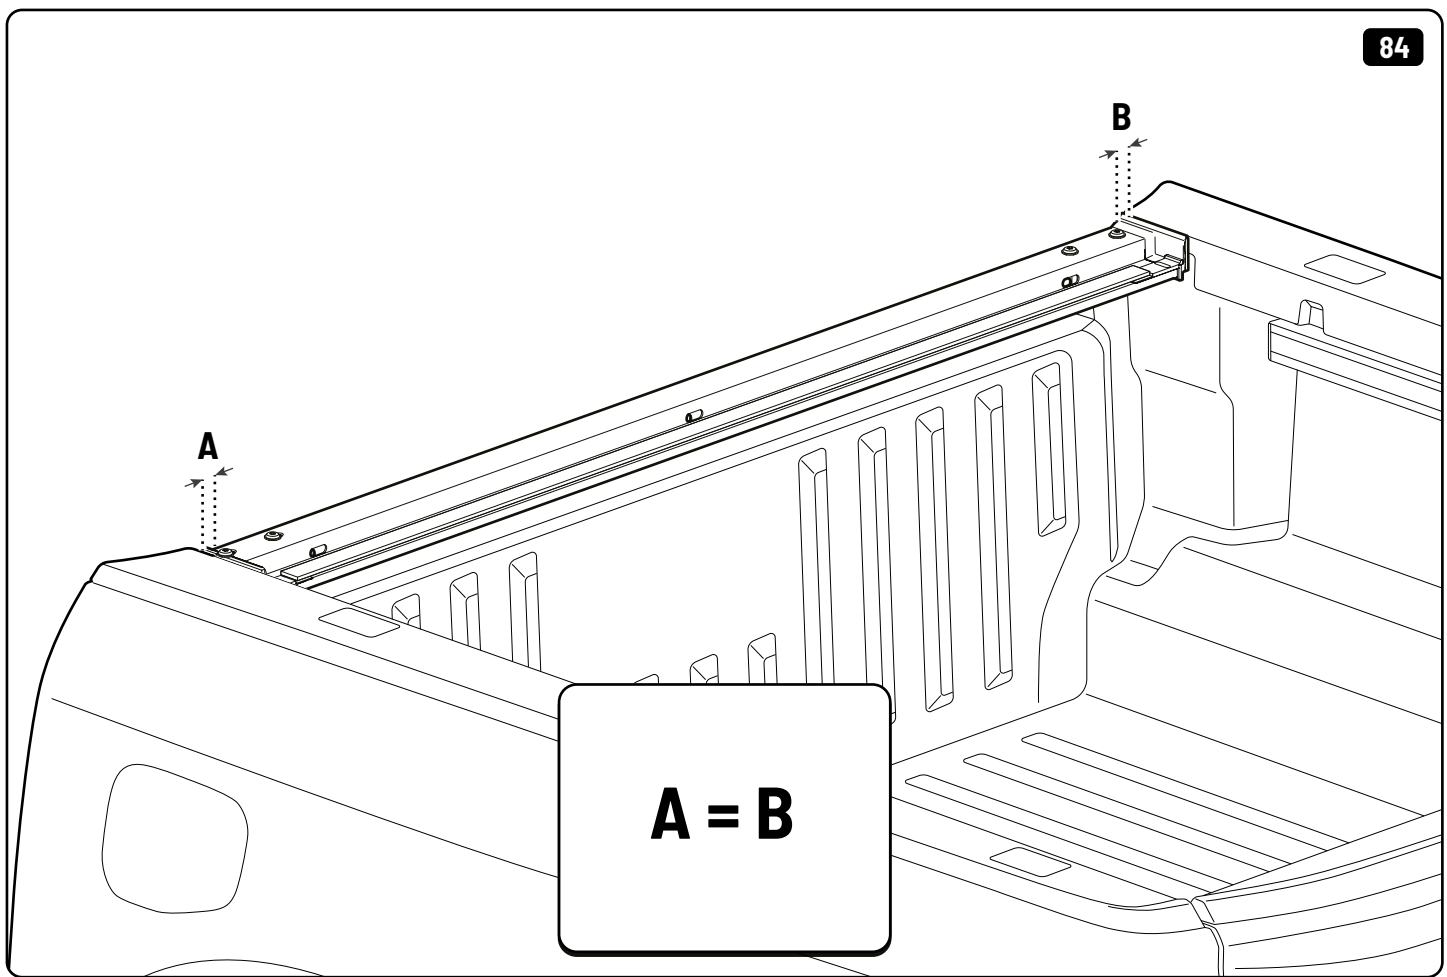





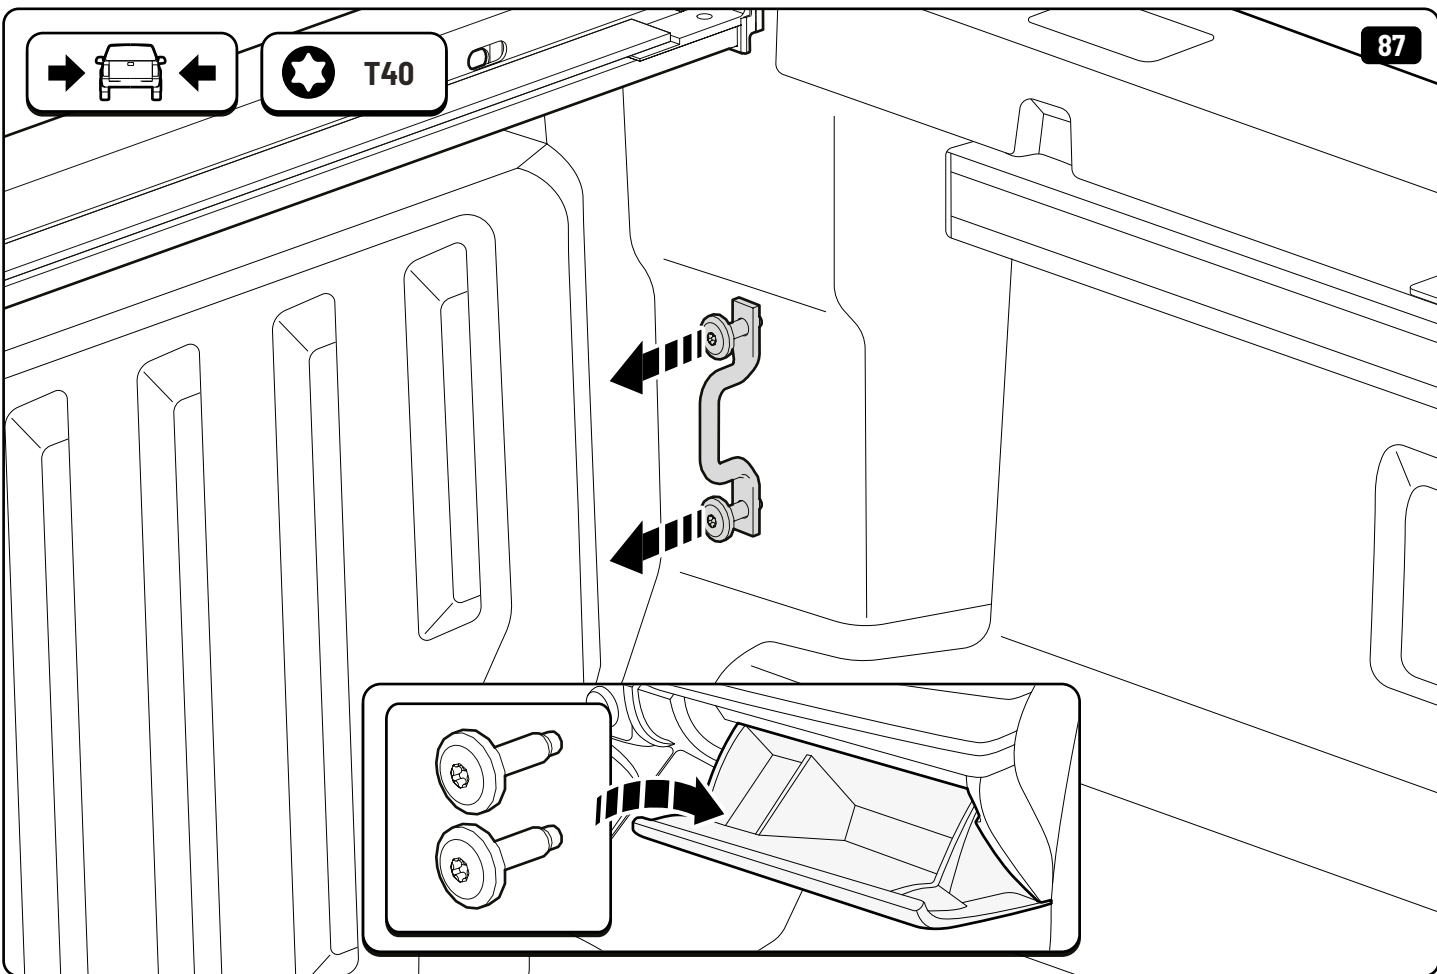

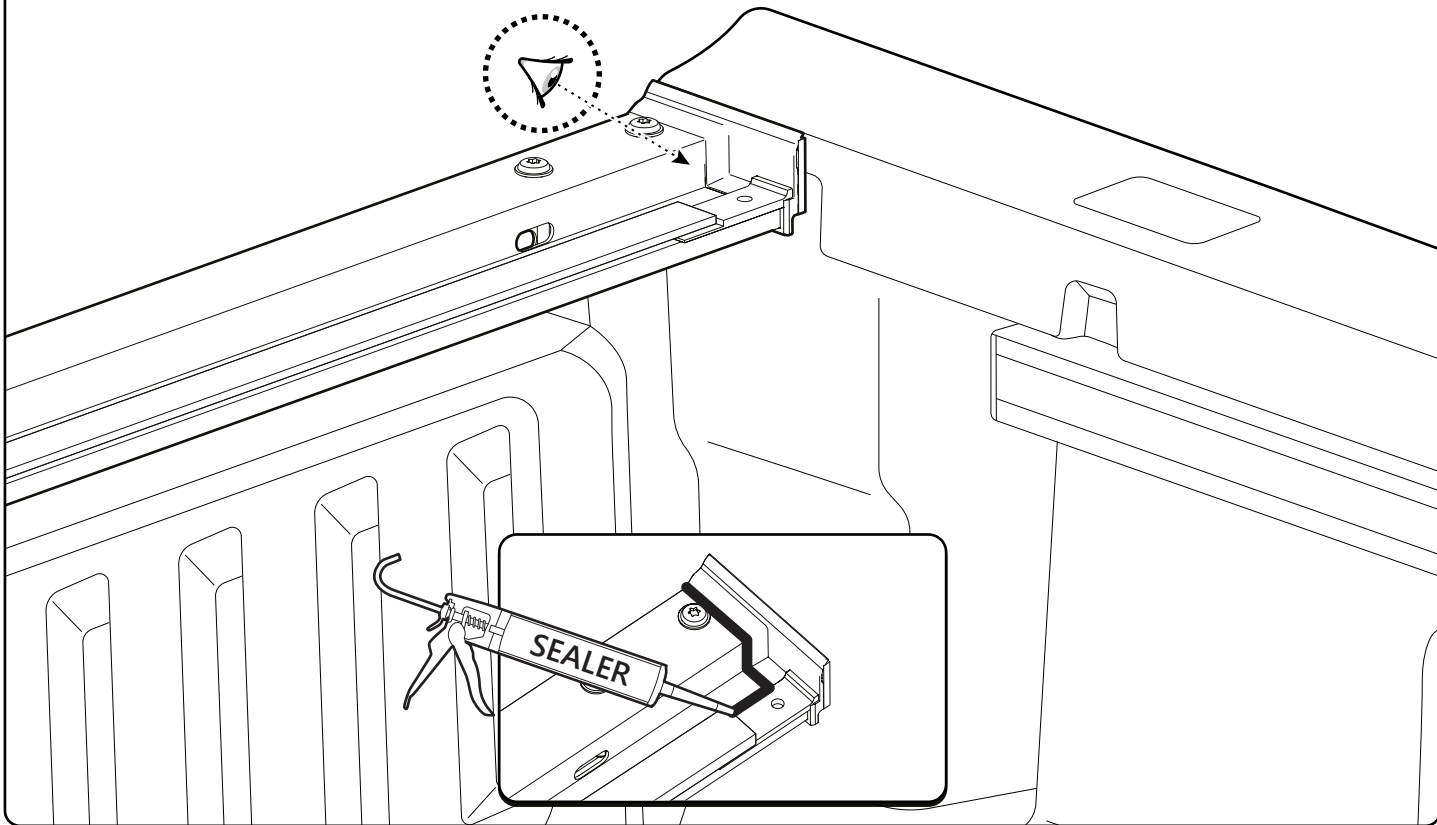



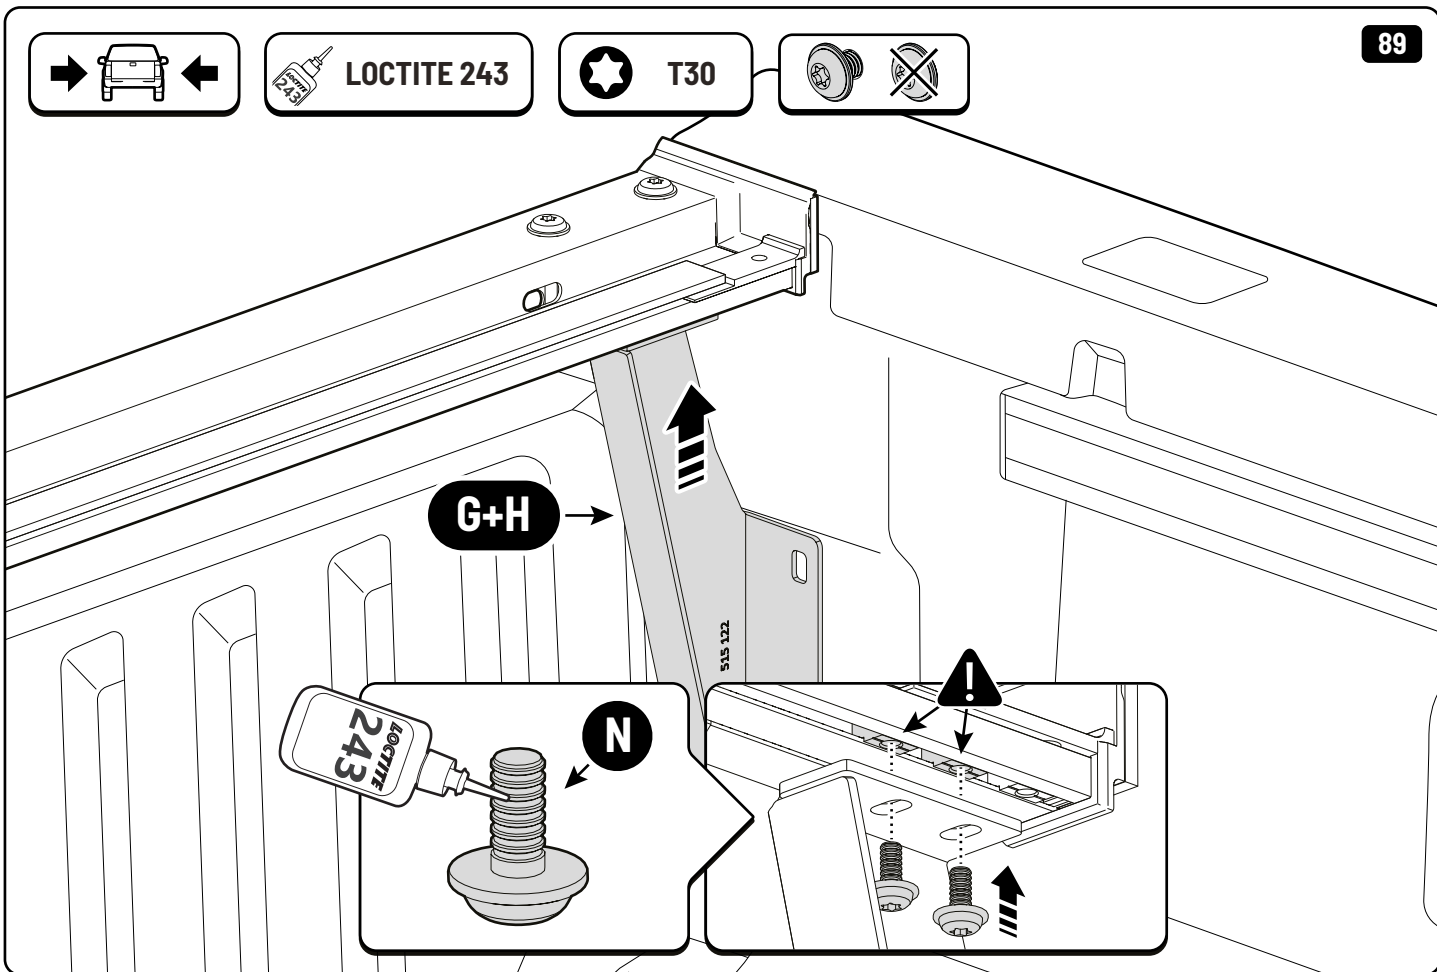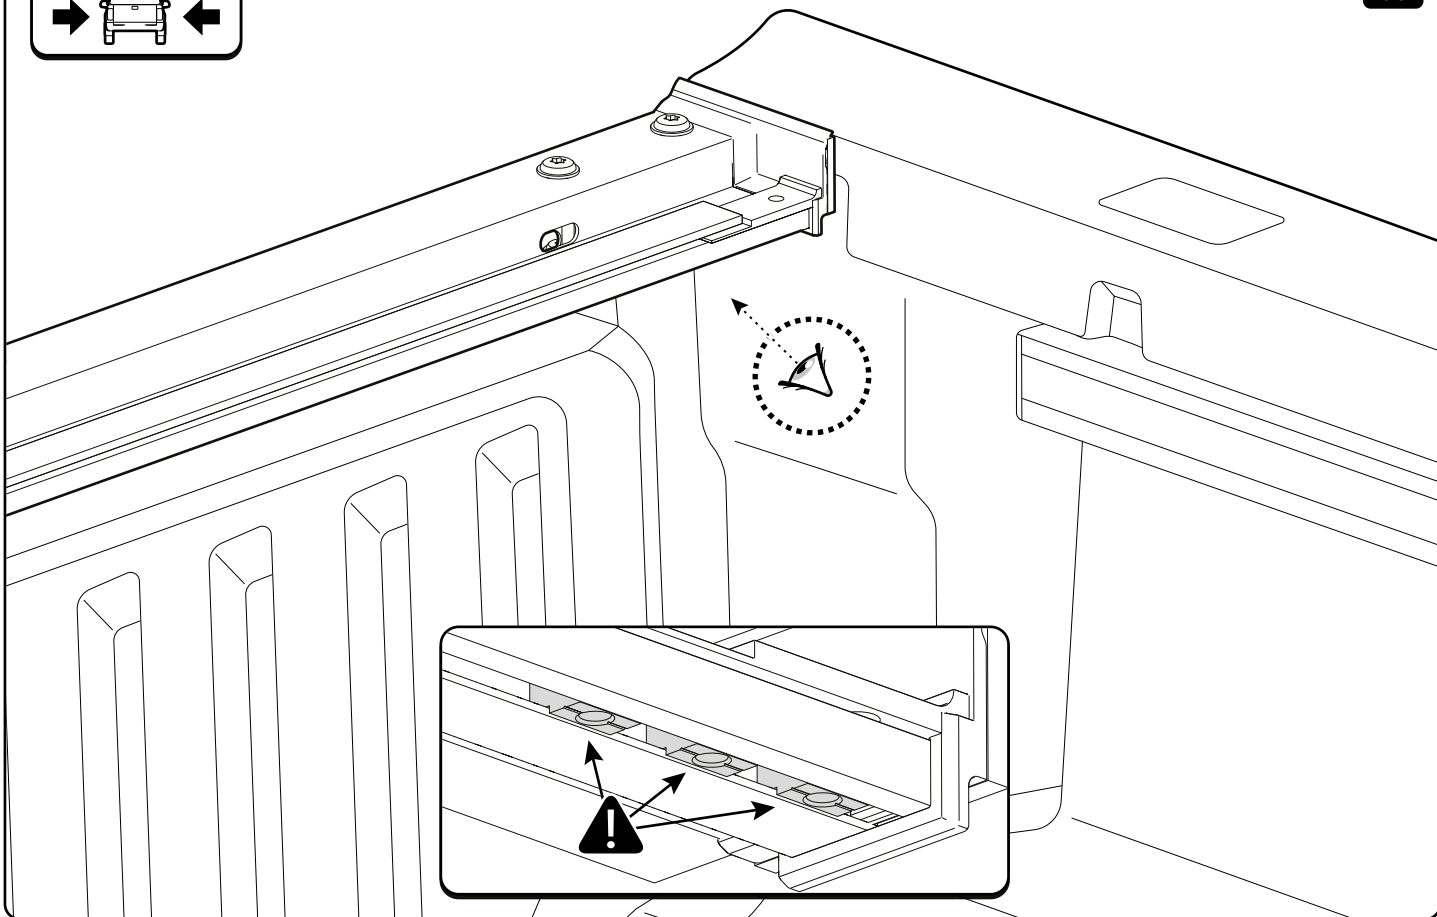



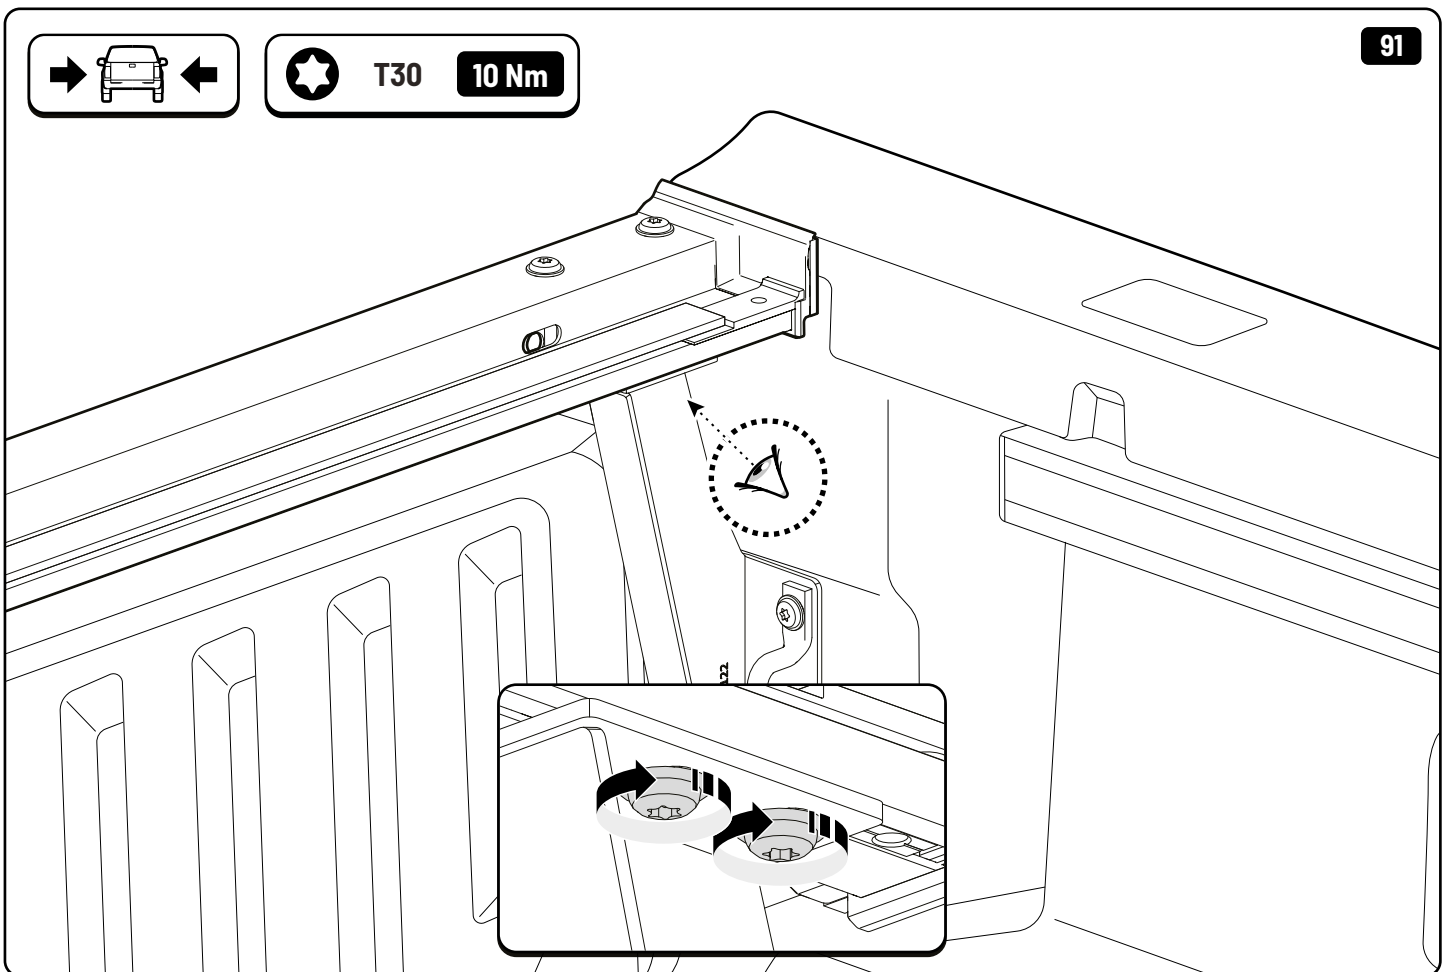
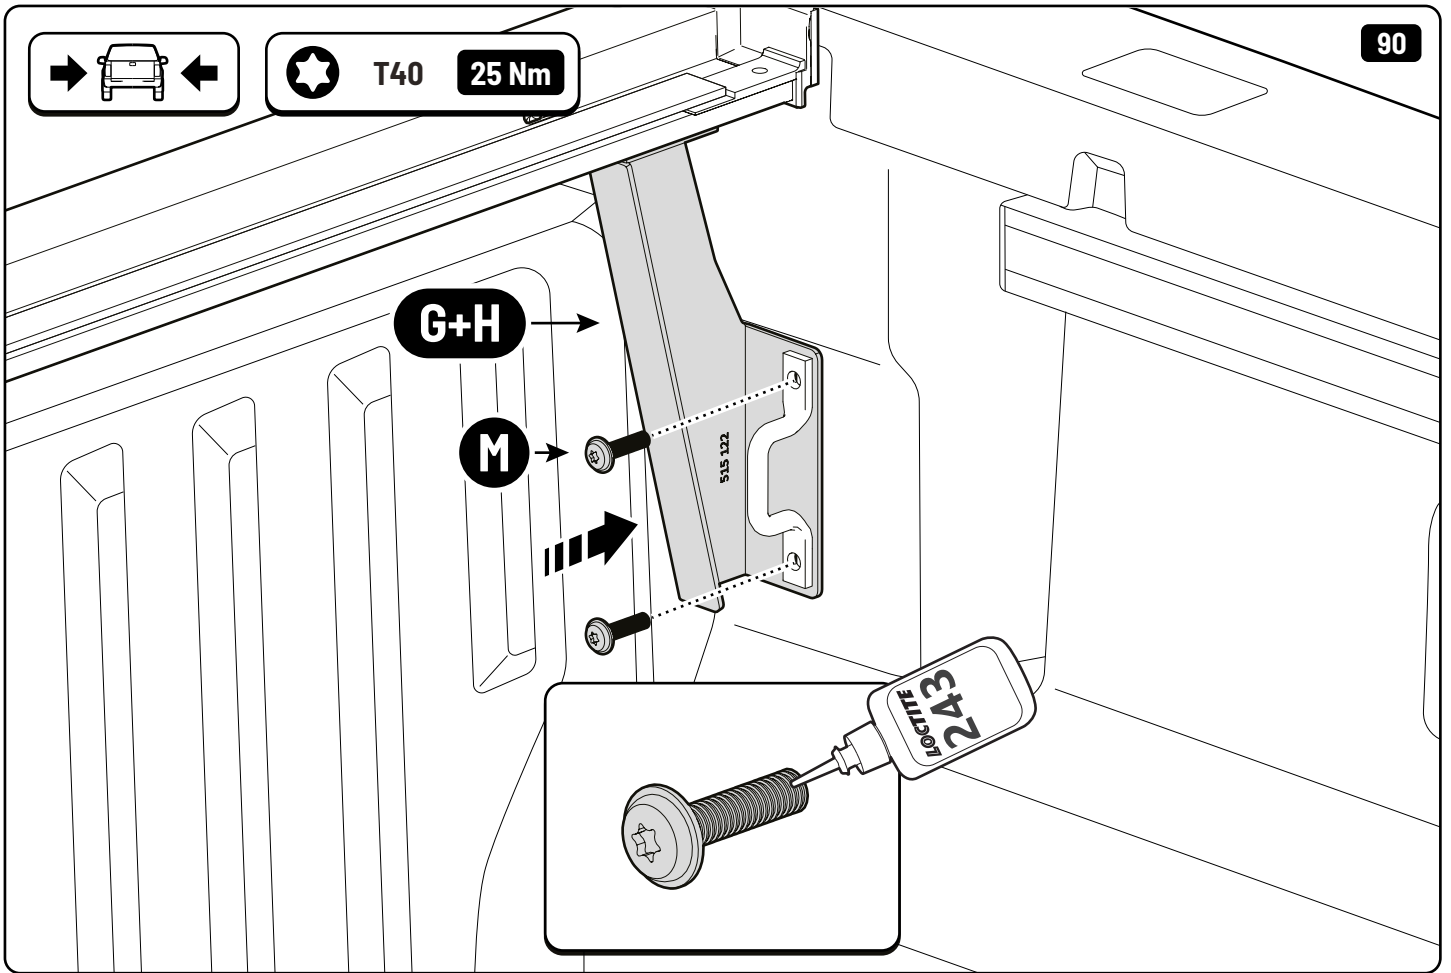







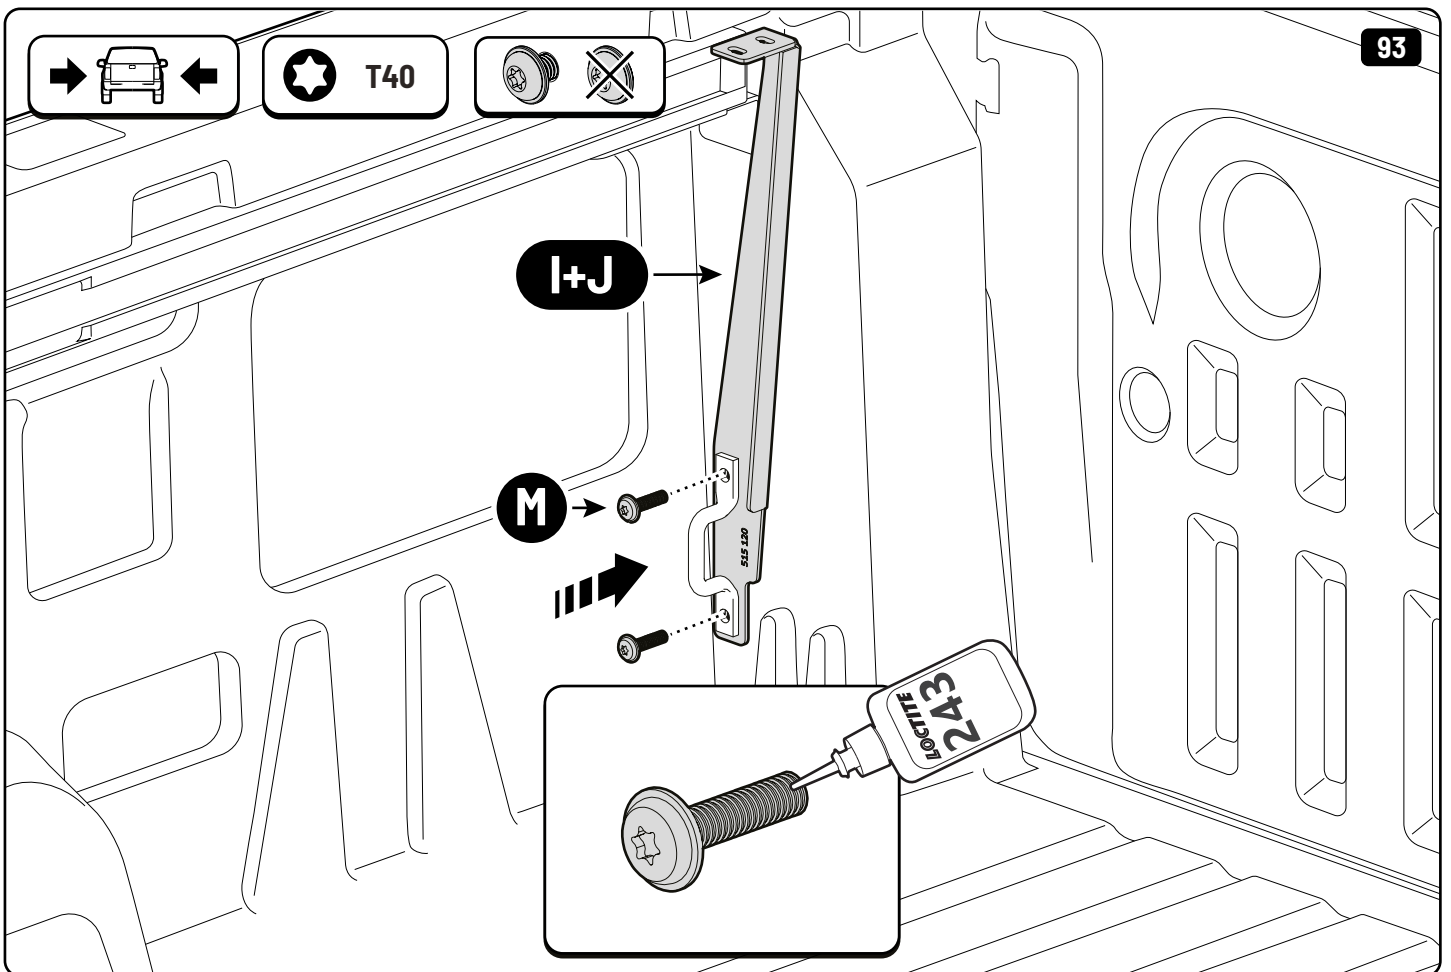
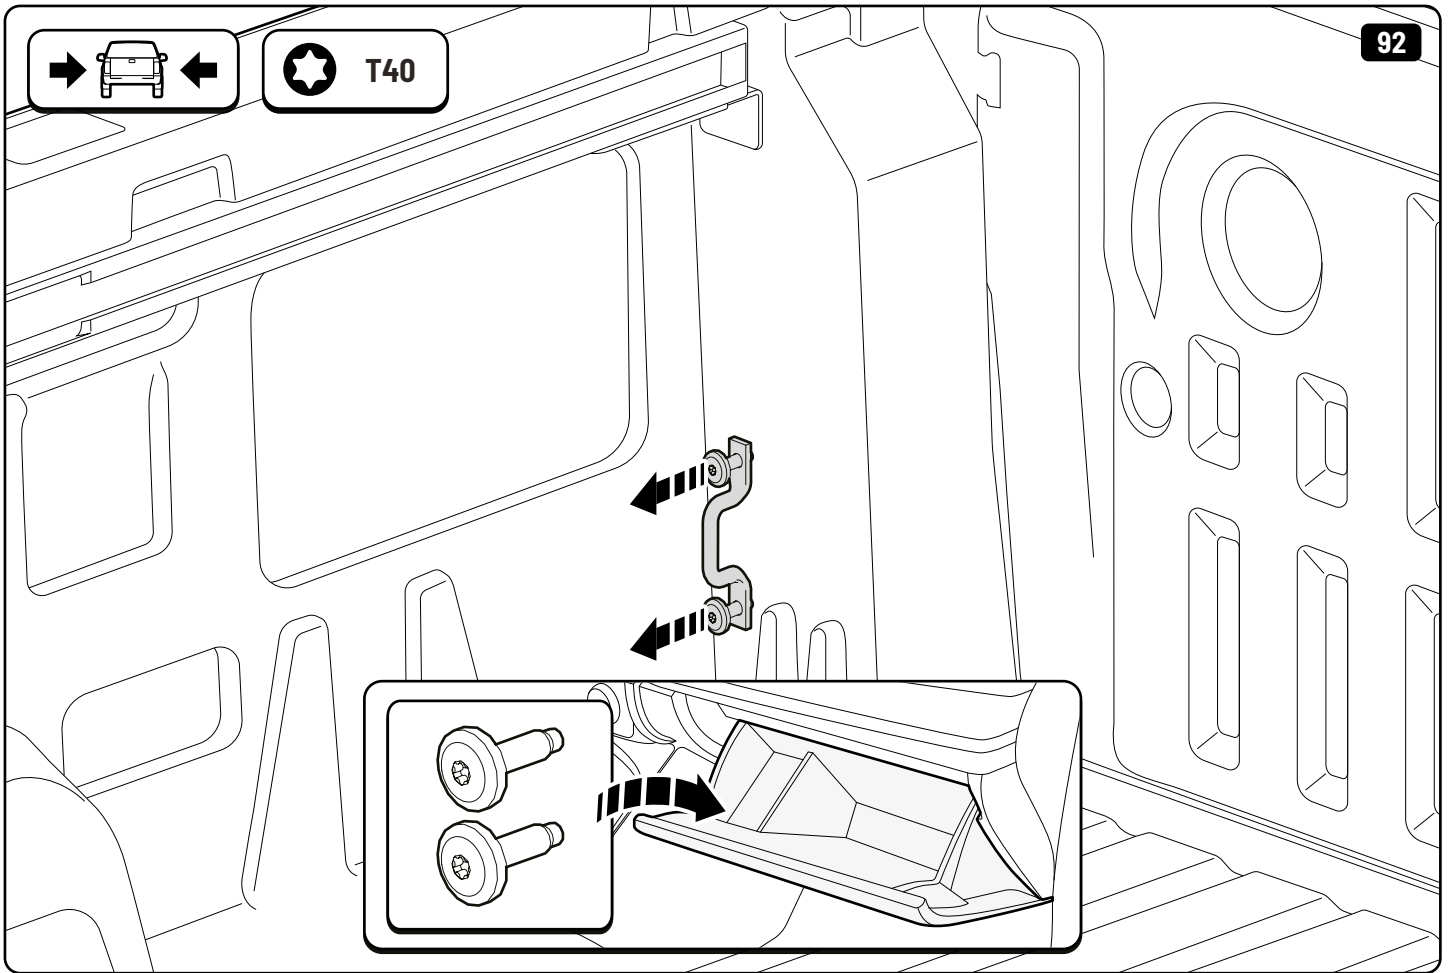


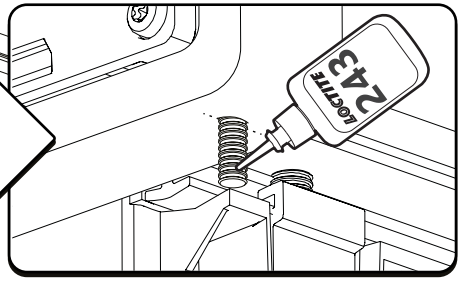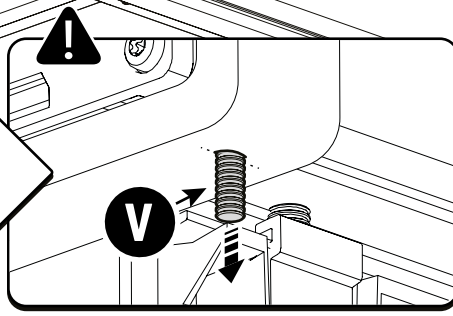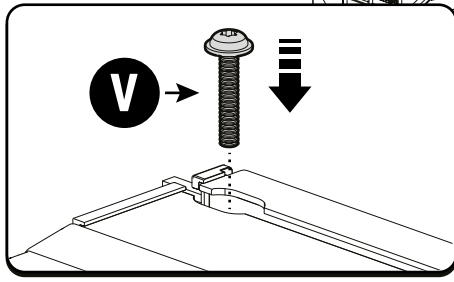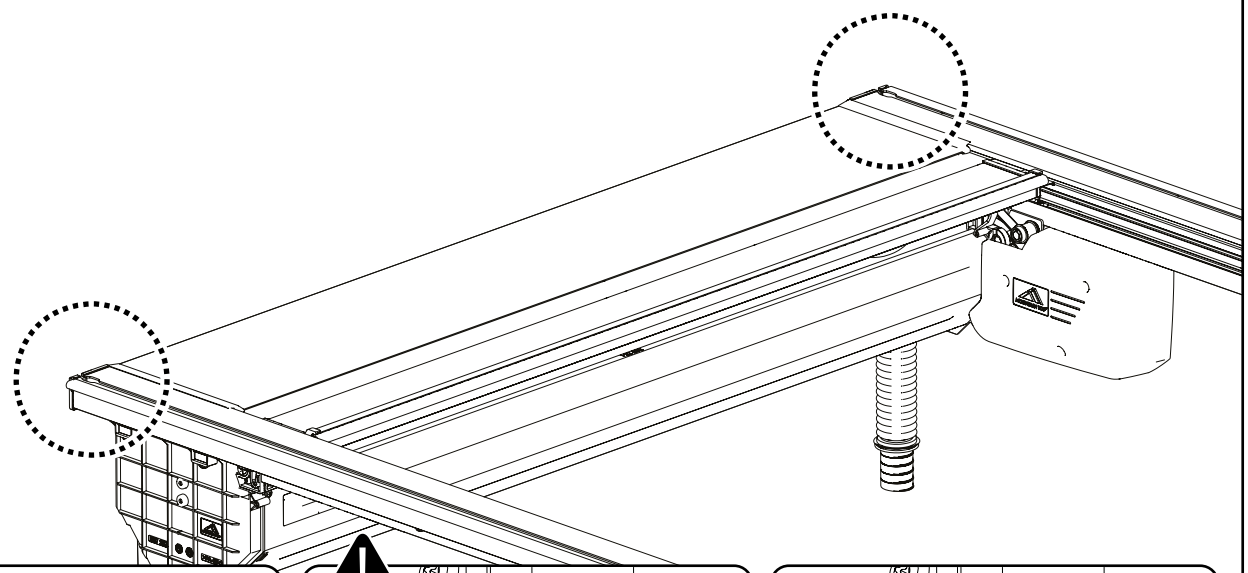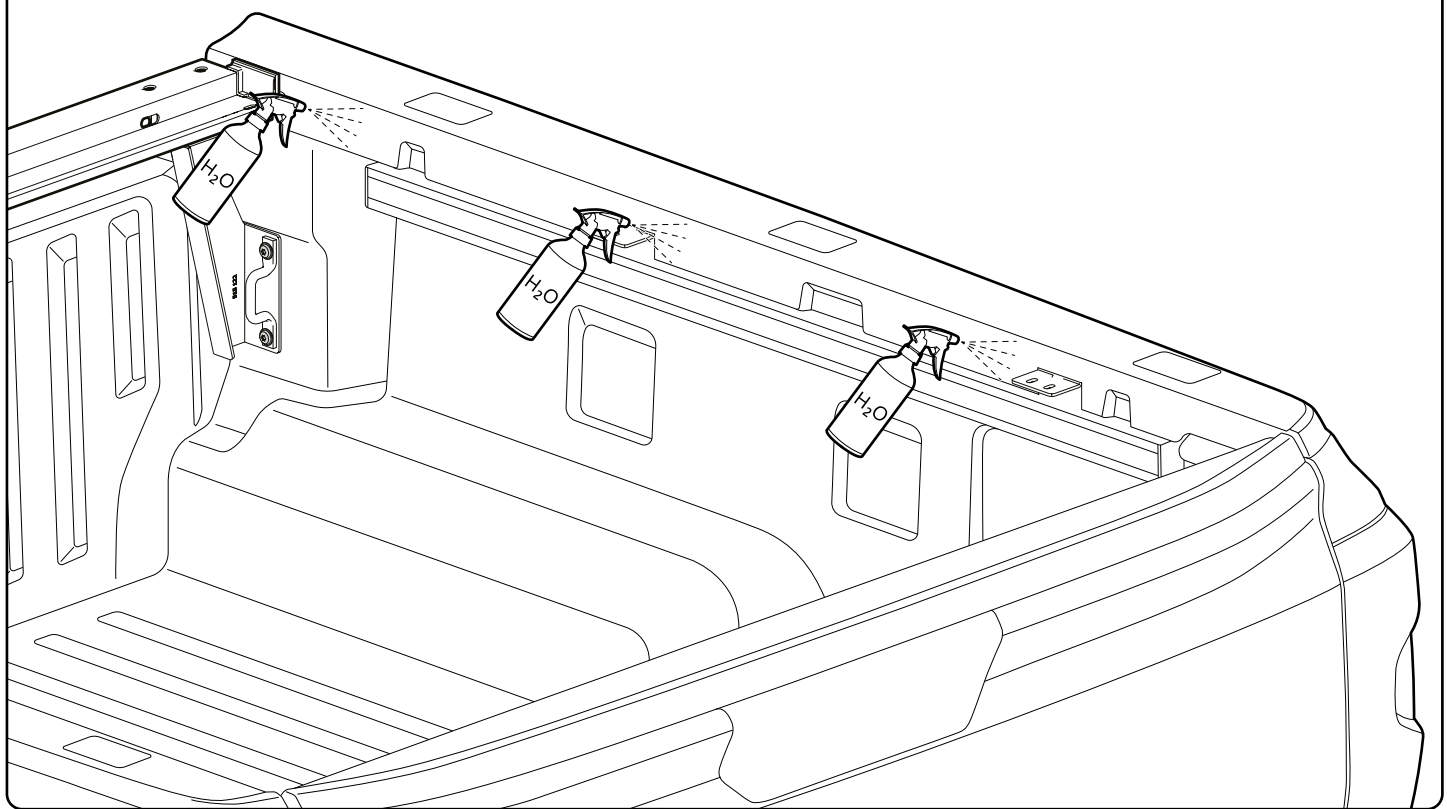

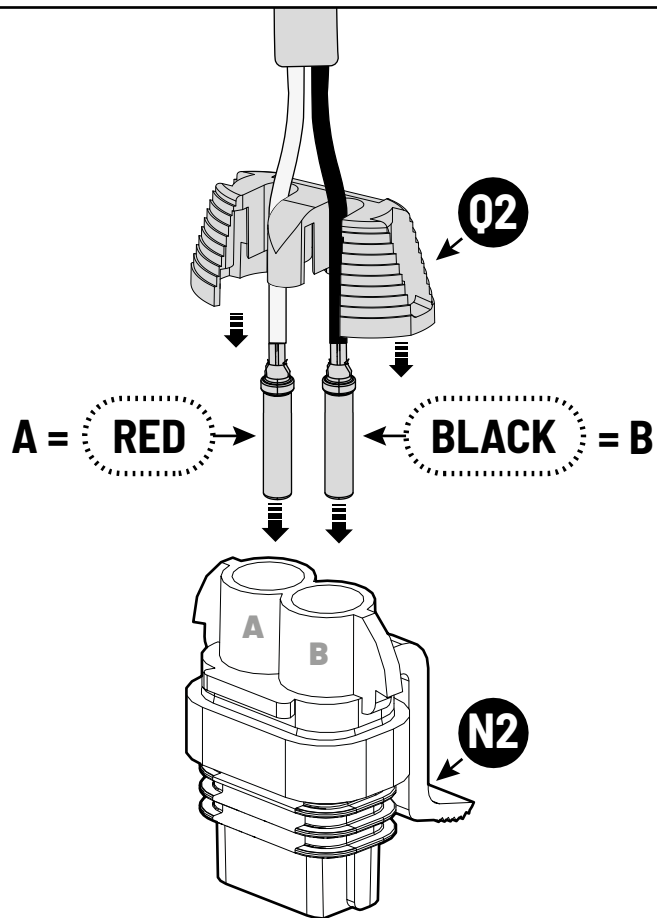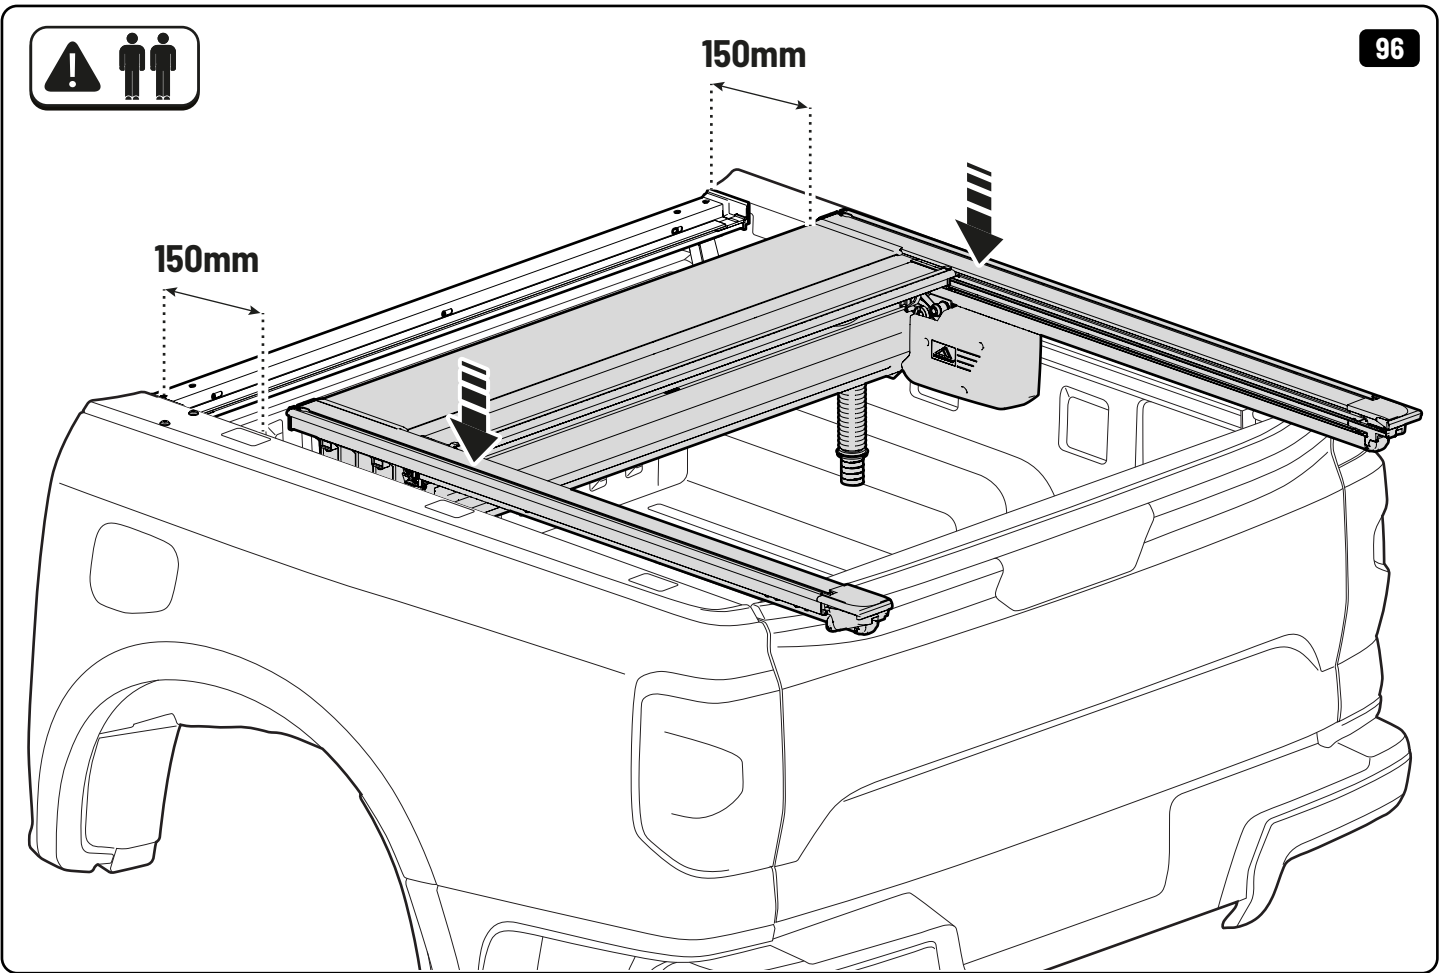

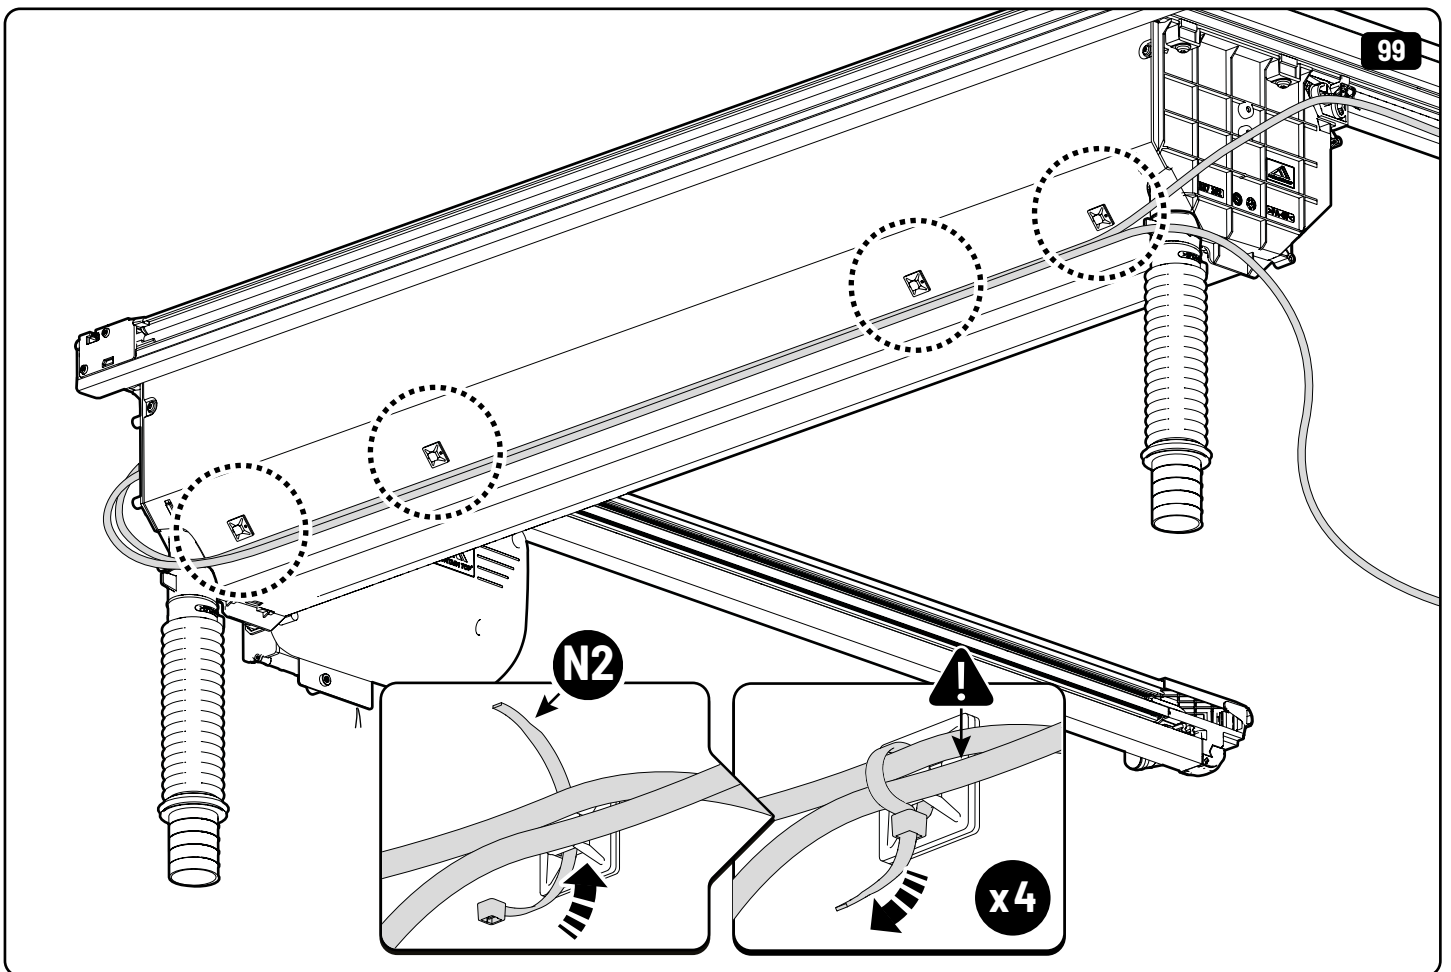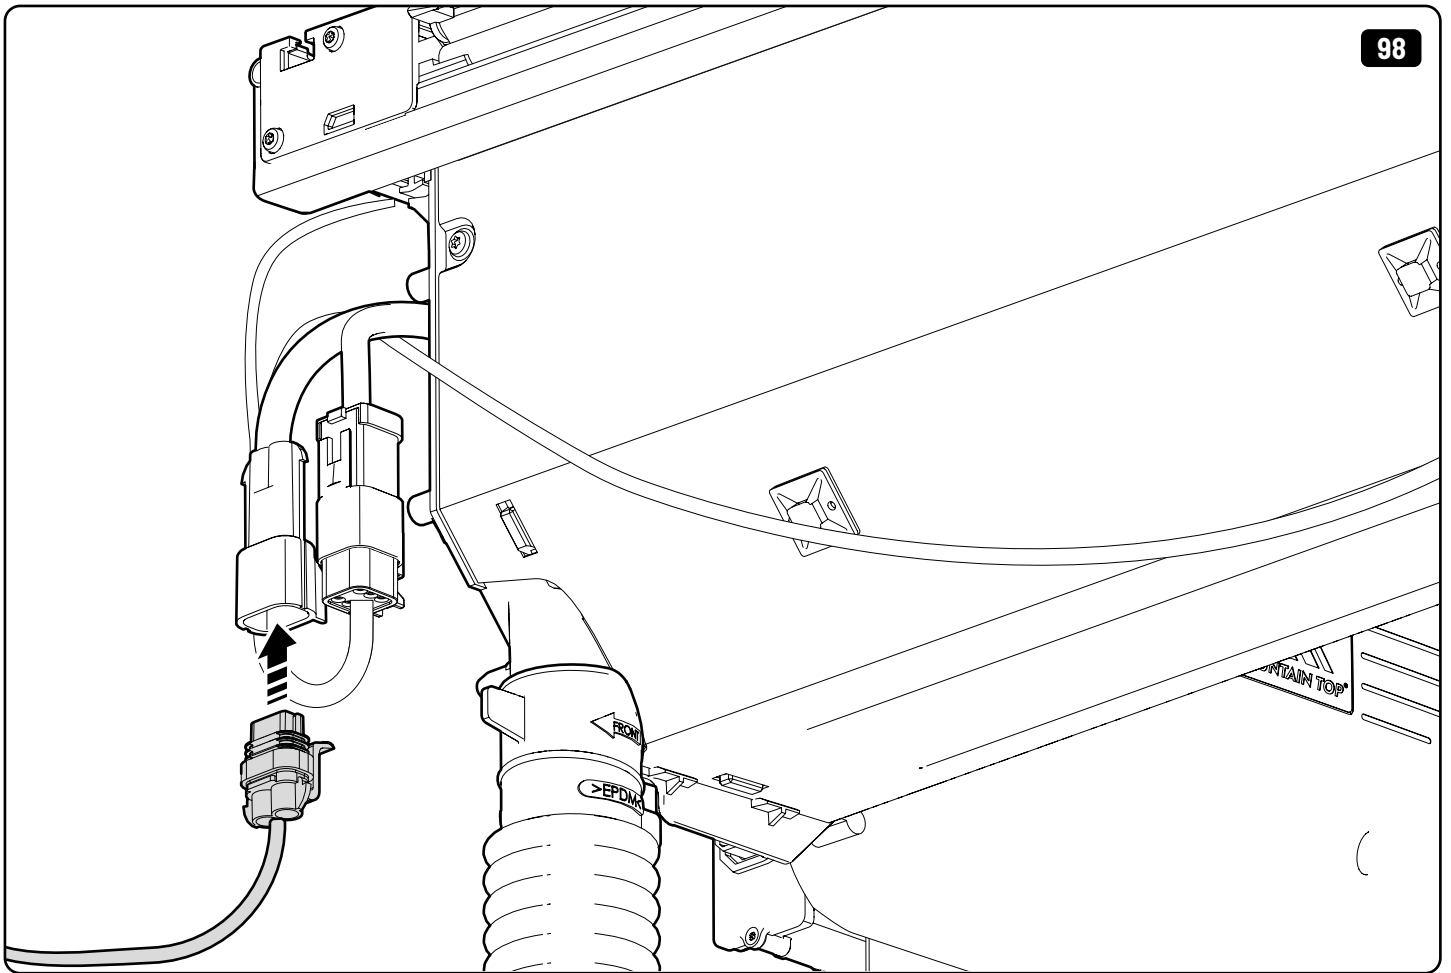

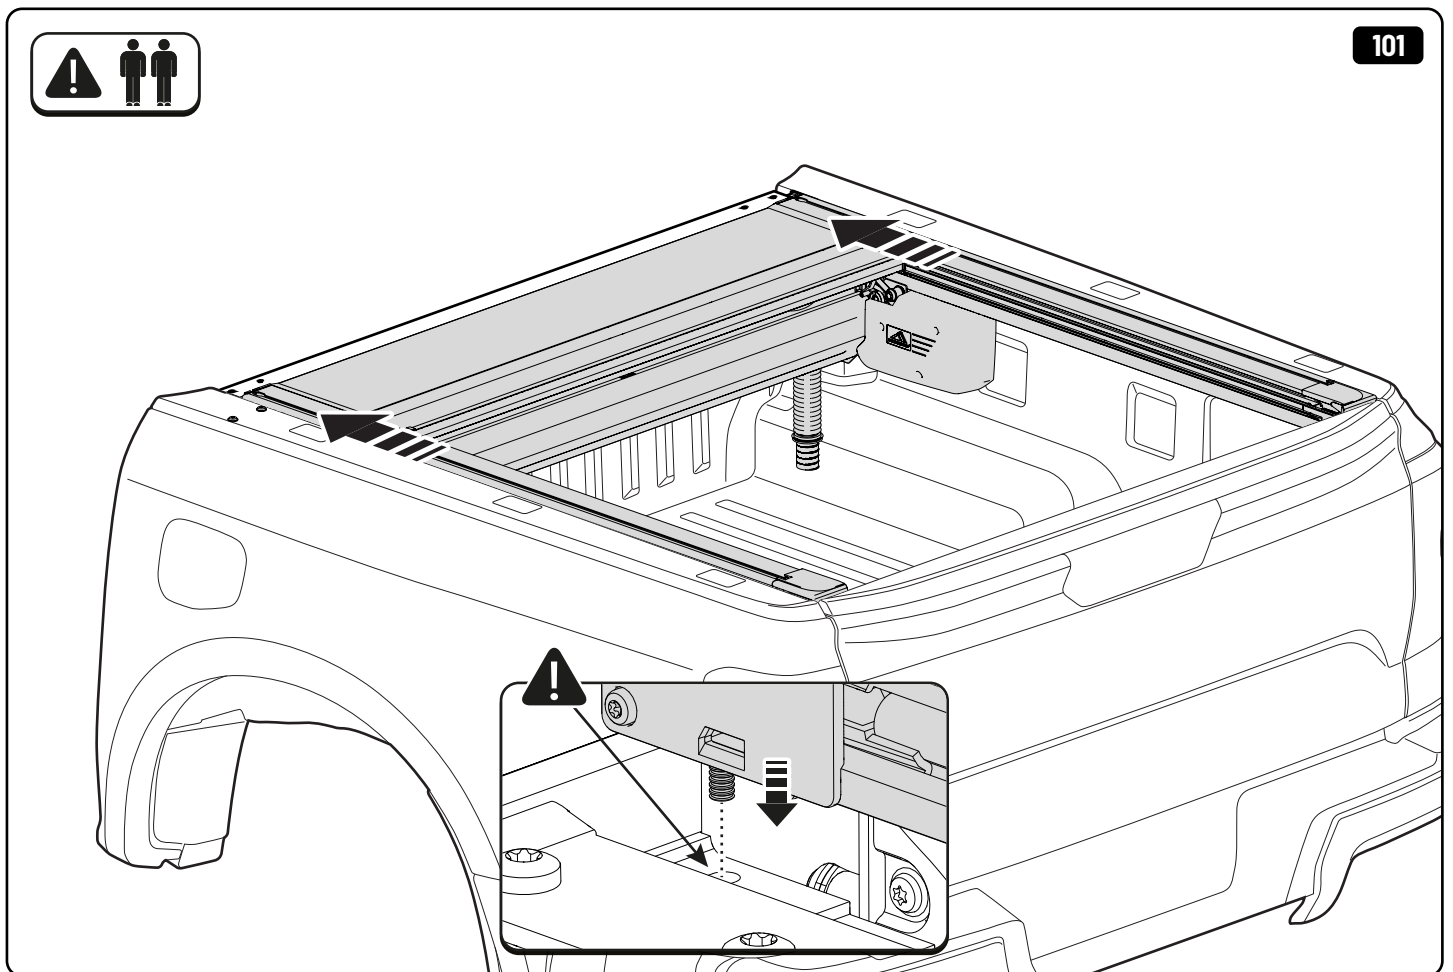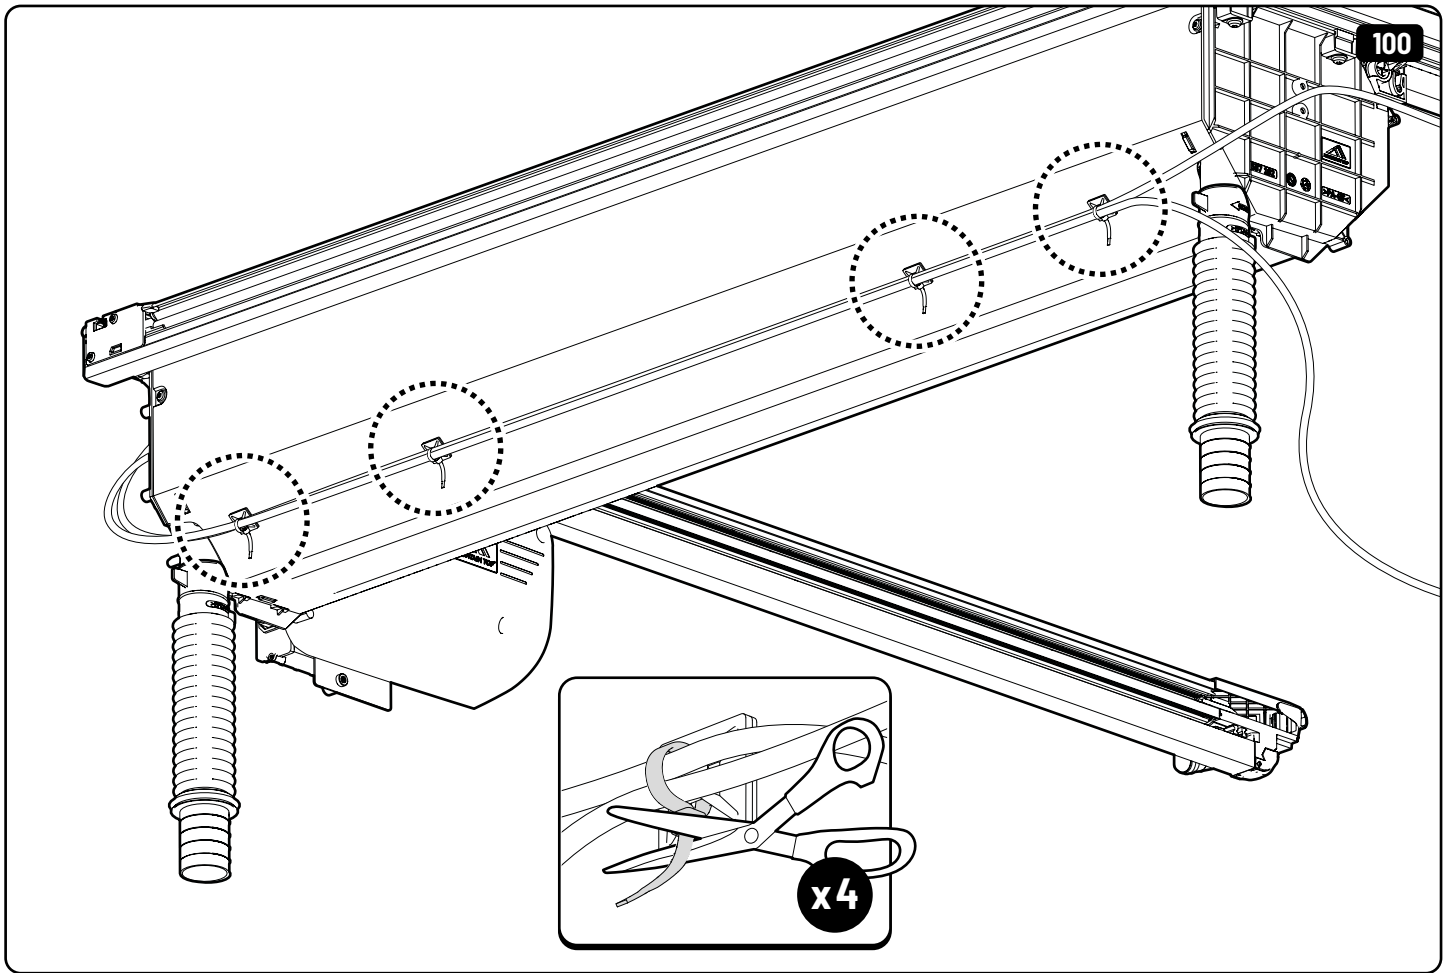

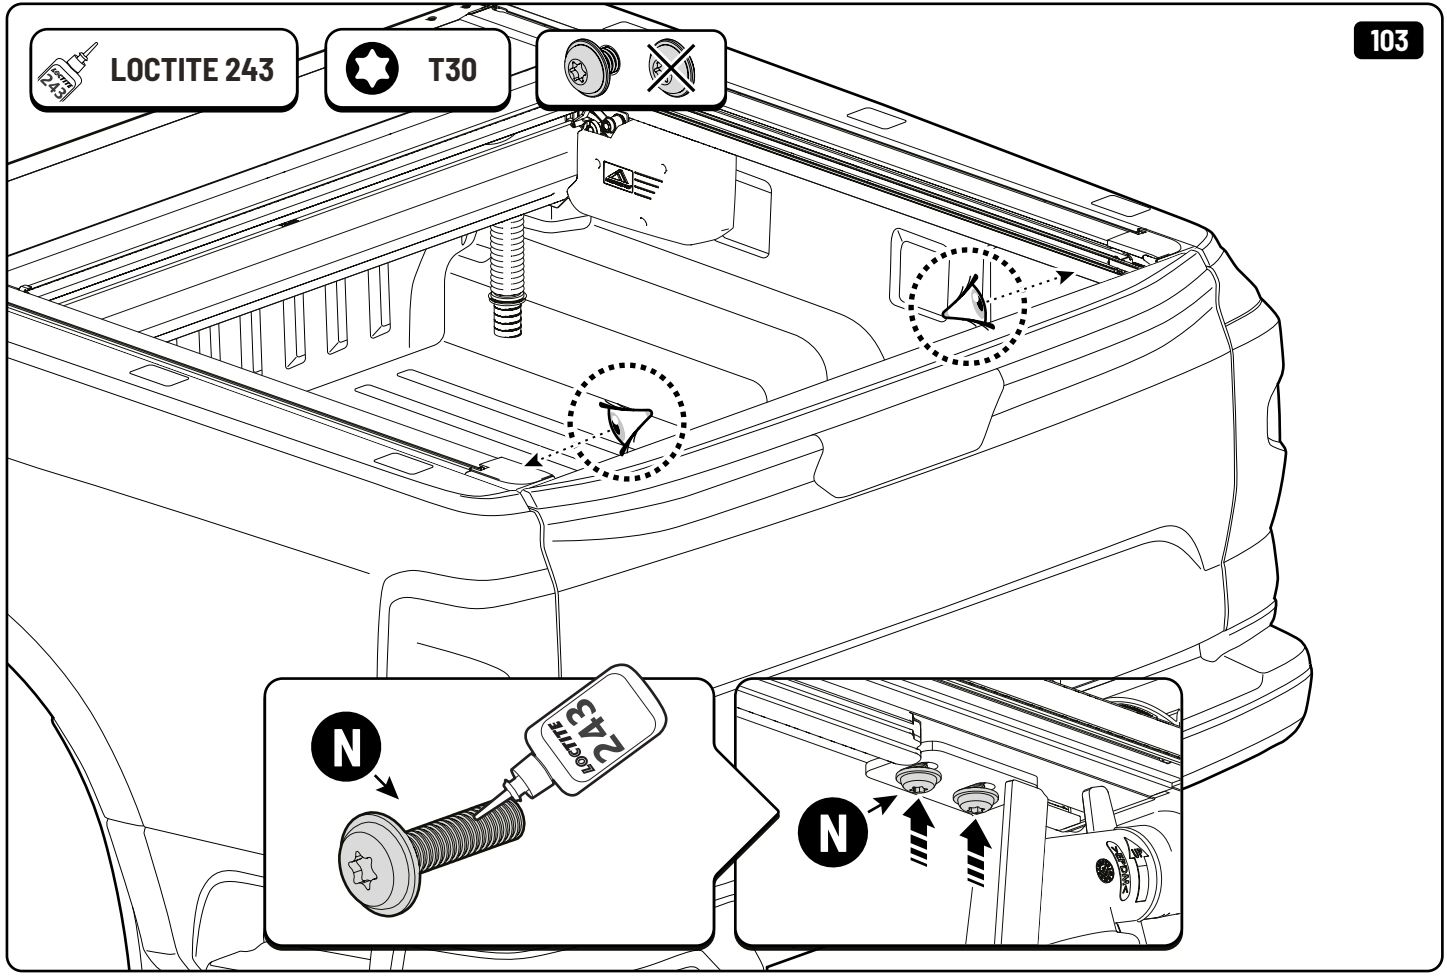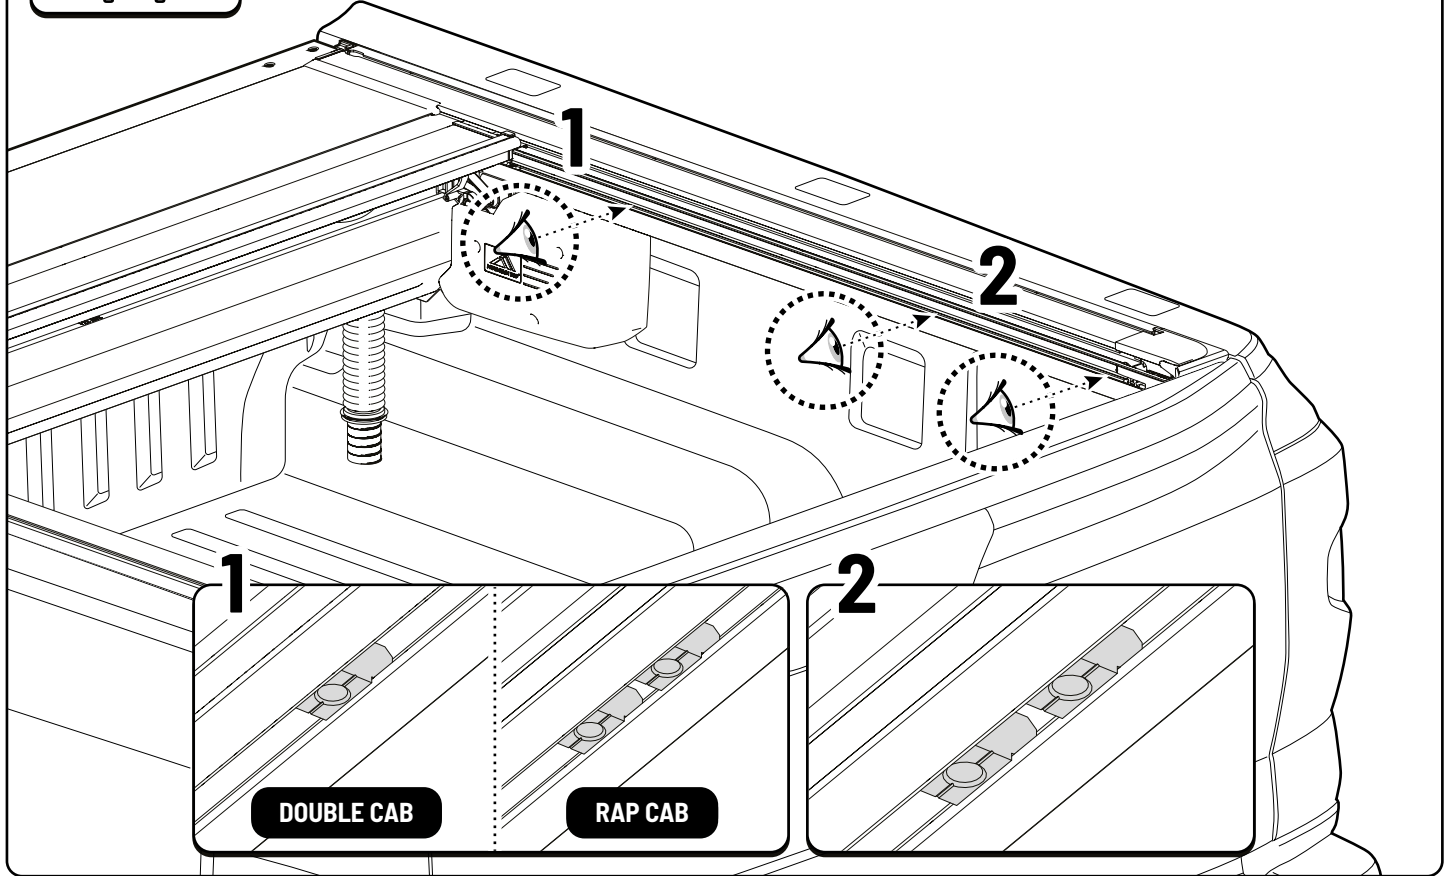




LOCTITE 243


T30




104

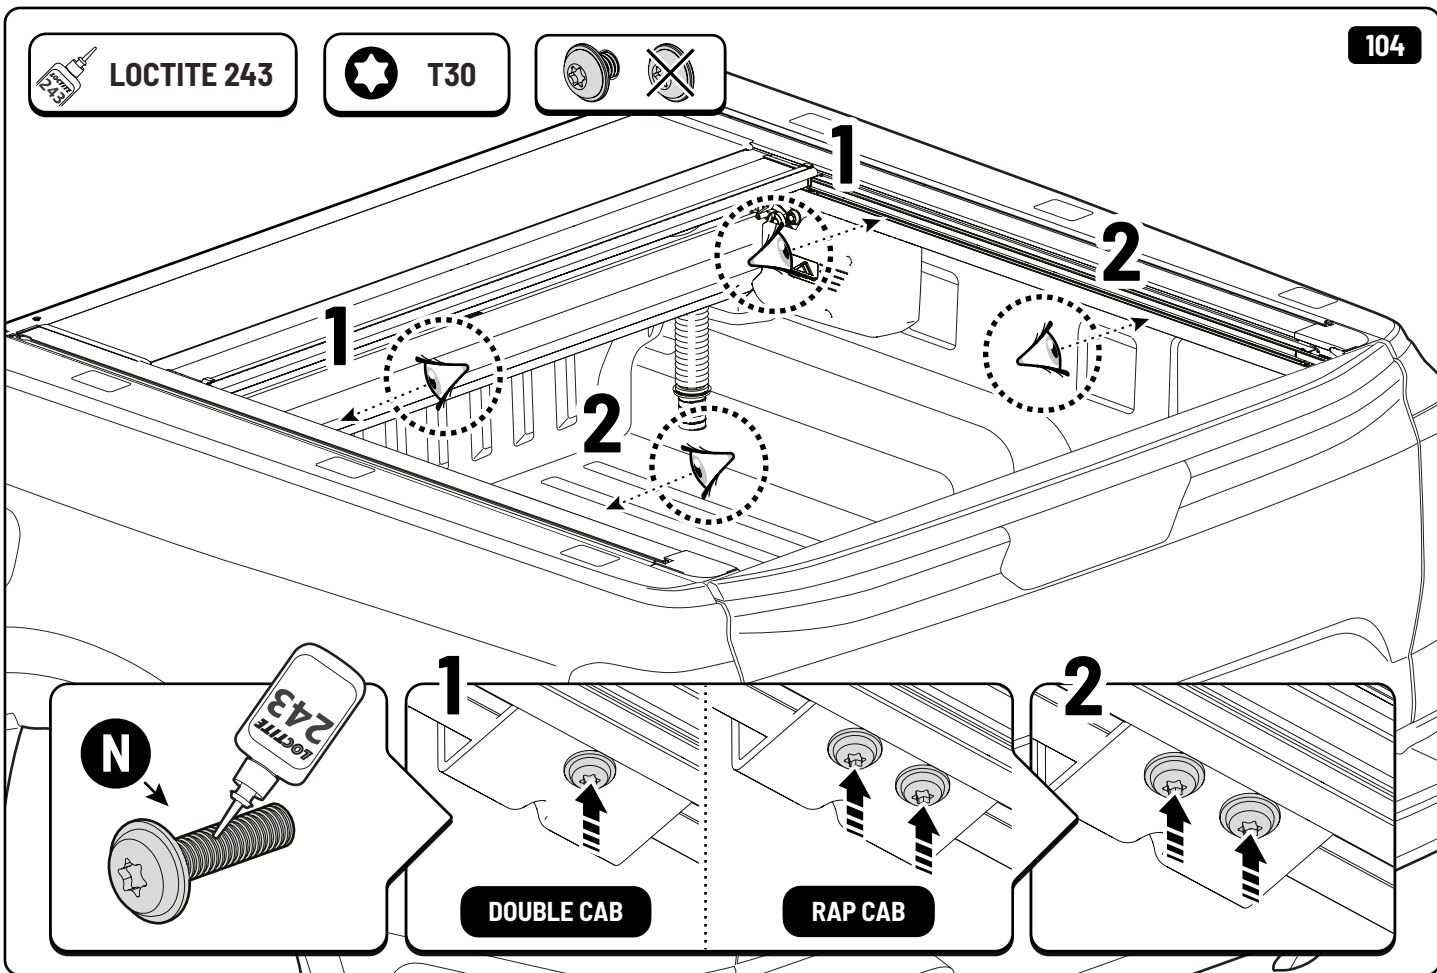


**!** ONLY FOR Aventura




105

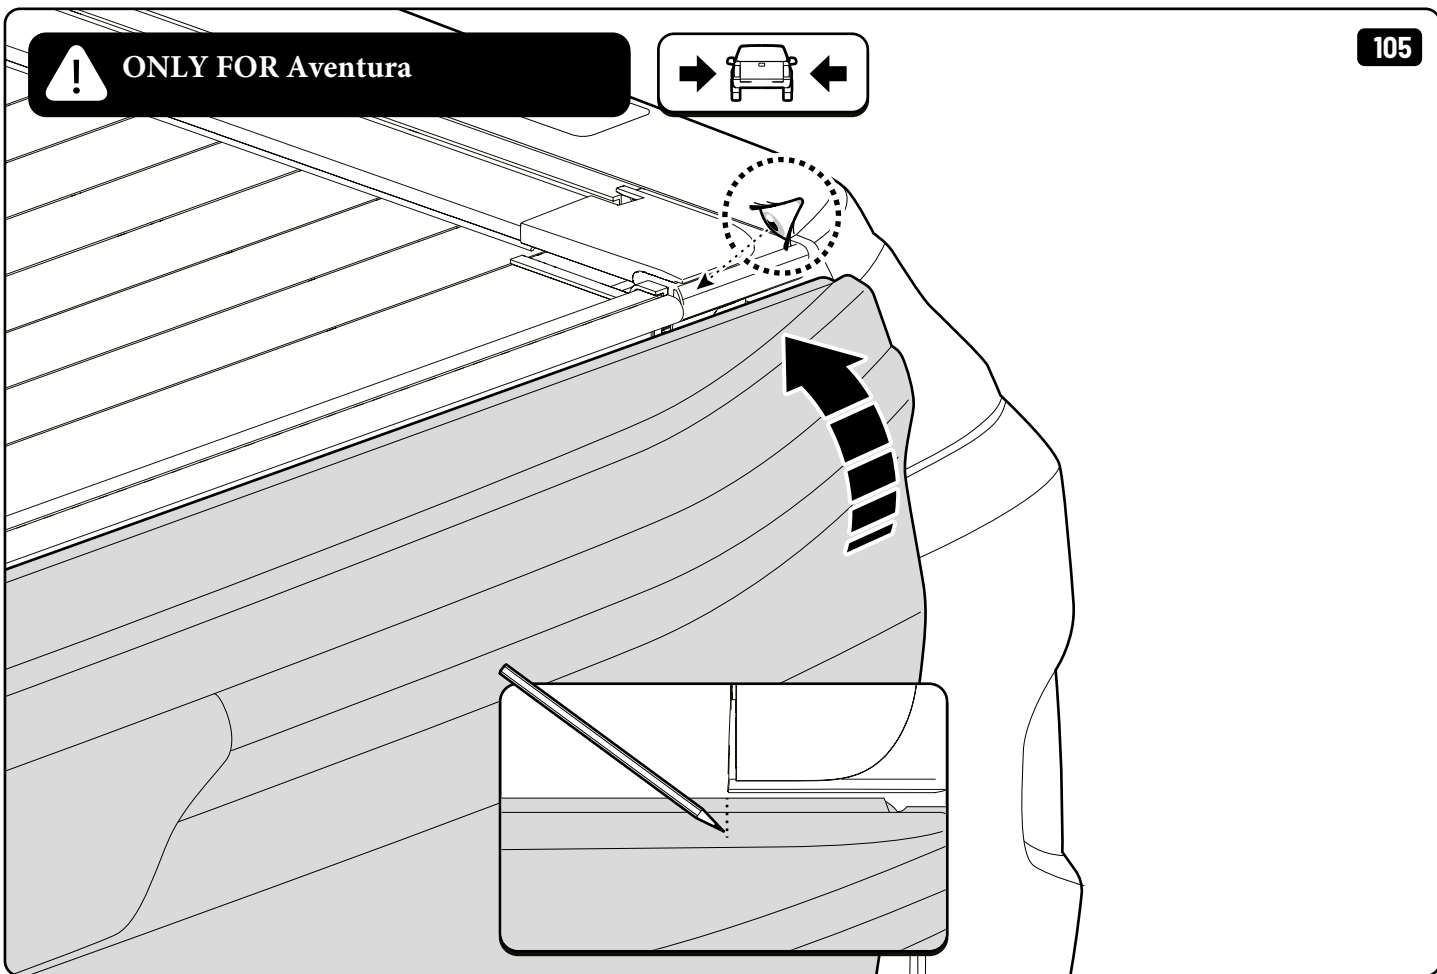


**!** ONLY FOR Aventura




106

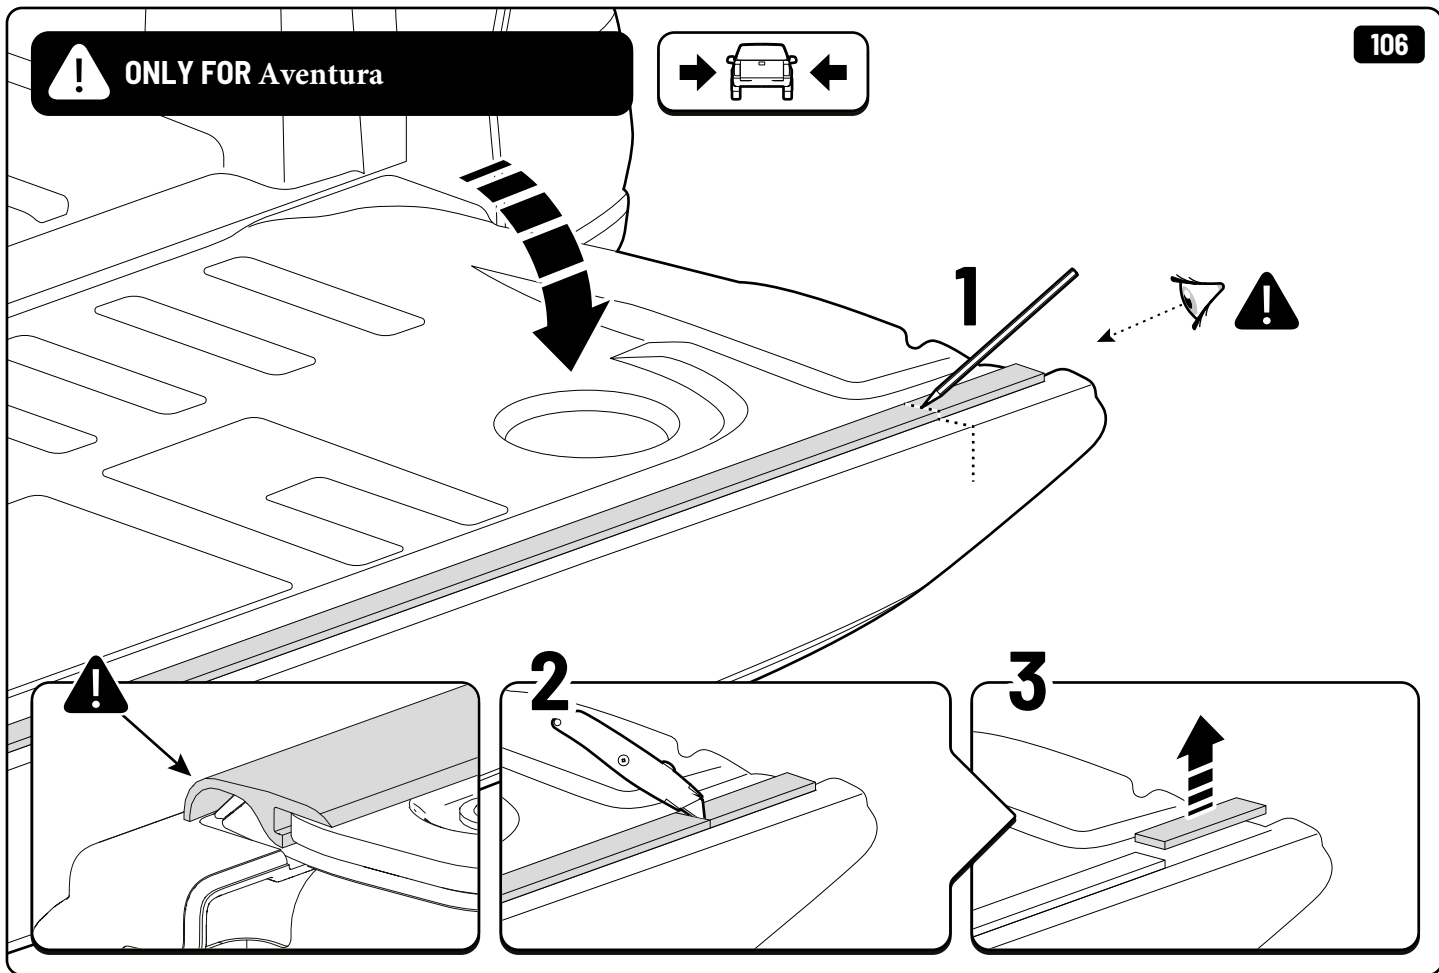

107

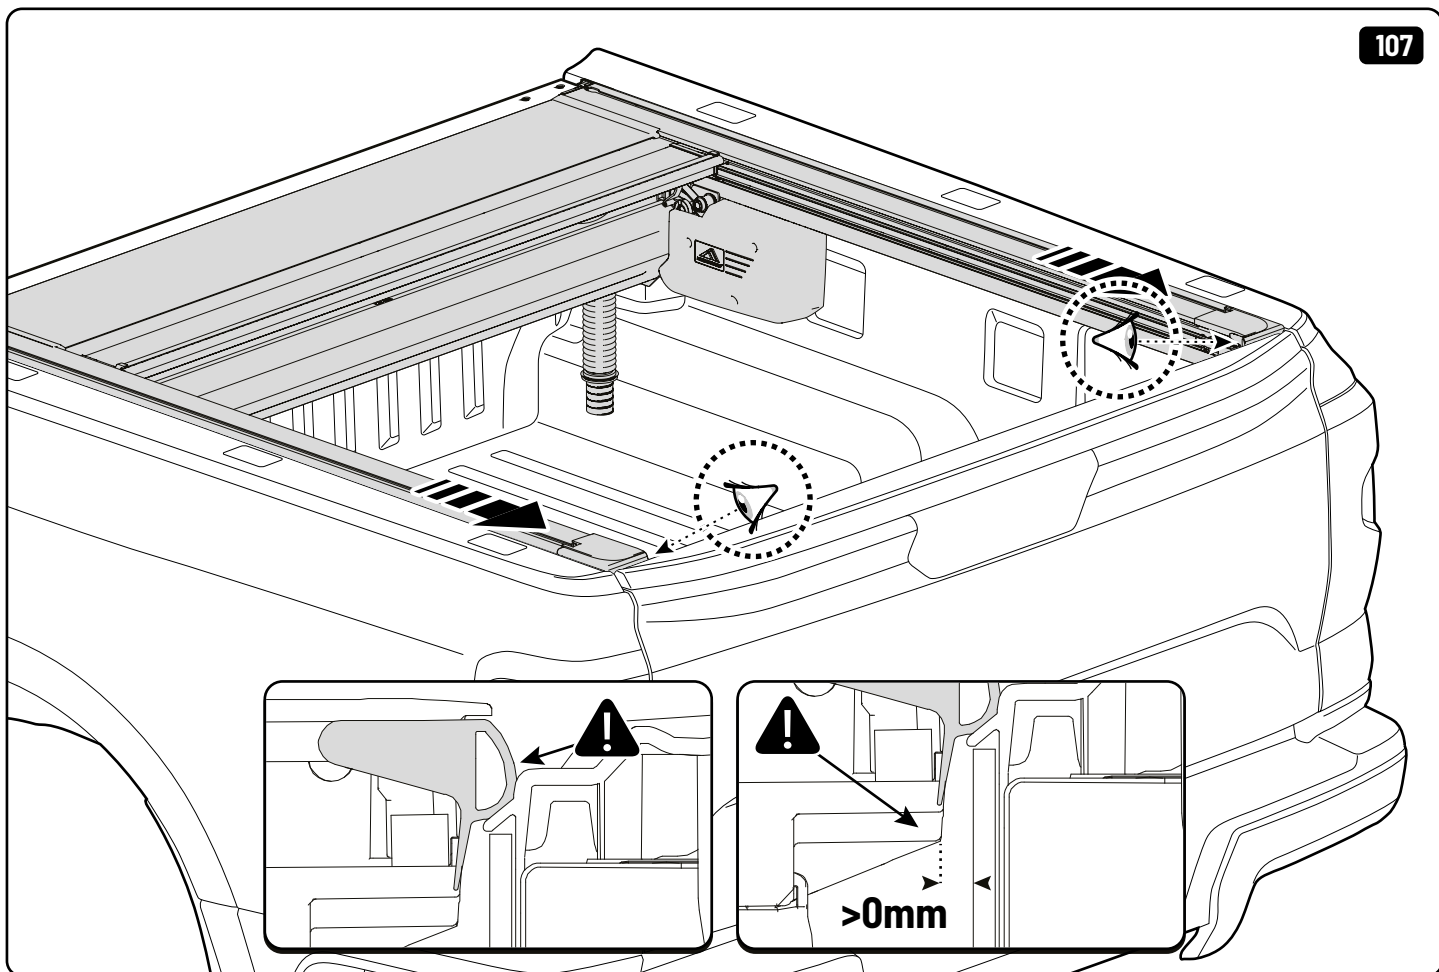





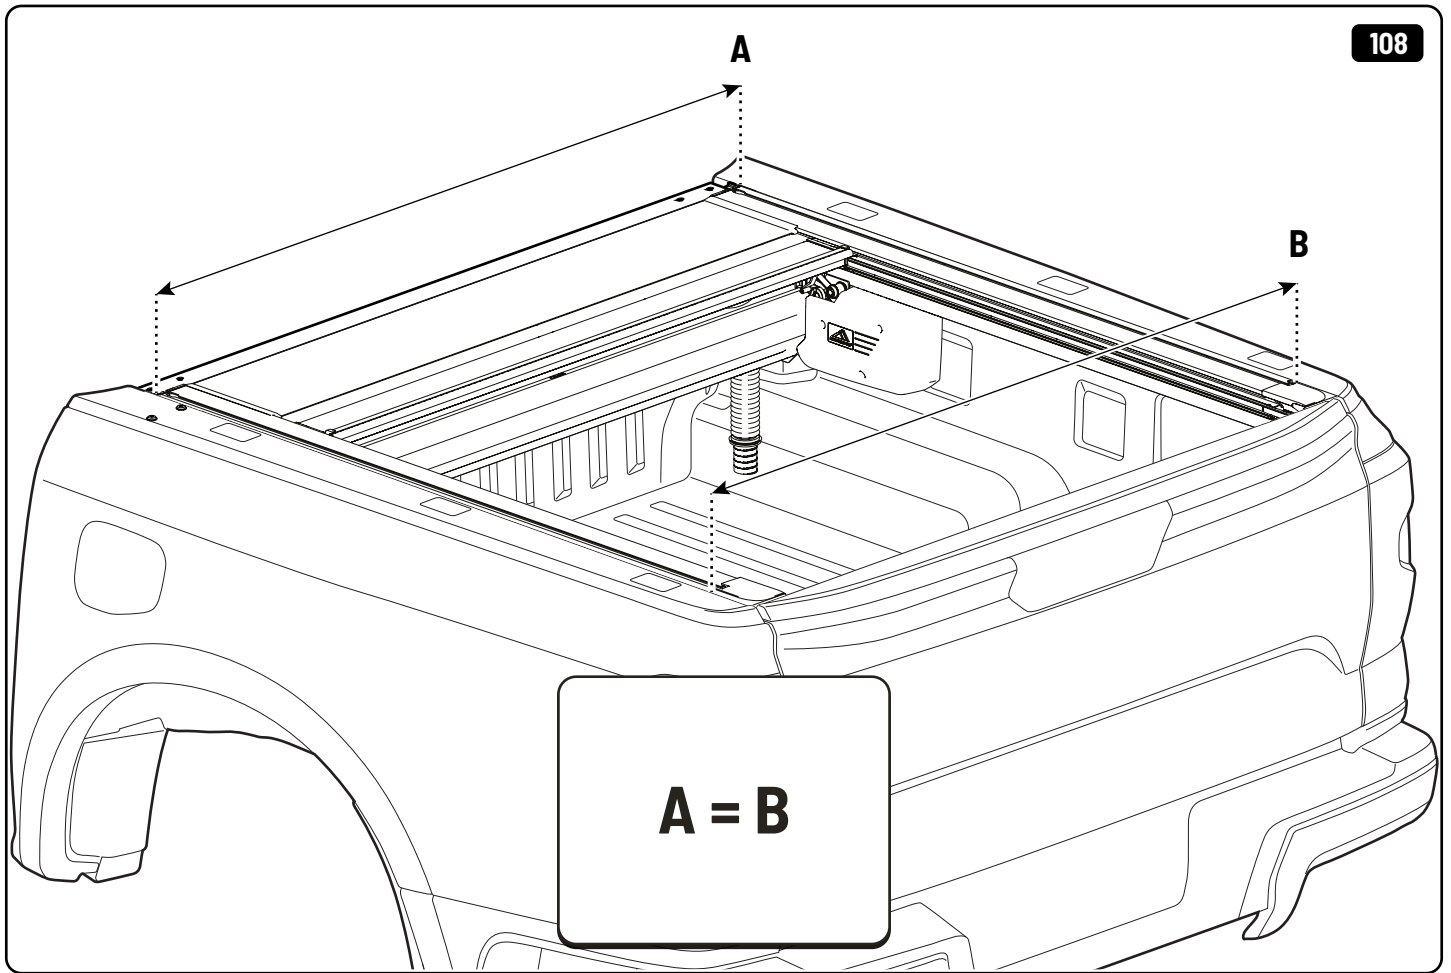

T30


10 Nm

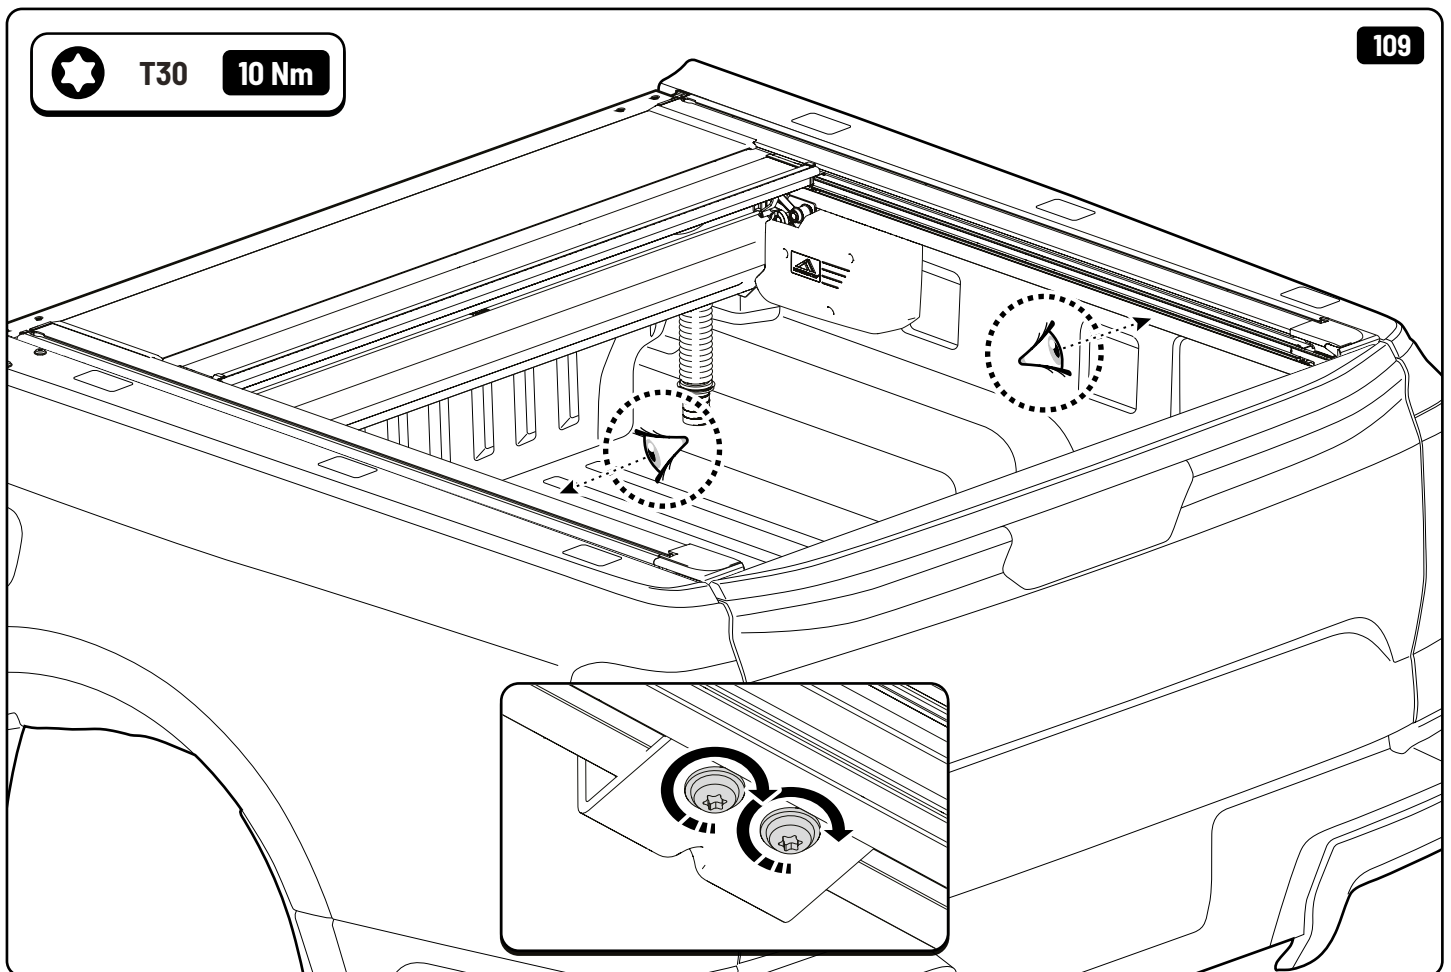

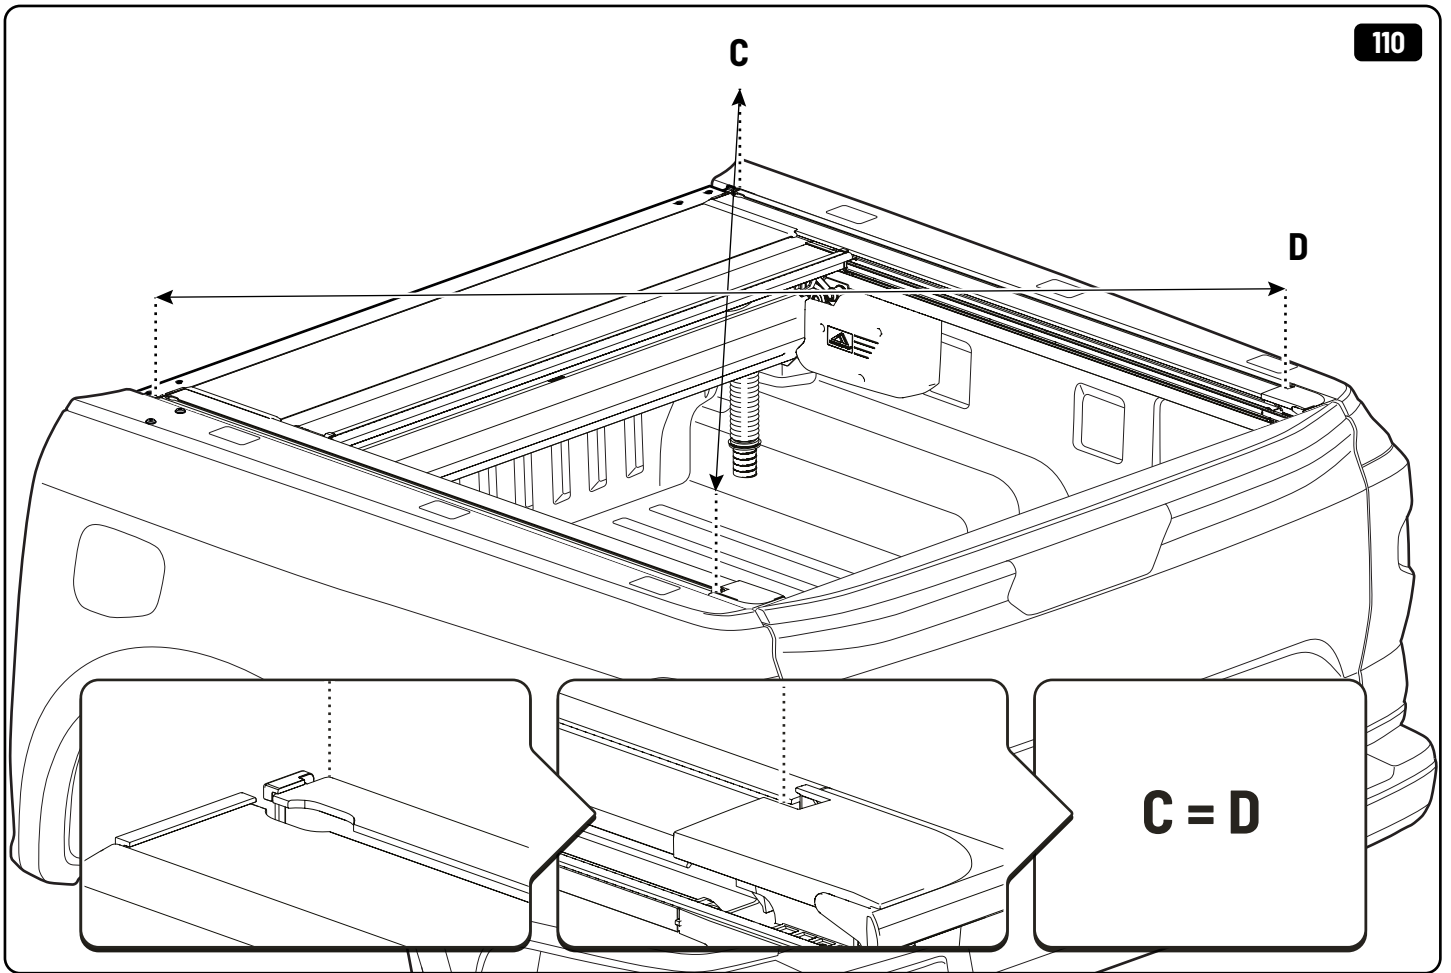


T30


4,8 Nm


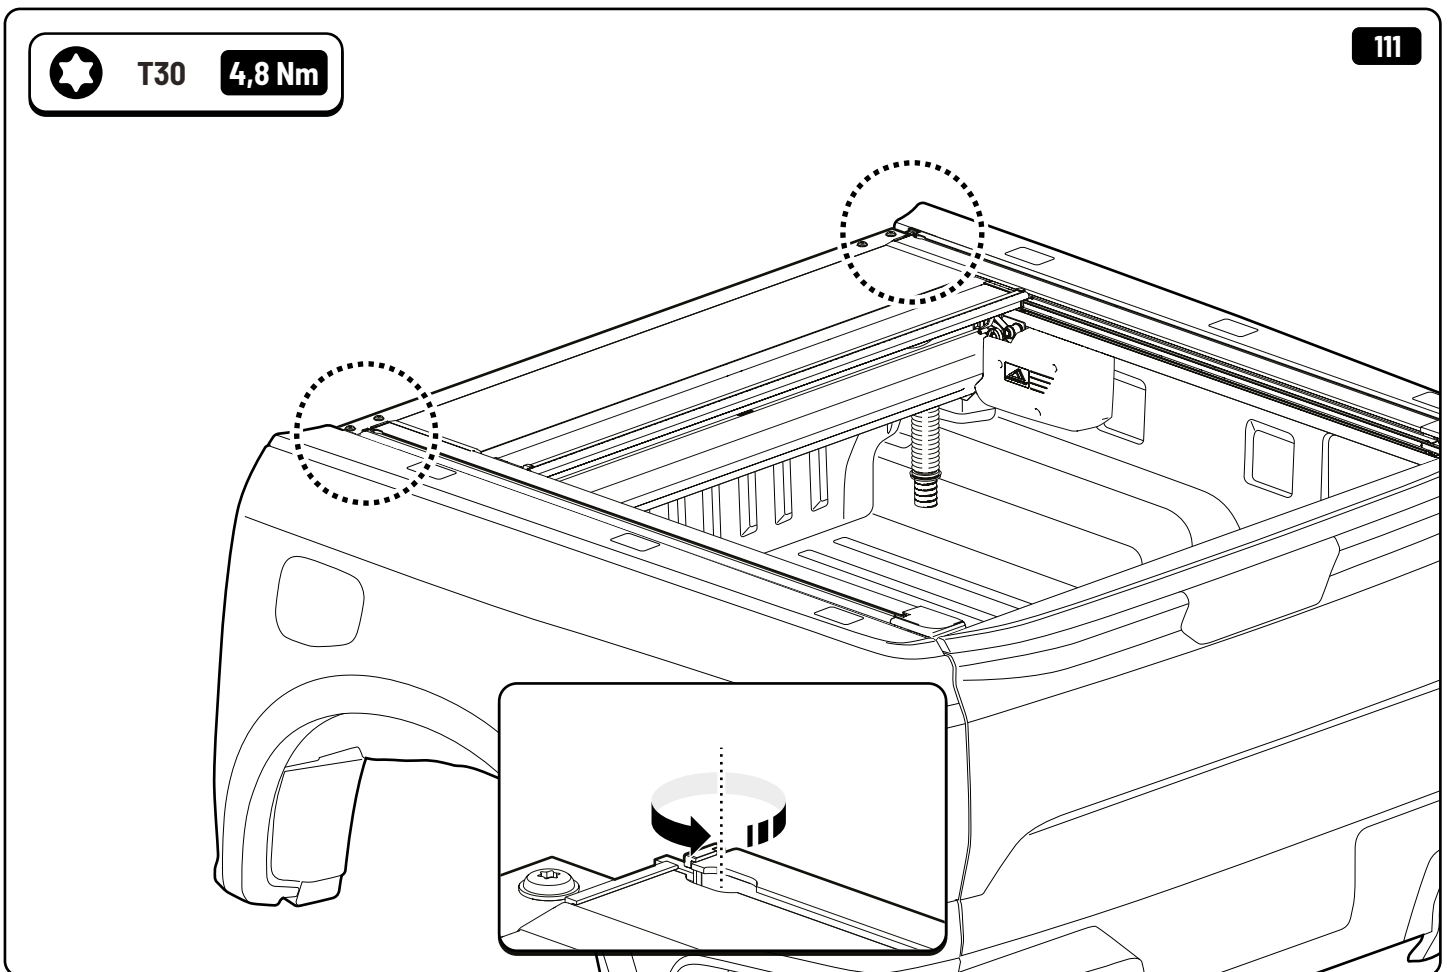




 T30 10 Nm




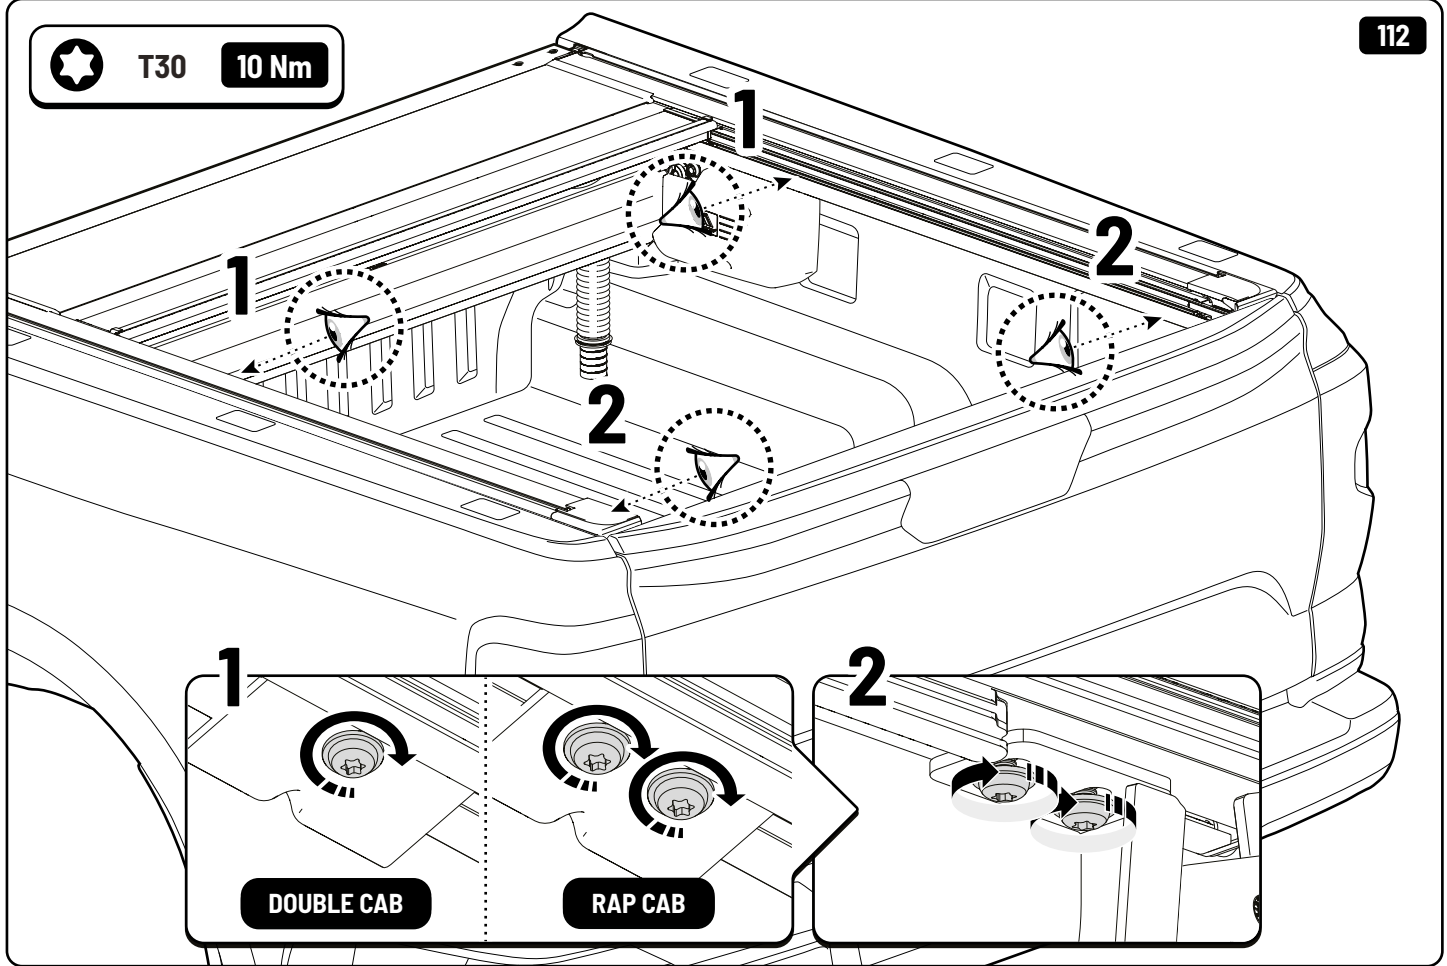


 T40 25 Nm

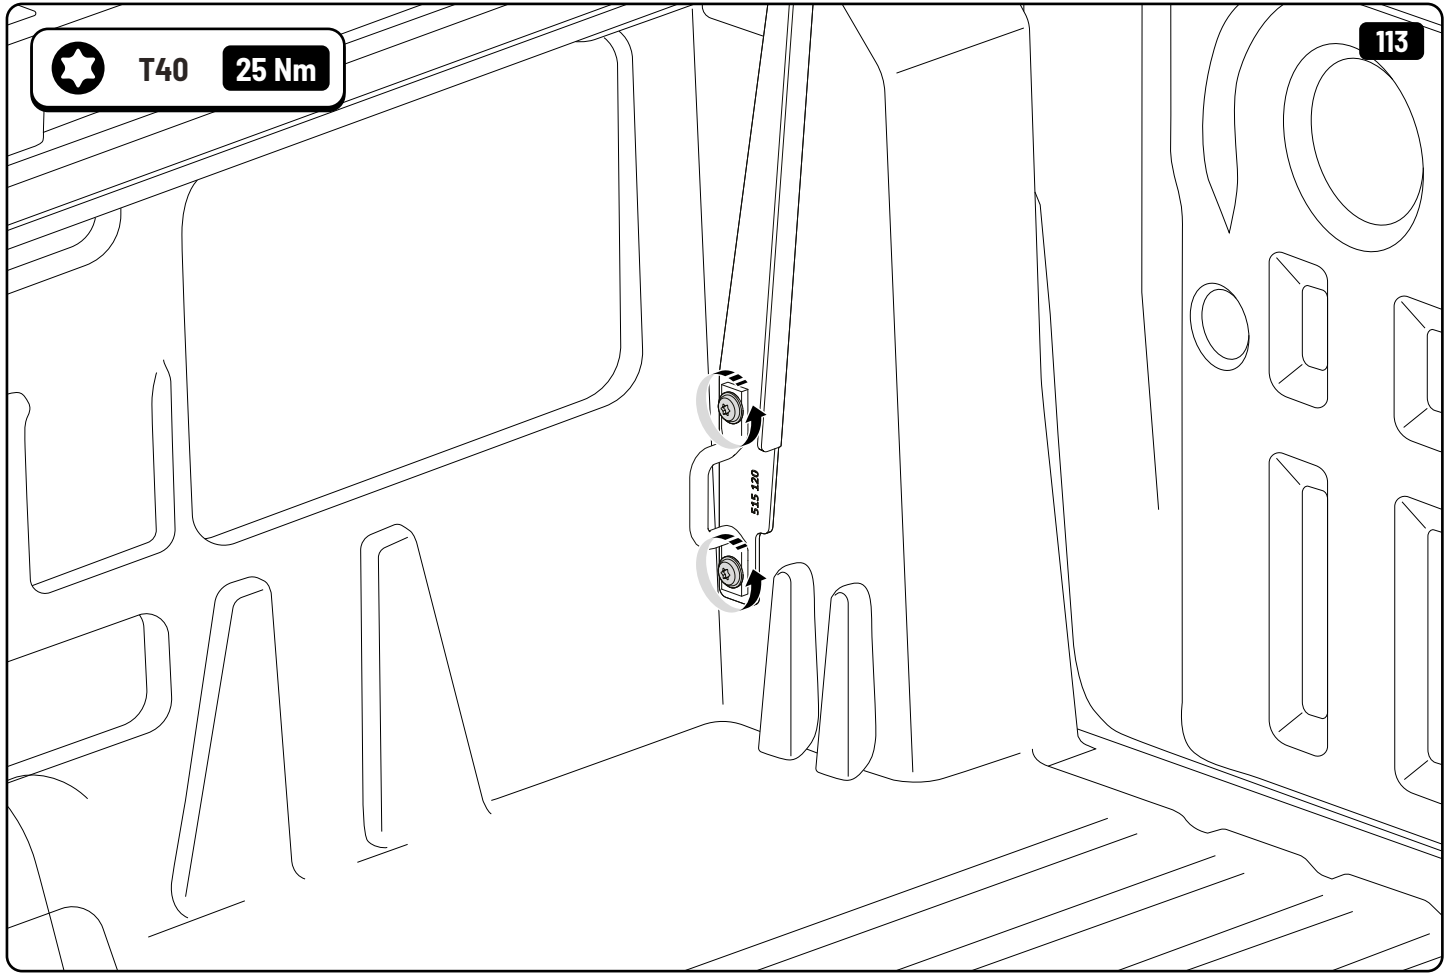

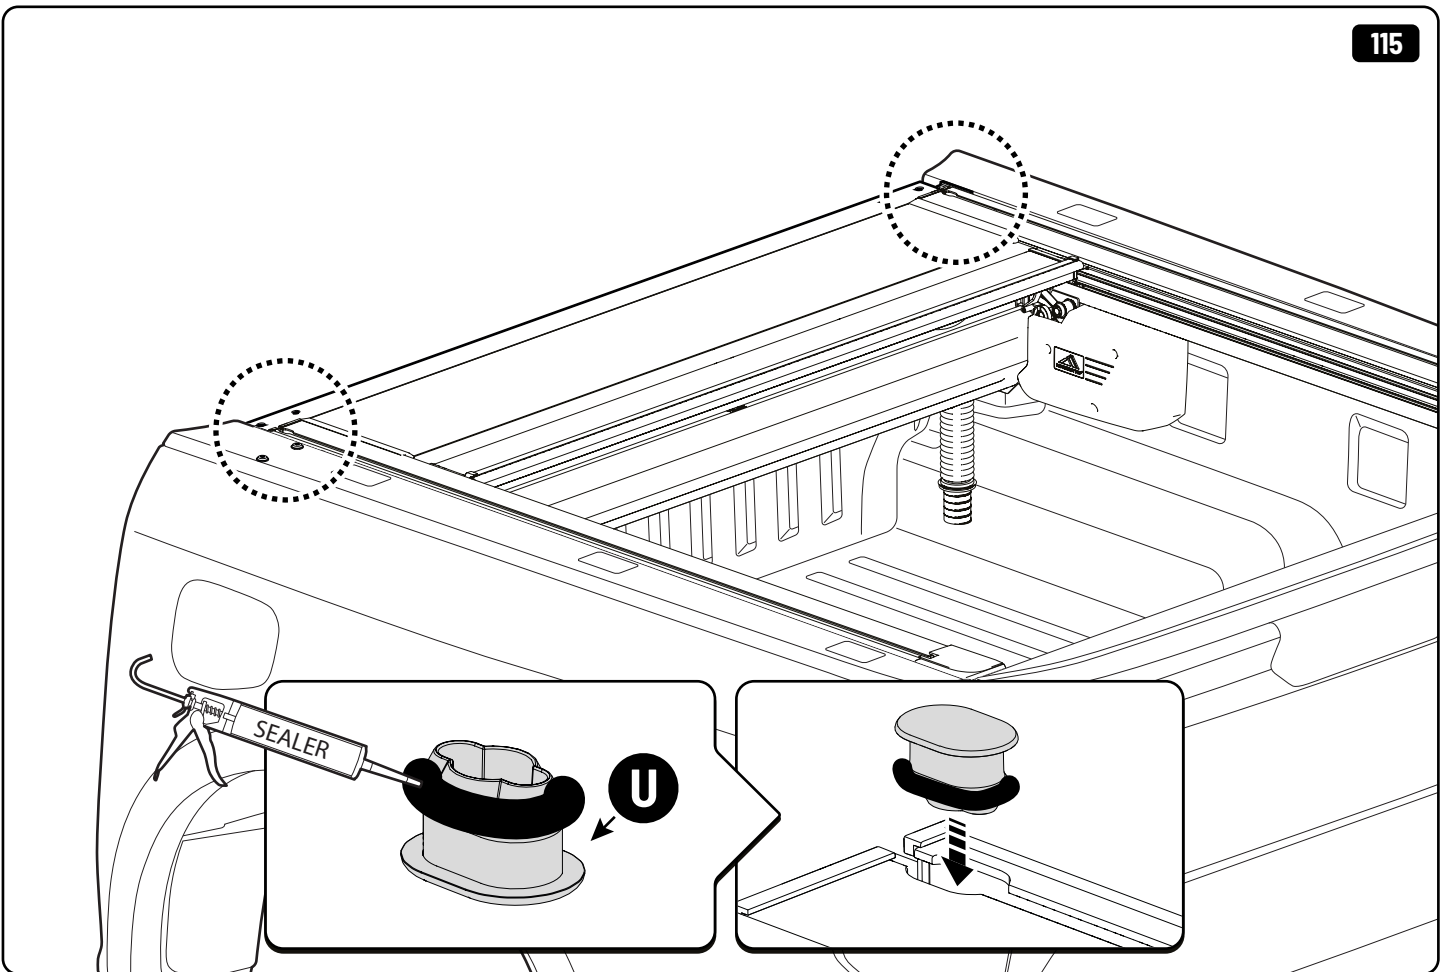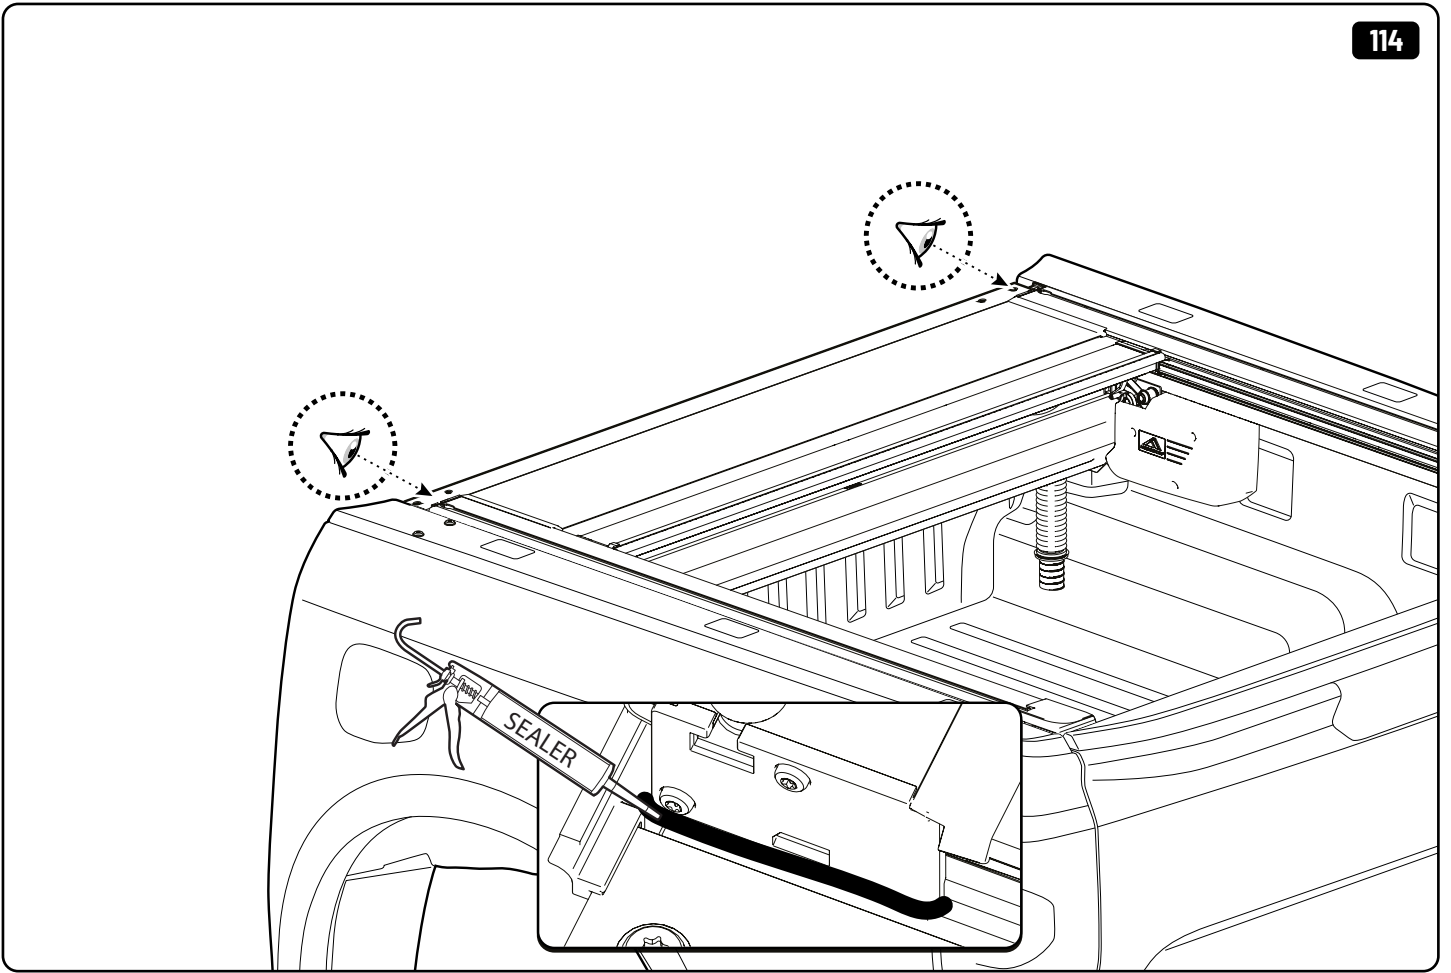


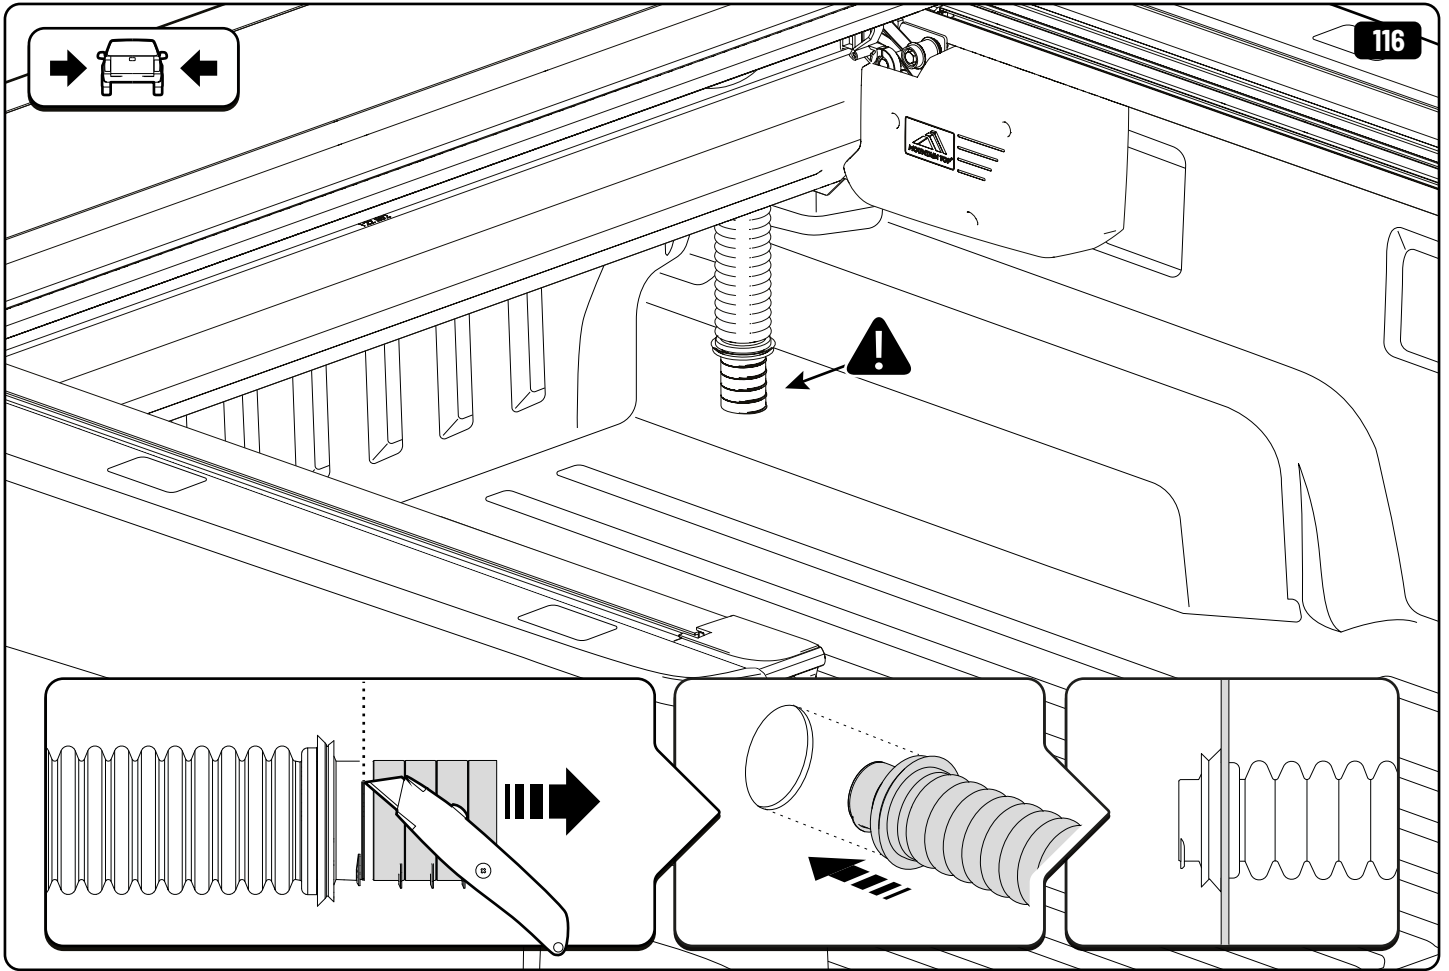

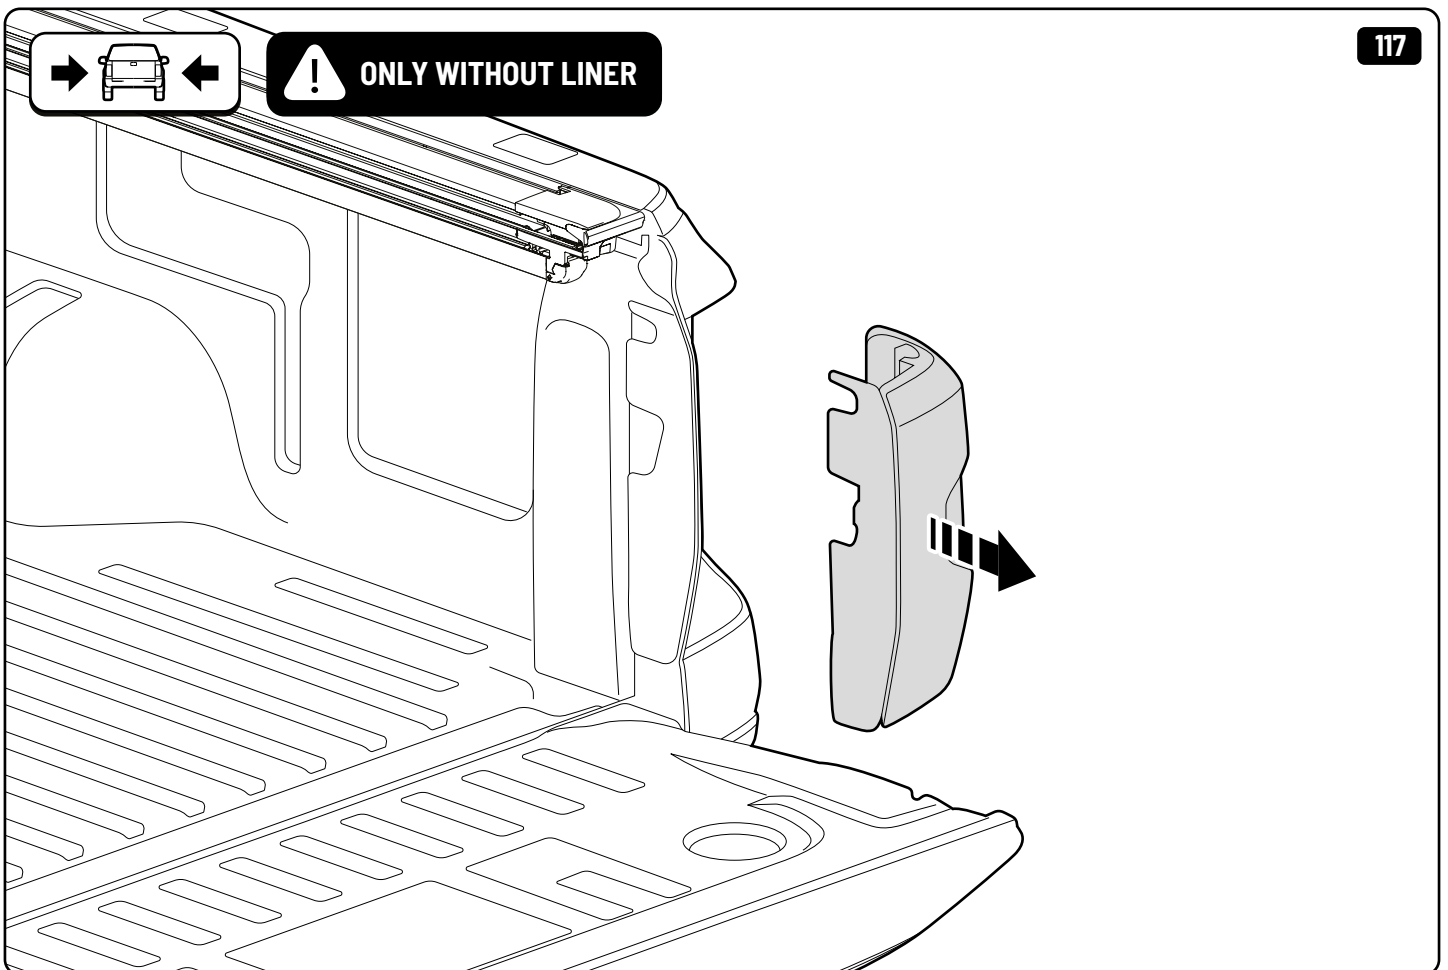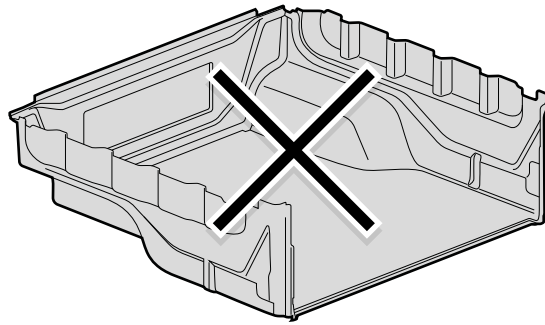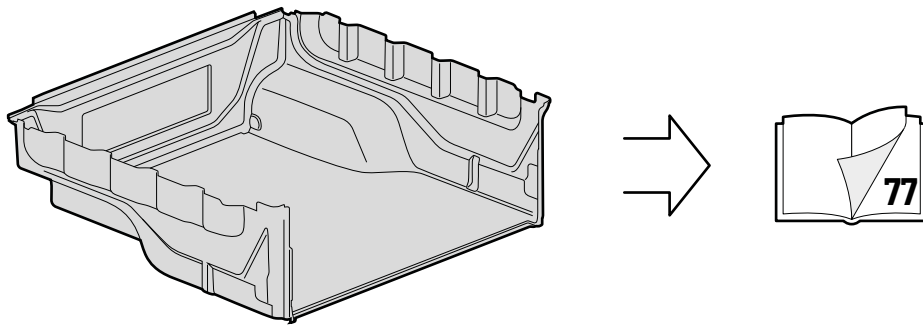




**!** ONLY WITHOUT LINER

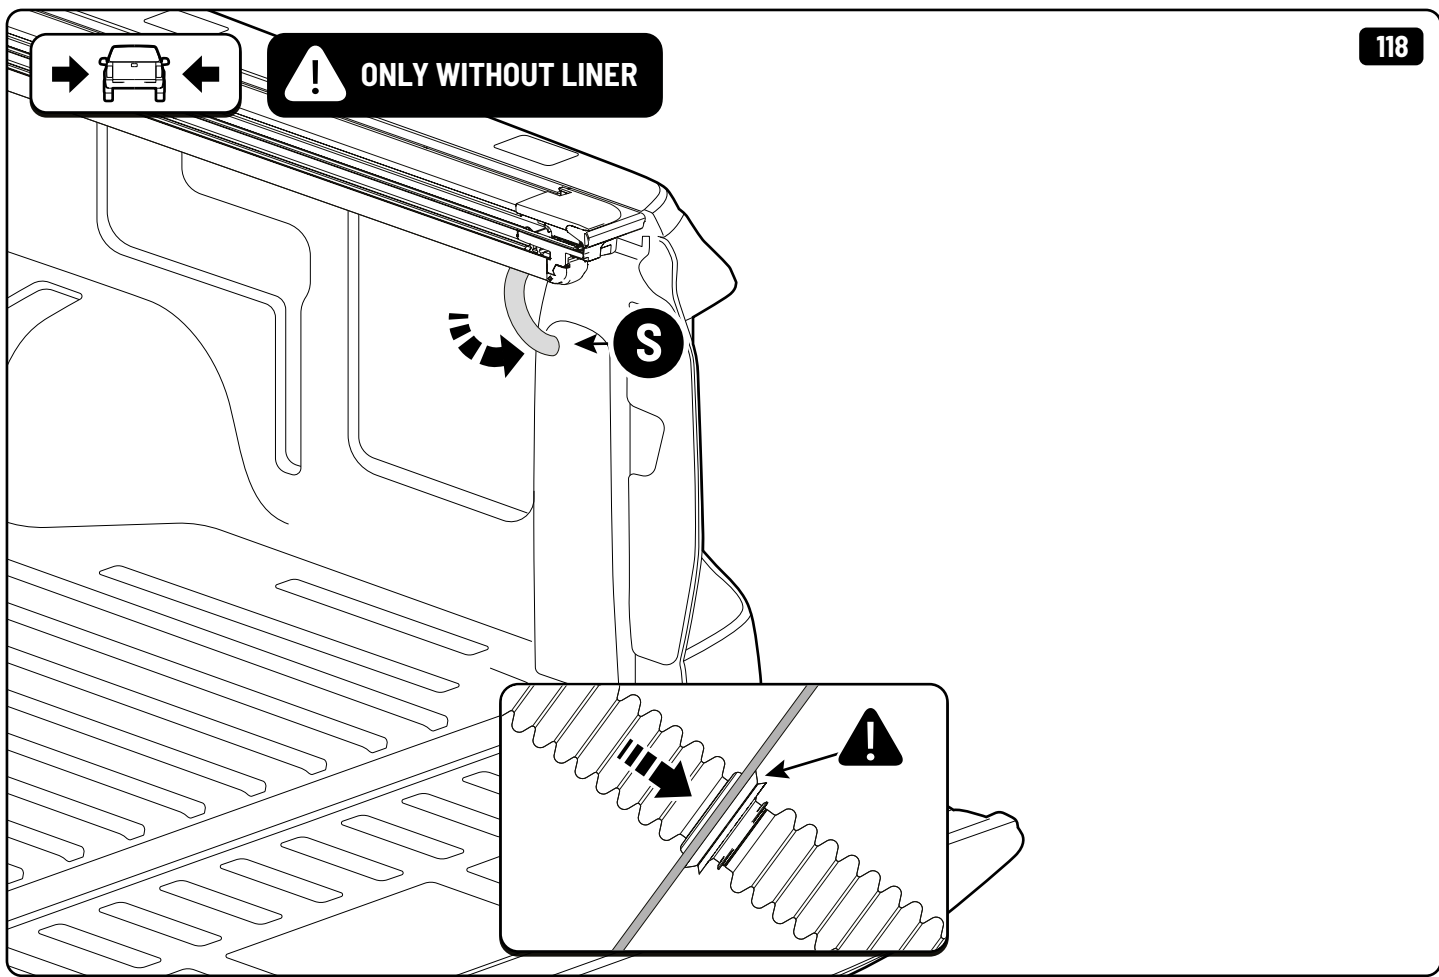



**!** ONLY WITHOUT LINER

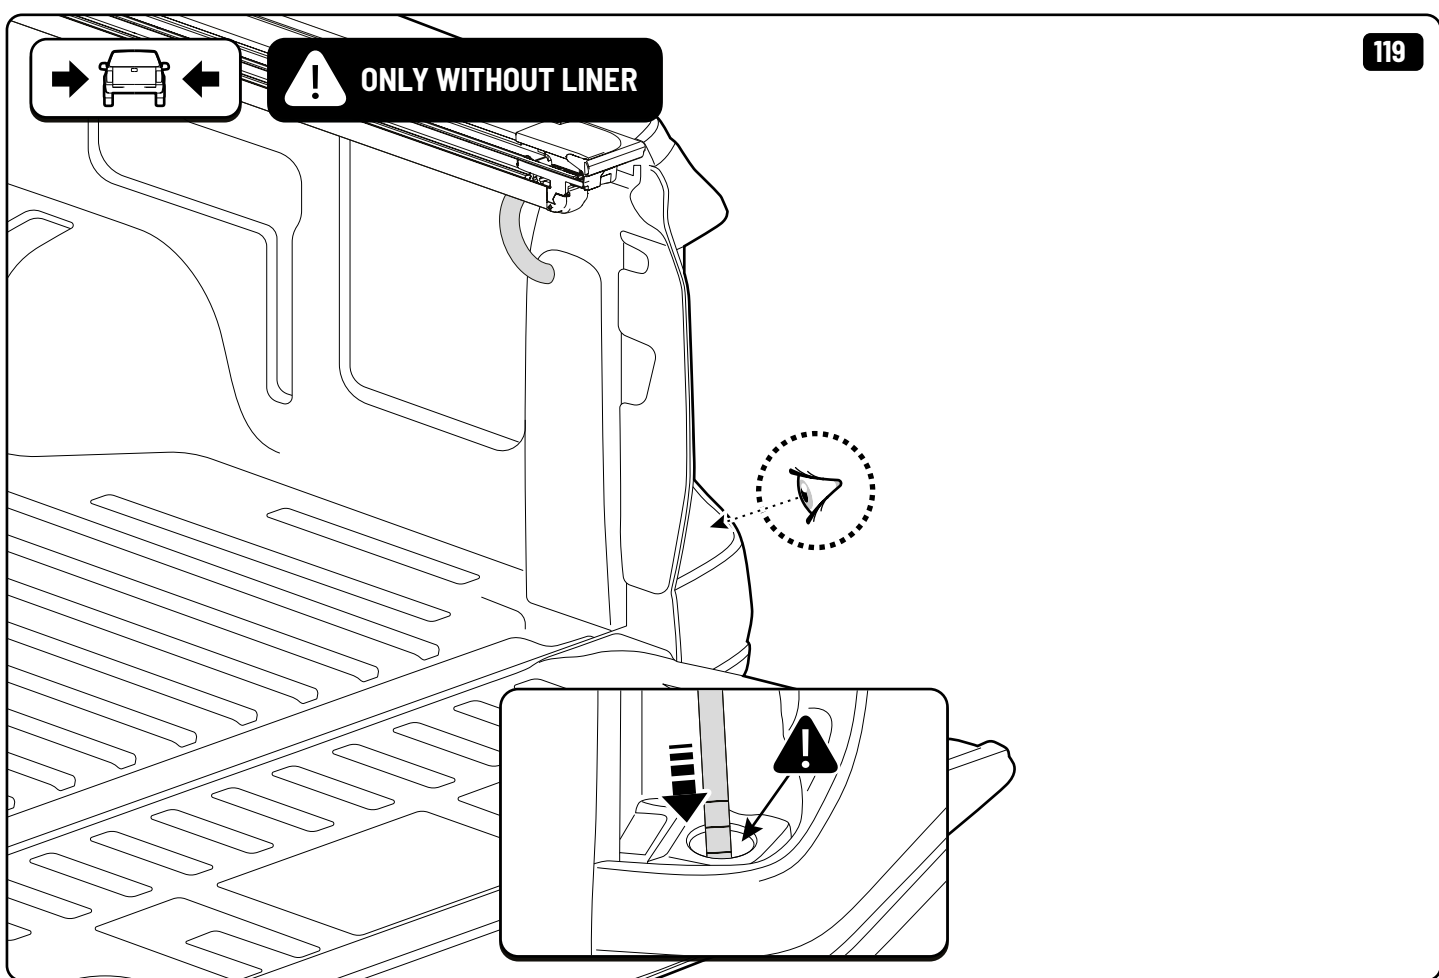










**! ONLY WITHOUT LINER**

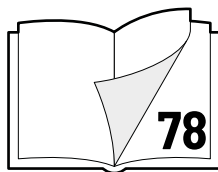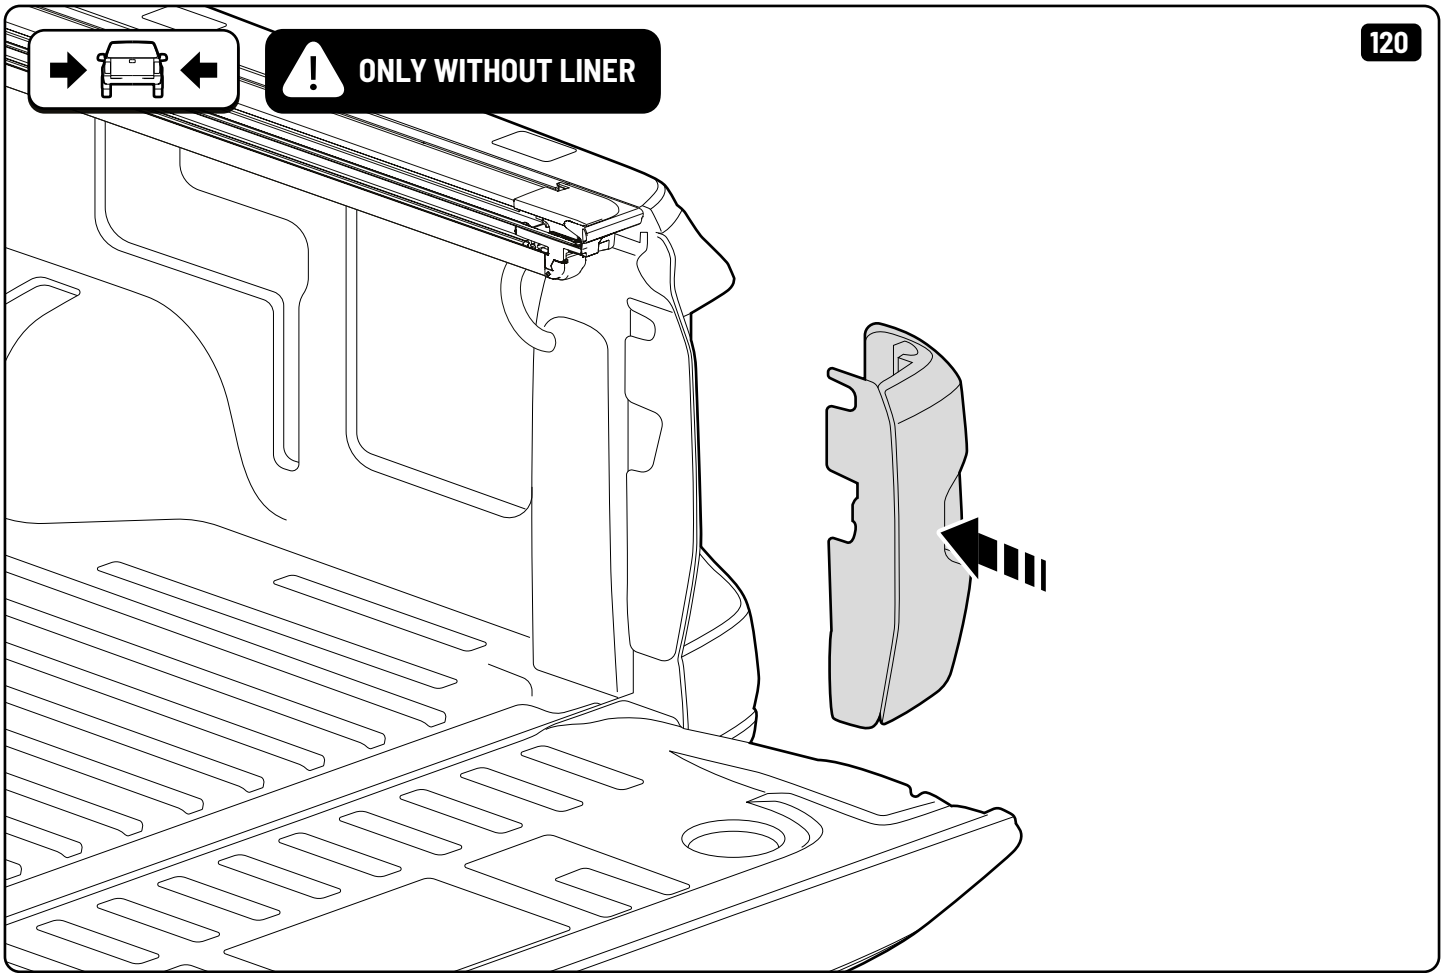




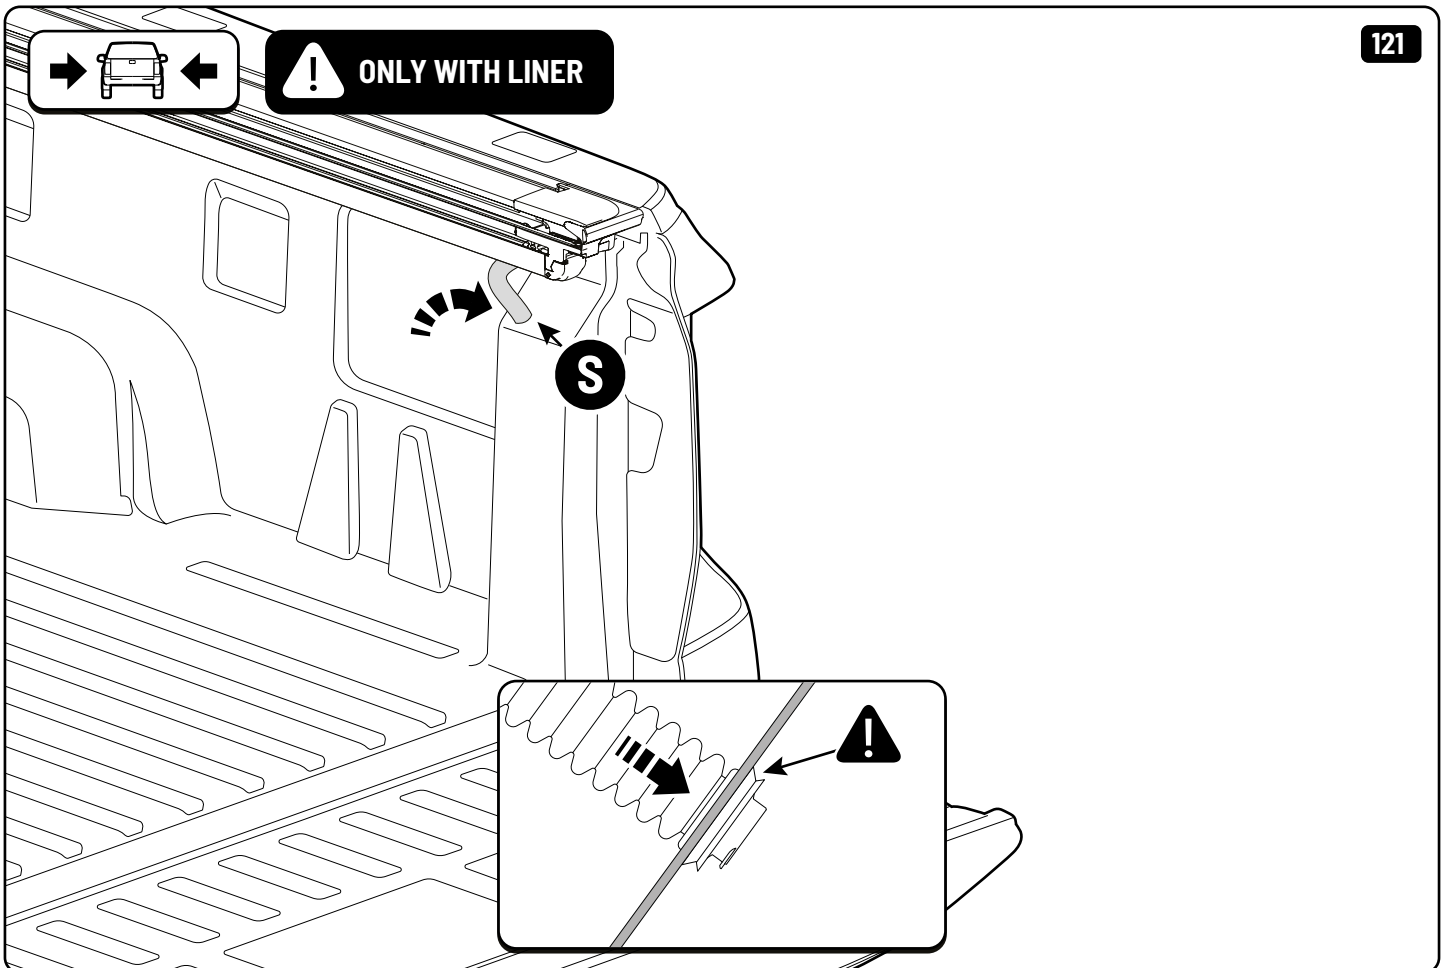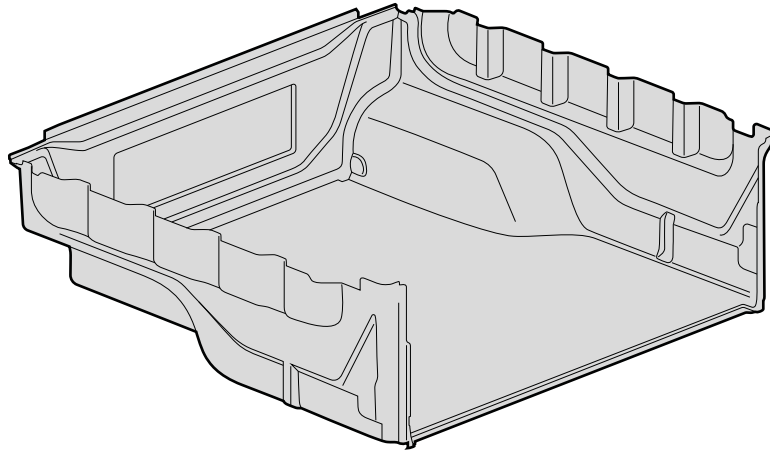

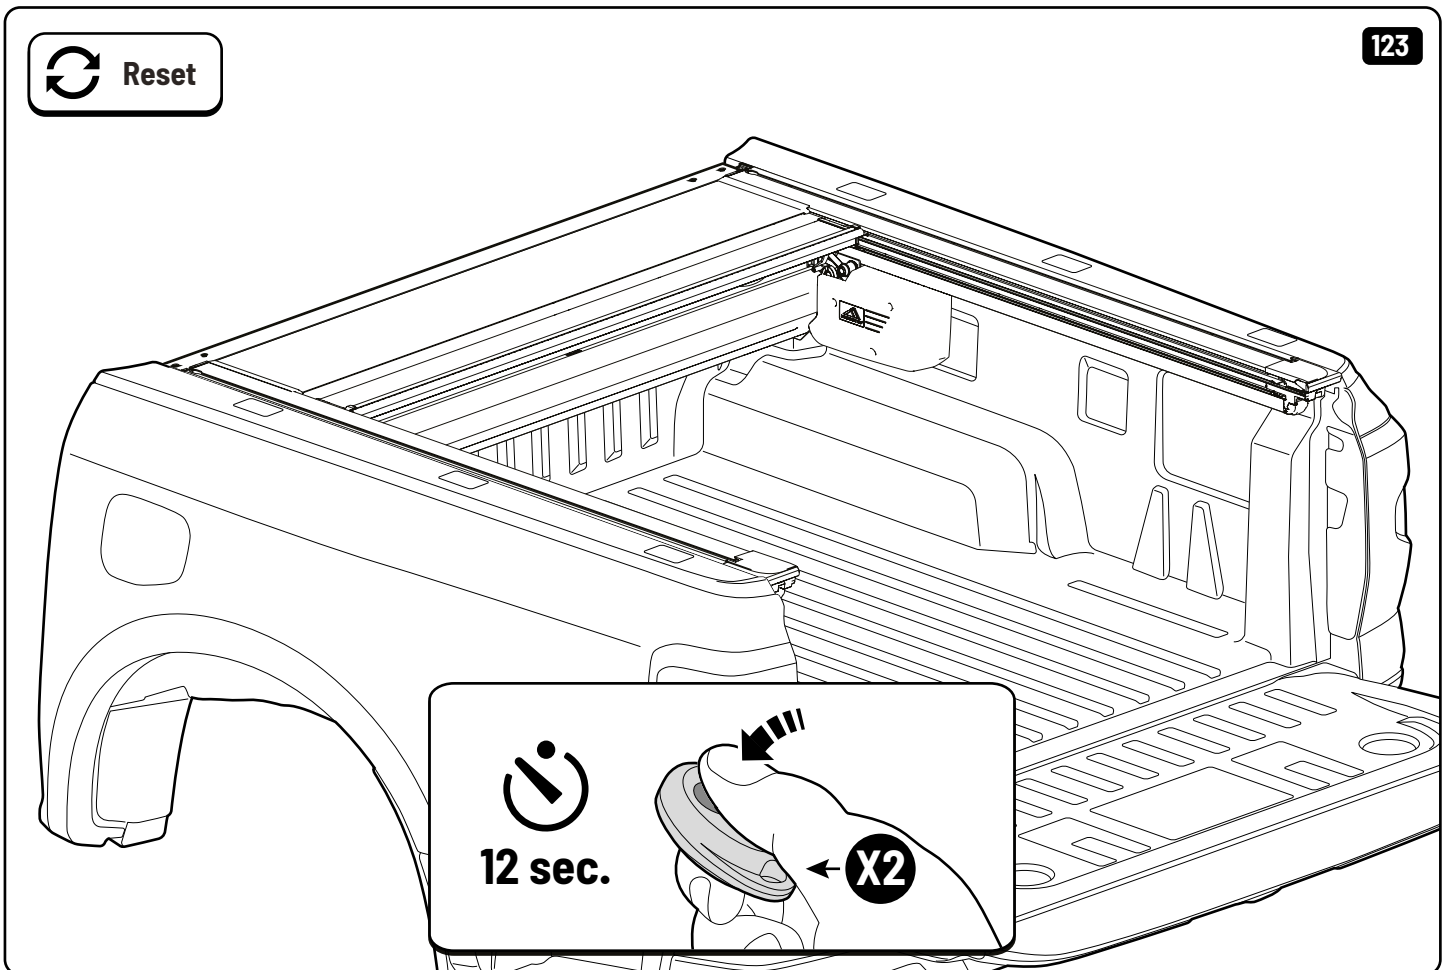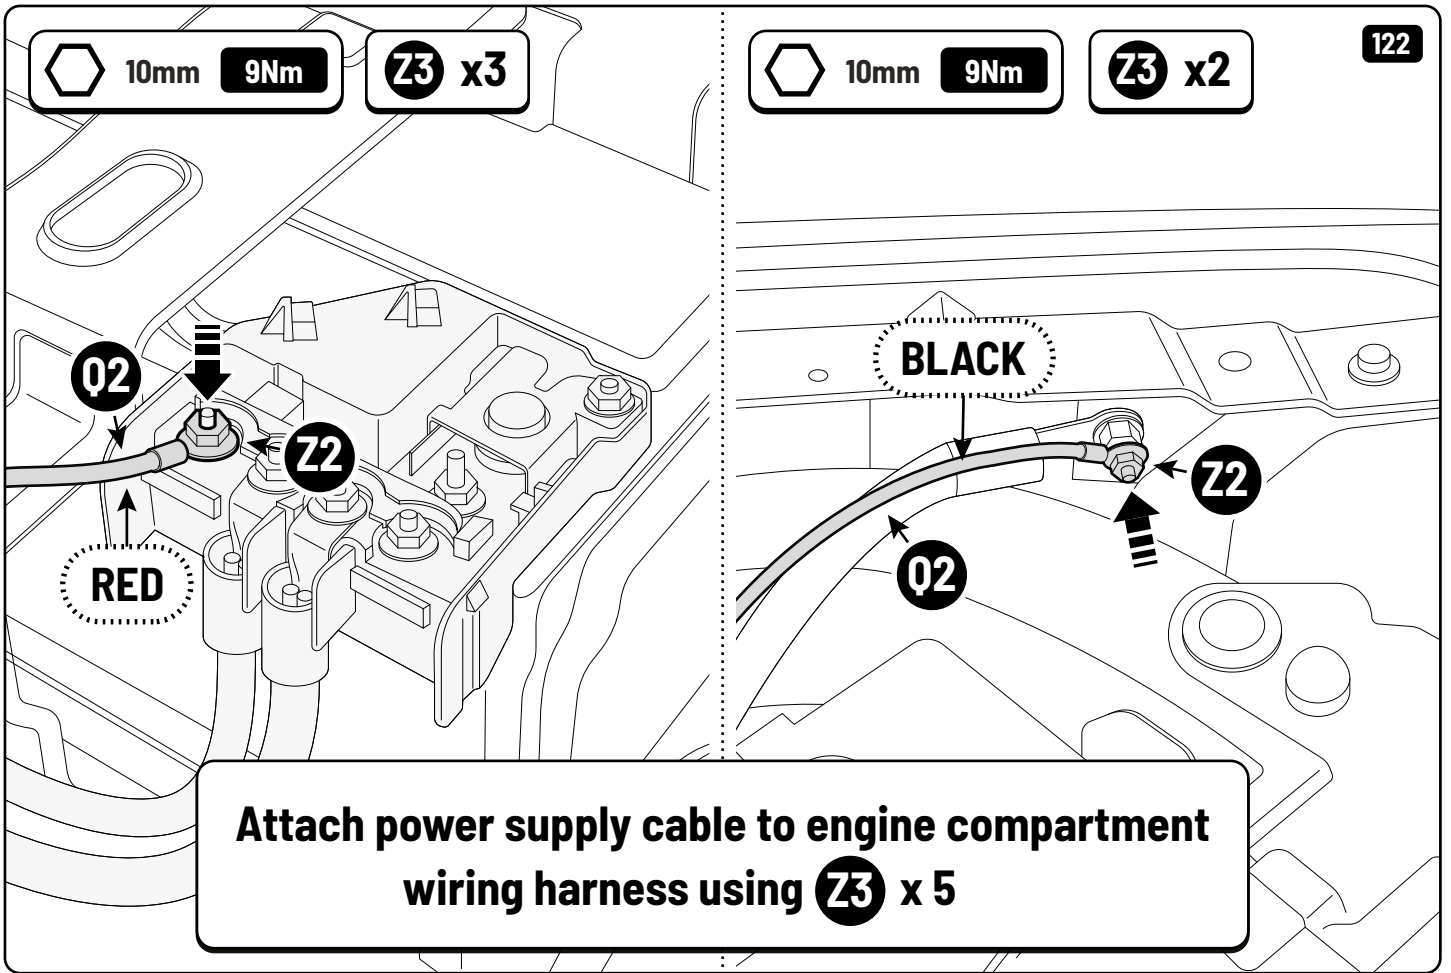



 Reset

124

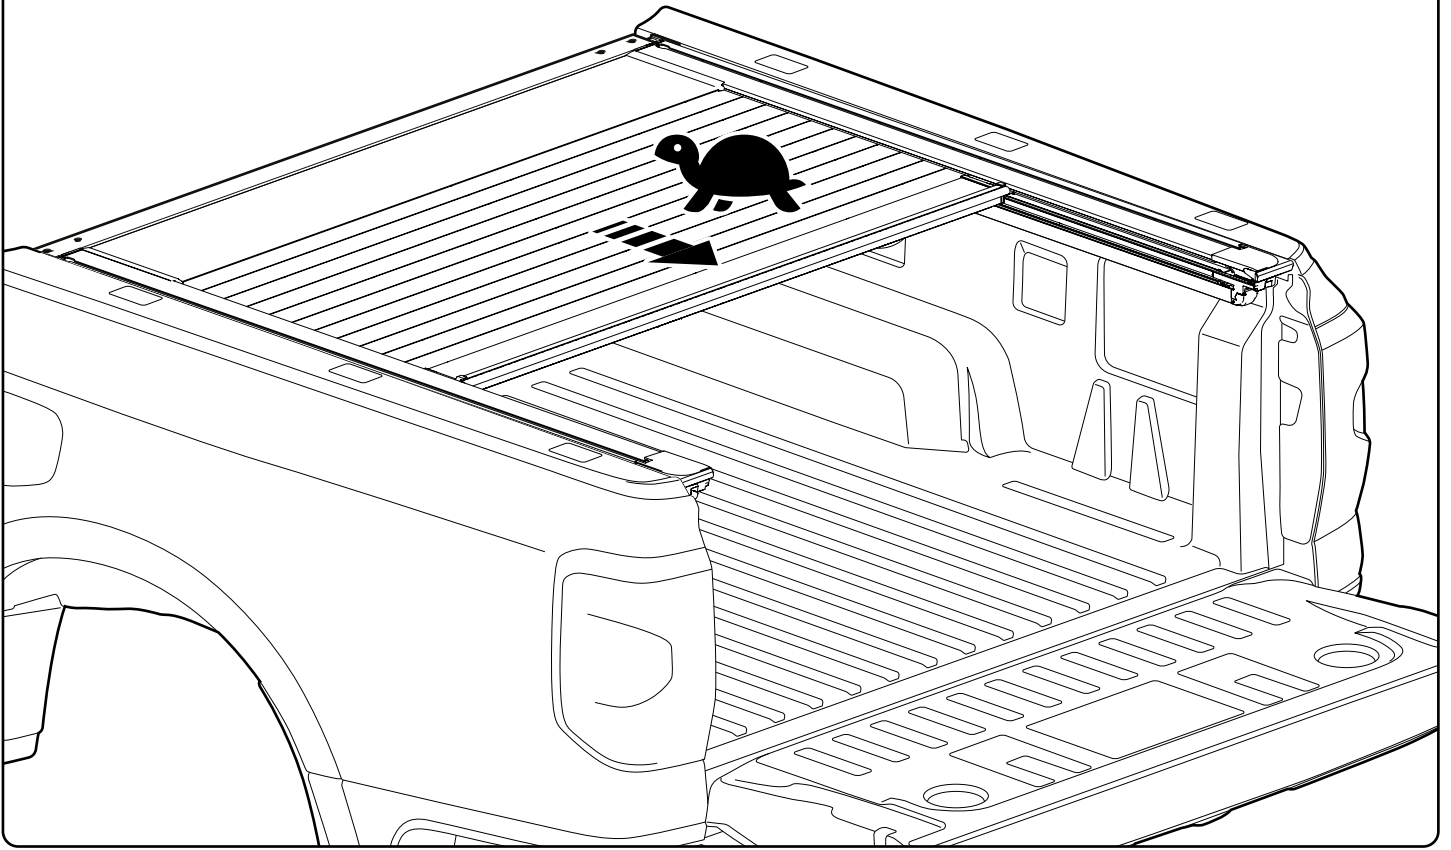

125

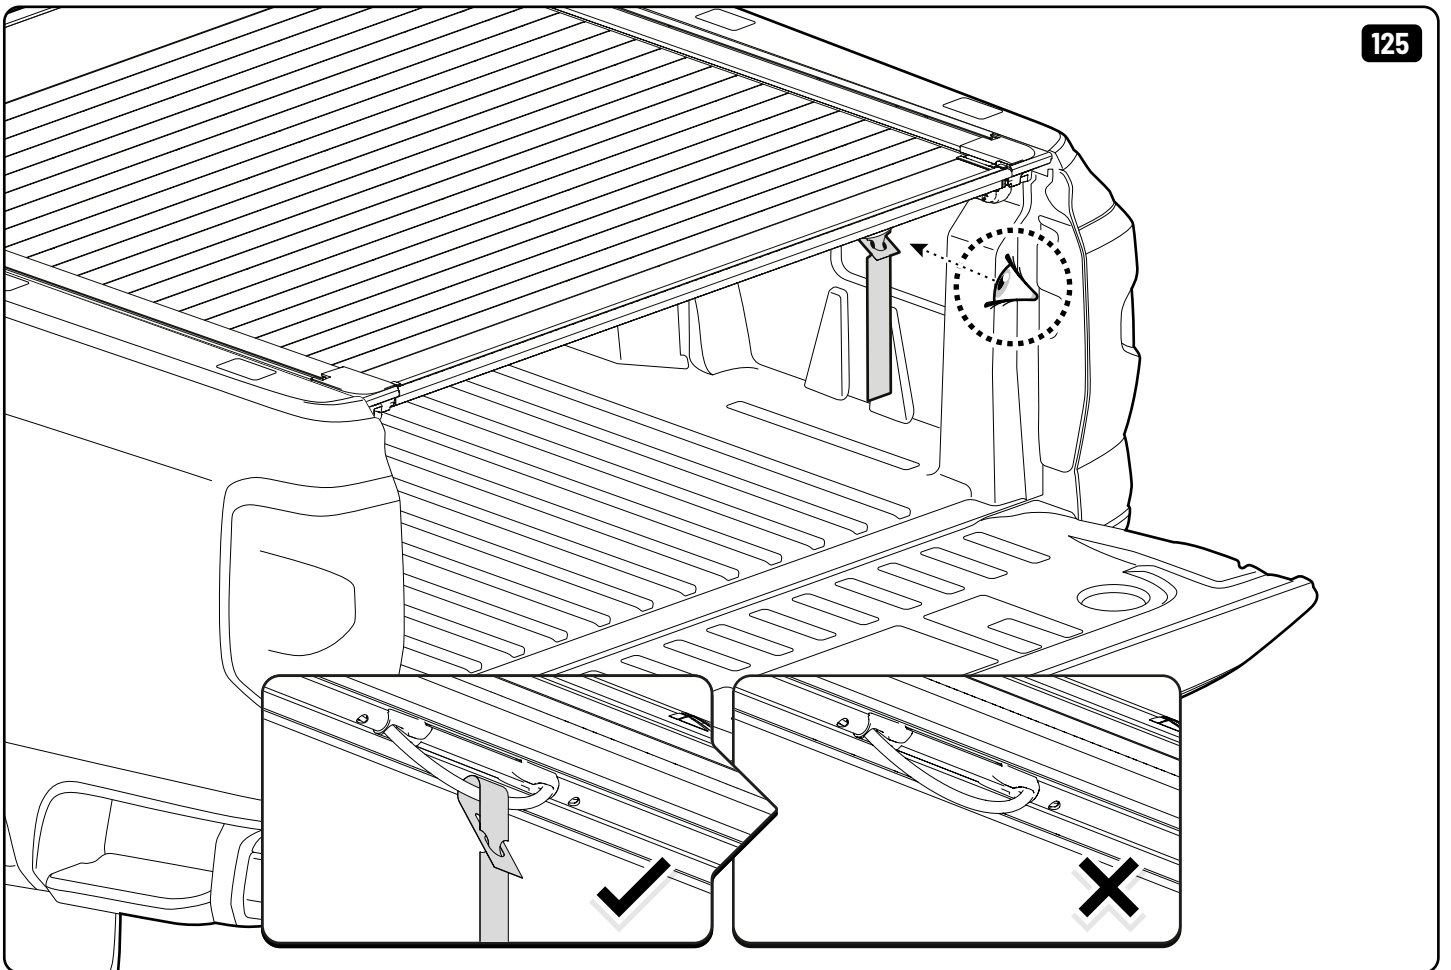

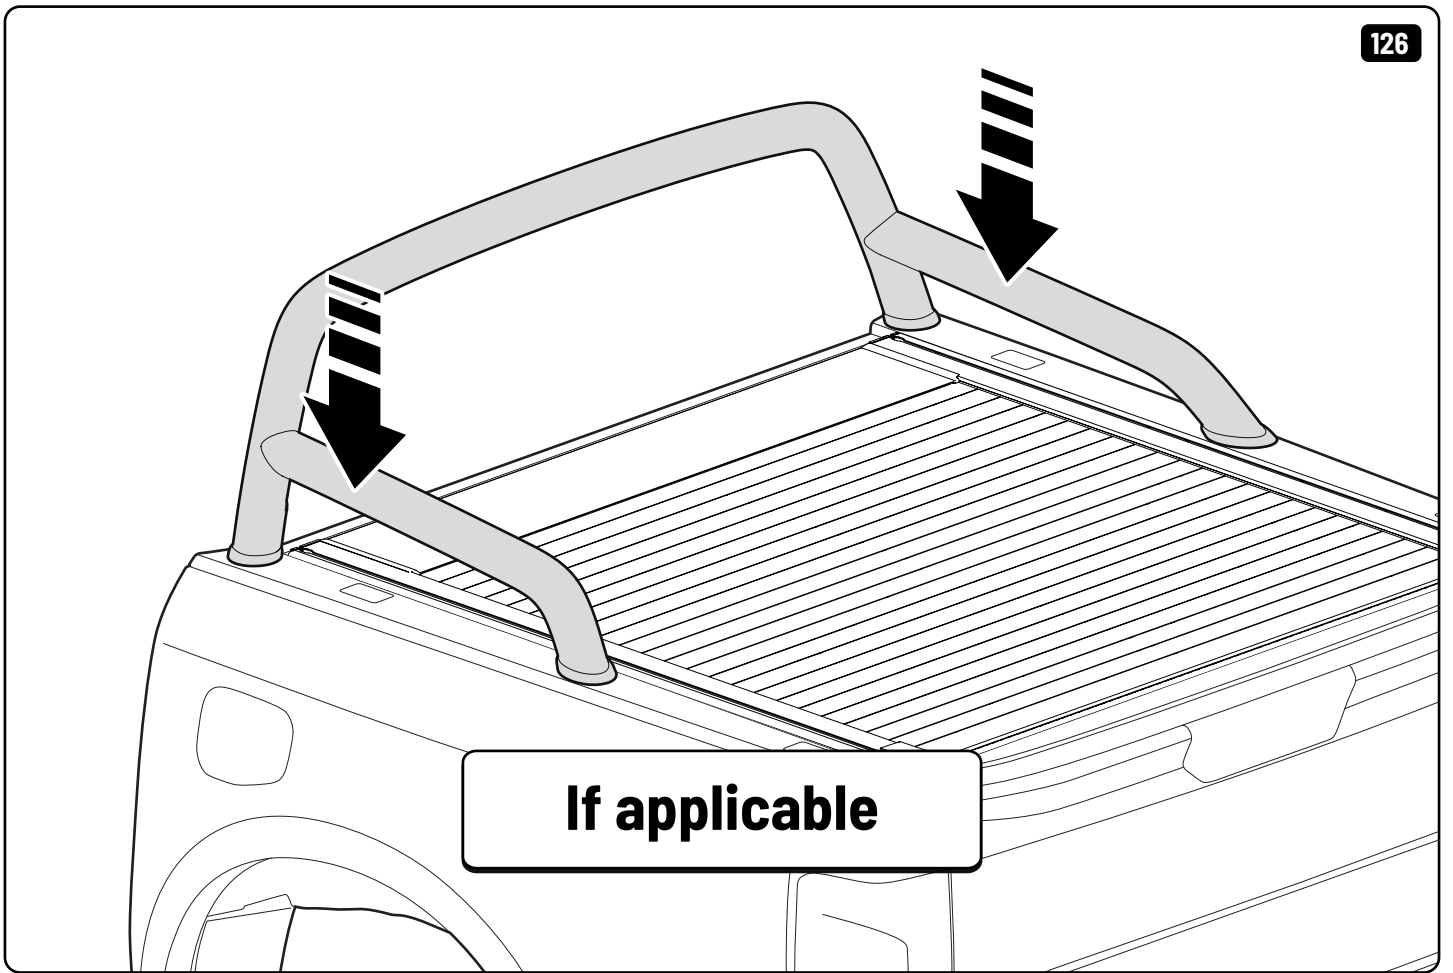

**If applicable**



Steps	Page	Done by
Mounting gliding rail in canister	18-19	
Holes for drain	33-36 / 38-42	
Width + Cross measurement	69+70	
Tightening bracket screws	69-71	
Mounting drain	73+74-76 / 77	
Calibrate EVOe	78-79	









Customer Service +45 4810 2950 (08:00 - 16:00 CET)  
Support info@mountaintop.dk  
Website www.mountaintop.dk  
Address Pedersholmparken 10, 3600 Frederikssund, Denmark

Part number (s)	Model / Year	Cab type (s)	Installation time	Weight
EVOe FO10 HB02	Ford Ranger/ 2022 ->	Double Cab	2 hour (s)	33 kg
EVOe FO11 HB02	Ford Ranger/ 2022 ->	Rap Cab	2 hour (s)	40 kg

<b>GB</b> Installation manual	<b>S</b> Monteringsanvisning	<b>D</b> Einbauanleitung
<b>SF</b> Asennusohje	<b>E</b> Instrucciones de montaje	<b>CZ</b> Návod k instalaci
<b>F</b> Notice de montage	<b>H</b> Szerelési utasítás	<b>I</b> Istruzioni di montaggio
<b>PL</b> Instrukcja montażu	<b>P</b> Instruções de instalação	<b>GR</b> Οδηγίες Εγκατάστασης
<b>NL</b> Installatie-instructies	<b>RUS</b> Инструкция по установке	<b>DK</b> Monteringsvejledning
<b>TR</b> Montaj Talimatı	<b>N</b> Monteringsveiledning	<b>RO</b> Instructiuni de instalare