Assembly Manual PETIT PUK for JARDIN BUNK BED



Congratulations with your PETIT PUK BED!

Now it's assembly time. Please make sure to check these elements prior to starting:

- is everything complete?
- are all pieces in good shape?
- good spirits and perhaps a partner in crime in your presence?
- ready to take a photo of your great work afterwards, to share it with us?
- ticked all boxes with yes? Ready, steady, gooo!

PS. A tip

You will find small green glue tubes with EU standards. Just slide a small amount of glue into the holes to receive the wood dowels. Glue is only neccesary at the level of beveled wood stud assemblies for perfect stability. It is not necessary to put glue on the bed base which would prevent you from dismantling the bed afterwards.





JARDIN STAIRS MIDDLE


 70x140
 70x150
 70x160
 70x170
 70x180
 70x190
 70x200


 80x140
 80x150
 80x160
 80x170
 80x180
 80x190
 80x200


 90x140
 90x150
 90x160
 90x170
 90x180
 90x190
 90x200

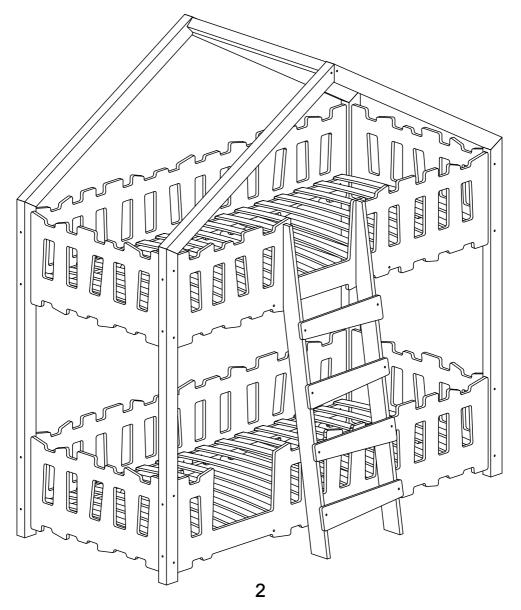


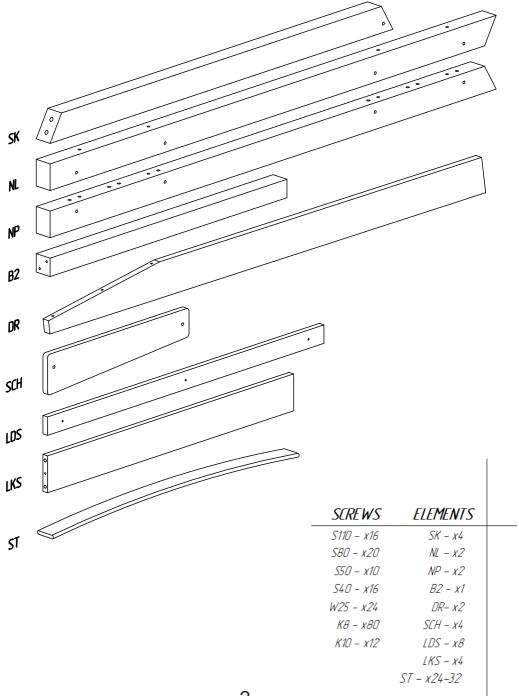


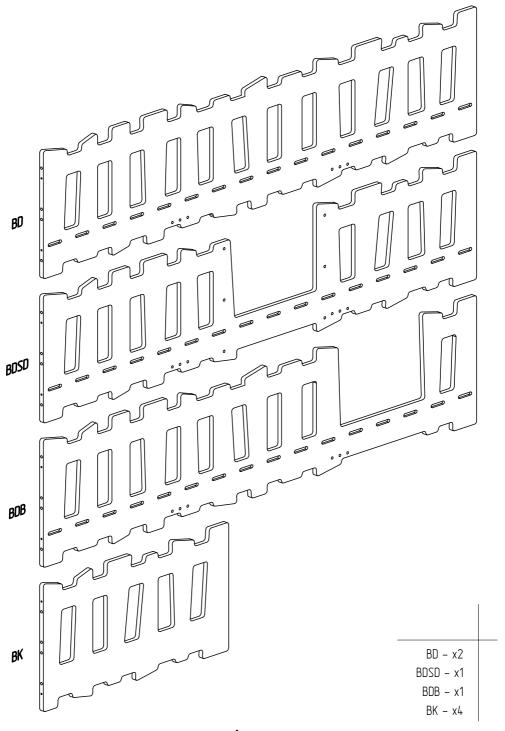


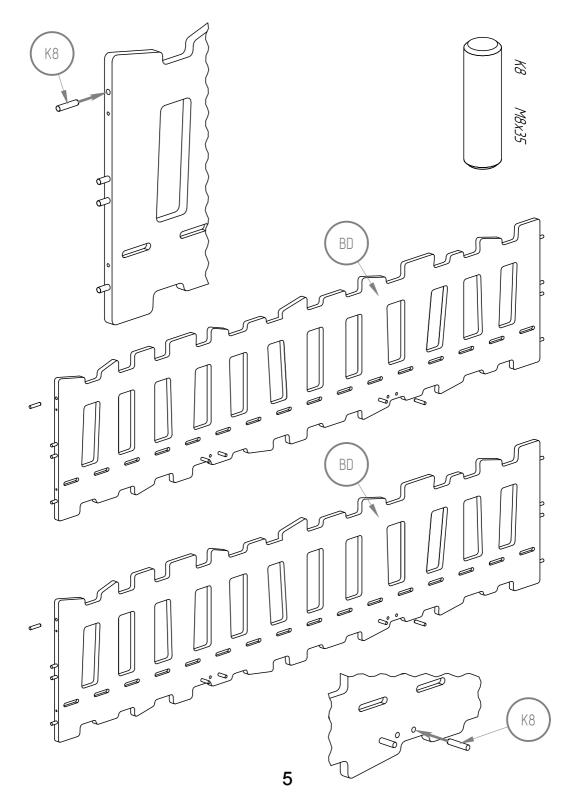


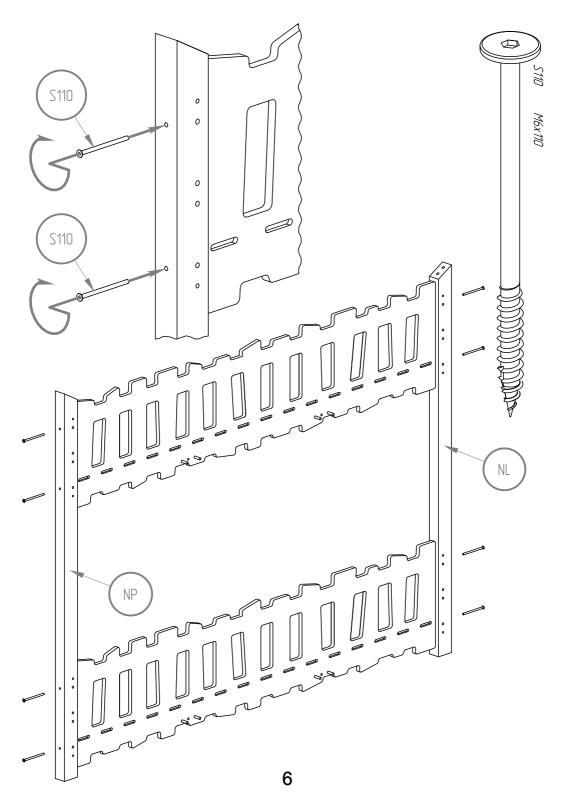


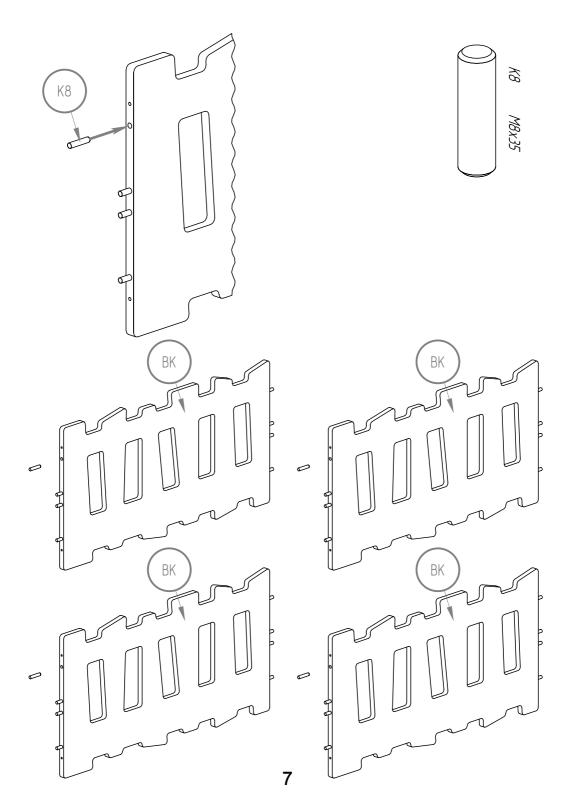


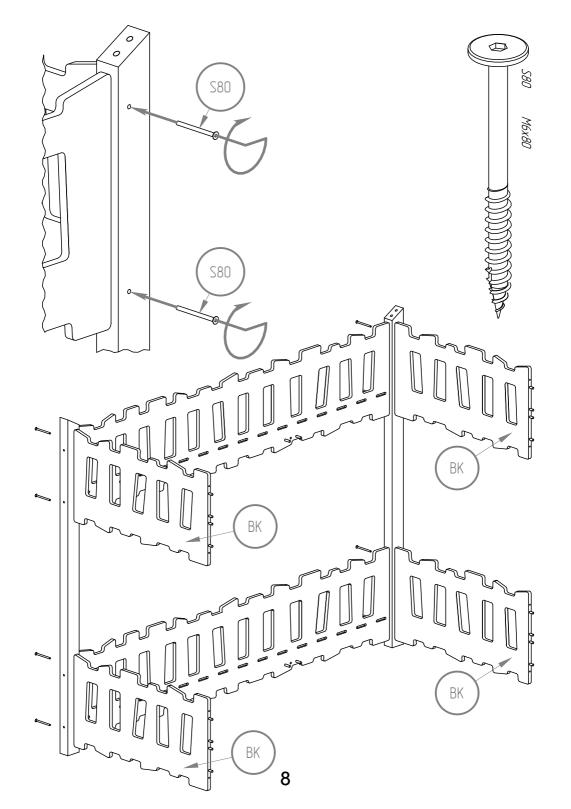


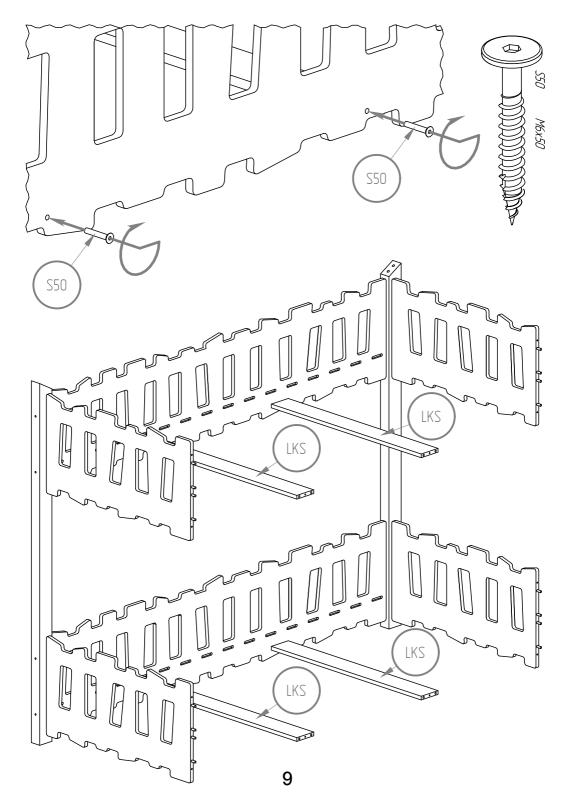


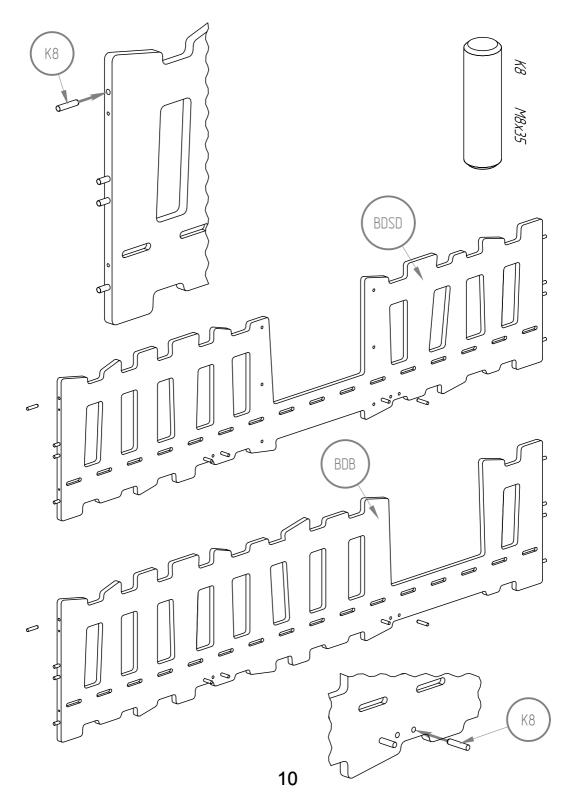


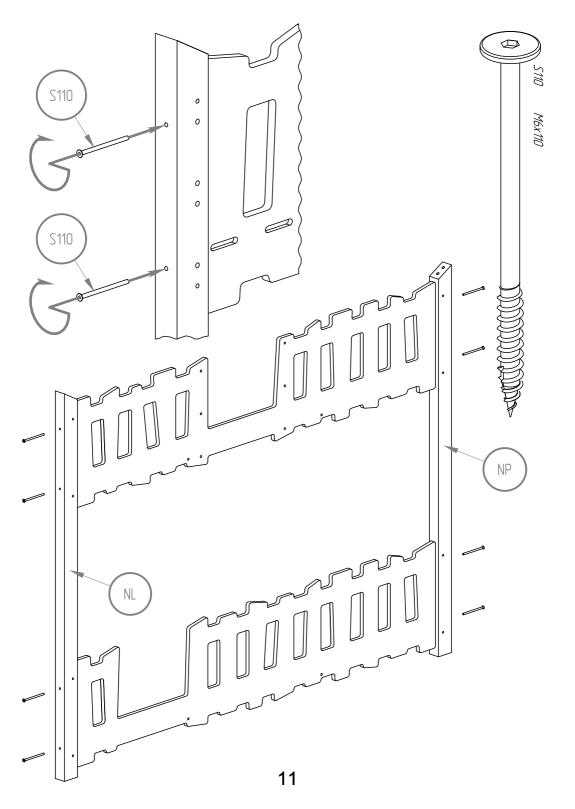


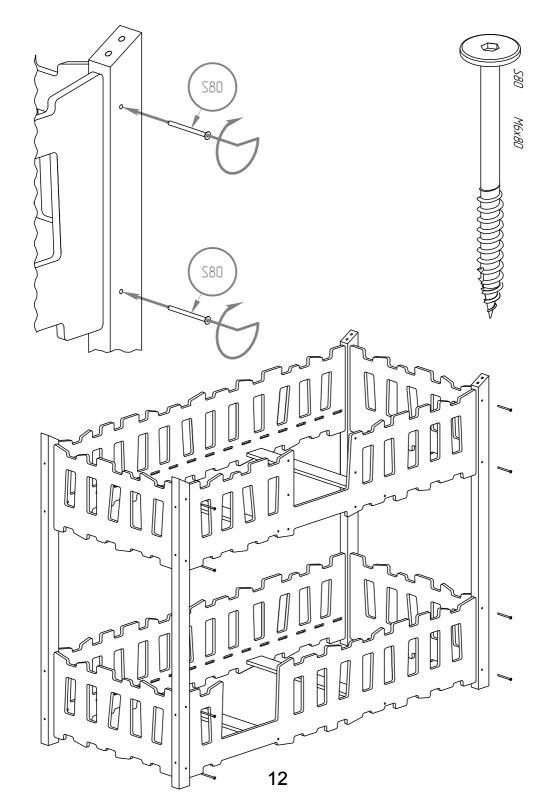


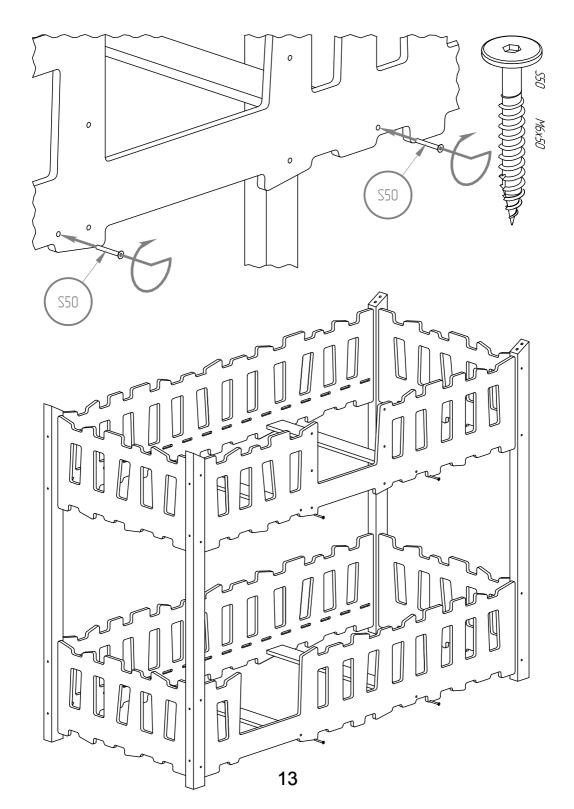


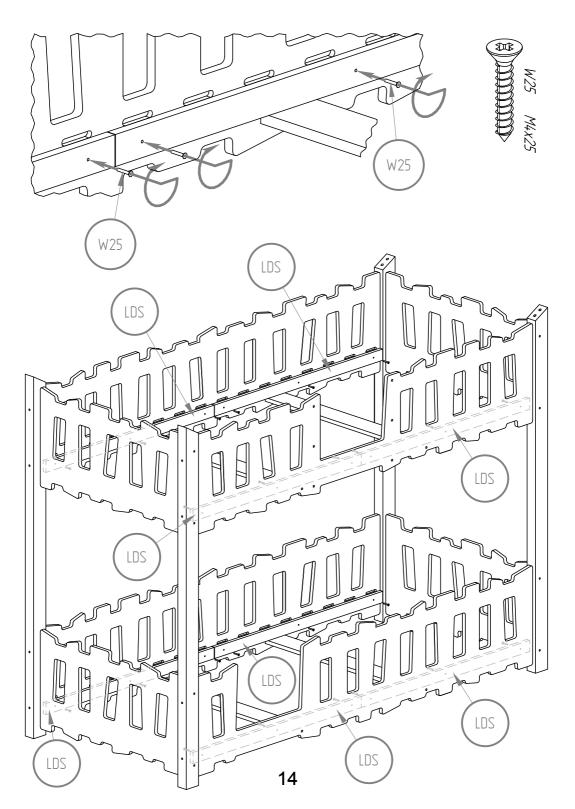


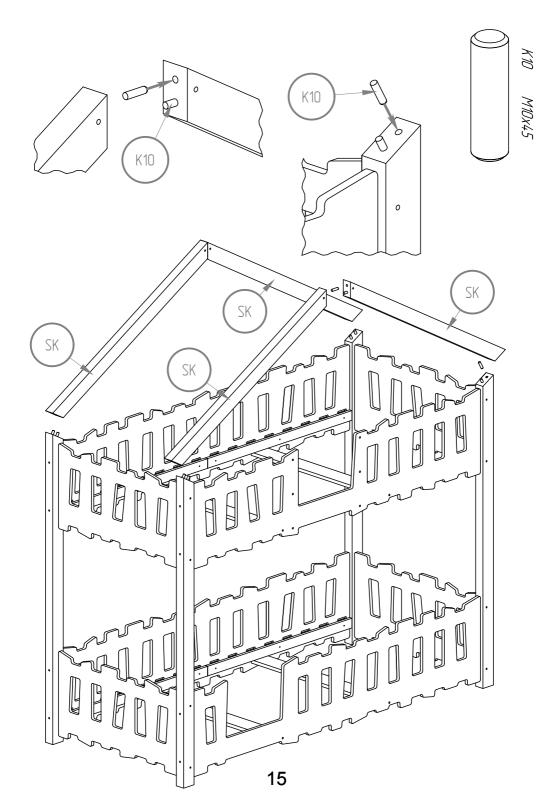

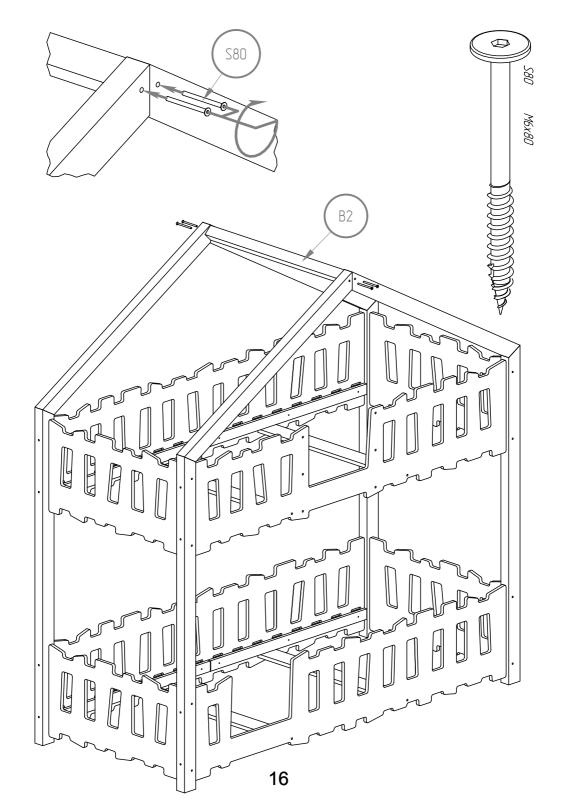

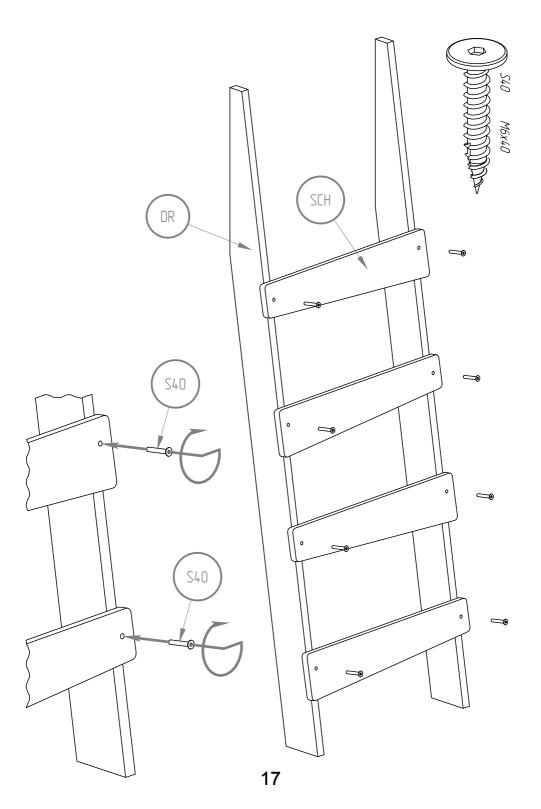

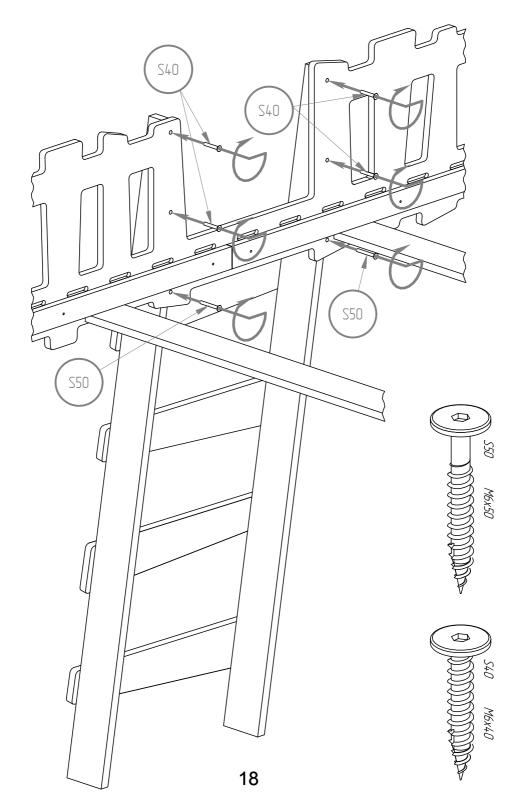

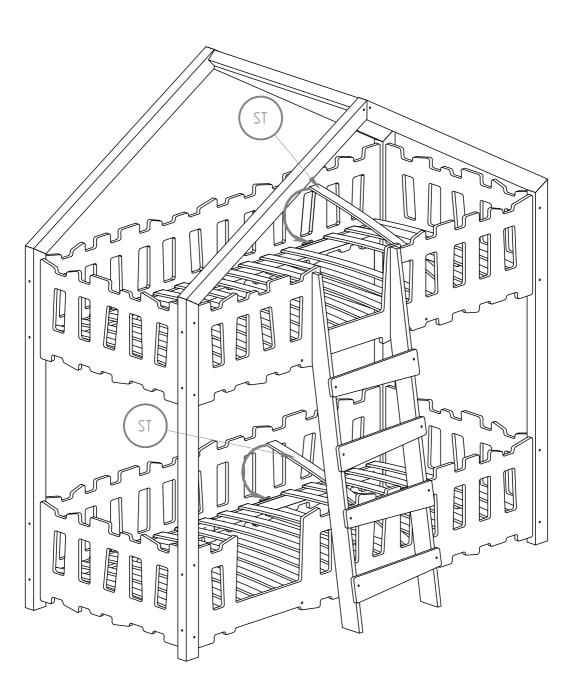



JARDIN STAIRS SHORT SIDE


 70x140
 70x150
 70x160
 70x170
 70x180
 70x190
 70x200


 80x140
 80x150
 80x160
 80x170
 80x180
 80x190
 80x200


 90x140
 90x150
 90x160
 90x170
 90x180
 90x190
 90x200

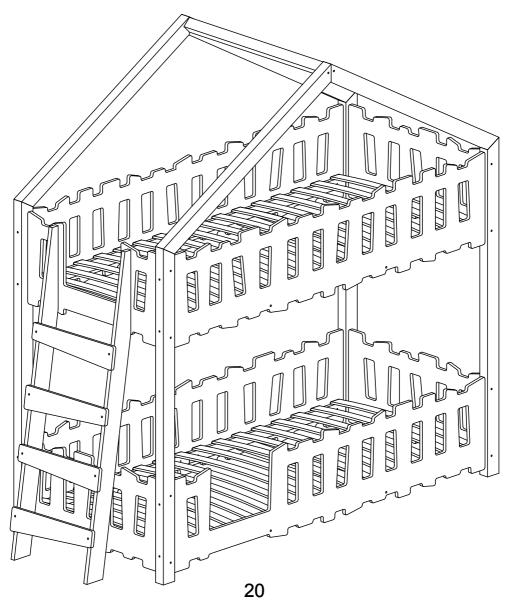


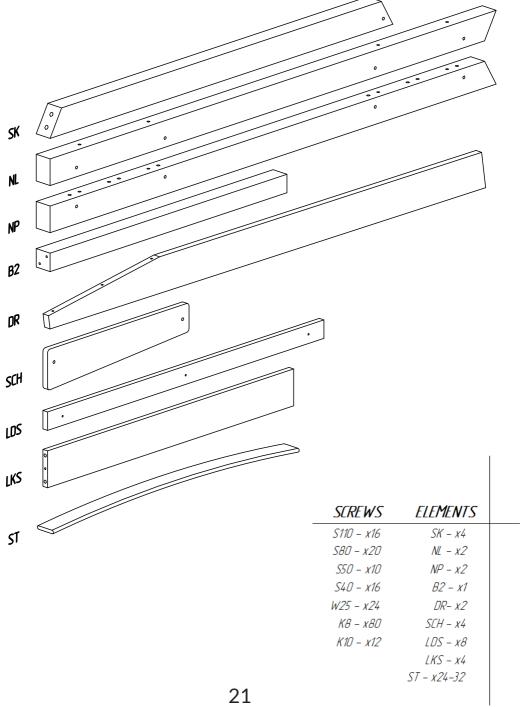


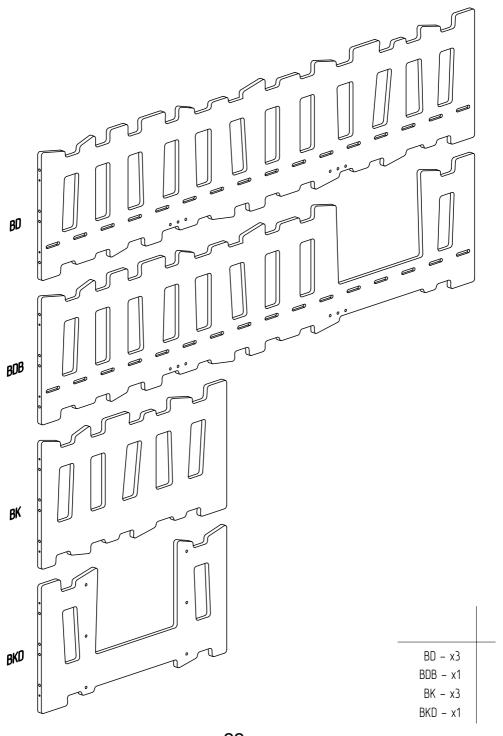


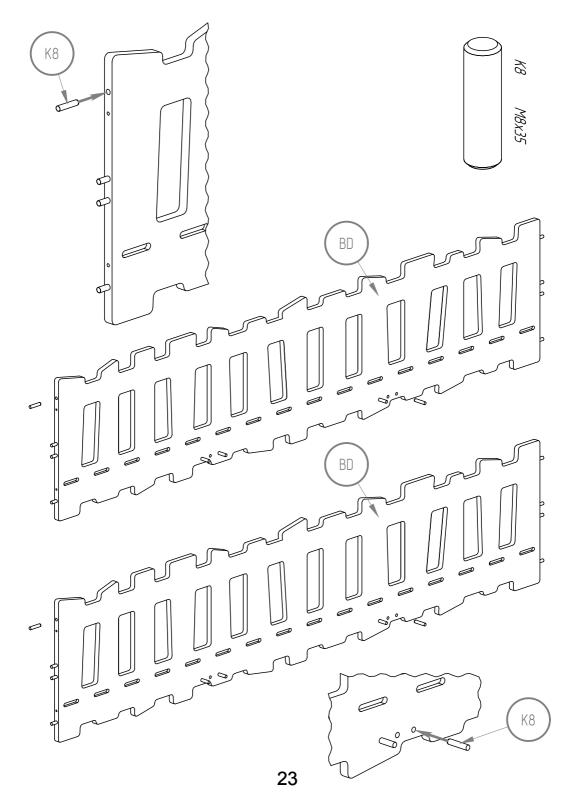


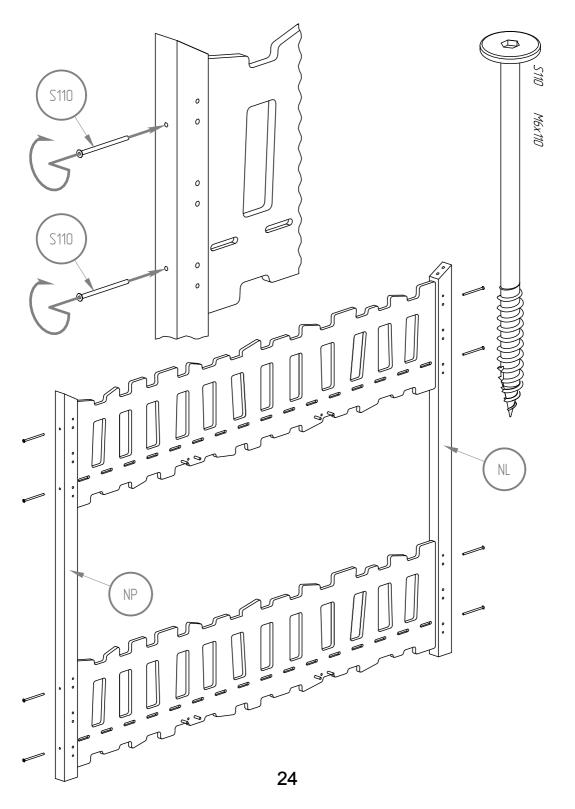


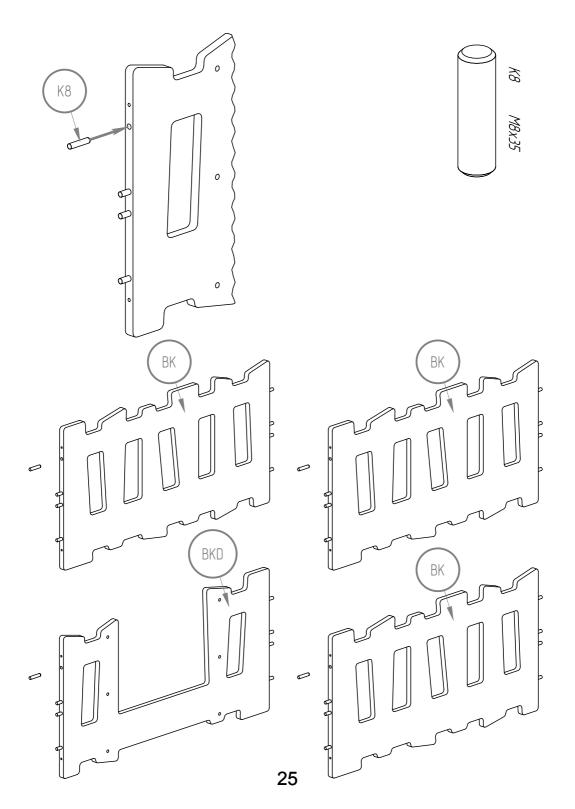


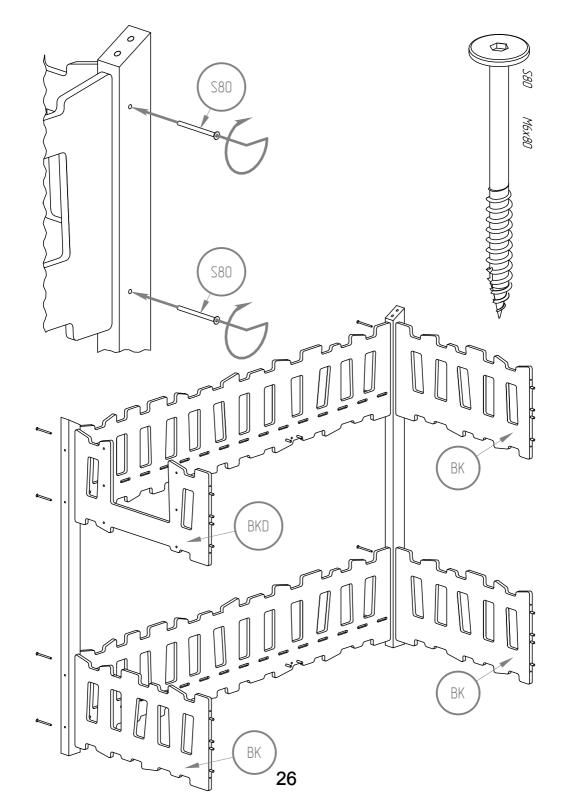


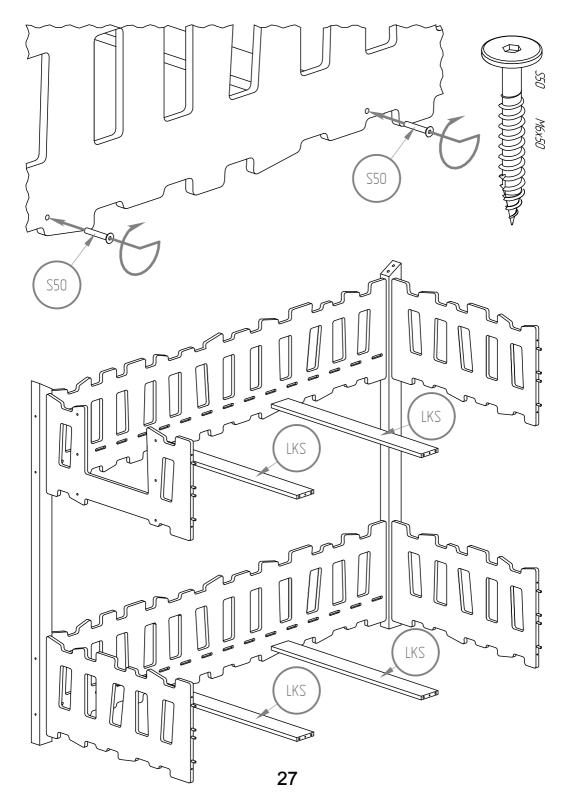


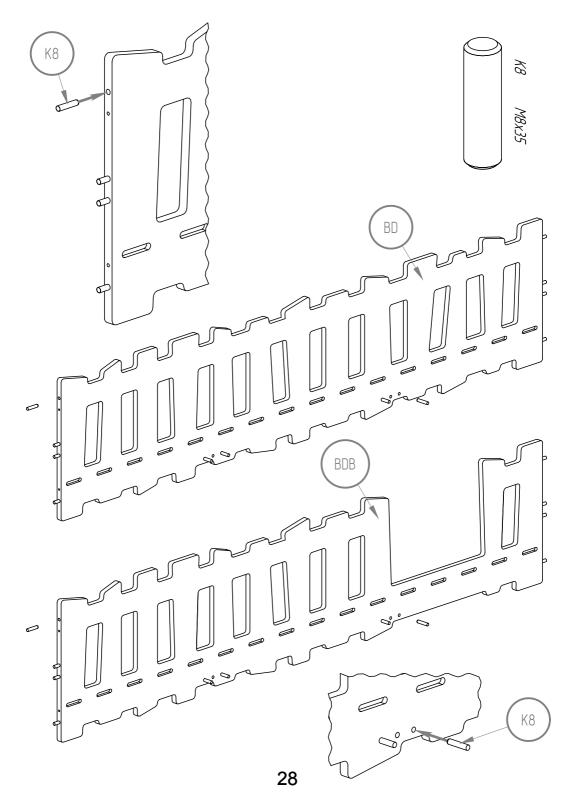


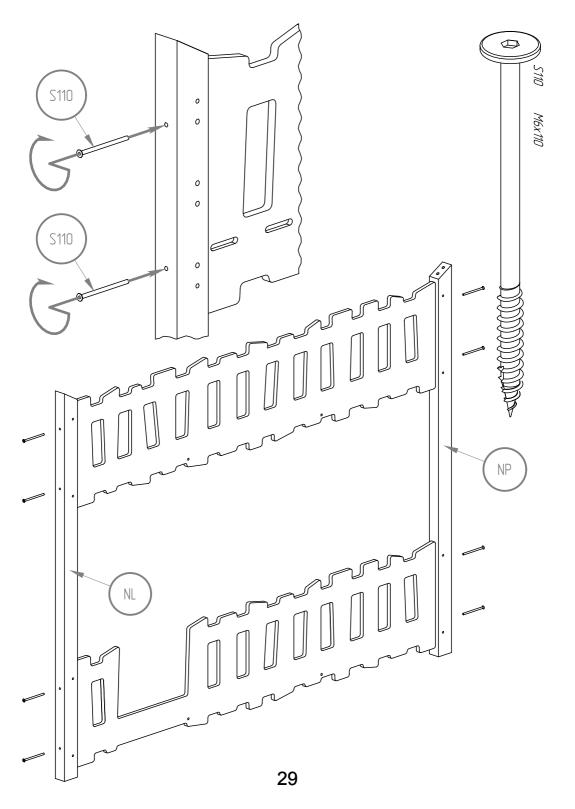


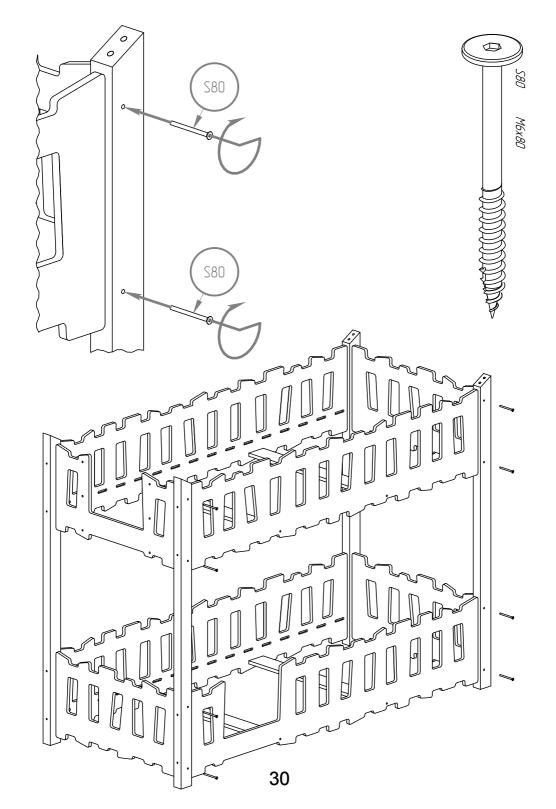


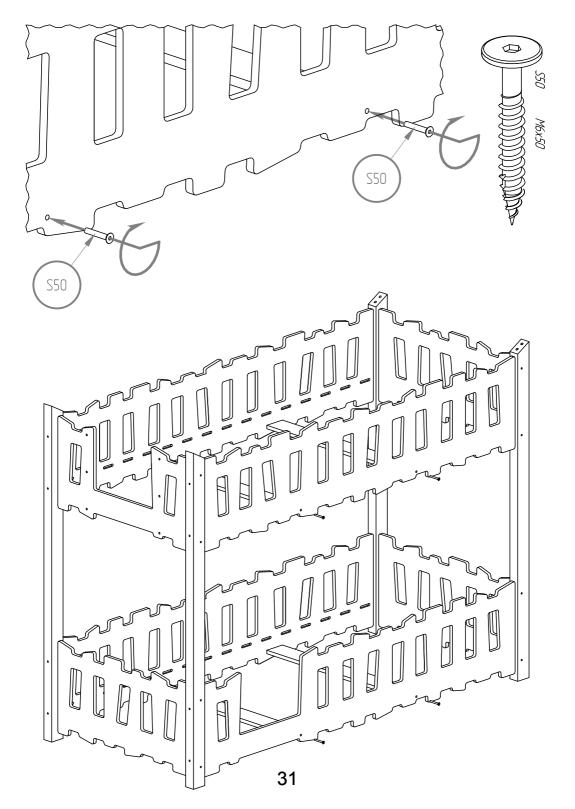


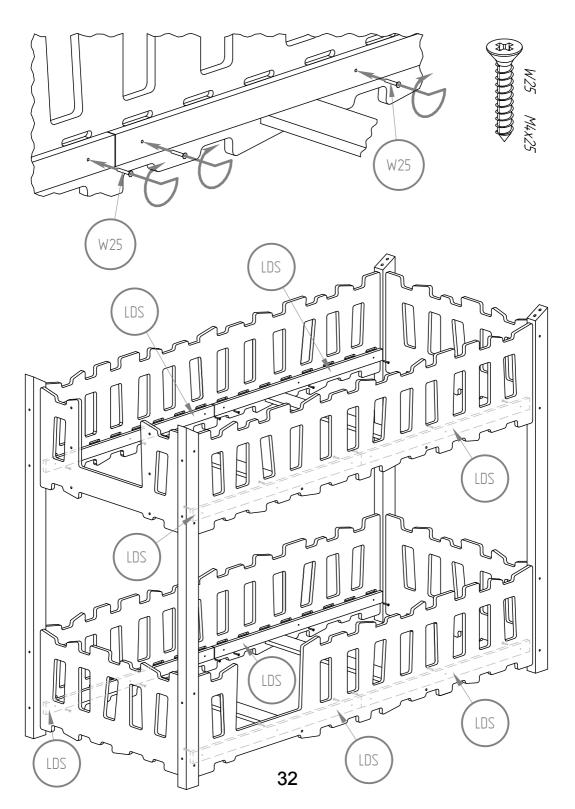


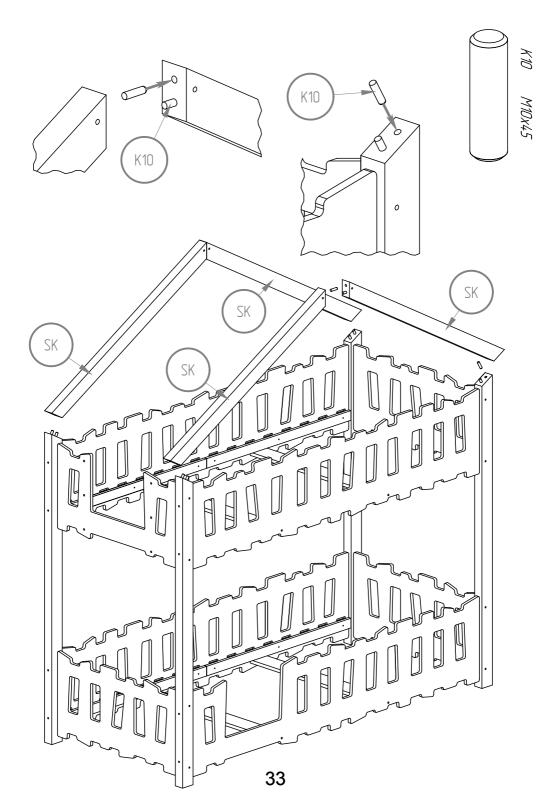

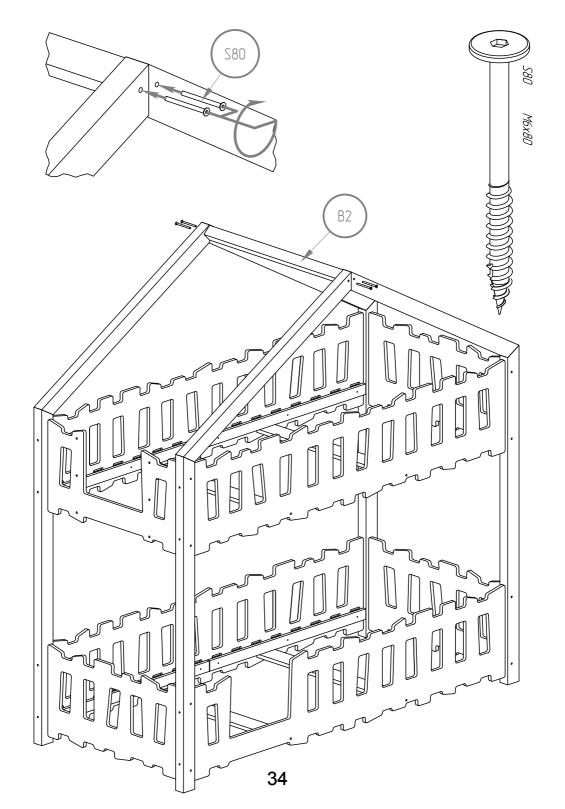


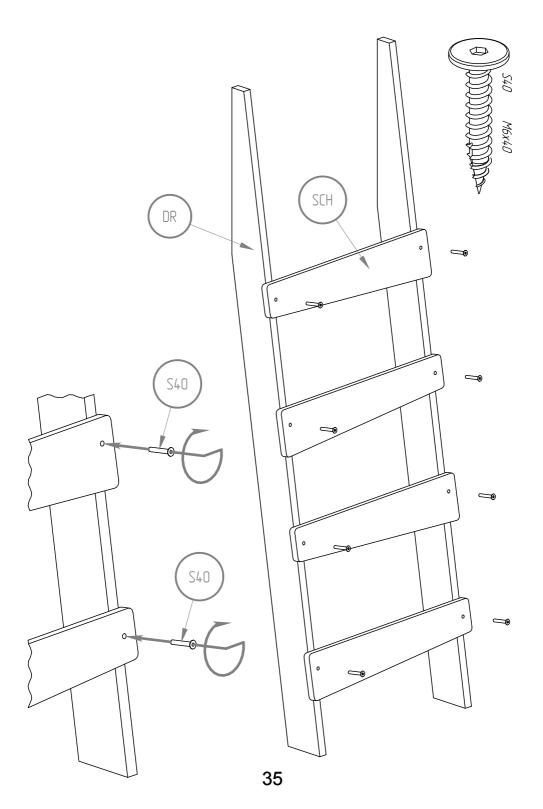


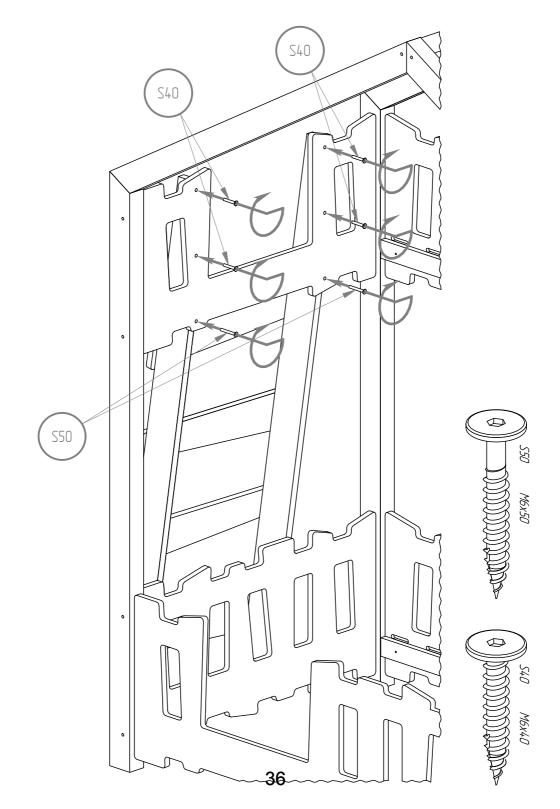

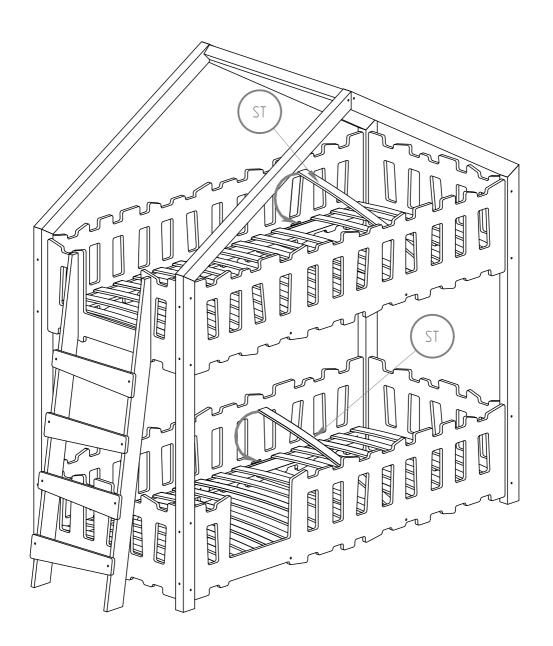


DRAWER

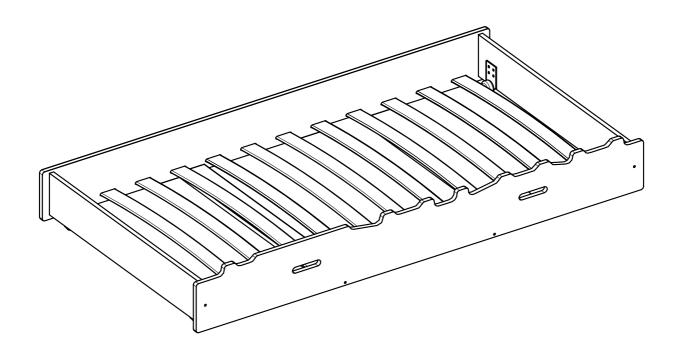


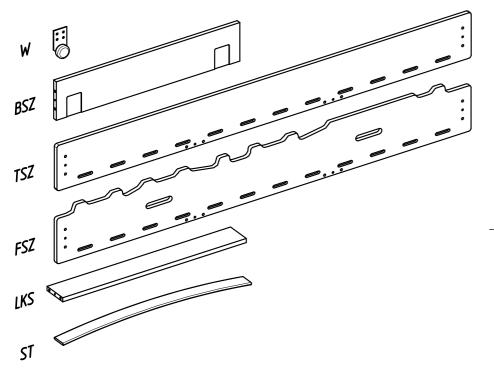



DRAWER


SCREWS	ELEMENTS
S50- x8	W- x4
K8 - x16	BSZ – x2
W13 - x16	TSZ – x1
	FSZ - x1
	LKS - x2
	ST - x12-14

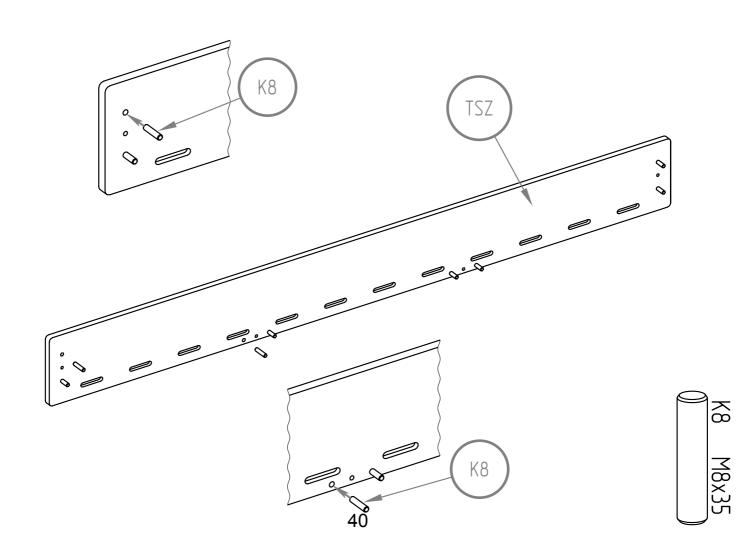


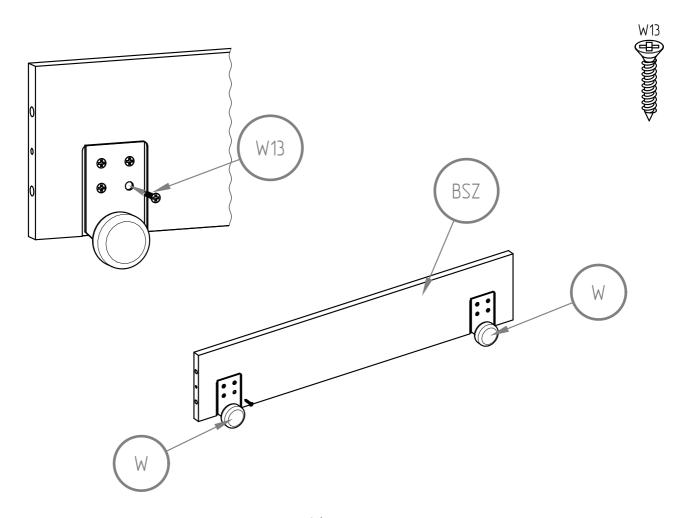

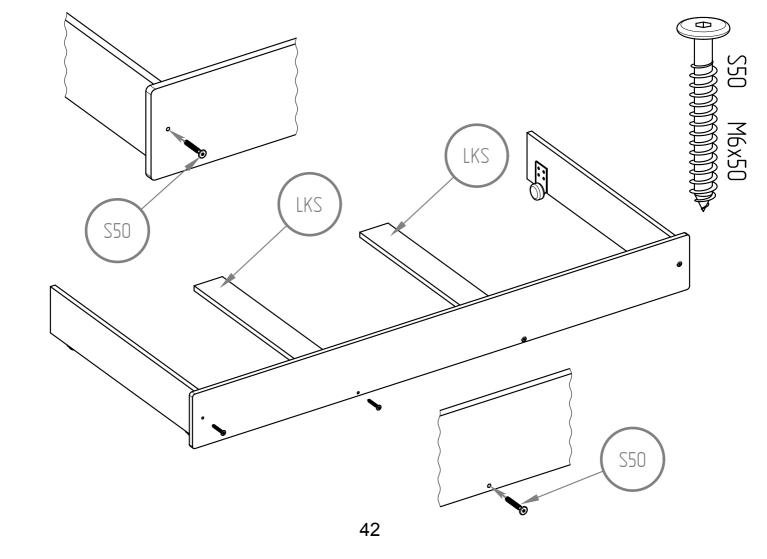

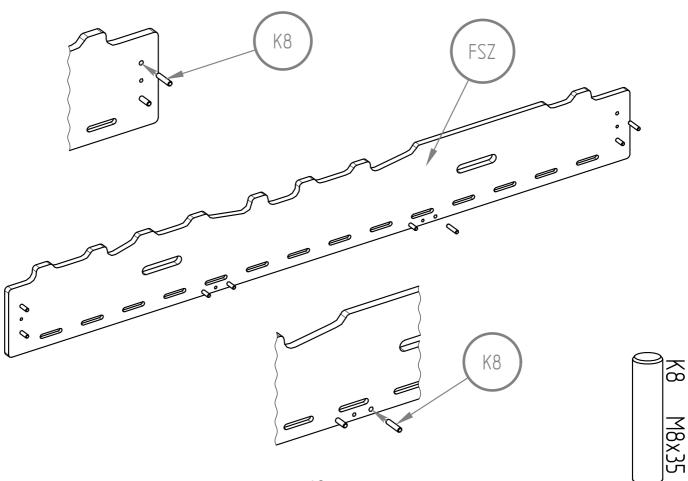

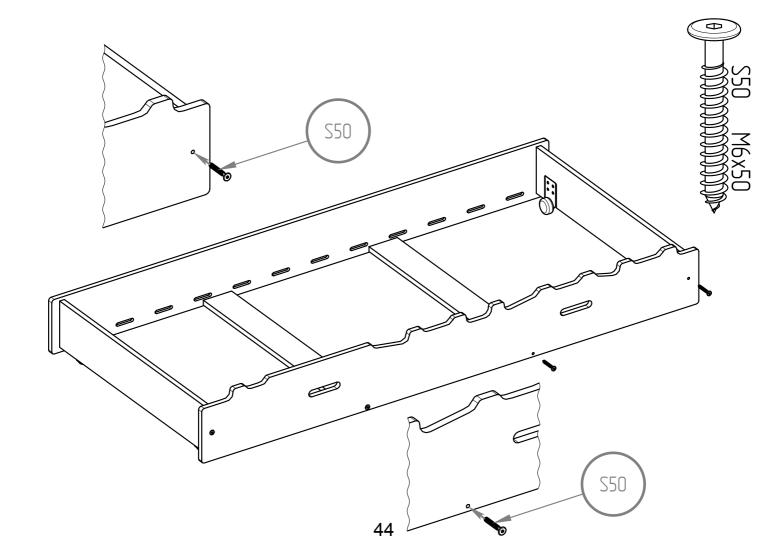

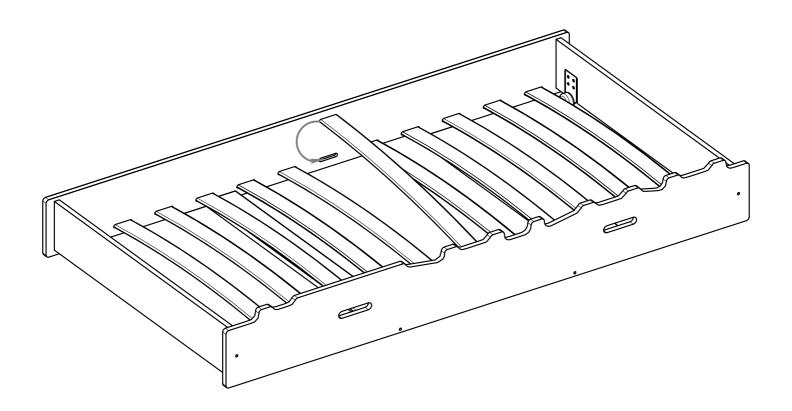

Assembly Manual PETIT PUK



Yeaah, great job!!

We hope you are happy with the results too! Don't forget to share a photo with us, it makes us incredibly happy to see the results in our mailbox or on instagram with #petitpuk

Please remember this:

- Use only matress with thickness is 8-14 cm height.
- Beds are for sleeping, not for jumping
- Prohibit more than one person on the bunkbed. Do not hang on construction components.
- Wooden and plastic parts should be cleaned with a dry cloth and ordinary, mild care and cleaning of raw wood
- Bed parts have a warrantee for 2 years under normal use. If necessary, contact **PETIT PUK** indicating your name and order number, accompanied by photos's of the situation.



www.petitpuk.com f petitpuk

