













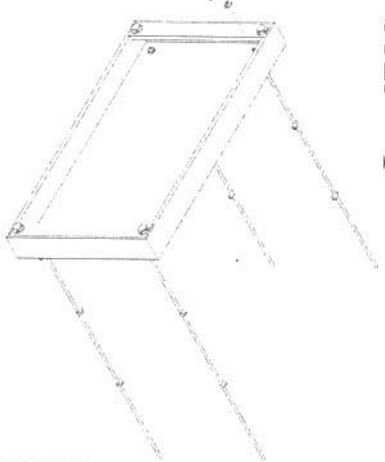


ASSEMBLY INSTRUCTION


NO:	Parts	Qty
A	 Key	1
B	 nut M6X20	4
C	 17#	1
D	 shelf support	8
E	 10#	1
F	 L connector	6
G	 allen screw M6X16	20
H	 $\phi 2$	1
I	 $\phi 4$	1
J	 hinge	2
M	 Lock	2
N	 Pole end cap	4
L	 Connector	4
O	 Nut	20

STEP 1



Using wrench and screw to fix the pole on the bottom.


STEP 2

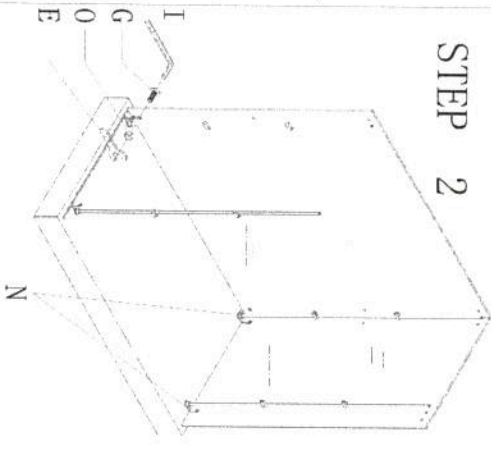


Using allen screw and connector to install the side glass and back glass.

STEP 3

Install the top glass.

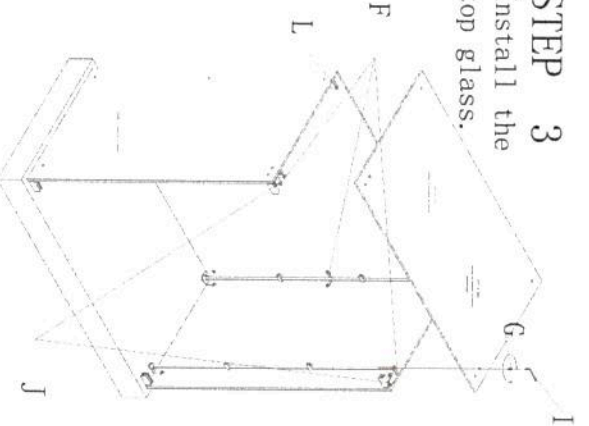


STEP 4

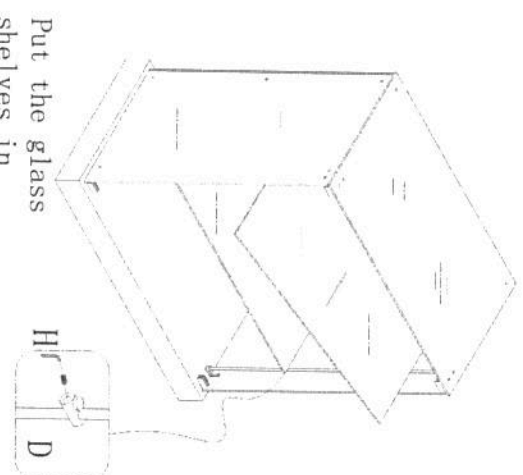


Put the glass shelves in.

STEP 5

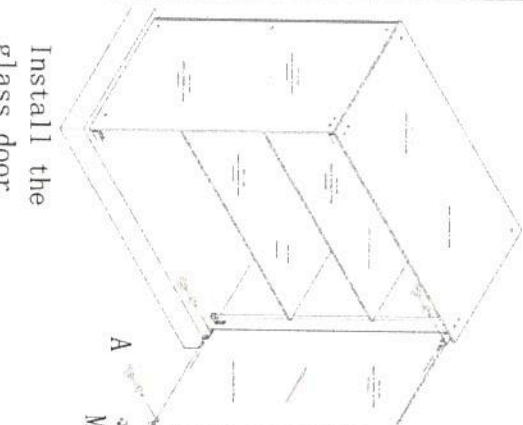

Install the glass door.

FINISH

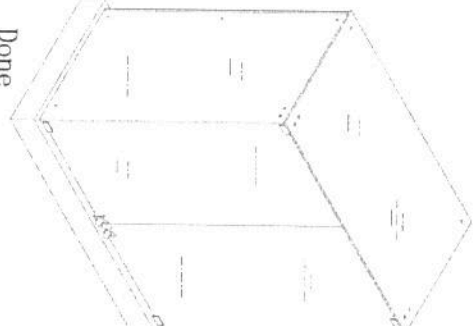

Done