SKU: IMRLK 145-7 7mm Assembly Instructions Portakabin

What tools and glue are needed?

We recommend Deluxe Materials "Laser Glue" and "Glue 'n' Glaze" for the windows.

A sharp craft knife, Fine Wet & Dry (400 grit), needle files, modelling tweezers and elastic bands or suitable clamps.




www.intentio.shop

WELCOME TO YOUR INTENTIO MODEL RAILWAYS PRECISION SCALE MULTI MEDIA KIT

CAREFULLY READ THROUGH THESE INSTRUCTIONS AND THOROUGHLY FAMILIARISE YOURSELF WITH THE PARTS BEFORE STARTING ASSEMBLY. ALWAYS DRY FIT FIRST.



When removing parts from the frames take care to clean any remaining attachment "nibs"

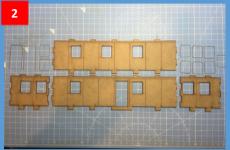


Prepare the 4 walls (2, 3, 4, & 5), door frame (13) and window frames (14 & 15 x8)



Glue the window frames to the walls using the engraved lines as a guide



Glue the door frame to the wall using the engraved lines as a guide

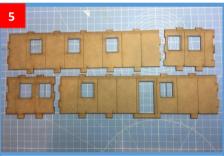

You should end up with 4 walls with a frame around each opening as shown



Glue the 4 walls using the base as a guide
DO NOT GLUE THE WALLS TO THE BASE




Glue the roof (6) to the walls



Use a little weight to ensure the roof sits flat whilst the glue dries



At this point you might think to fit the glazing but it may be better to wait until after painting

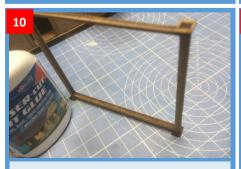

Glue the support plates (8 x4) to the frames (7)



Glue the pads (9) to the bottom (the thicker frame), of the support frame



Glue the steps (10, 11, & 12) together and you should have parts that look like this

