



AUXGuard

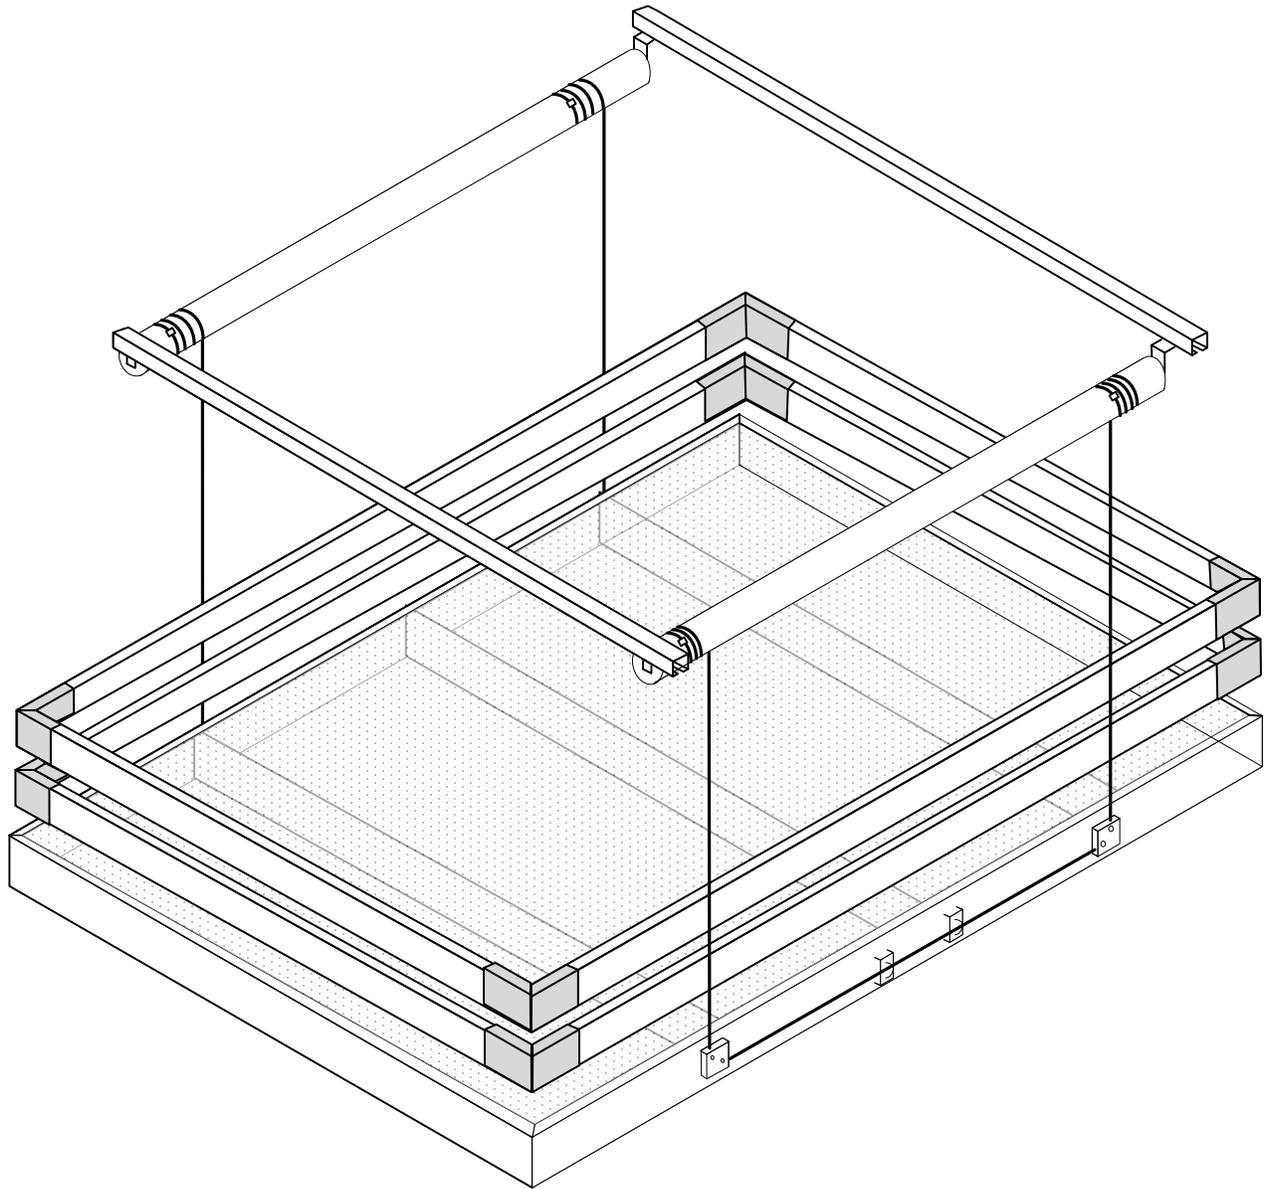


All rights reserved
US Patent
Release 06/2023/SW

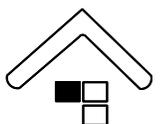

Design and Quality
AUXLIFT of the USA

Before YOU start

1. Have you read through the instructions?
2. Do you have all the recommended tools?
3. Do you have somebody assisting you?
4. Have you allocated enough time?

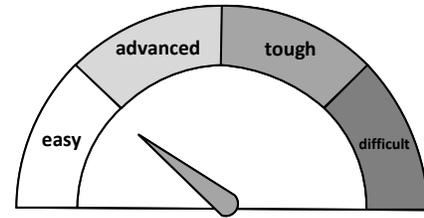

For a professional it takes about 3 hours to install.

What is most important is to follow the instructions

and read everything carefully before you start.

5. Don't use an impact driver.
6. Clean the area before you start.
7. Wear safety glasses!
8. Keep work area clear!









Check measurements during construction.

If you have any problems understanding the instructions or you feel uncomfortable handling the installation, please ask a handyman or work with a contractor. Call/write us if you need help or have concerns or questions.


www.auxx-lift.com

Help phone: PST 10 am -3 pm 1 805 862 8271


RECOMMENDED TOOLS

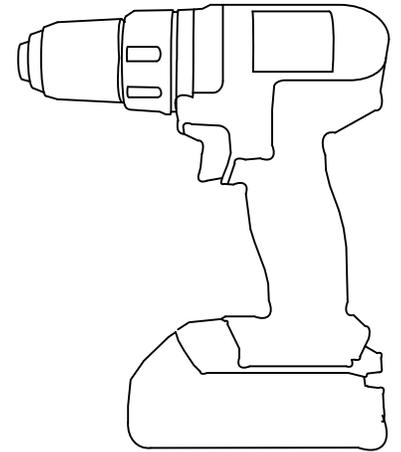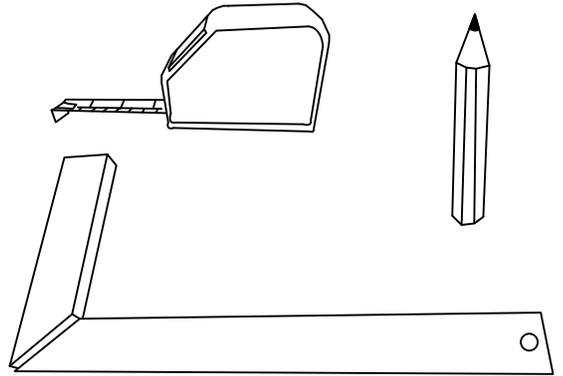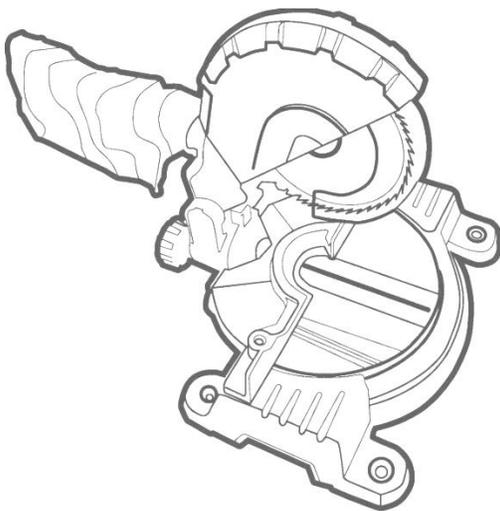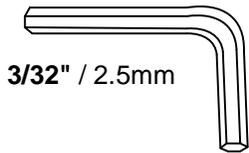
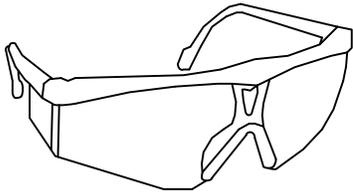






LIST OF PARTS

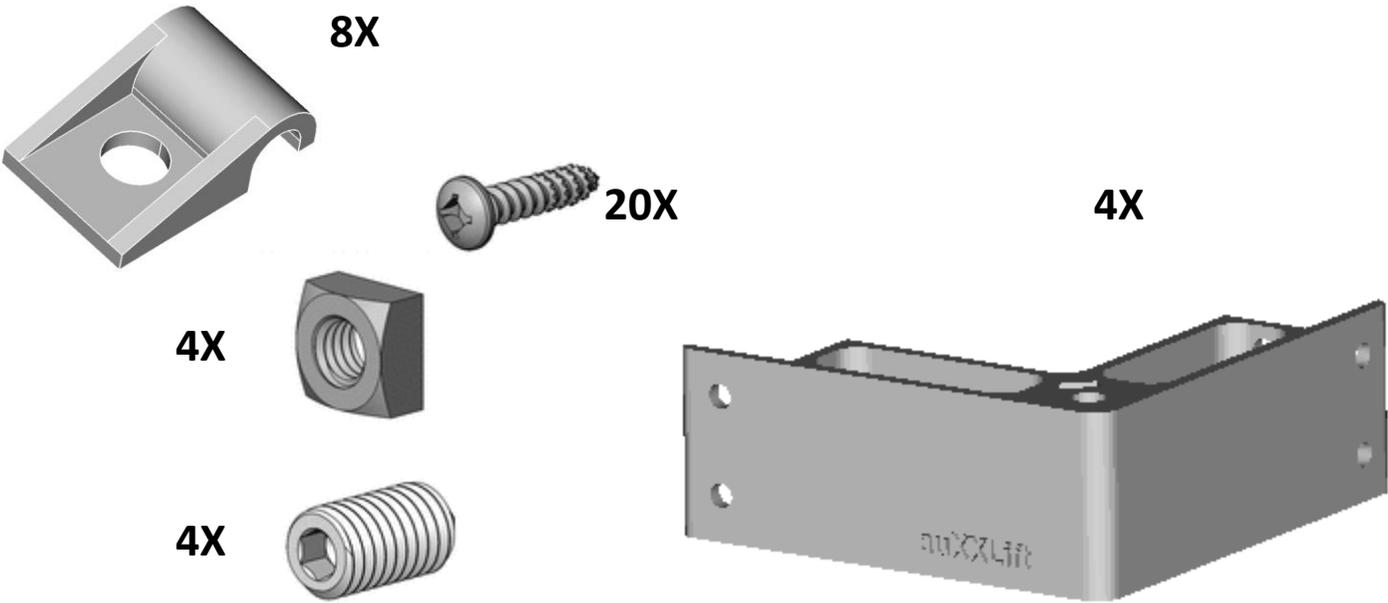

Additional Material for the second level


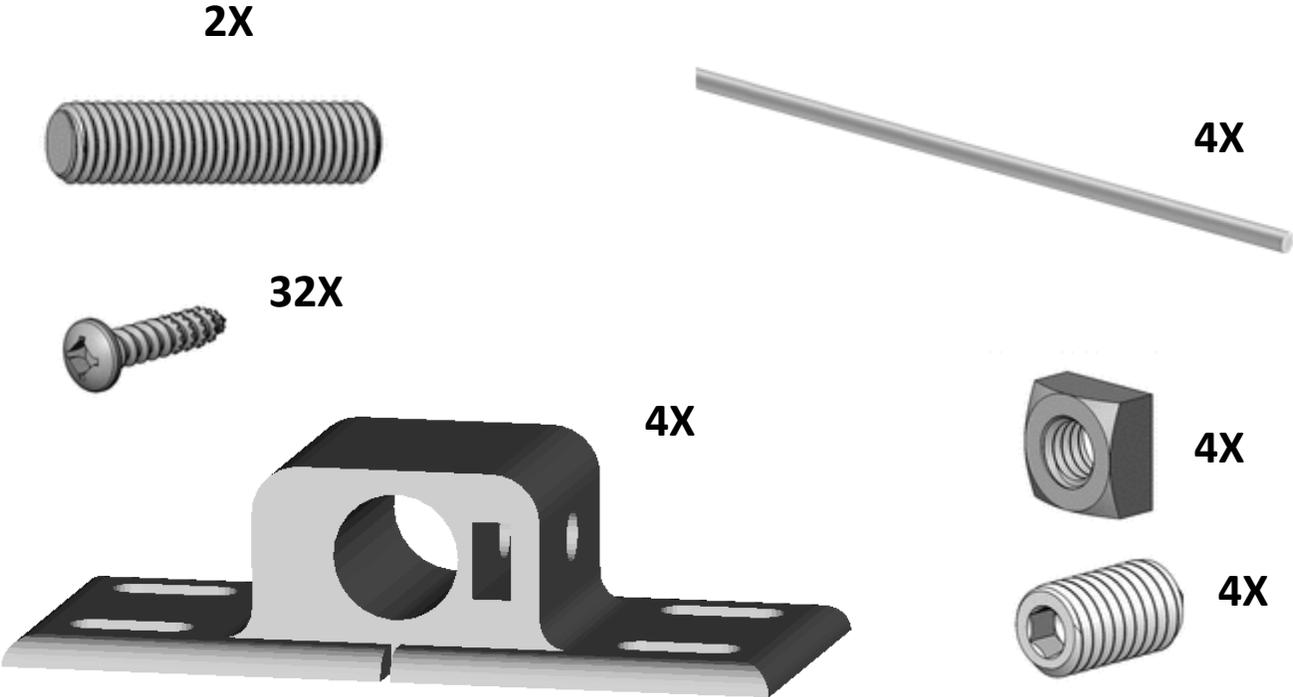


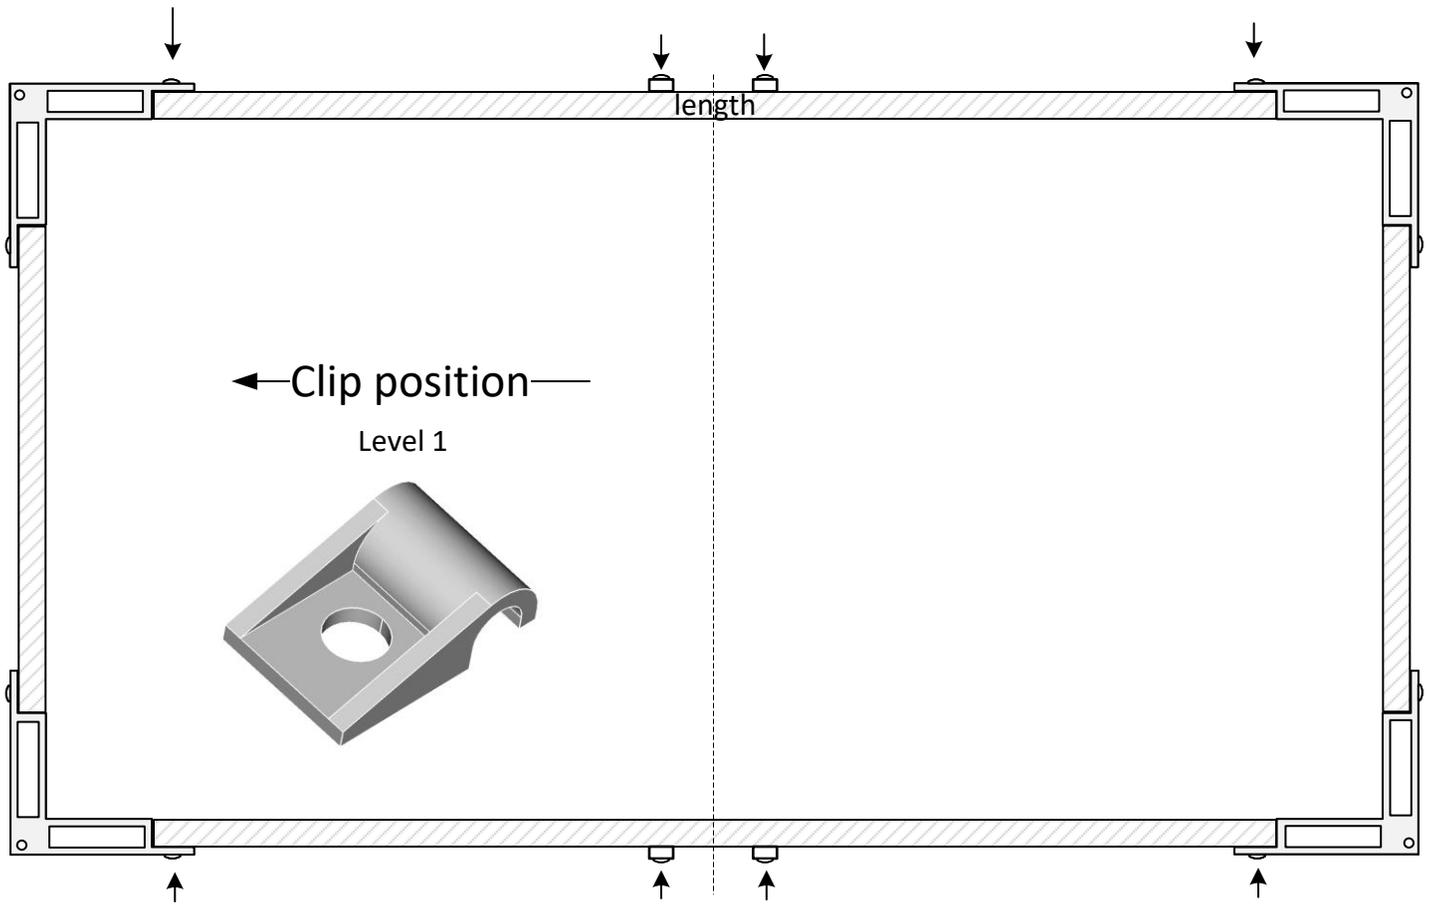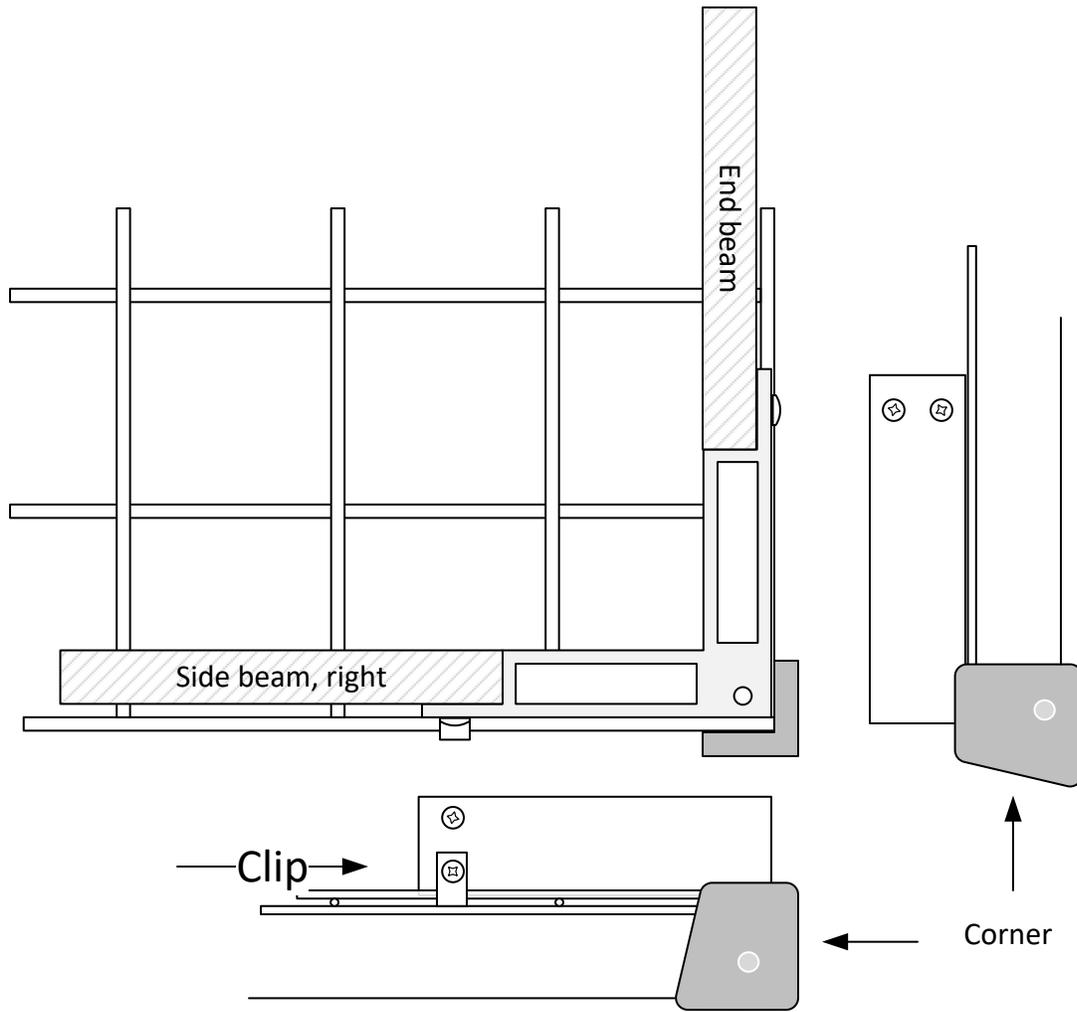

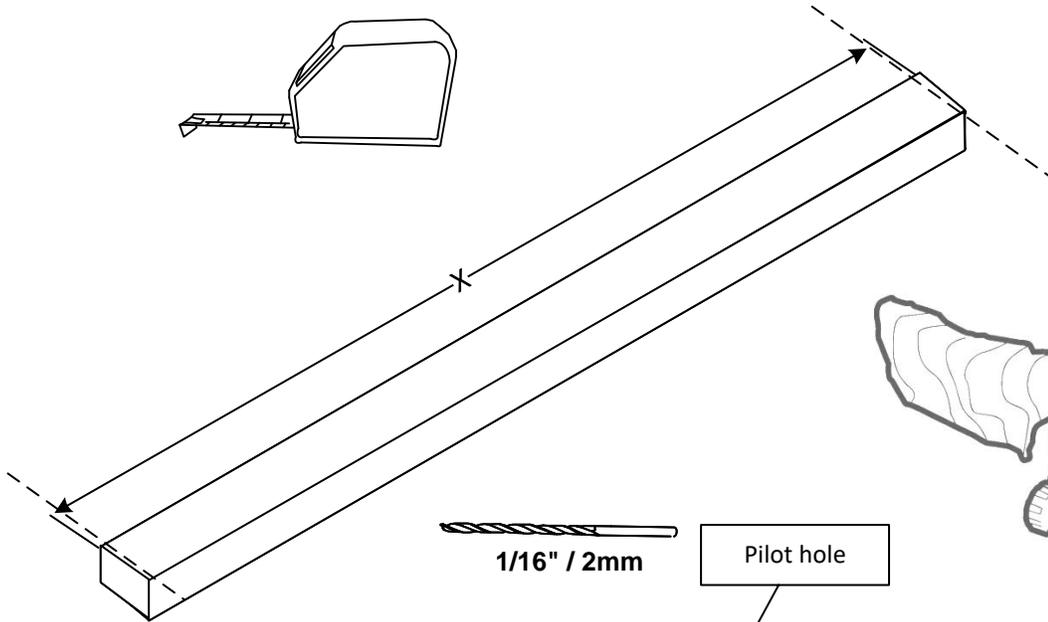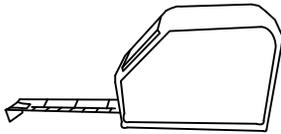
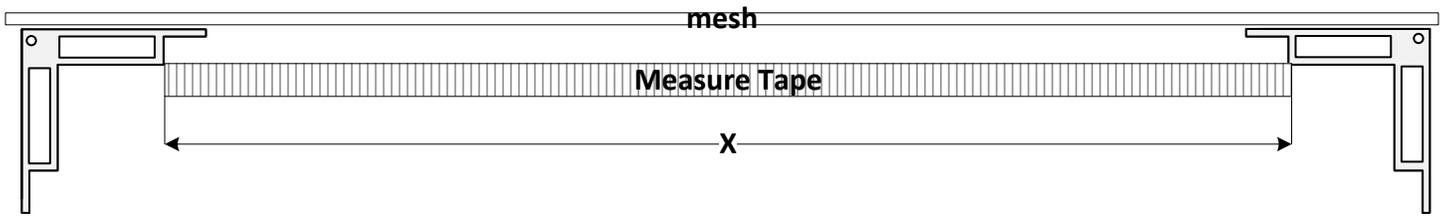







1/16" / 2mm

Pilot hole

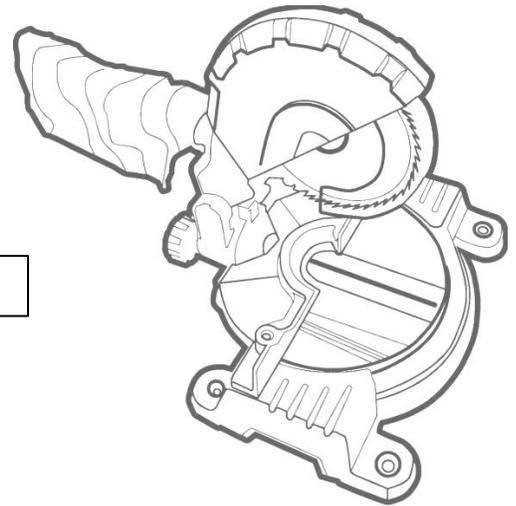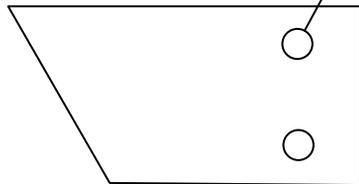




Additional screws for more stability

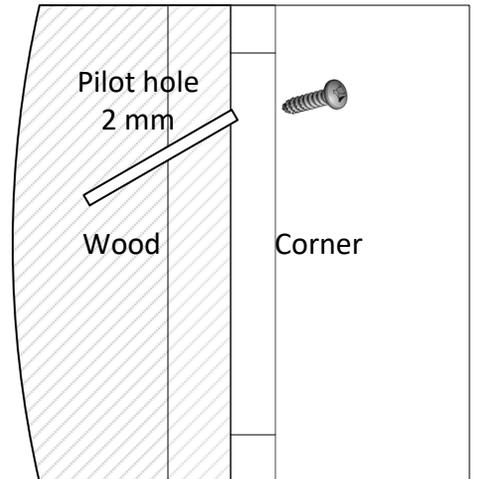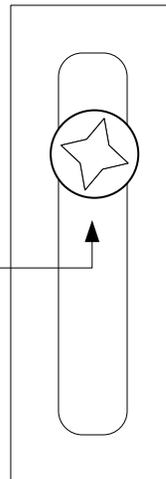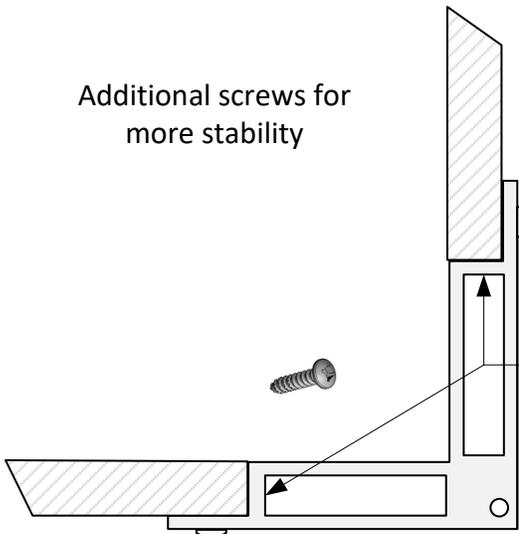

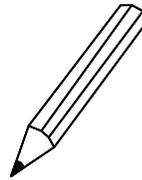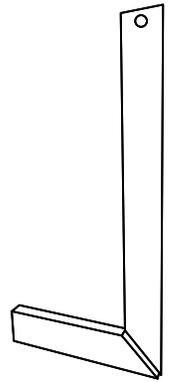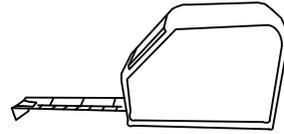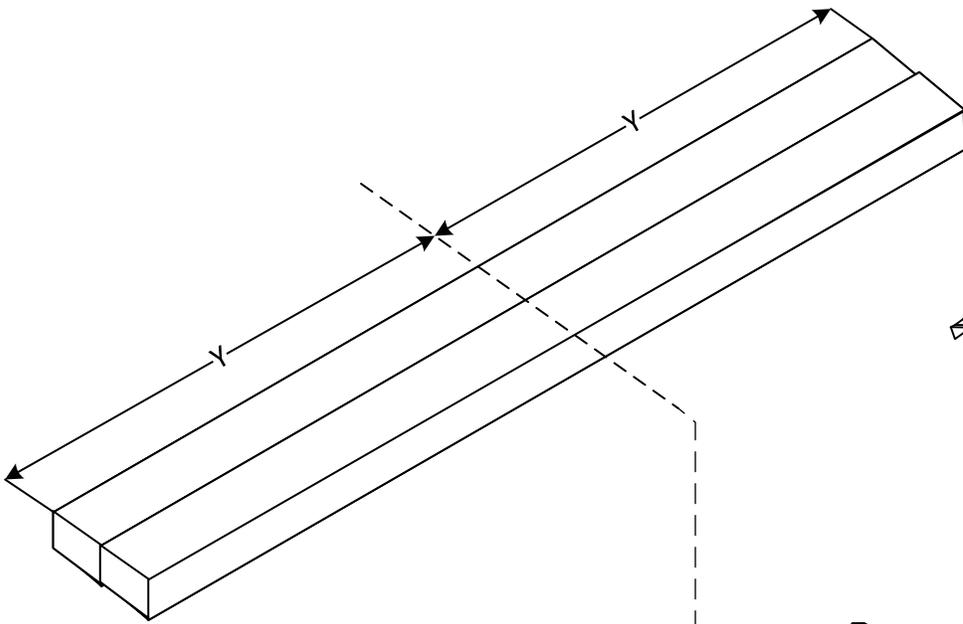






Top

Opening to
the top





6


Length fence Beams

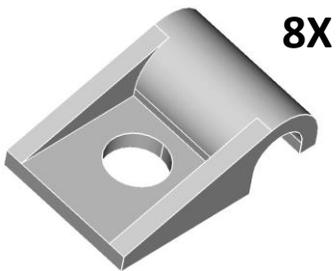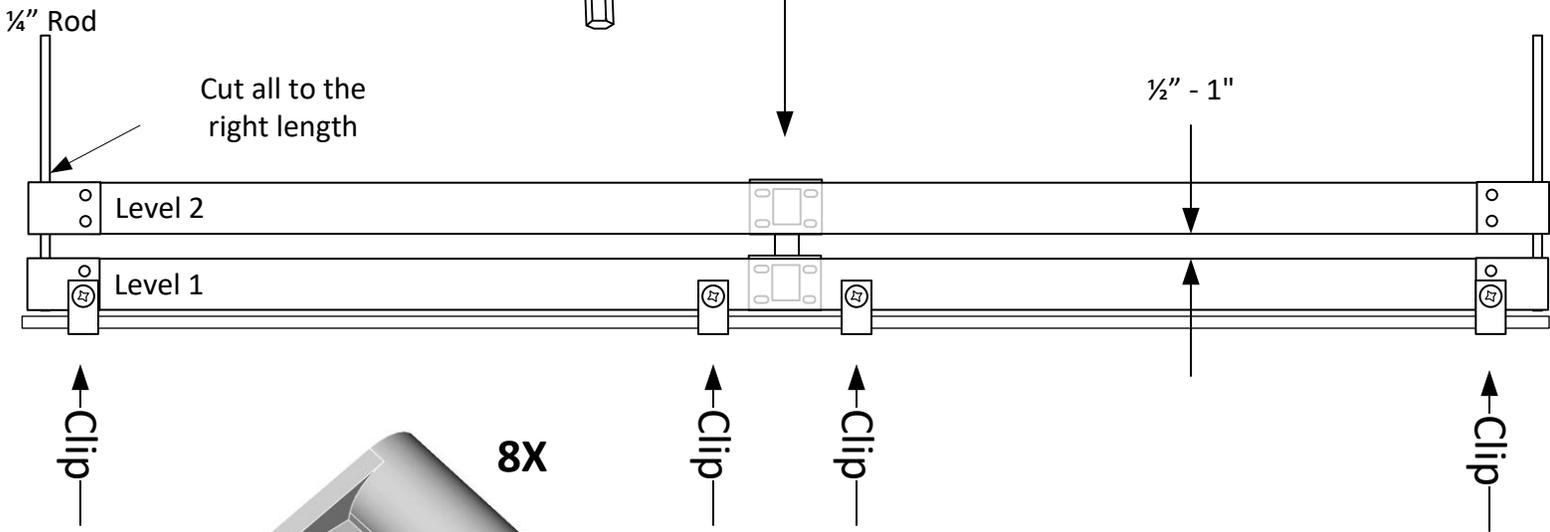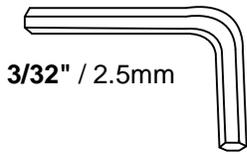


8X

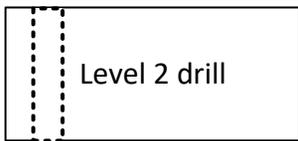

Level 2 drill

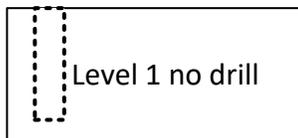

Level 1 no drill

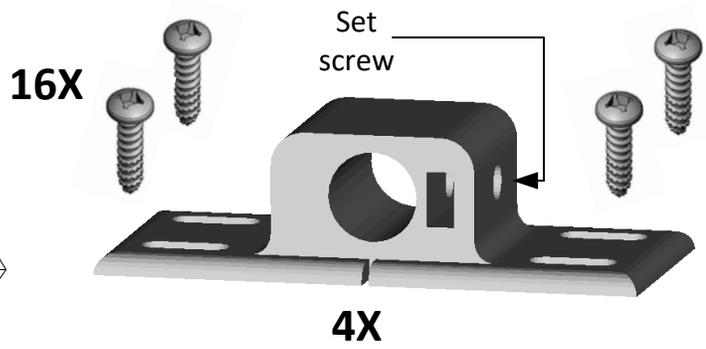

4X

Set screw



2X

