

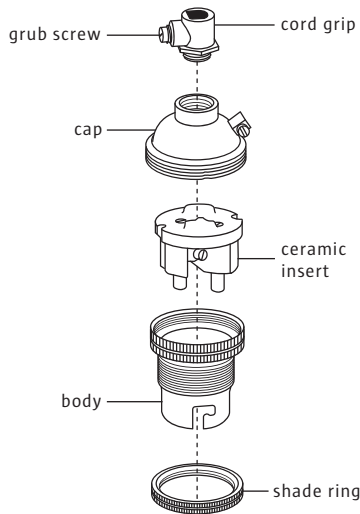


# URBAN COTTAGE INDUSTRIES

## METAL B22 & B15

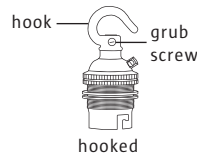

### VARIANTS

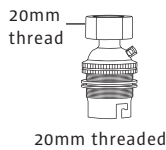

### YOUR PRODUCT

Thank you for purchasing this product. It has been designed and made to give you many years of reliable service. Please read these user instructions carefully.

### WARNING

- Installation in accordance with current wiring and building regs and by a competent person only.
- For indoor use only
- Earthed - only compatible with 3 core lighting cable
- Shut off power to the circuit before installation
- Ensure cables are secured in correct terminals (see 'wiring diagram')
- Ensure flexible cables are secure - terminals must be relieved from strain and twisting
- Ensure lugs on cap are aligned with indents on ceramic insert
- Bathroom installation by authorised contractor only
- Do not exceed max operating temperature - 210°C (T2)
- Maintain safe distance between light source and surfaces

### TROUBLESHOOTING

No user serviceable parts. In the event of failure, fault or damage shut off power and contact [hello@urbancottageindustries.com](mailto:hello@urbancottageindustries.com)

### STAY UP TO DATE

We post regular design and product information via social media. You can also contact us via instant support and email [hello@urbancottageindustries.com](mailto:hello@urbancottageindustries.com)

### USER INSTRUCTIONS

#### TOOLS REQUIRED

- |                        |                           |
|------------------------|---------------------------|
| • Cord grip grub screw | 4mm flat head screwdriver |
| • Hooked grub screw    | 3mm flat head screwdriver |
| • Terminals            | 3mm flat head screwdriver |

#### INSTALLATION NOTES

- We recommend using ferrules with crimping pliers to crimp exposed stranded conductors. It's simpler, neater and safer

#### HANDLING & CLEANING

**WARNING:** Shut off power and allow to cool


- Wipe gently with a dry, soft, cotton cloth
- Cleaning products, scratching, abrasion, damp, oils, liquids etc may have a detrimental effect on surface patina

#### WIRING DIAGRAM

**CAUTION:**  $\perp$  cable must be inserted and secured in the  $\perp$  terminal inside the cap

1. Strip insulation from end - appropriate to cable type and/or ferrules
2. Firmly secure stripped cables in terminals **WARNING:** There should be no loose copper strands
3. Line up lugs in cap with insert indent
4. Secure grub screw (or suitable alternative cable restraint)

• Cap:

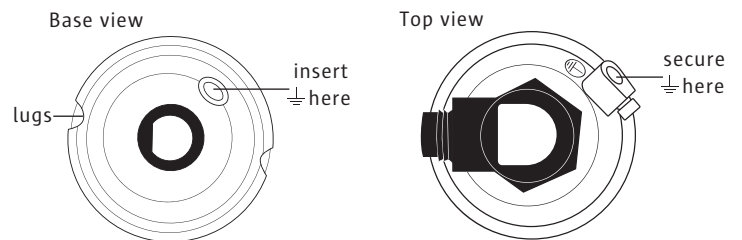

• Insert:

