


CORD GRIP PATTRESS TYPE 5

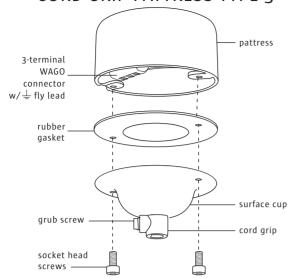

WHAT'S INCLUDED



* required for other Modular installations

YOUR PRODUCT

Thank you for purchasing this product. It has been designed and made to give you many years of reliable service. Please read these user instructions carefully.

WARNING

- Installation in accordance with current wiring and building regs and by a competent person only.
- For indoor use only
- · Bathroom installation by authorised contractor only
- Shut off power to the circuit before installation
- Ensure grub screw is secure WAGO terminals must be relieved from strain and twisting
- Always use fixings appropriate for the mounting surface (screws supplied may not be suitable)
- Cord grip max weight load 5kg
- Always consider the total weight load when installing and suspending your light
- Ensure luminaire cord is min 0.75mm² CSA and double insulated

TROUBLESHOOTING

No user serviceable parts. In the event of failure, fault or damage shut off power and contact hello@urbancottageindustries.com

STAY UP TO DATE

We post regular design and product information via social media. You can also contact us via instant support and email hello@urbancottageindustries.com

USER INSTRUCTIONS

TOOLS REQUIRED

- Drill + 6mm masonry bit
- 6mm + 4mm flat head screwdrivers

INSTALLATION NOTES

 Pendant combinations vary. Instructions are for ceiling rose installation only


INSTALLATION (MASONRY SURFACE)

WARNING: Must be insulated and earthed in accordance with current wiring regs

- 1. Drill 6mm holes x 30mm deep using mounting holes as a template
- 2. Insert plastic plugs into holes
- Use 6mm screwdriver and supplied medium screws to fix pattress to surface (alternatively, use supplied short screws only to fix pattress to a timber surface)
- Feed cable through cord grip and secure grub screw with 4mm screwdriver
- 5. Locate rubber gasket between surface cup and pattress
- 6. Use supplied WAGO connectors to make L, N and $\frac{1}{+}$ connections (as per 'wiring diagram'):
 - Flip integrated orange lever up to open position
 - Insert exposed conductor to stopping point
 - Return lever to closed position
- Secure surface cup to pattress using supplied short brass screws or socket head screws (with supplied allen key)

WIRING DIAGRAM

WARNING: Ensure no loose copper strands

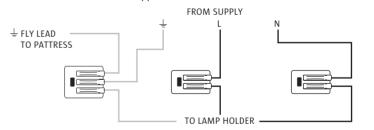

HANDLING & CLEANING

WARNING: Shut off power and allow to cool

- Wipe gently with a dry, soft, cotton cloth
- Cleaning products, scratching, abrasion, damp, oils, liquids etc may have a detrimental effect