




FLYSCREEN FITTING INSTRUCTIONS TRIUMPH BONNEVILLE/T100 1999 onwards

Thank you for purchasing a Dart flyscreen. It has been carefully designed and manufactured to suit a specific motorcycle model and by following these instructions you should encounter no problems with fitting. The kit should comprise the following:

- 1 x Makrolon® polycarbonate screen
- 4 x EPDM rubber grommets
- 1 x left hand mounting bracket
- 1 x right hand mounting bracket
- 4 x stainless hex head machine screws
- 4 x washers

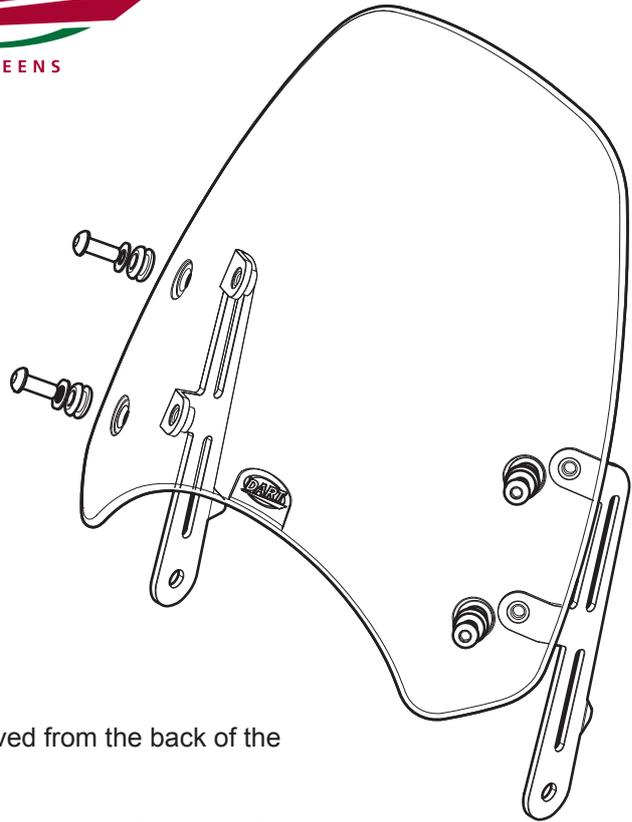

- 1 Fit the grommets to the screen - this is best achieved from the back of the screen blade.
- 2 Using a 13mm socket, remove the bolt holding the headlamp to the right hand headlamp bracket.
- 3 Fit the right hand screen mounting bracket on the headlamp bracket and refit the bolt. If your bike has a rubber mounted headlight (up to 2009 model year) make sure the large washer is on the outside of the screen bracket, so the screen bracket bears directly onto the rubber mounting. If your bike has the later, rigid headlight mount, then place the screen bracket outside the large washer, and then fit the bolt. In both cases, ensure that the triangular step at the back of the screen mounting bracket is resting fully on the headlamp bracket before tightening.
- 4 Repeat operation for left hand side. If one side is fully tightened before the other is attempted then the headlamp should not need readjusting.
- 5 With both brackets fixed, hold the screen blade in position and loosely fit the bottom two hexagon head machine screws with their washers, ensuring that they engage in the captive nuts on the brackets. Do not tighten these yet.
- 6 Fit the top two machine screws. Note that the screen is held by a small amount of tension and the brackets may have to be forced slightly to accommodate this. Once everything is in position, gradually tighten all the screws evenly until they are seated on the brackets. Do not overtighten these screws as damage to the brackets or threads may result.
- 7 Double check that everything is sufficiently tight and if so, fitting is now complete!

MAINTENANCE: No special maintenance is required. Do not use solvents to clean - just warm soapy water. Many proprietary glass cleaners are suitable for polycarbonate - check the label before trying.

IMPORTANT NOTICE: Whilst the screen provides a good level of impact protection, it is not warranted unbreakable. It is NOT a substitute for eye protection, which should be worn at all times while riding.

Designed and produced by Dart Flyscreens Ltd, 59 Boyne Road, London SE13 5AN
e-mail: steve@dartflyscreens.com