KICKSTAND MANUAL FROG CITY | HYBRID | FIRST PEDAL Tel: +44 (0) 1784 557 300 Web: www.frogbikes.com Email: info@frogbikes.com

V1.2022



TOOLS NEEDED



4MM ALLEN KEY



1. The plastic packaging washers are for transportation only, and should be removed before installing the kickstand.



1. If installed correctly, the kickstand should move up and down with a firm movement of the foot.





2. Locate the mounting point underneath the left-side chain stay.




Down position



3. Attach bolts through the kickstand mount.



To adjust the height of the stand, simply pull the pin upwards with your thumb

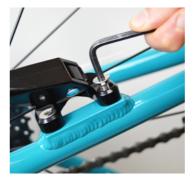

4. Tighten both bolts with an allen key to 10nm.



3. Slide the base to the desired height.



5. Ready for adjustment.



4. Close the pin to lock in position



COMPLETE!

You can fine-tune the positioning of your kickstand by opening the pin and trying different settings to achieve you desired outcome.



