


---

# C6A008BC01 C6A008GR01

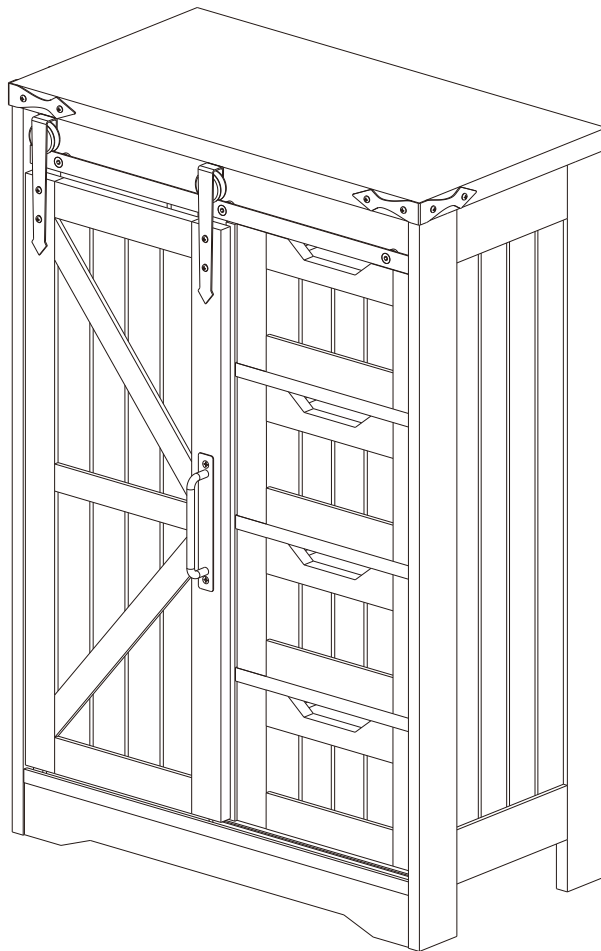


As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

**[hosoteservice@gmail.com](mailto:hosoteservice@gmail.com)**

Our professional after-sales team will serve you online all day.

# Before You Start

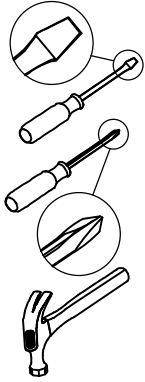

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)

## Helpful Hints

### PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.



- Identify, sort and count the parts before attempting assembly.

- Compression dowels are lightly tapped in with a hammer.



- Slides are labeled with an **R** (right) and **L** (left) for proper placement.



- Make sure to always face the point on the top of the Cam Lock towards the outer edge.

- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.



- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.




- Do NOT use harsh chemicals or abrasive cleaners on this item.




- Never push, pull, or drag your furniture.

# Board Identification


Not actual size

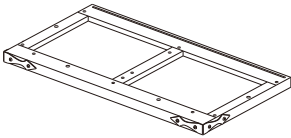


**A**  
TOP PANEL  
Qty:1

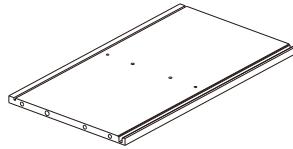


**B**  
FIXED SHELF  
Qty:1

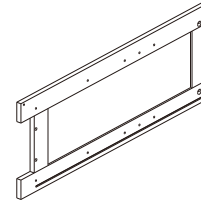


**C**  
BOTTOM PANEL  
Qty:1

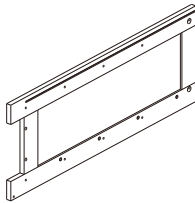


**D**  
LEFT SIDE PANEL  
Qty:1

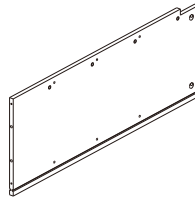


**E**  
RIGHT SIDE PANEL  
Qty:1




**F**  
MIDDLE SIDE PANEL  
Qty: 4




**G**  
SHELF PANEL  
Qty:1

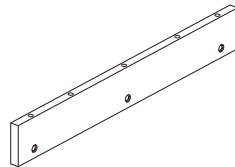


**H**  
LOWER BACK PANEL  
Qty:1

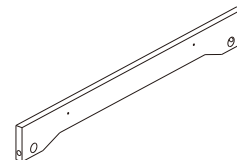


**I**  
**BACK SLAT**  
Qty:1

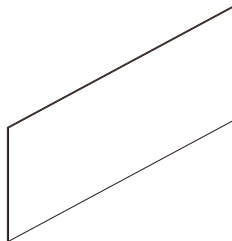

**J**  
**TOP FRONT RAIL**  
Qty: 2

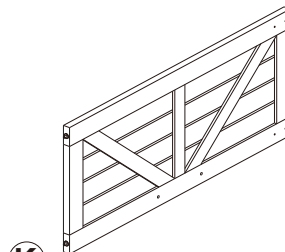

**K**  
LOWER BACK PANEL  
Qty: 1

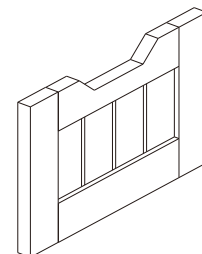


**L**  
LOWER BACK PANEL  
Qty: 4

---


# Board Identification

Not actual size

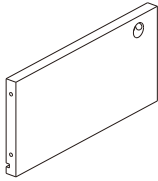


**(M)**

DOOR  
Qty: 4

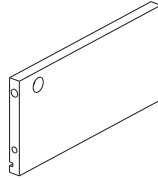


**(N)**

DRAWER FRONT PANEL  
Qty: 4

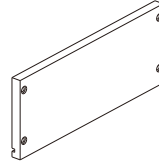


**(O)**

DRAWER LEFT SIDE PANEL  
Qty: 4



**(P)**


DRAWER RIGHT SIDE PANEL  
Qty: 4

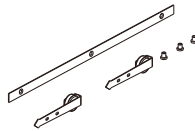


**(Q)**

DRAWER BACK PANEL  
Qty: 1


# Part List

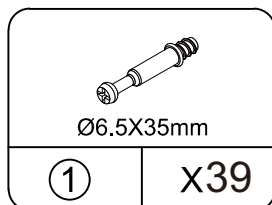


CAM LOCK  
spare: 2

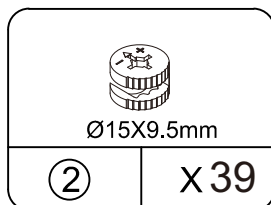


CAM BOLT  
spare:2

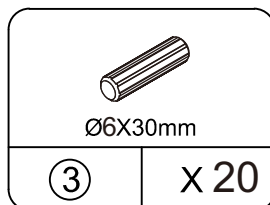



WOOD DOWEL  
spare: 2

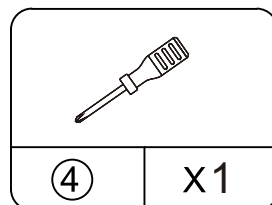


CROSS SCREWDRIVER

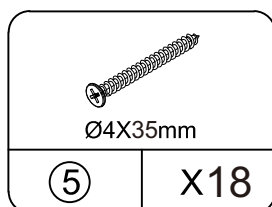


SCREW  
spare: 2

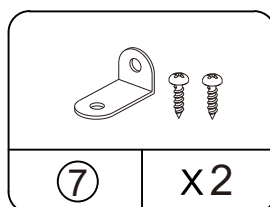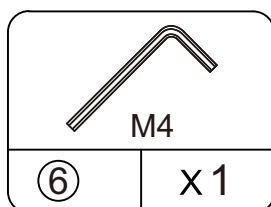


SCREW

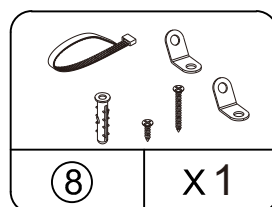


SCREW  
spare: 1

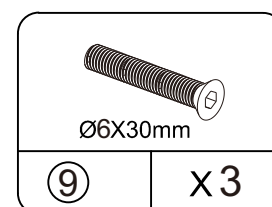


LEFT CABINET  
MEMBER

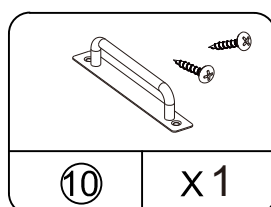


WOOD DOWEL

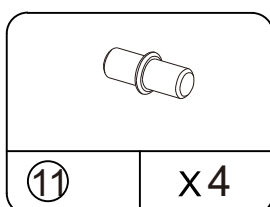


HANDLE

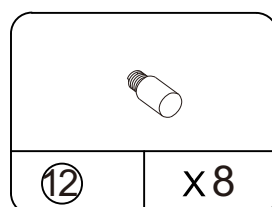

HANDLE

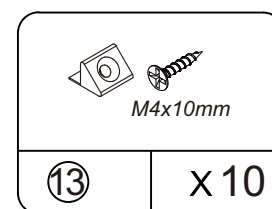

LEFT CABINET  
MEMBER

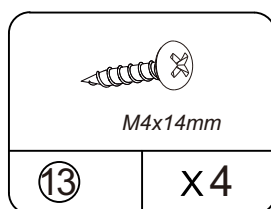

---


# Part List

---


## Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.


1

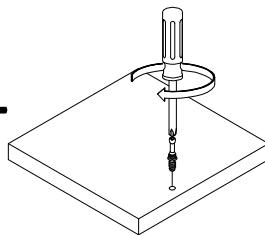

2

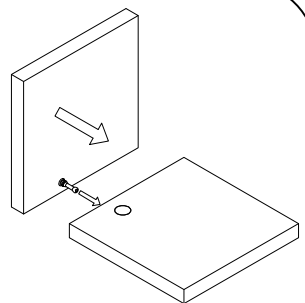


3

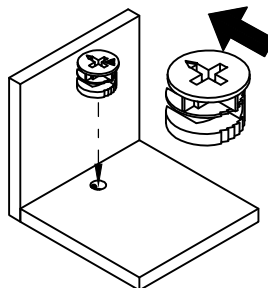

The opening must point toward the edge of the board


4

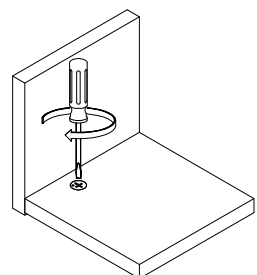




---

# Board Identification

Not actual size


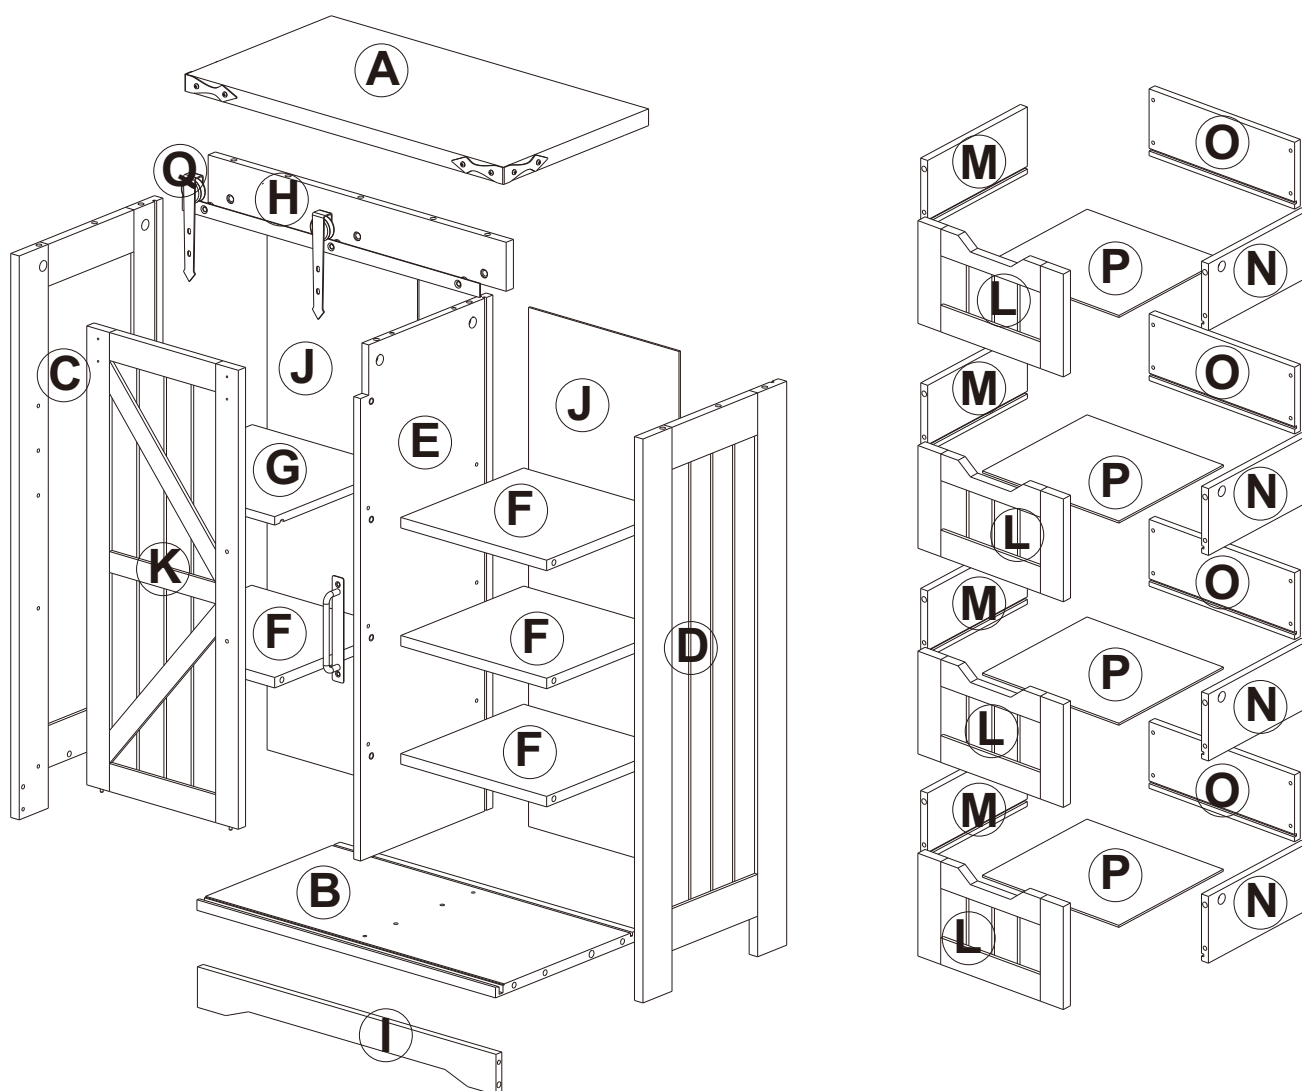


# STEP1

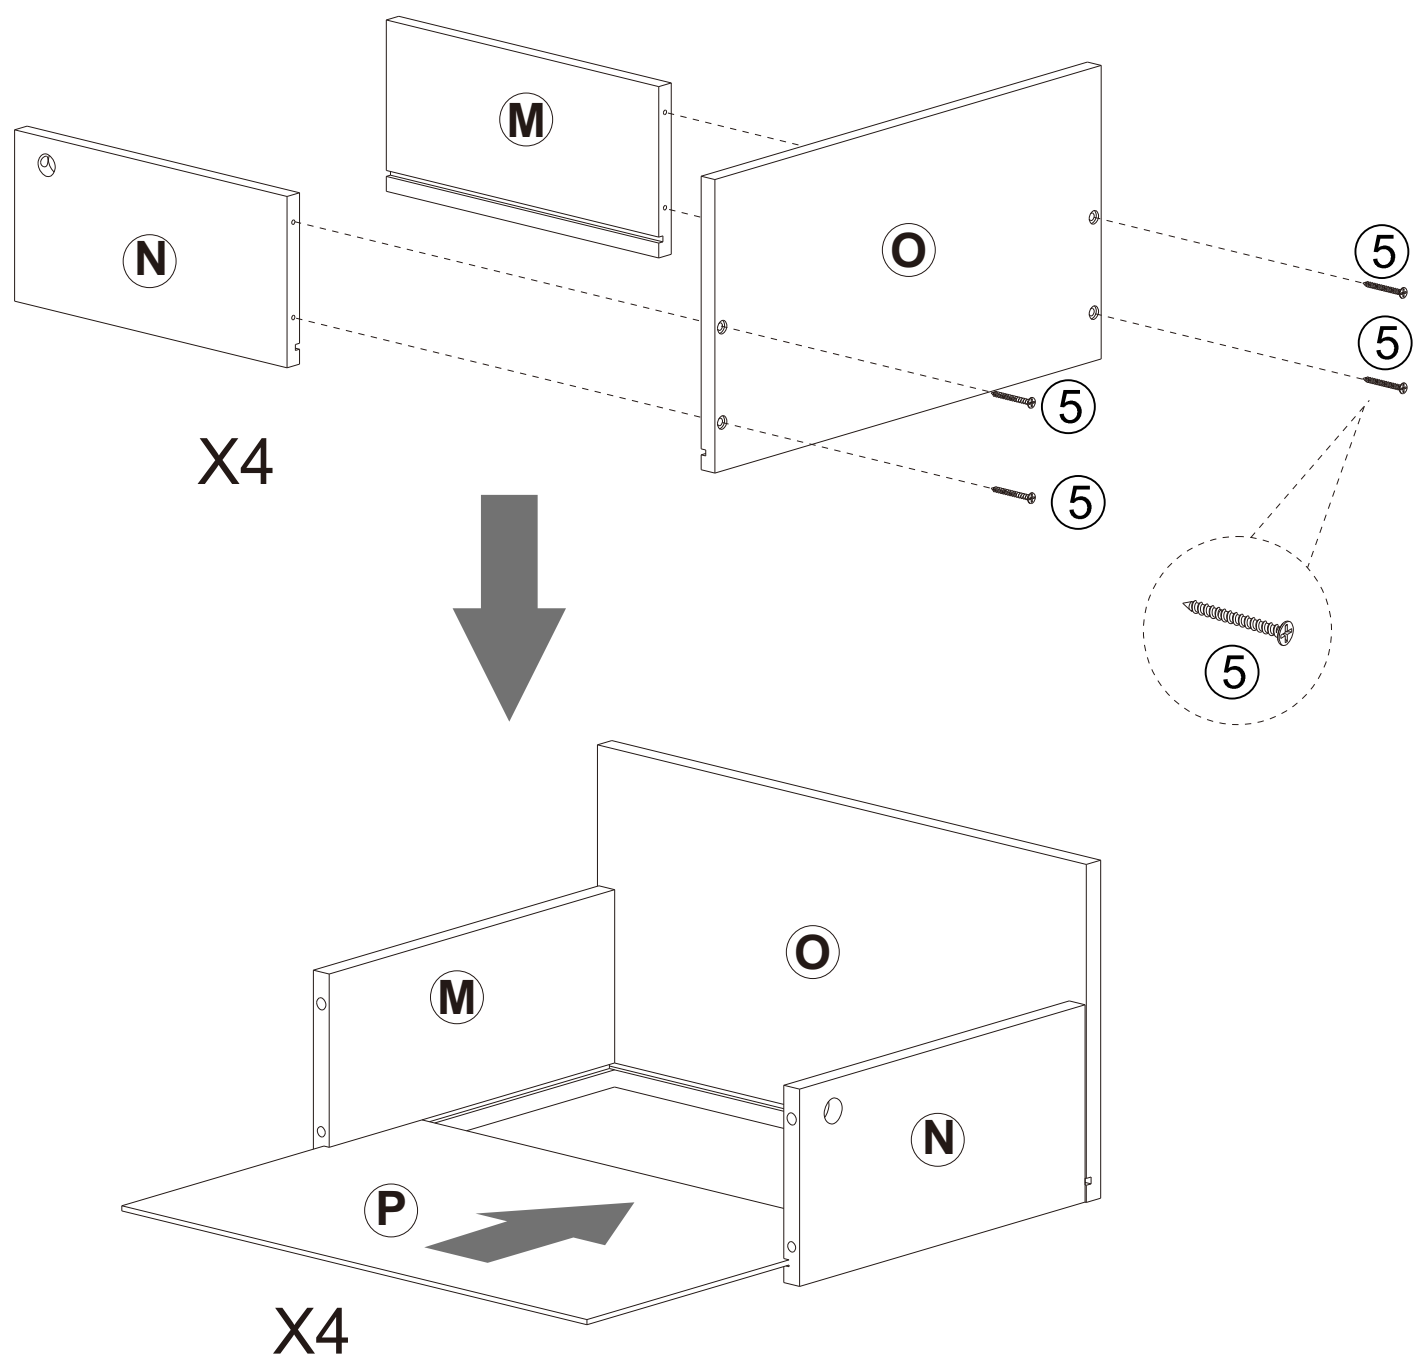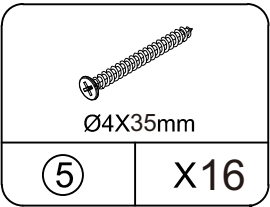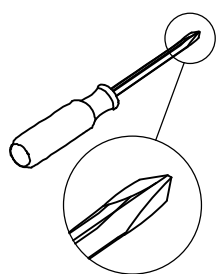








# STEP2




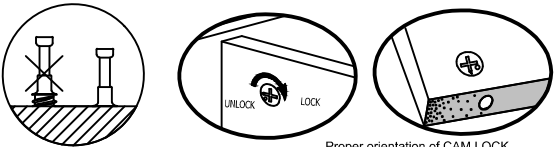
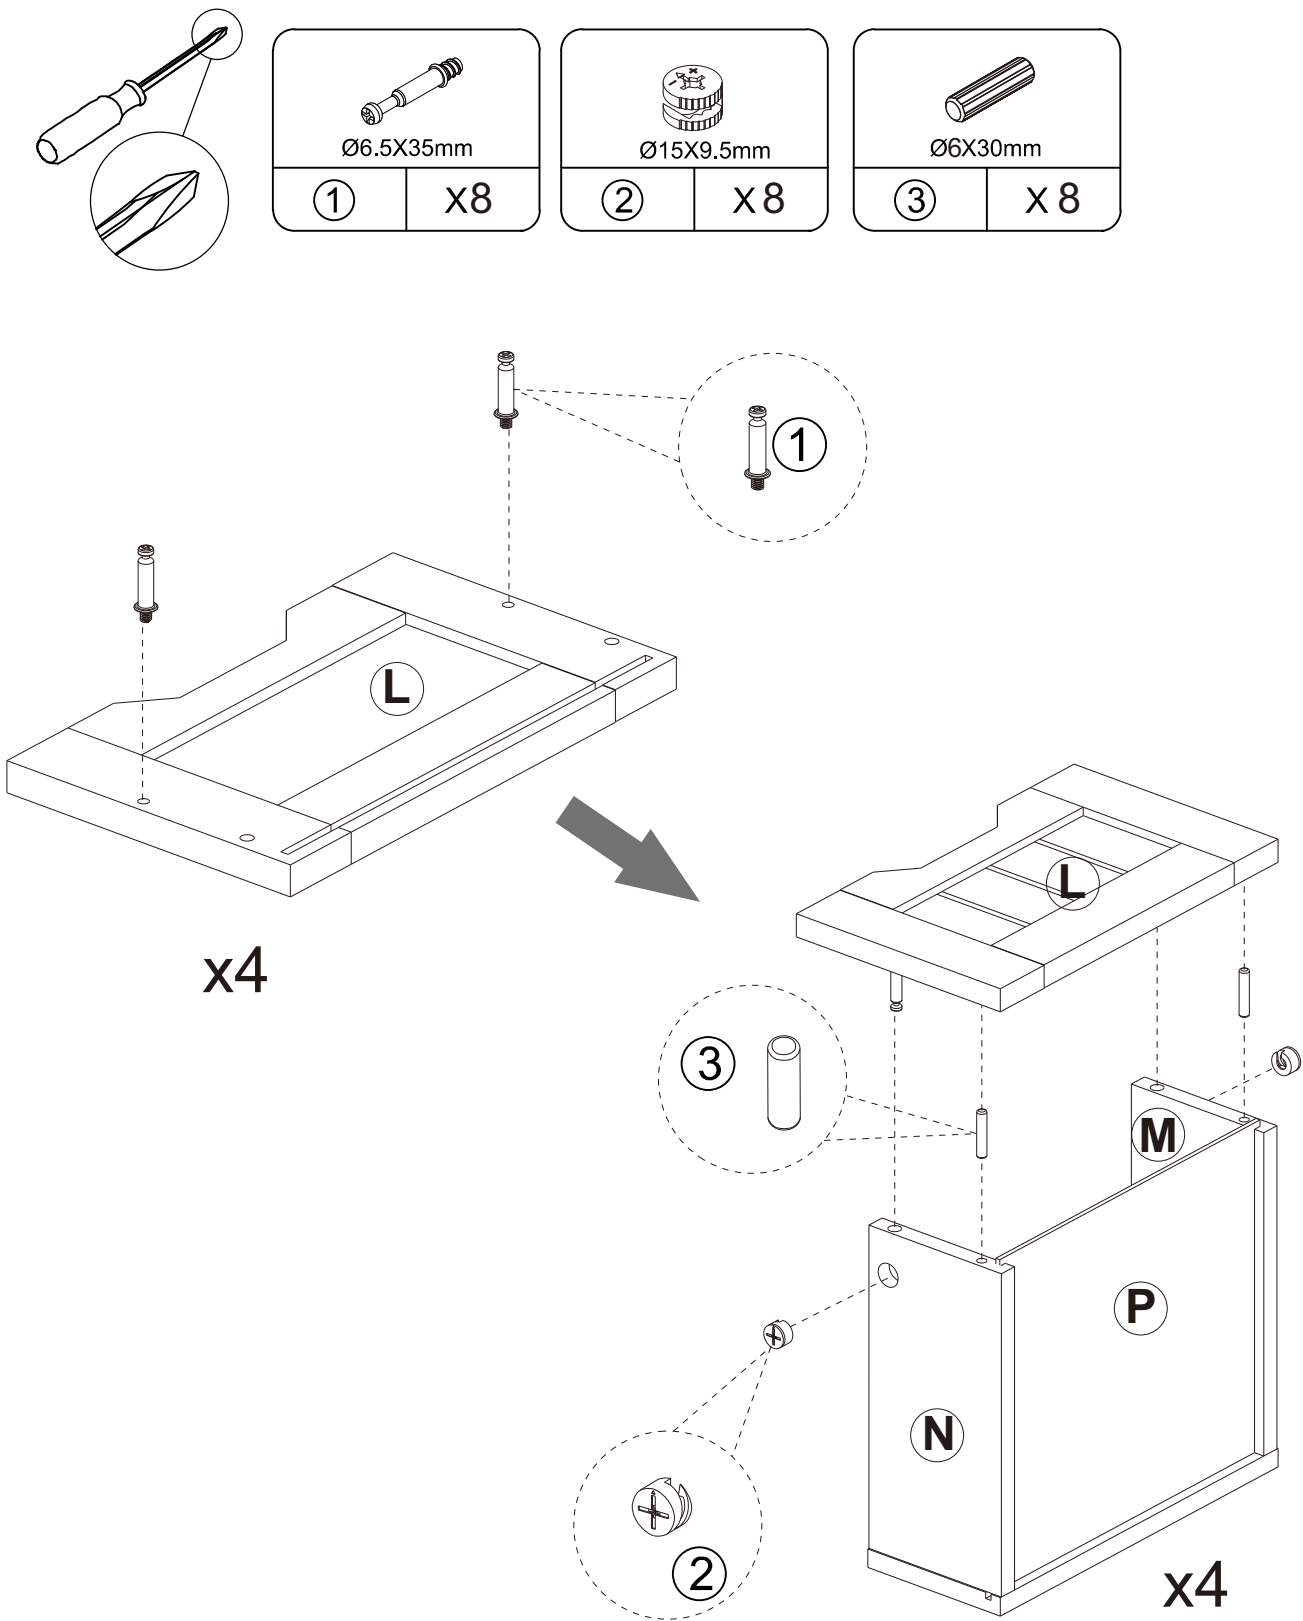


Proper orientation of CAM LOCK

# STEP3

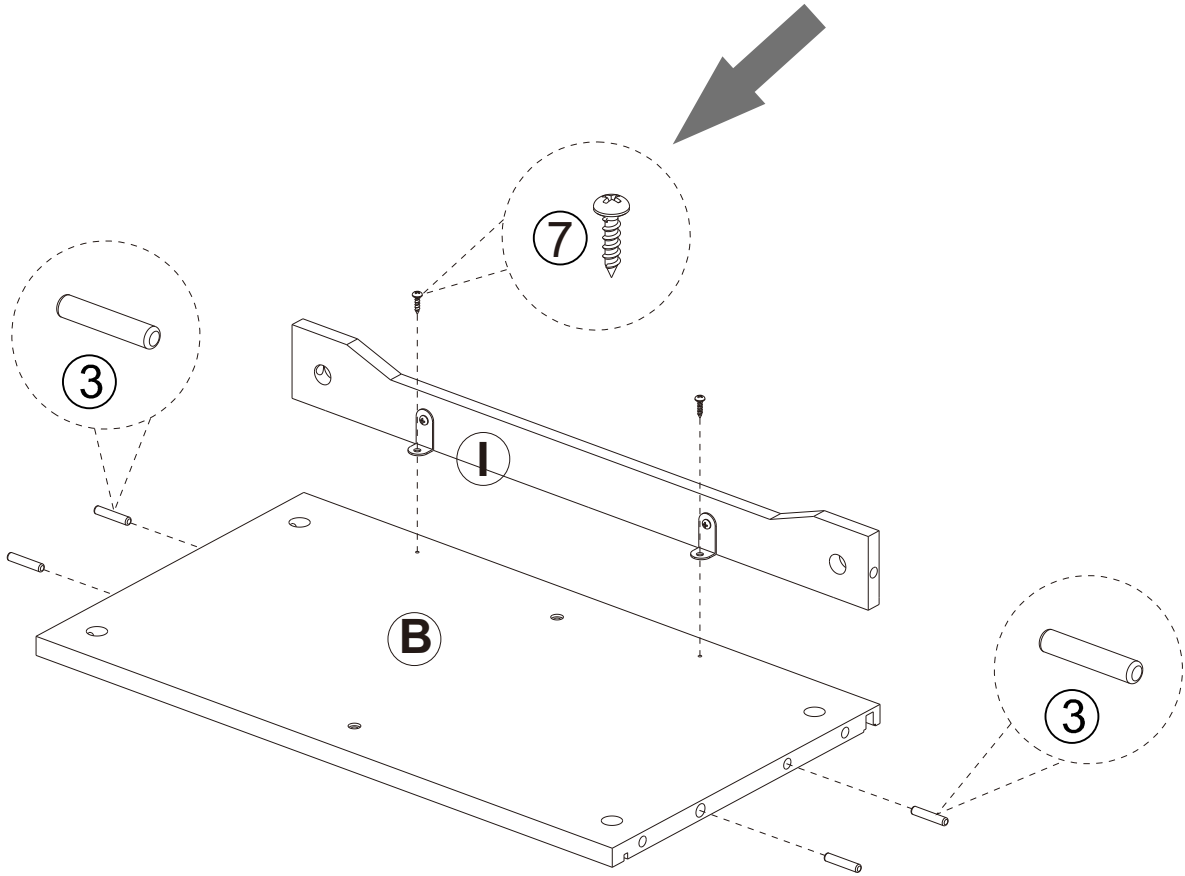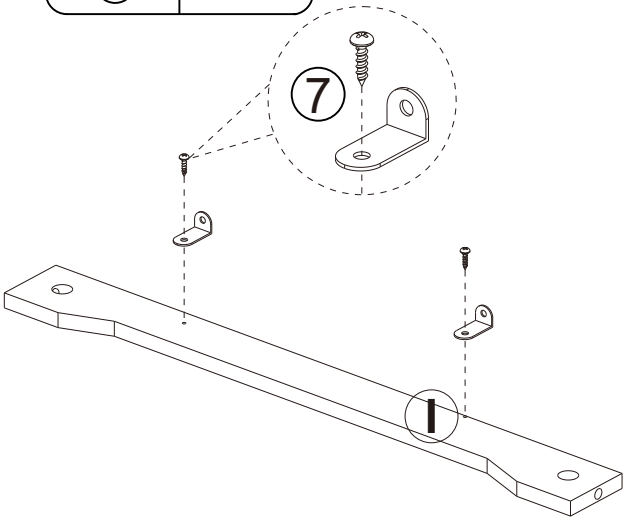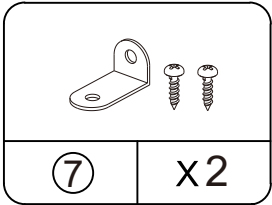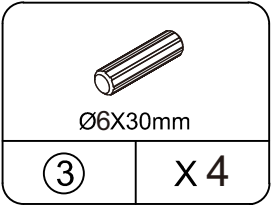
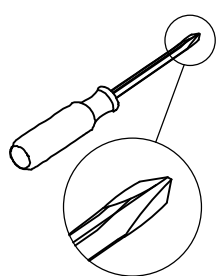


# STEP4

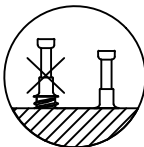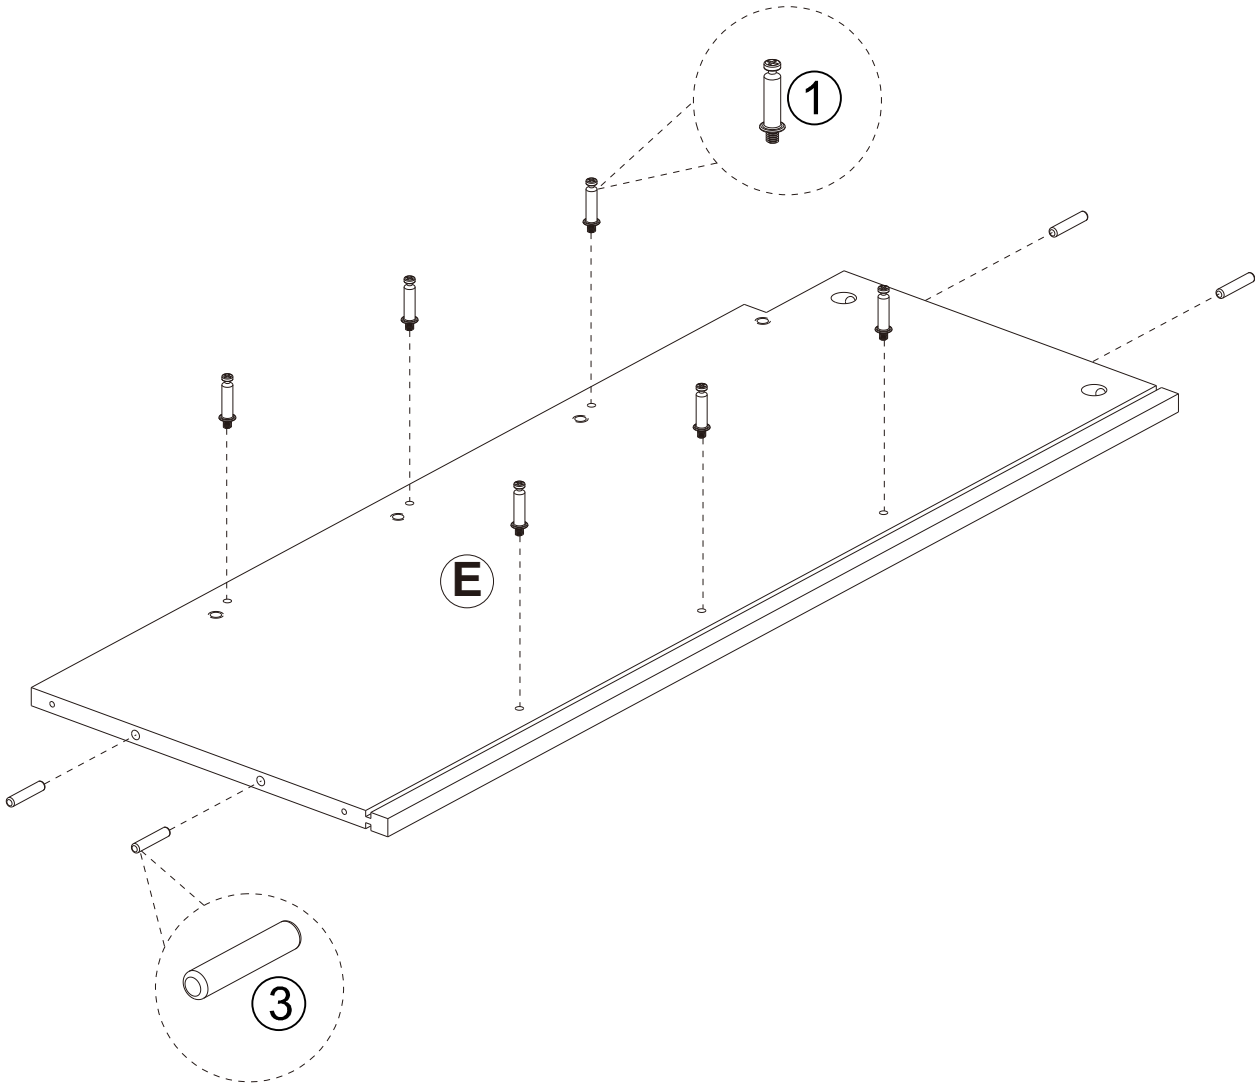
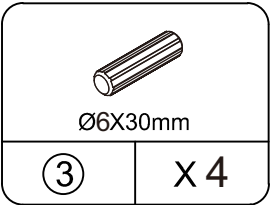
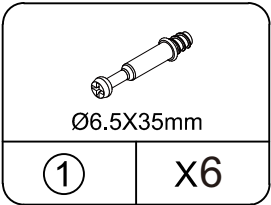
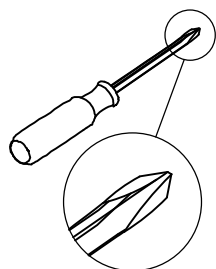


# STEP5







---

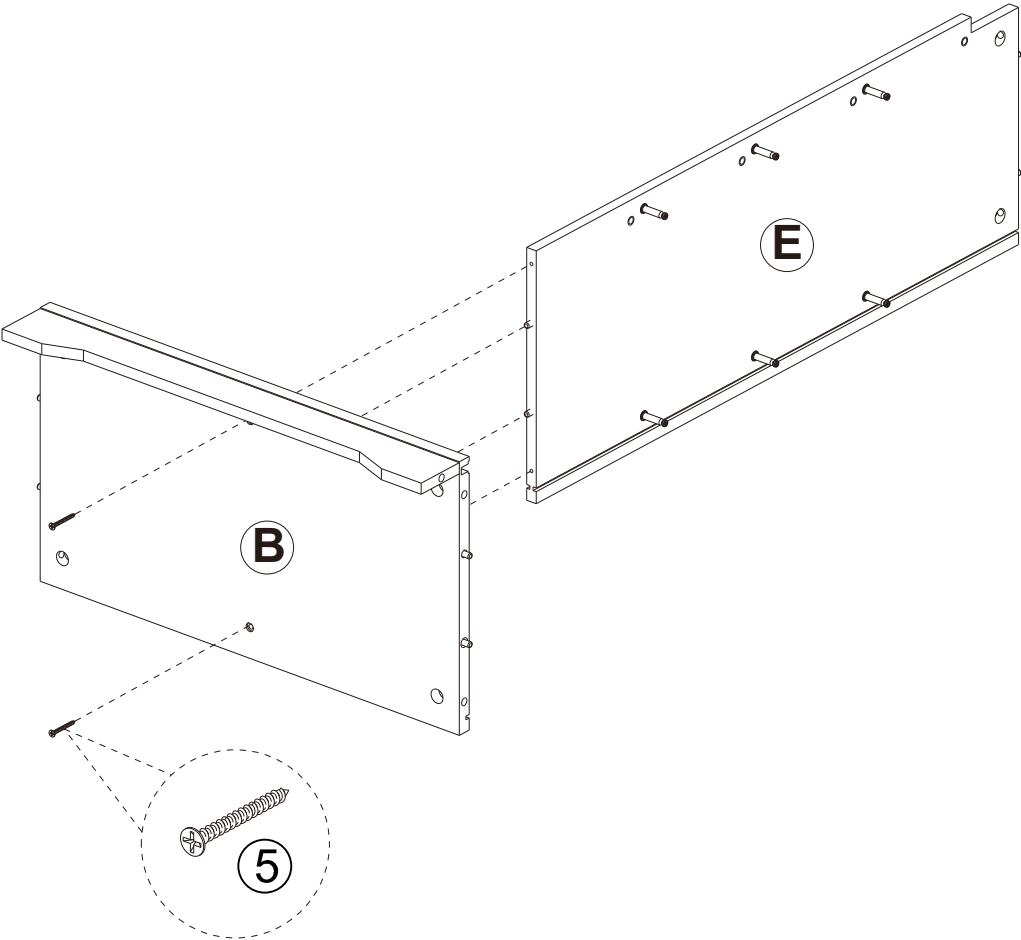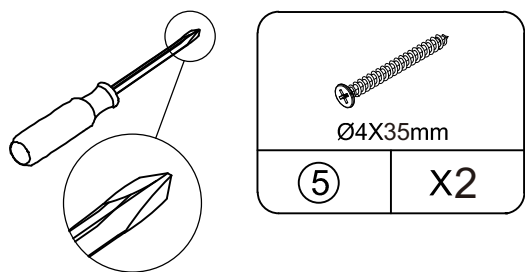





# STEP6

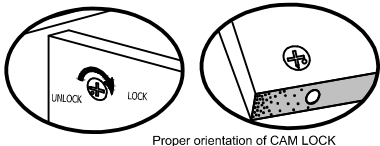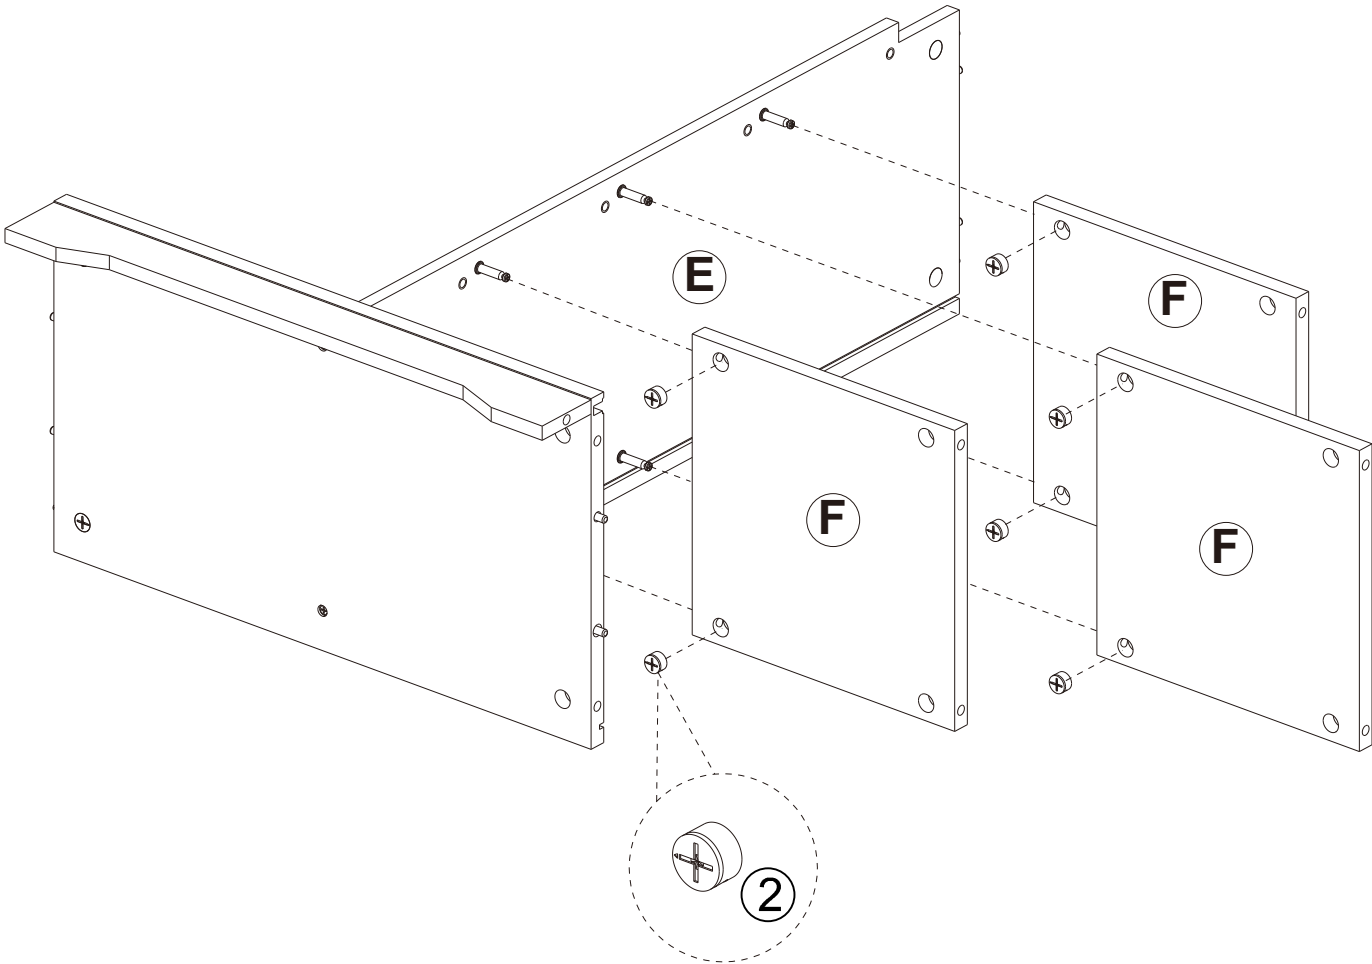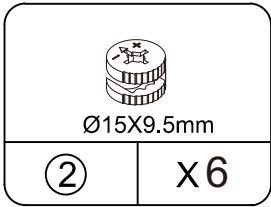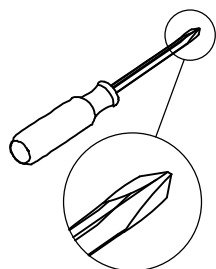

# STEP7

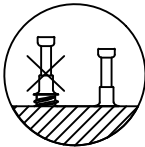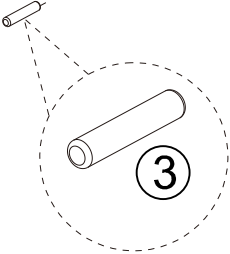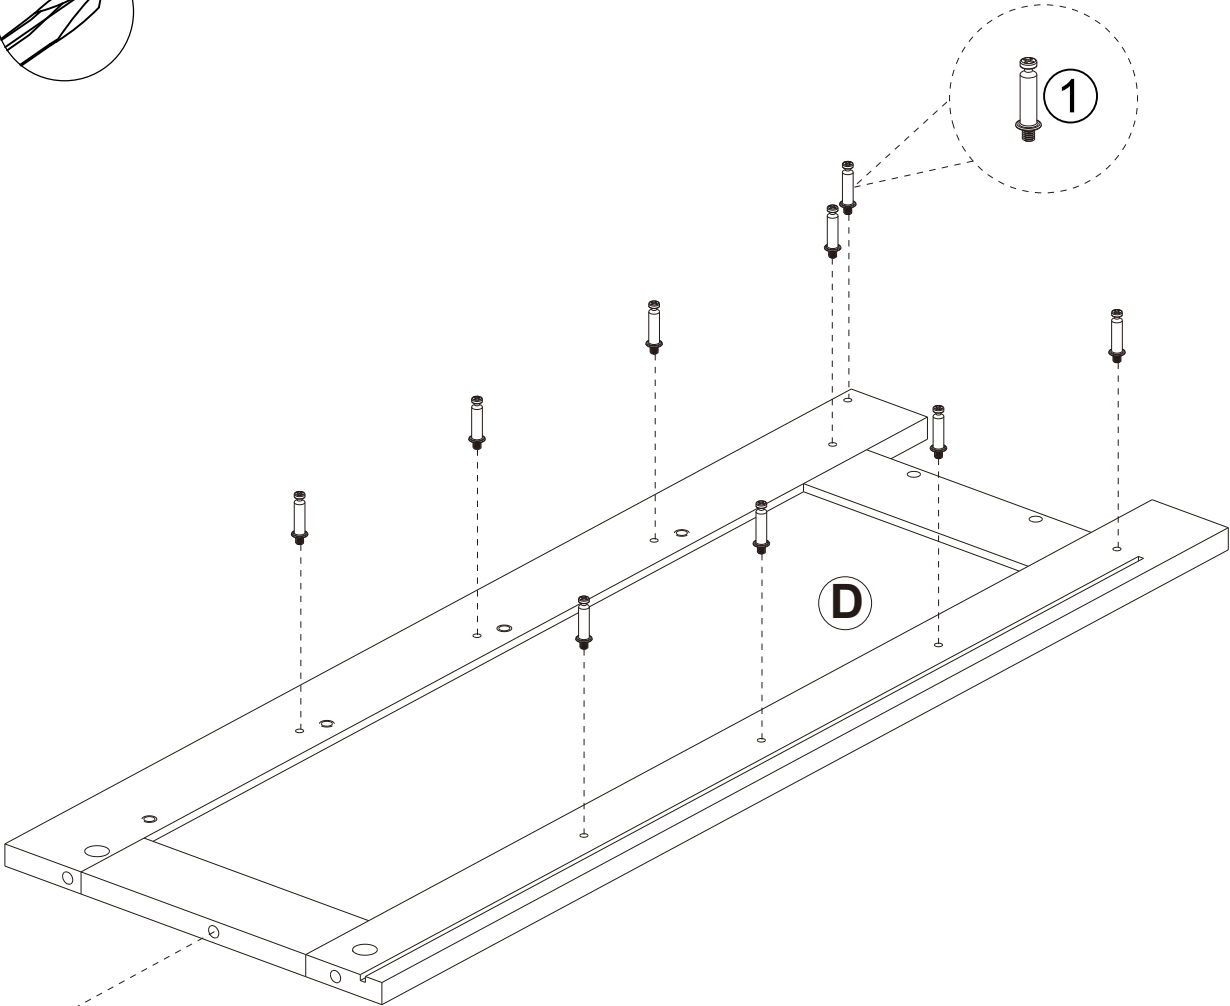
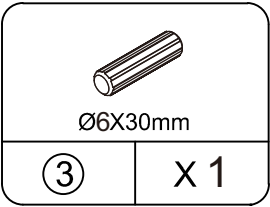
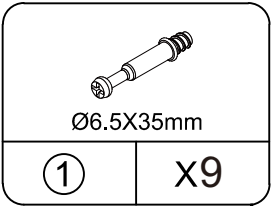
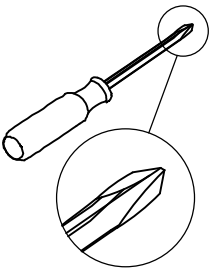


# STEP8

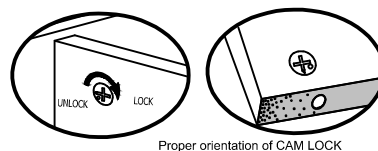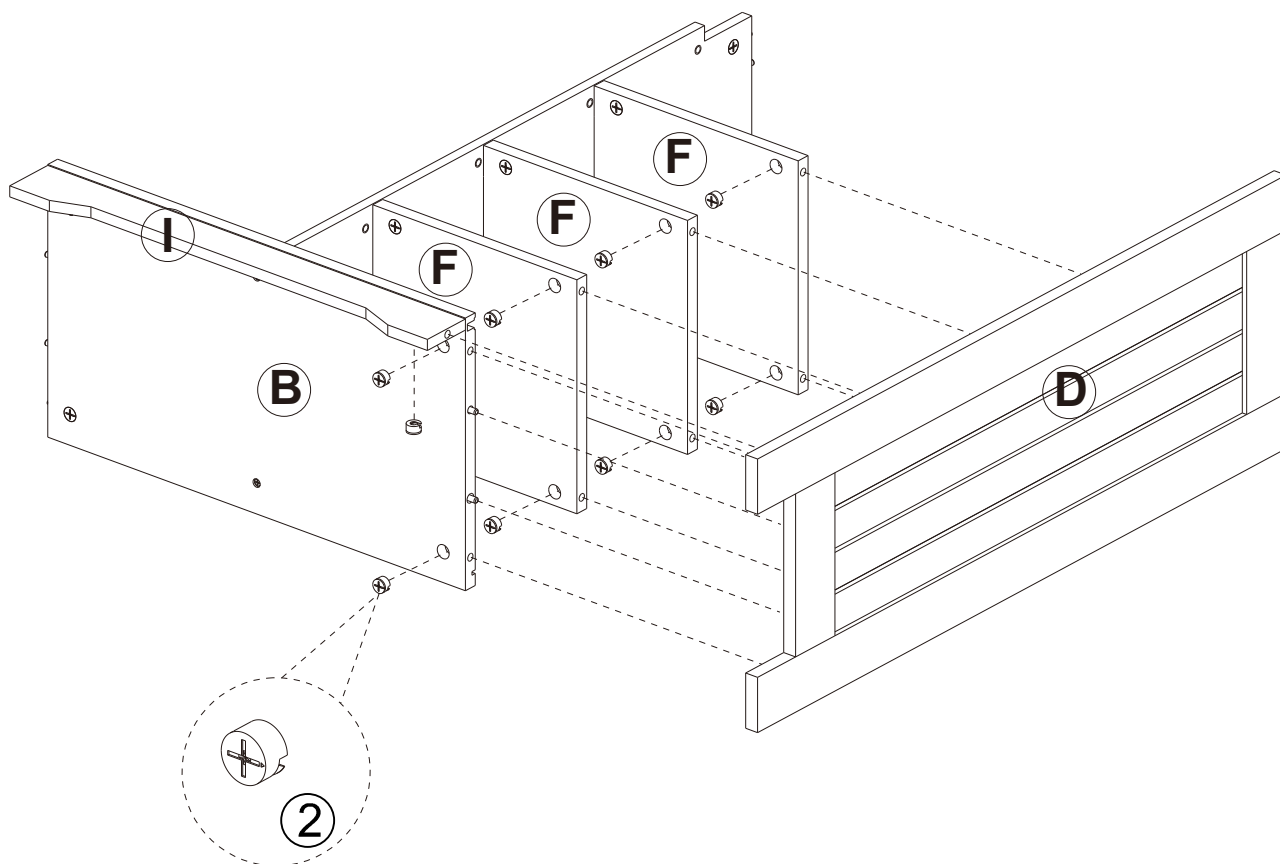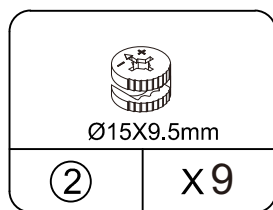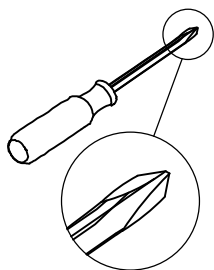




Proper orientation of CAM LOCK

# STEP9

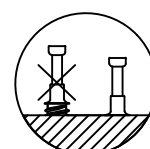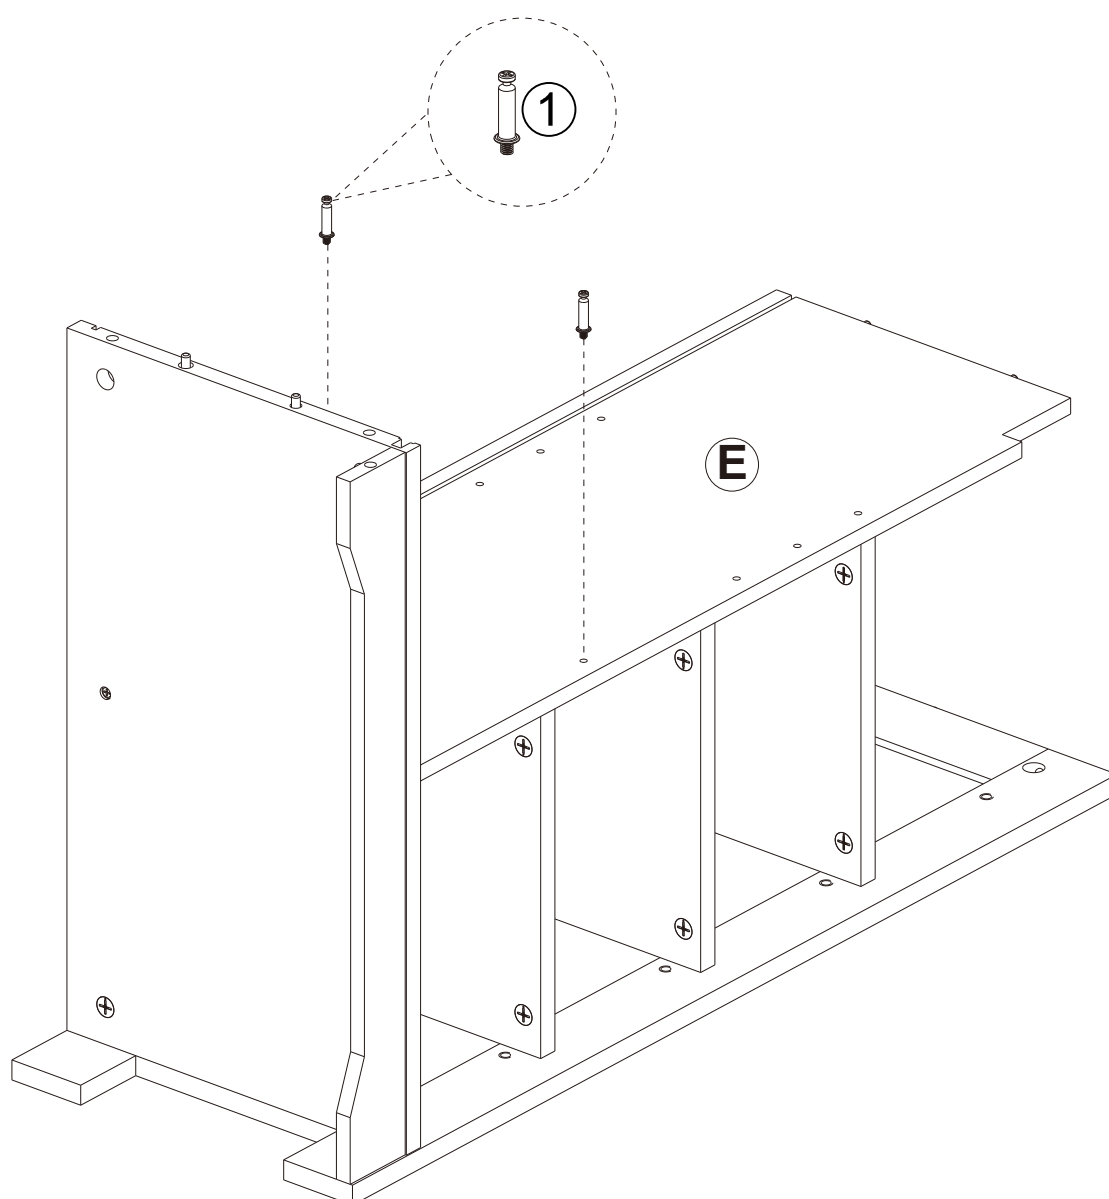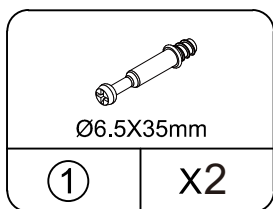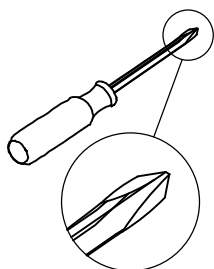








# STEP10


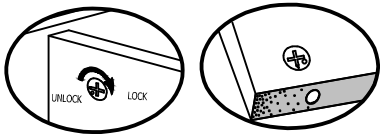
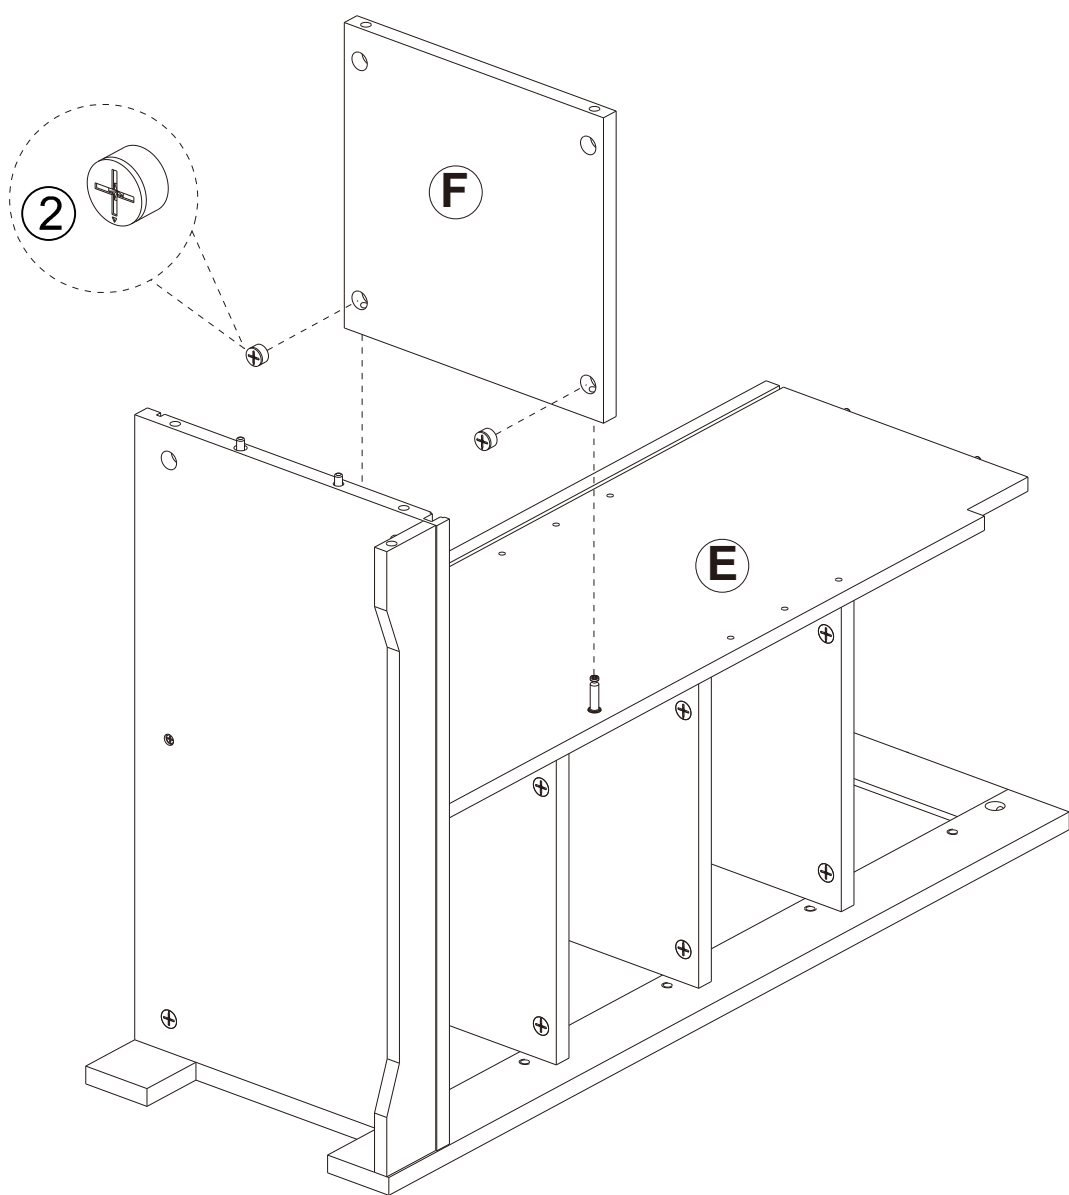
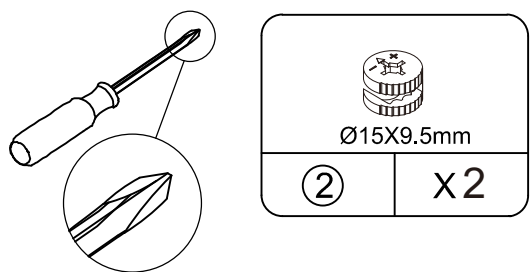


Proper orientation of CAM LOCK

# STEP11

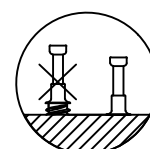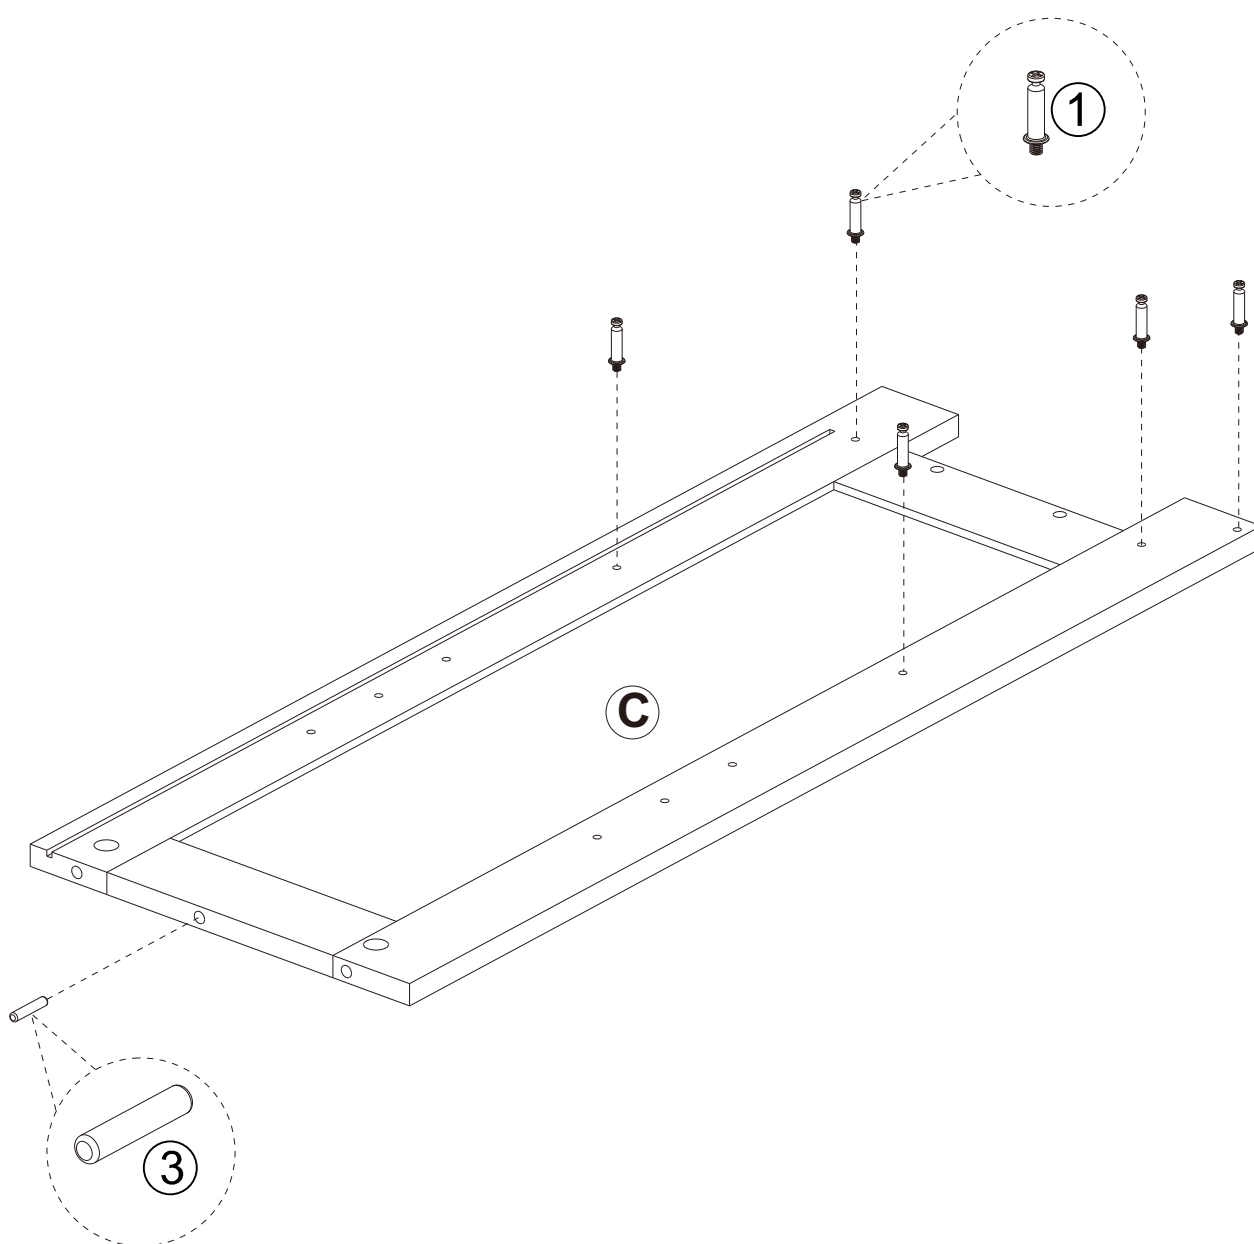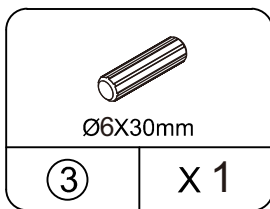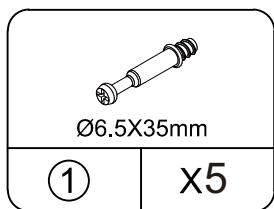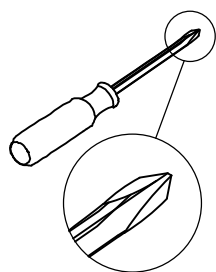


# STEP12

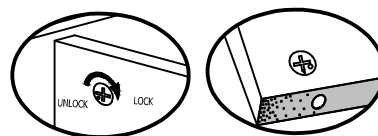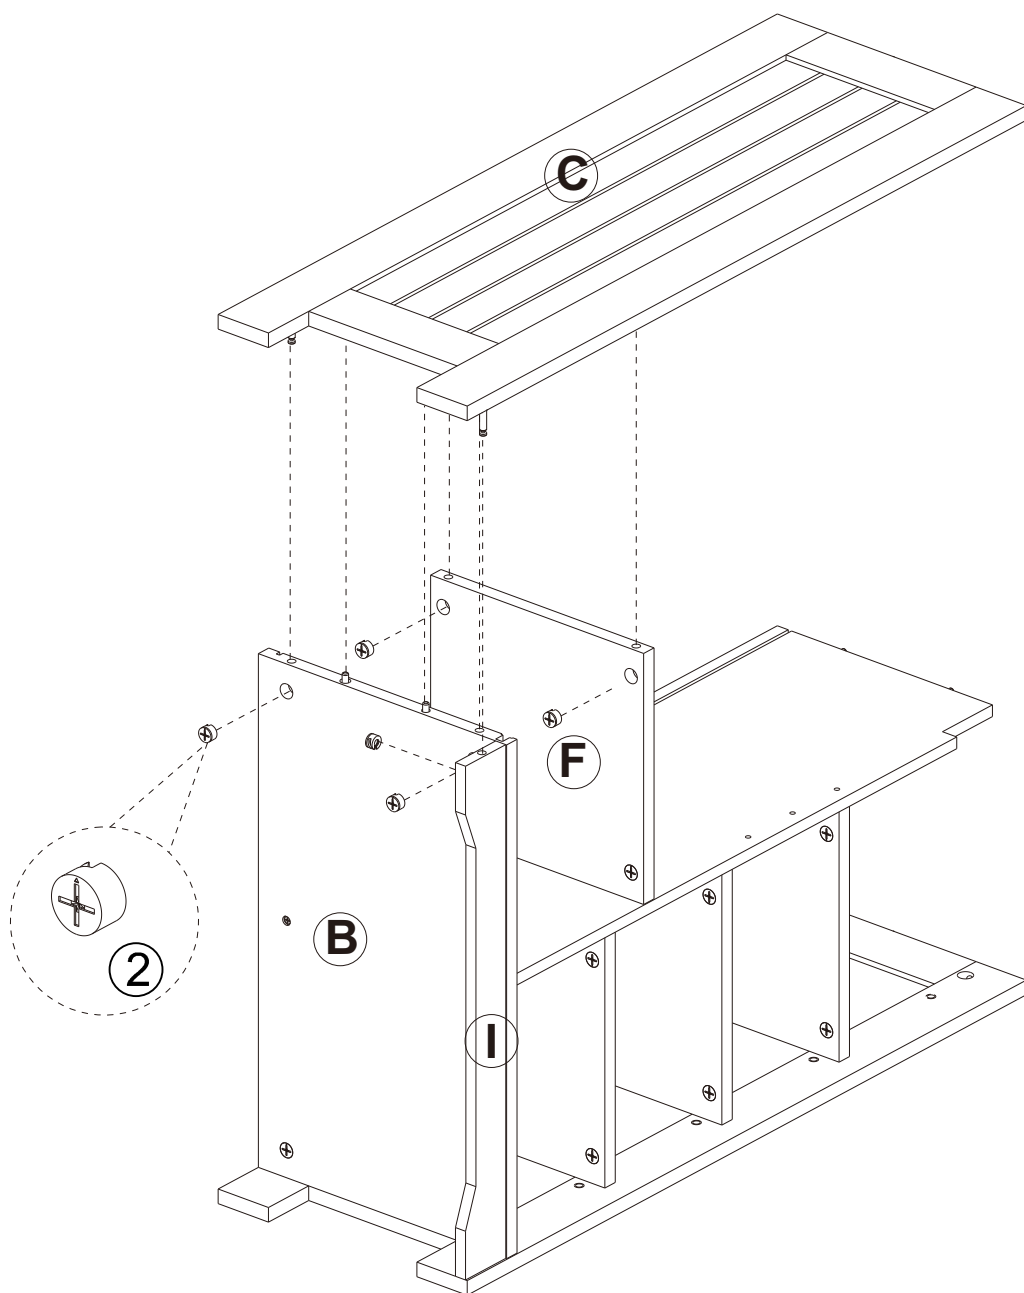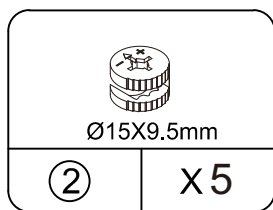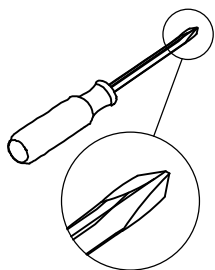












Proper orientation of CAM LOCK

# STEP13

---




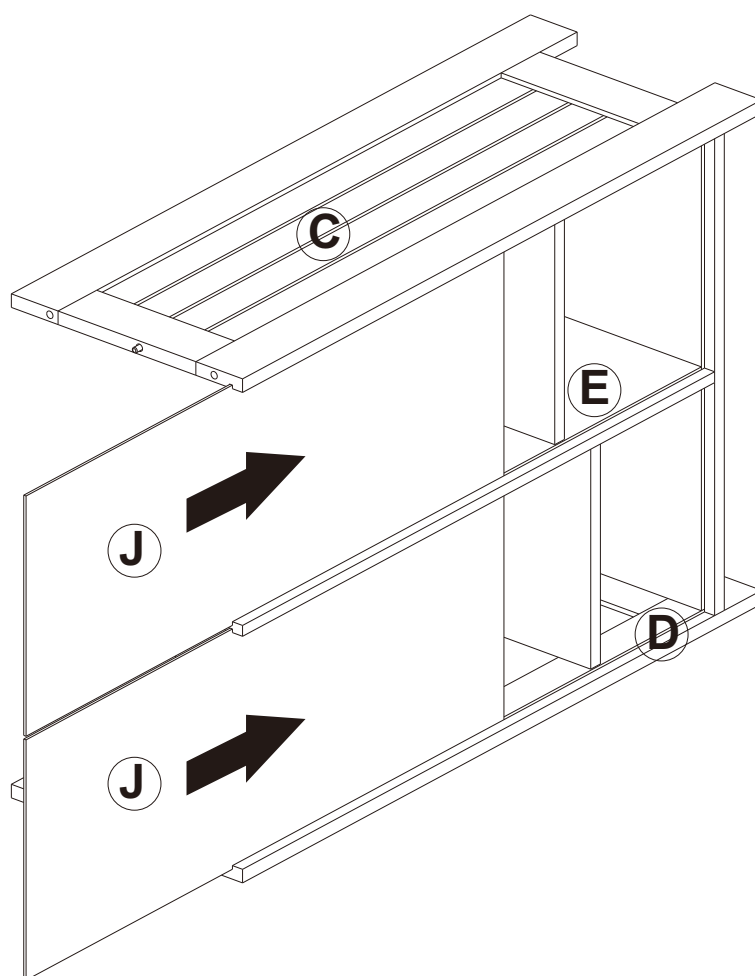


# STEP14

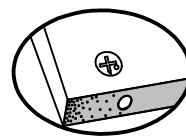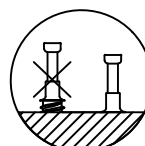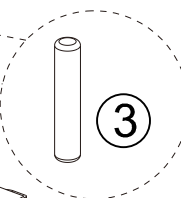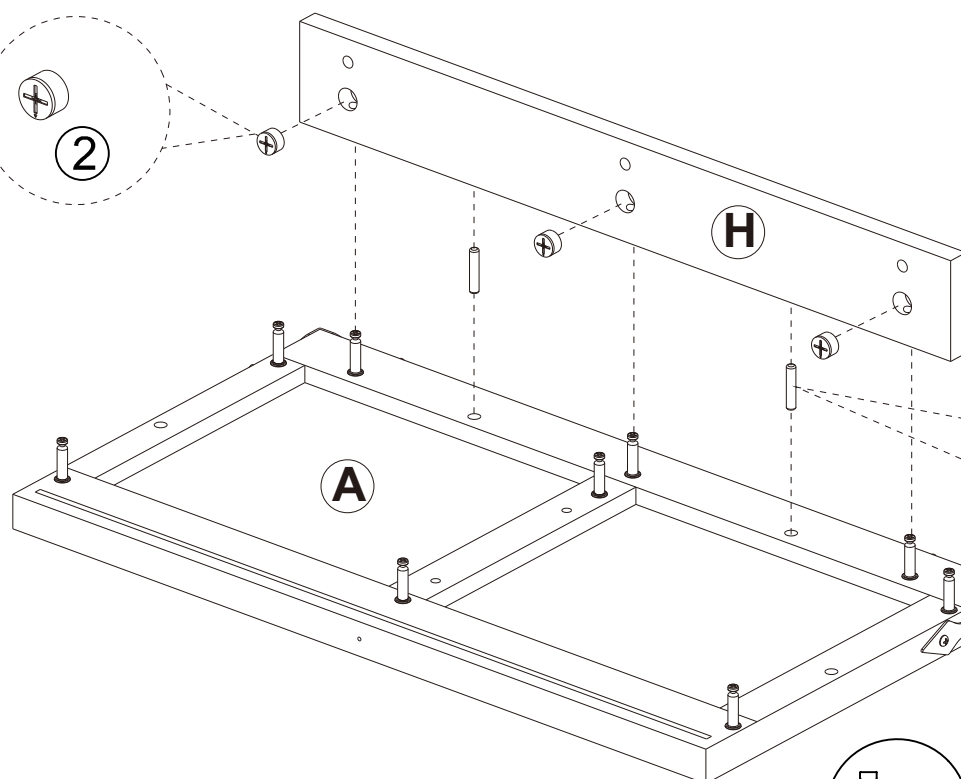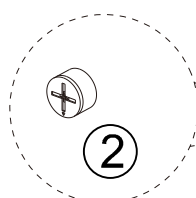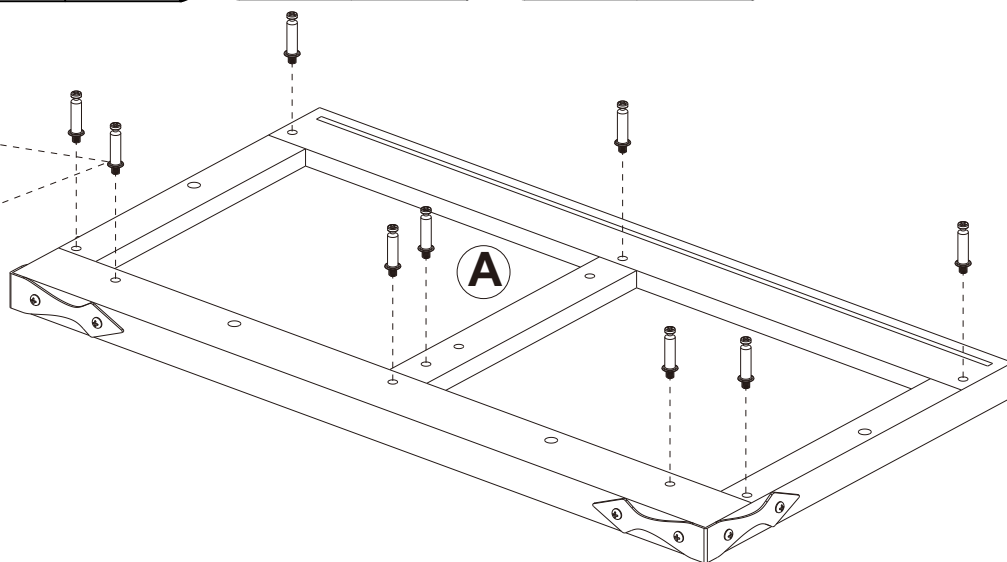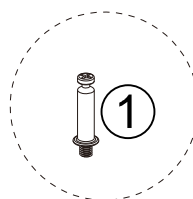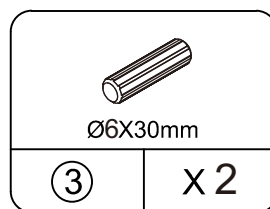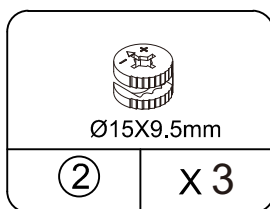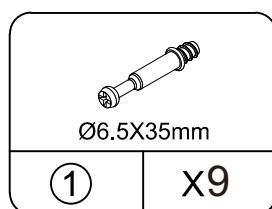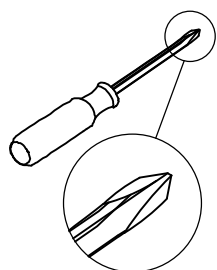



Proper orientation of CAM LOCK

# STEP15

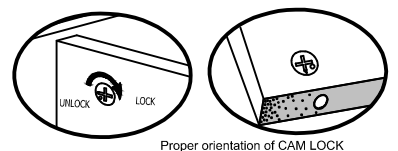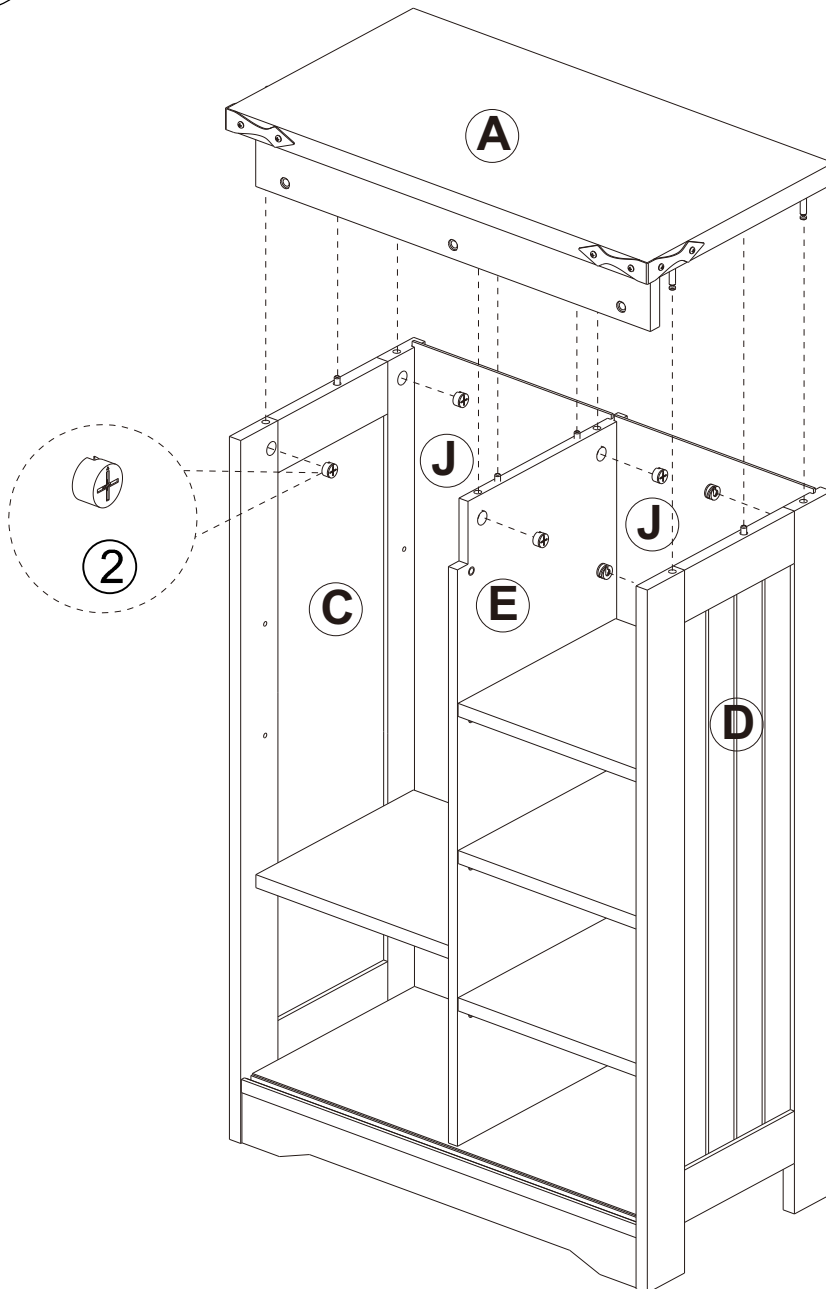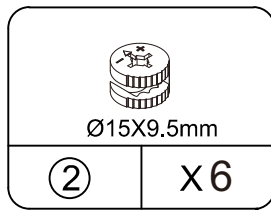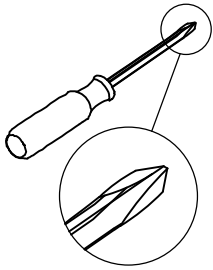



# STEP16

---

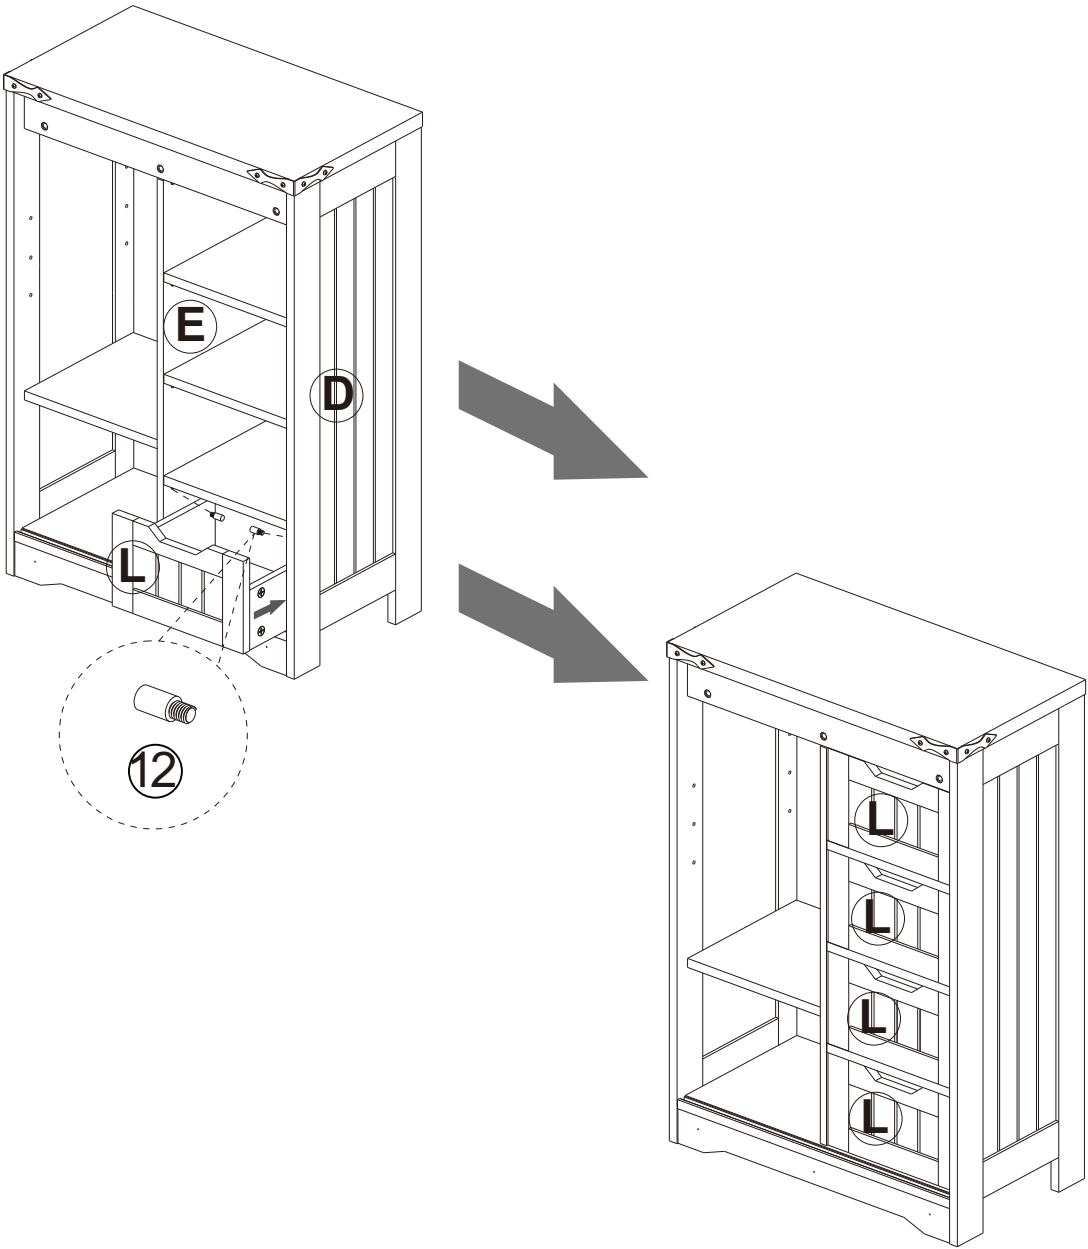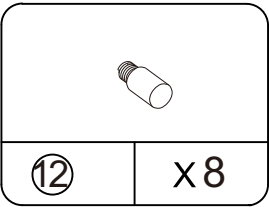







# STEP17

---

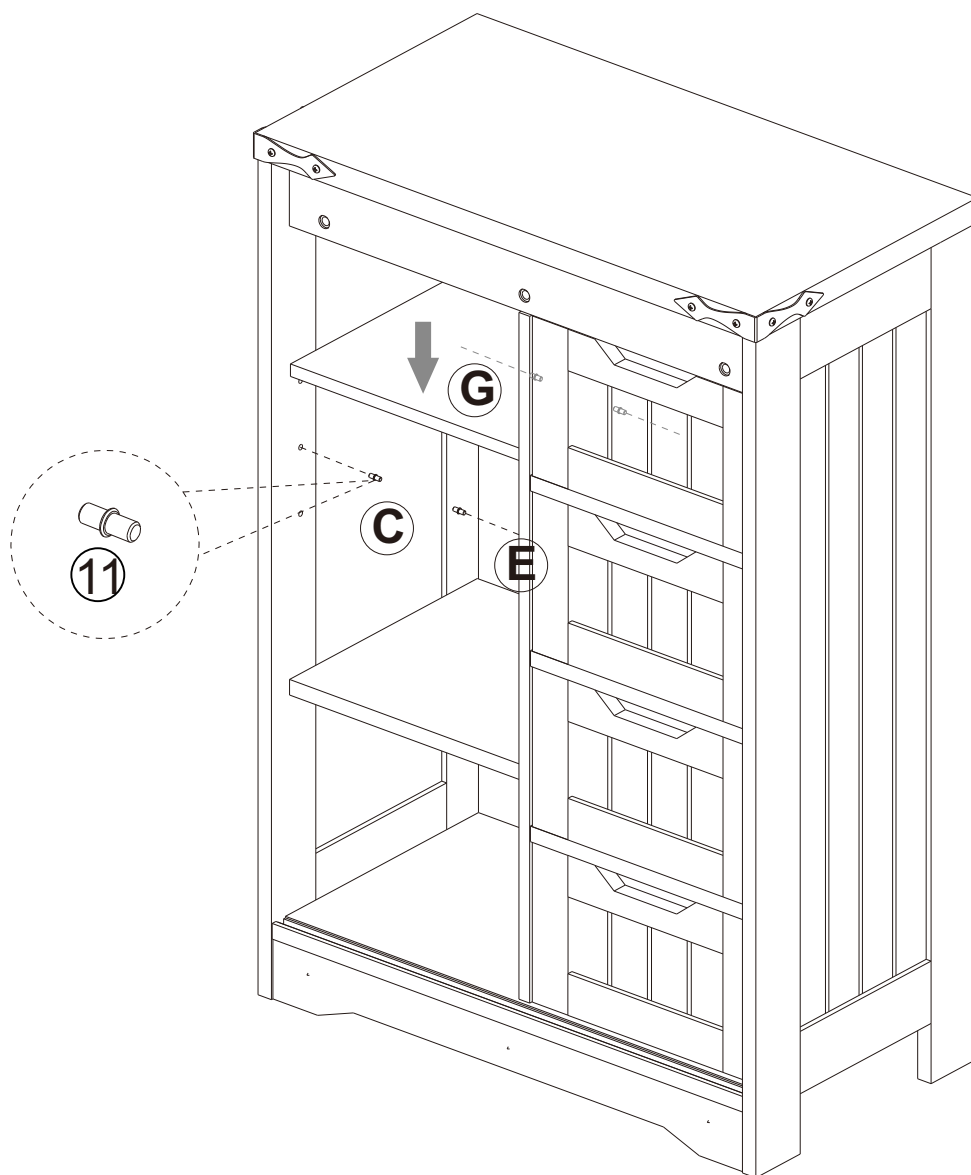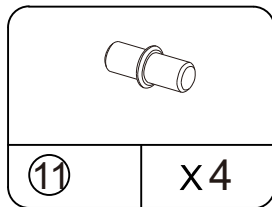




# STEP18

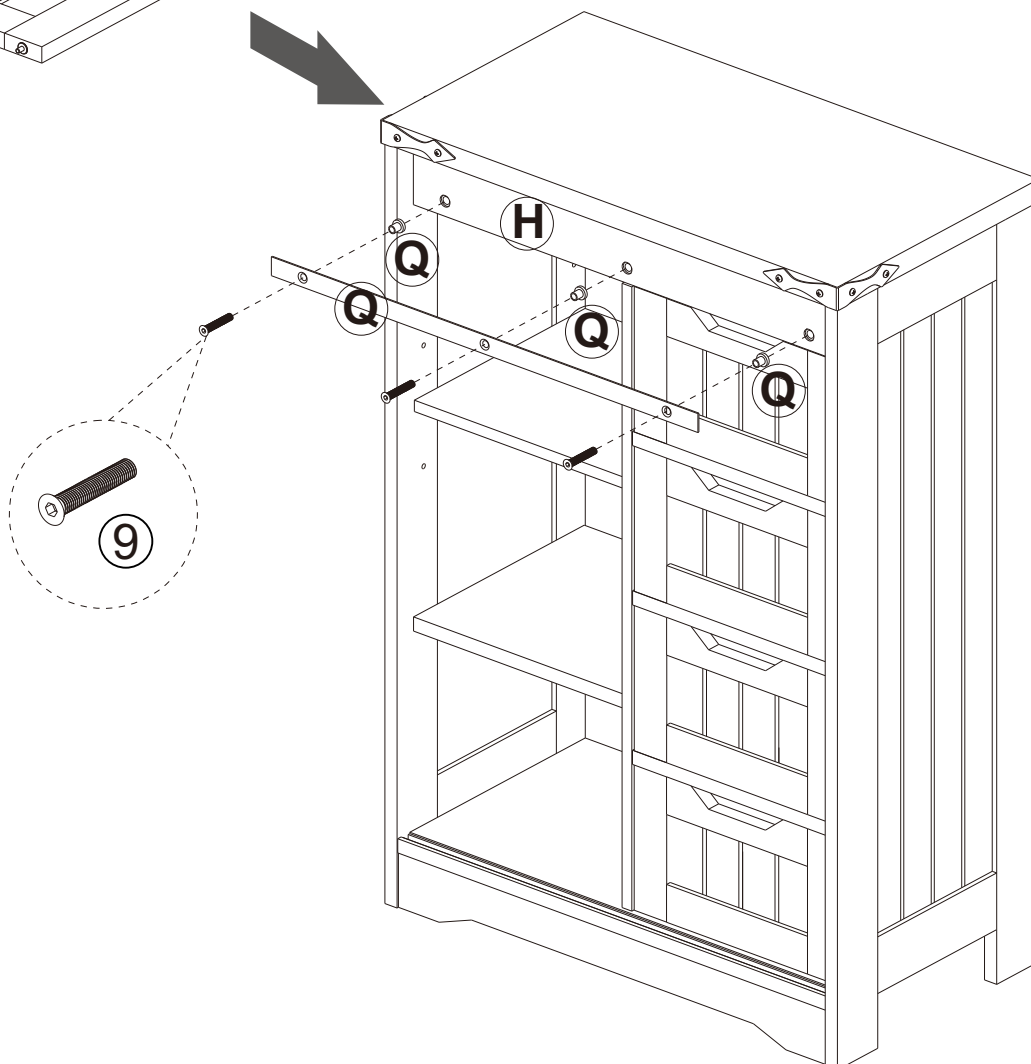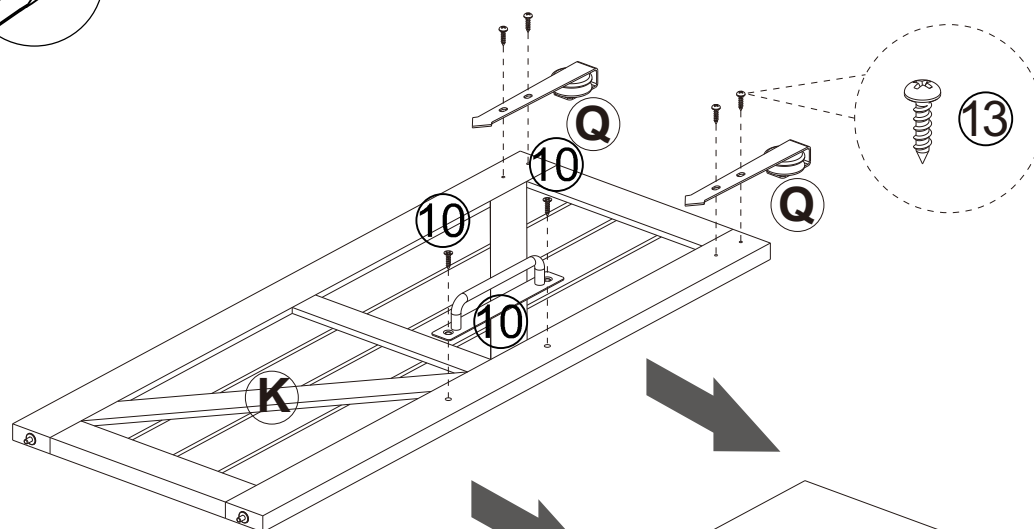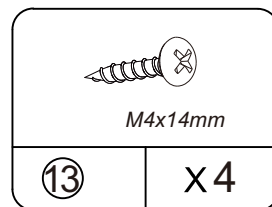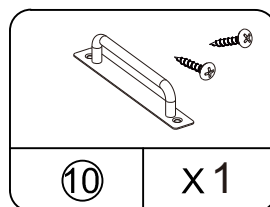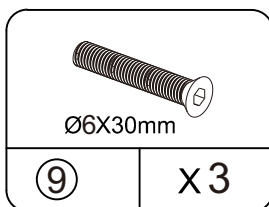
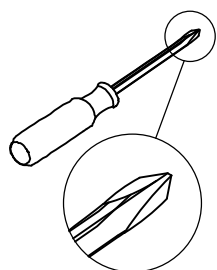


# STEP19

---

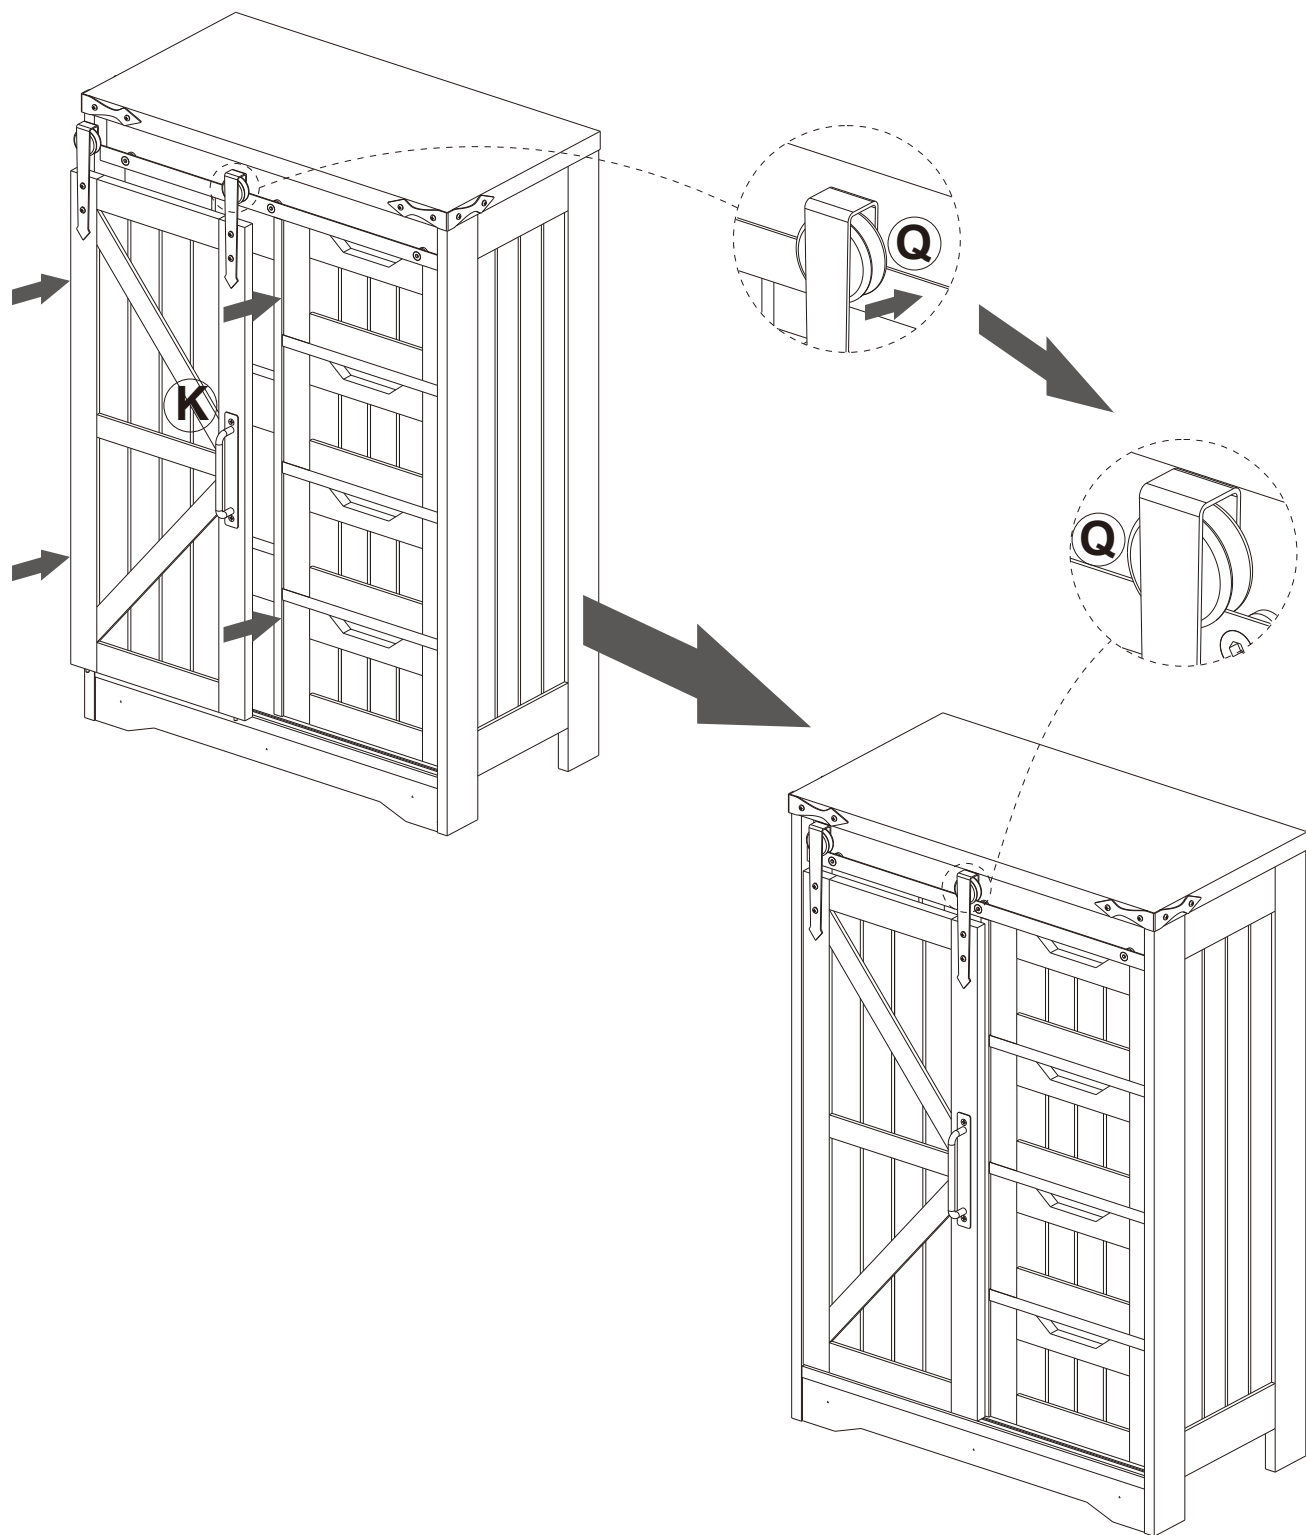

# STEP20

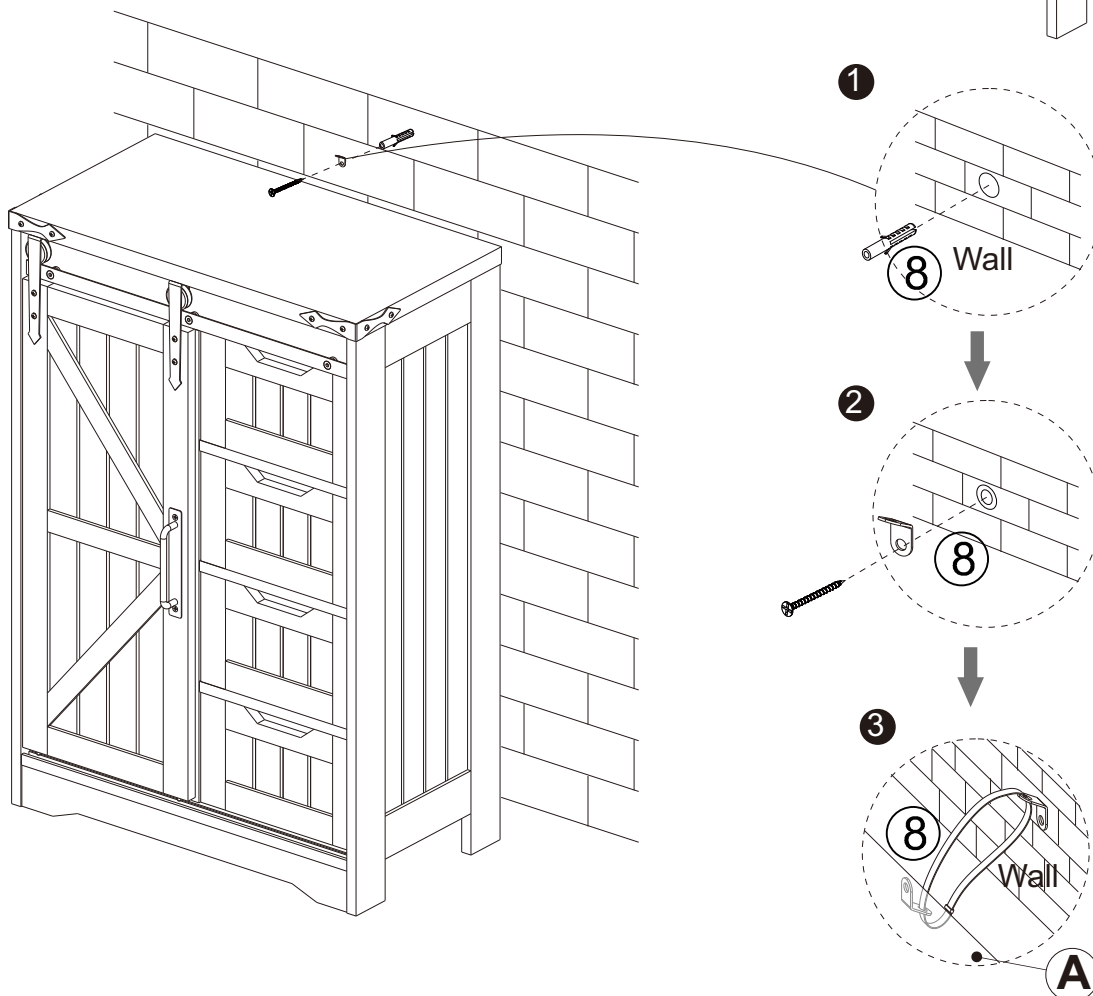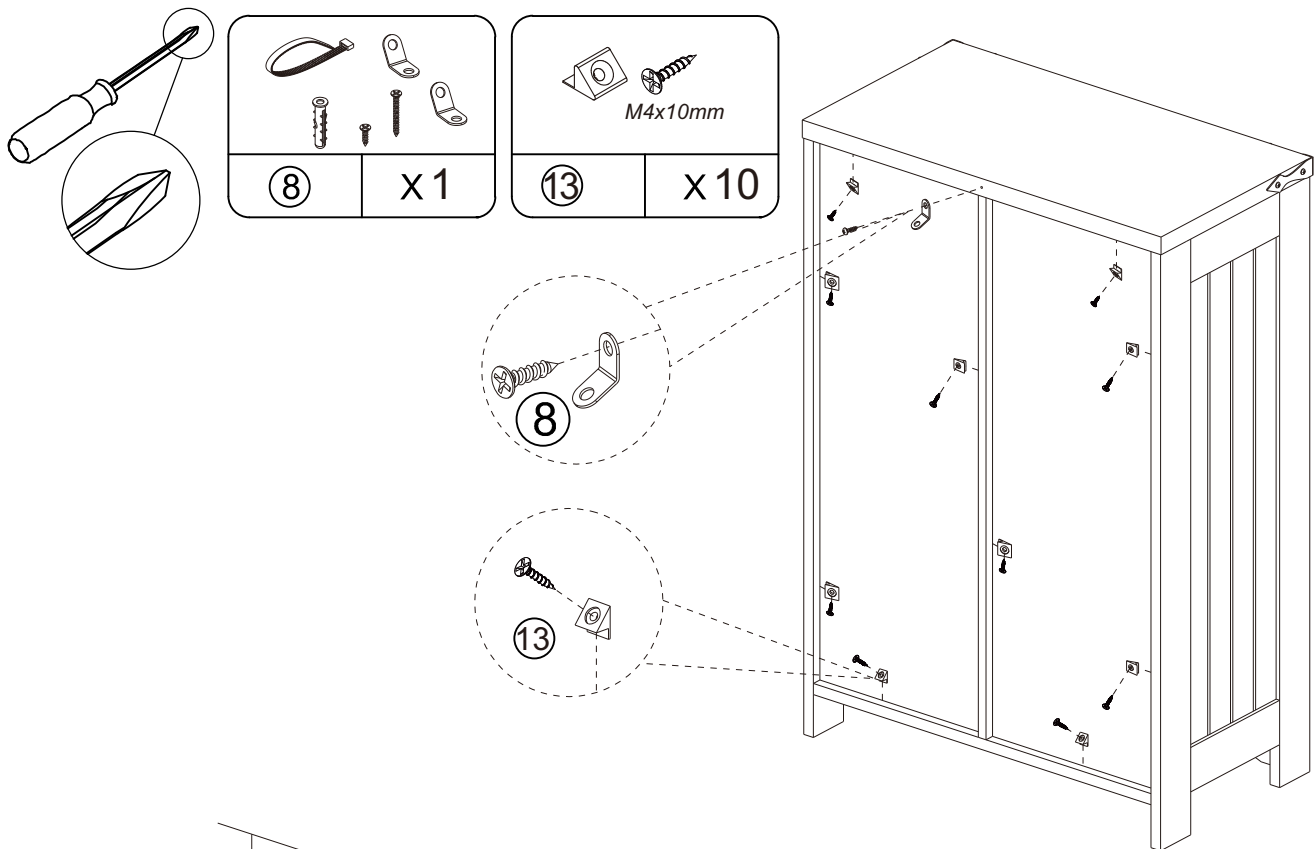

# STEP21

---

