


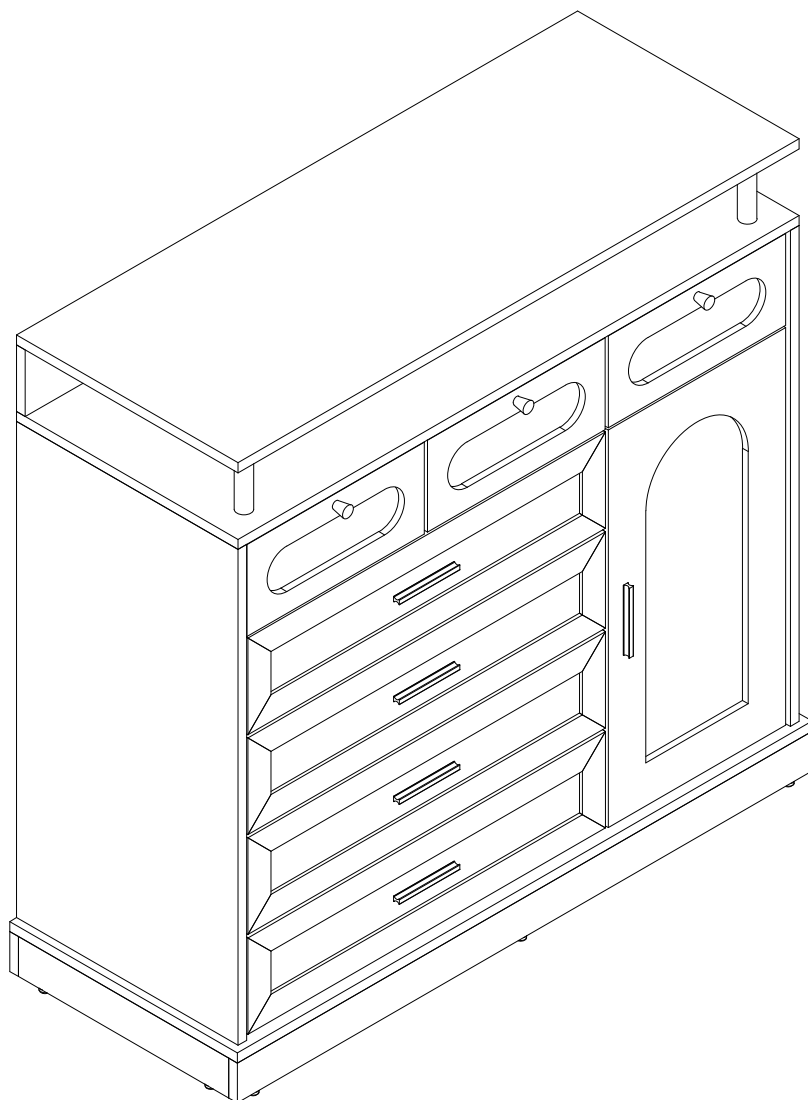

D3M569BS0M




As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

service@vabchesofficial.com

Our professional after-sales team will serve you online all day.

Before You Start

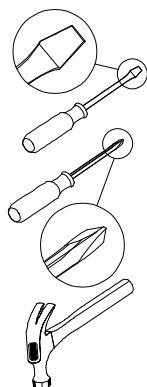


- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




Board Identification


Not actual size

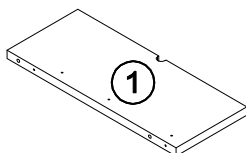


LOWER UPPER LEFT
PARTITION
Qty:1

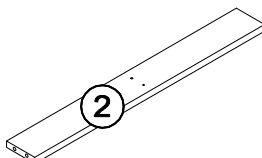


LOWER UPPER LEFT
BAR
Qty:2

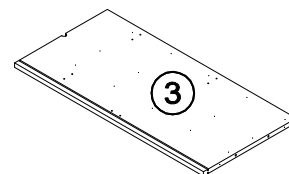


UNDER THE RIGHT
LARGE PANEL
Qty:1

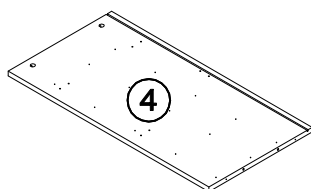


LOWER LEFT SIDE PLATE
Qty:1

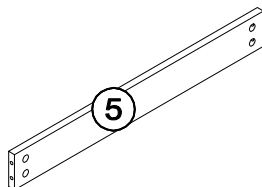


LOWER LEFT FRONT AND
REAR HORIZONTAL BARS
Qty:2

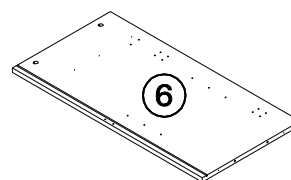


RIGHT PANEL
Qty:1

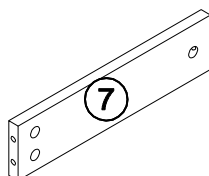


LOWER RIGHT FRONT BAR
Qty:1

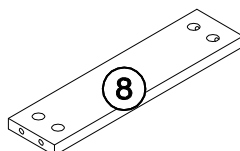


LOWER RIGHT BACK BAR
Qty:1

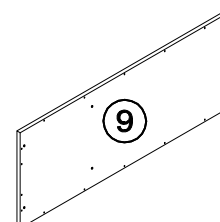


MOTHERBOARD
Qty:1

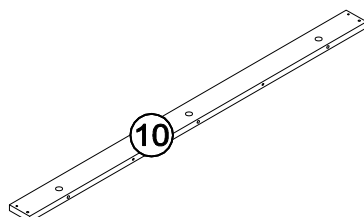

FRONT AND REAR
STANDING WATER
Qty:2

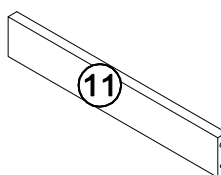

STANDING WATER LEFT
AND RIGHT
Qty:2




LEFT BACK PLATE
Qty:1

Board Identification


Not actual size




DORSAL PLATE BONE
Qty:1



MID-BACK PANEL
Qty:1




RIGHT BACK PLATE
Qty:1

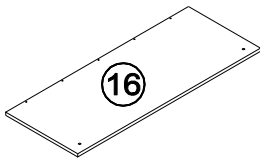


ROOF
Qty:1




UPPER LEFT AND RIGHT
CYLINDERS
Qty:2

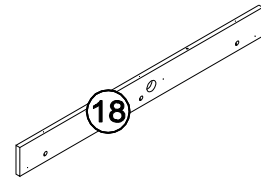


LARGE PLATE IN THE MIDDLE
Qty:1

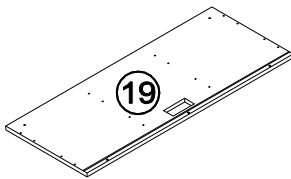


UPPER REAR BAR
Qty:1

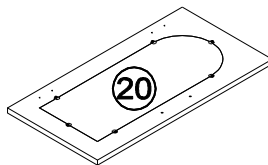


LOWER RIGHT CABINET DOOR
Qty:1

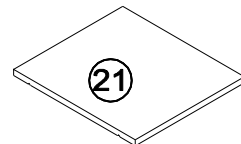


LOWER RIGHT CENTER
PARTITION
Qty:1

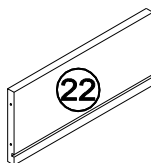

SMALL DRAWER BACK
PANEL
Qty:3

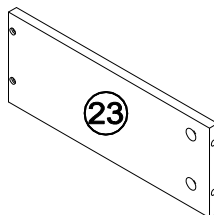


DRAWER LEFT PANEL
Qty:7

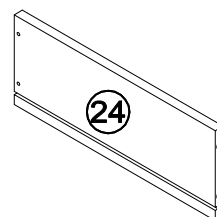


RIGHT PANEL OF
DRAWER
Qty:7

Board Identification


Not actual size

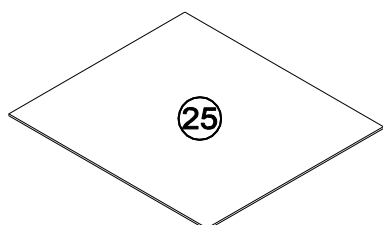


SMALL DRAWER
BOTTOM PANEL
Qty:3

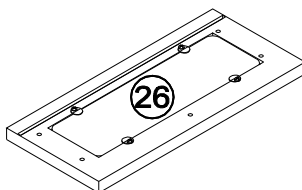


LEFT DRAWER PANEL
Qty:1

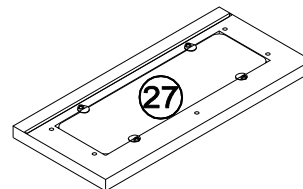


MIDDLE DRAWER
PANEL
Qty:1

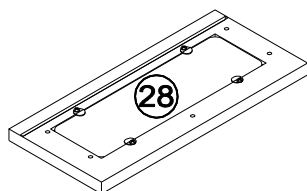


RIGHT DRAWER PANEL
Qty:1

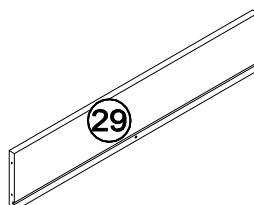


LARGE DRAWER BACK
PANEL
Qty:4

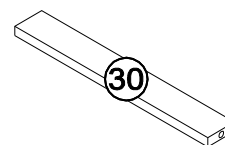

LARGE DRAWER
BOTTOM BAR
Qty:4

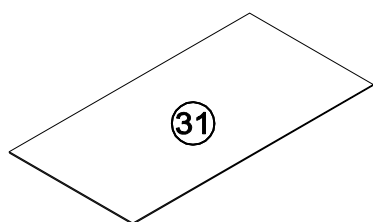


LARGE DRAWER
BOTTOM PANEL
Qty:4

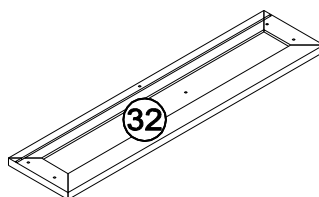


LARGE DRAWER PANEL
Qty:4


Part List

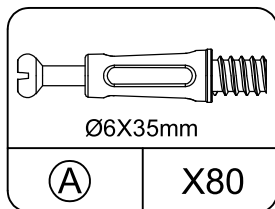


CAM BOLT
spare:3

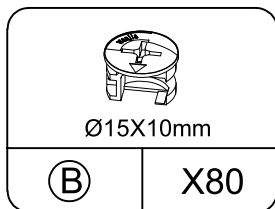


CAM LOCK
spare:3

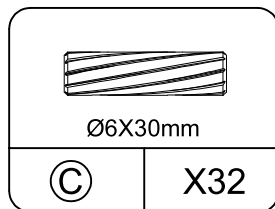


WOOD DOWEL
spare:3

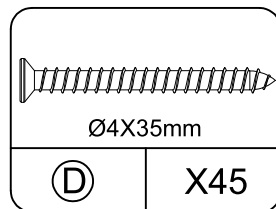


SCREW
spare:3

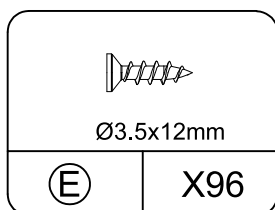


SCREW
spare:3

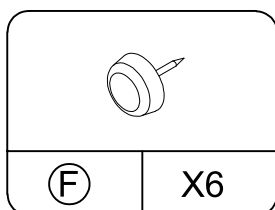


FOOT PEGS

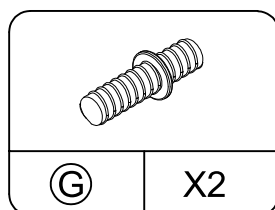


**WITH BICEPHALIC
TEETH**

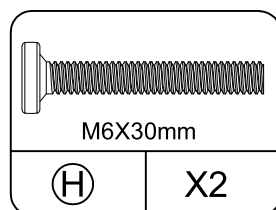


BOLT

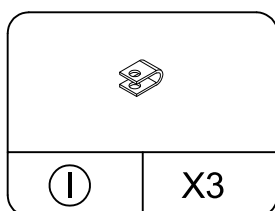


WIRE BUCKLE

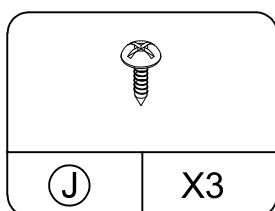


SCREW

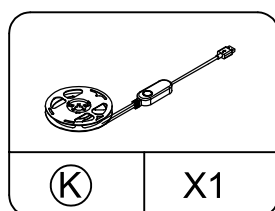


STRIP LIGHT

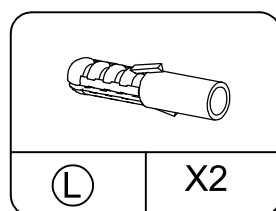


SLIDE EXPANSION BOLTS

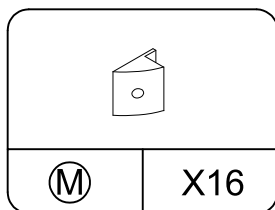


BACK PANEL BUCKLE
spare:1

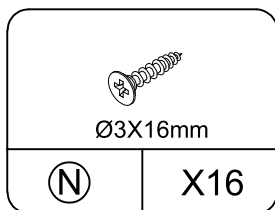


SCREW
spare:1

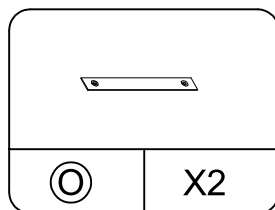


**ANTI-INVERTED
STRIPS**

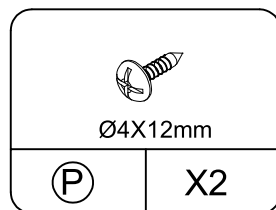


SCREW

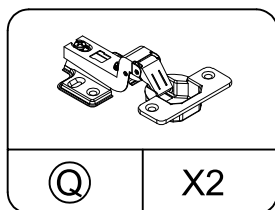


HINGE

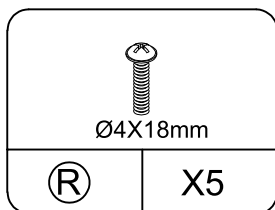

SCREW

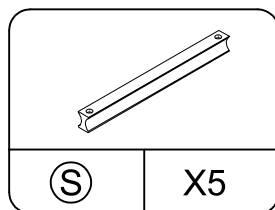


HANDLE

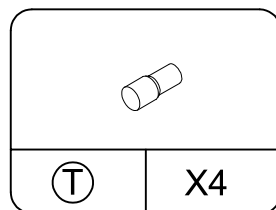


SHELF SUPPORT


Part List

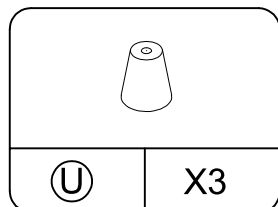


HANDLE

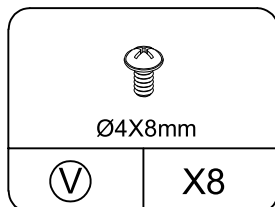


SCREW

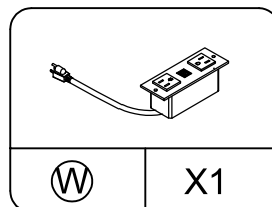


RECEPTACLE

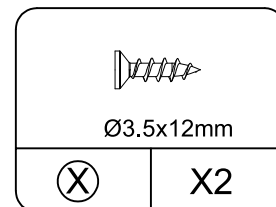


SCREW

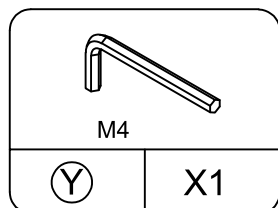


L WRENCH

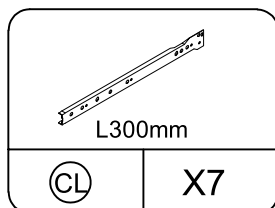


SLIDE

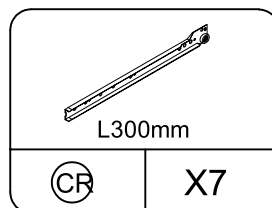

SLIDE

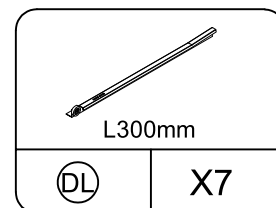


SLIDE

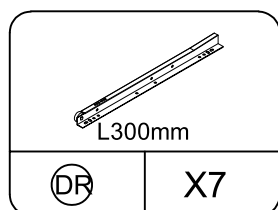

SLIDE





Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.





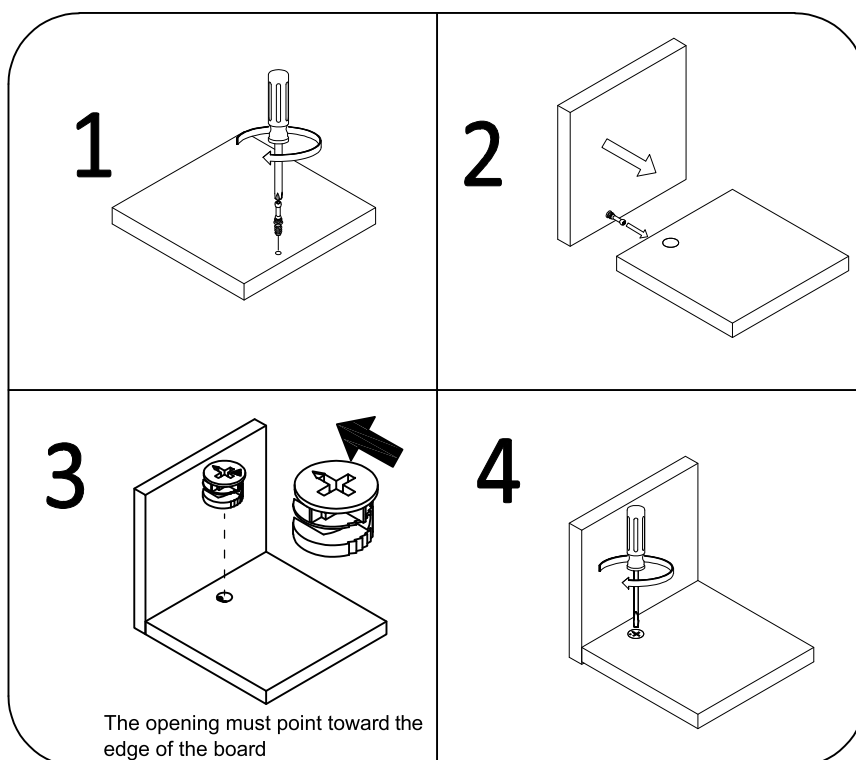


Board Identification





Not actual size

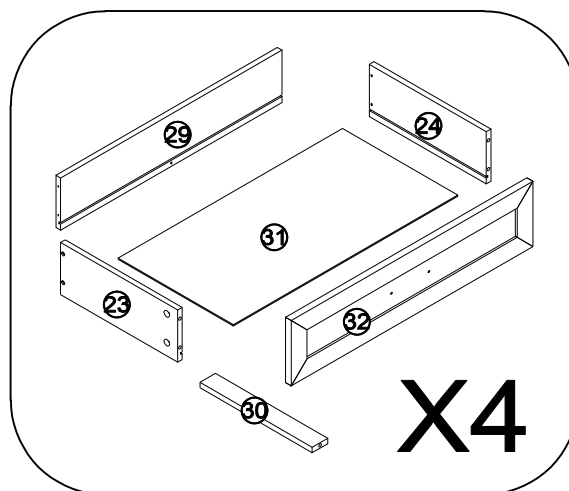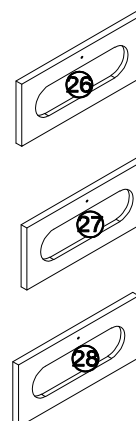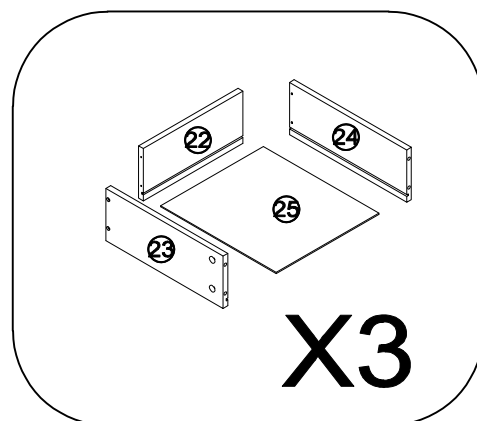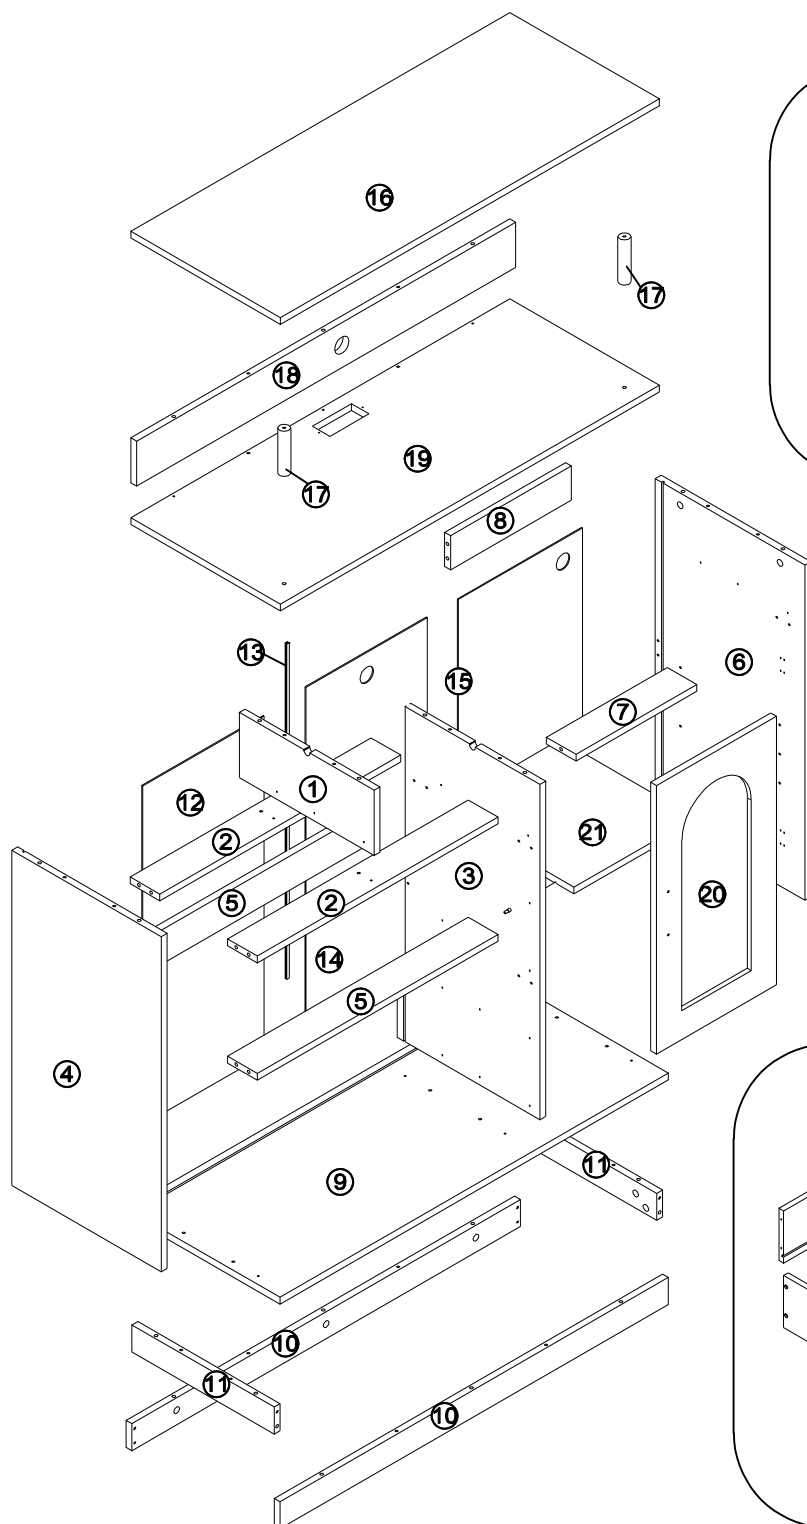


STEP1

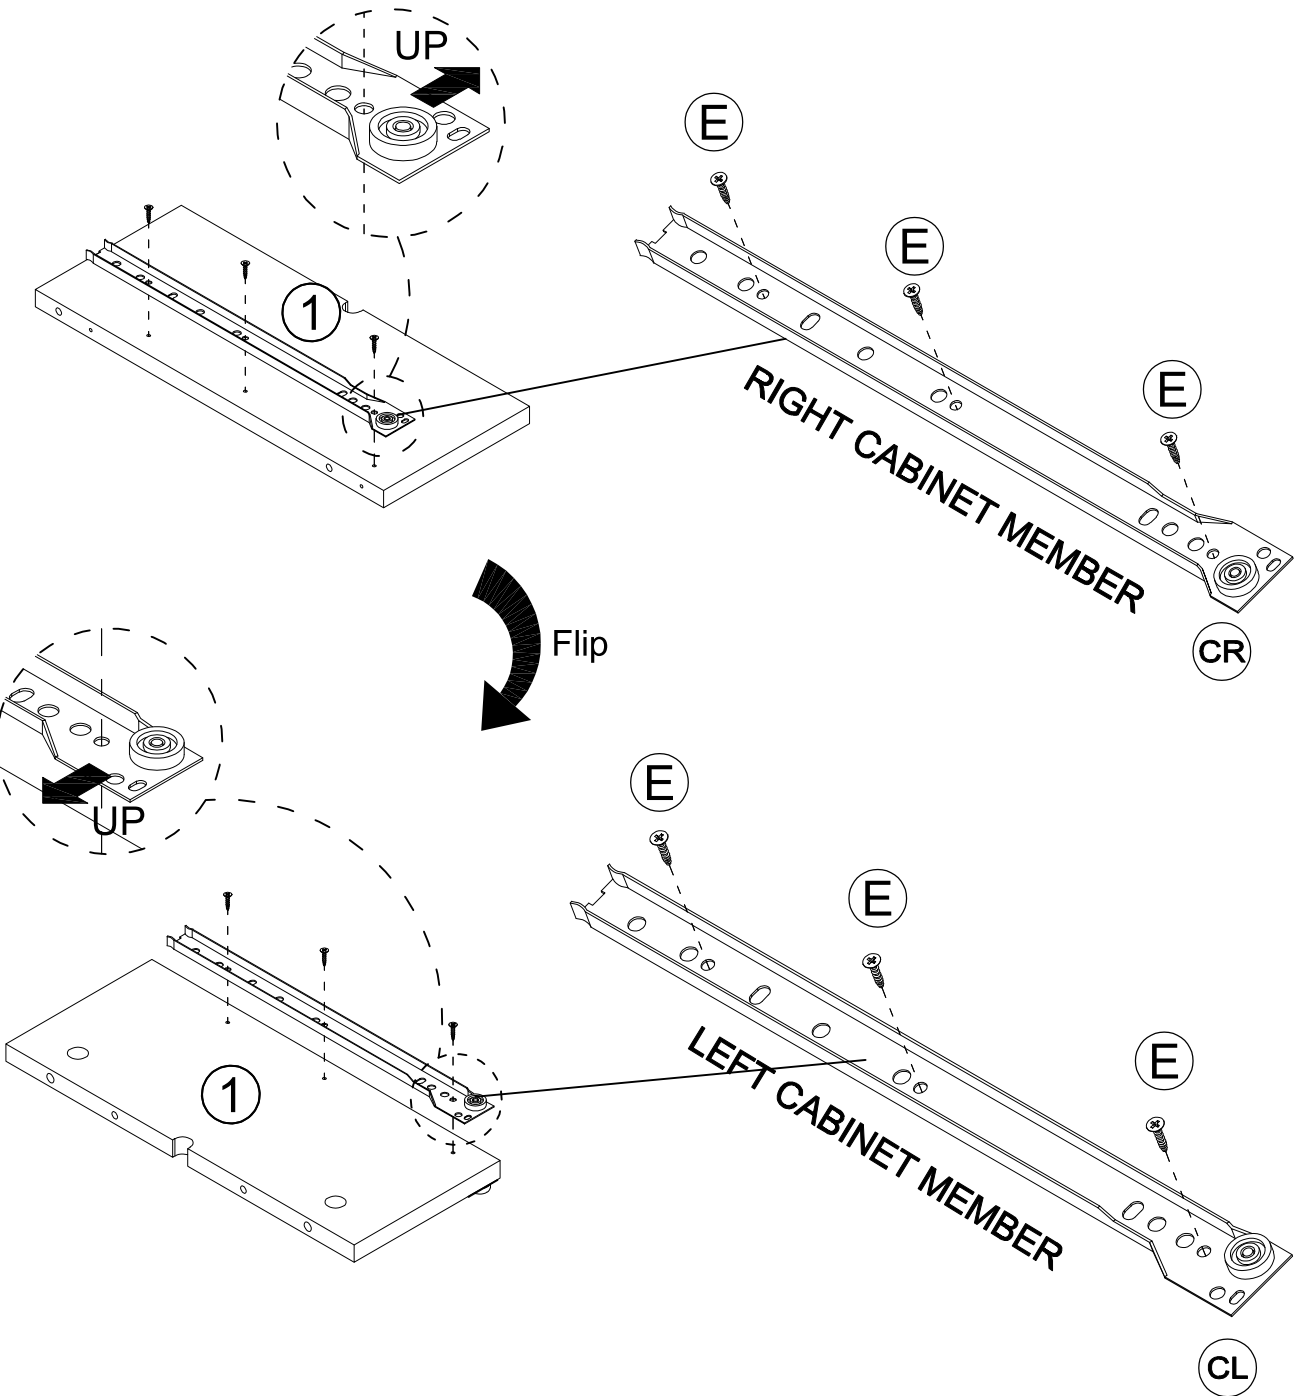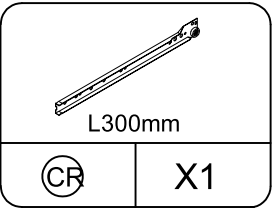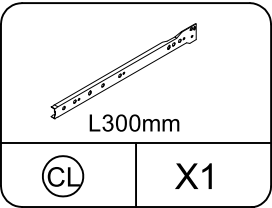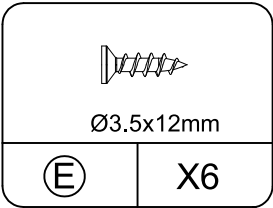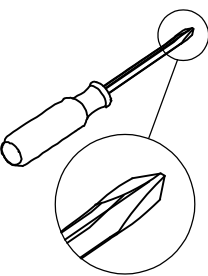







STEP2

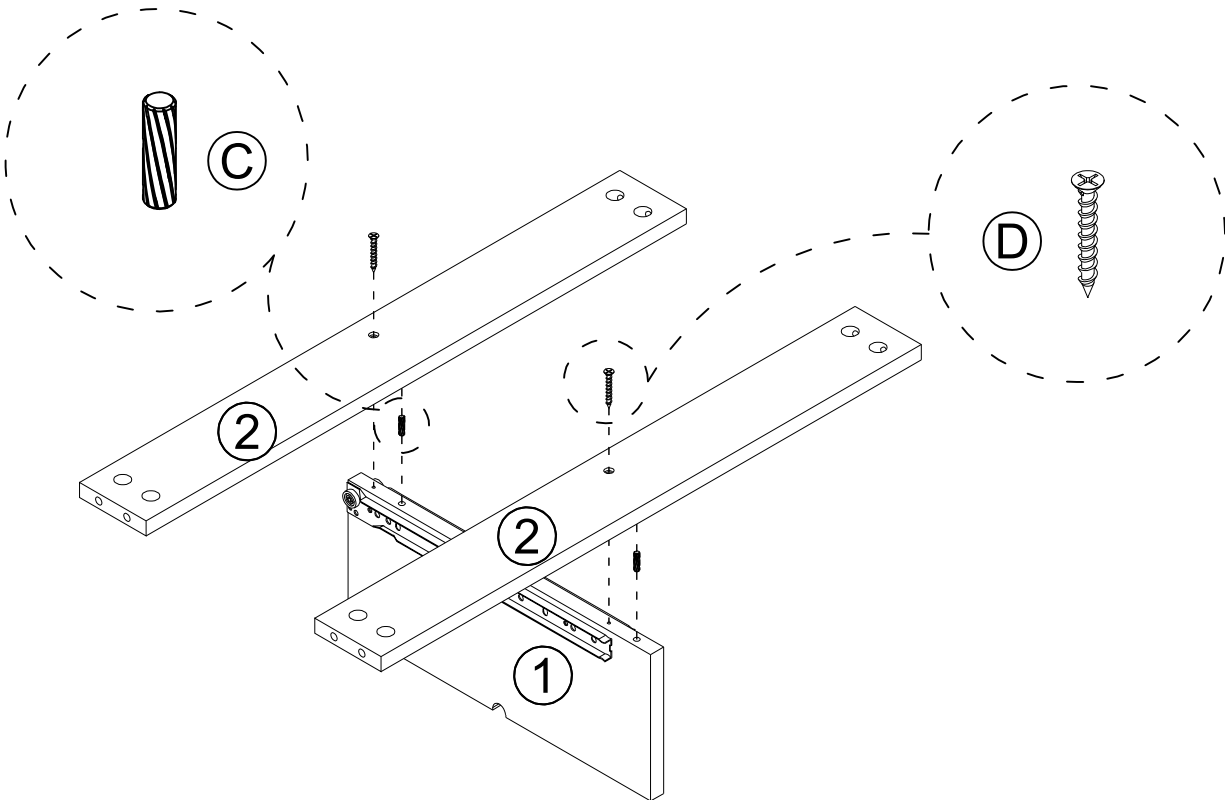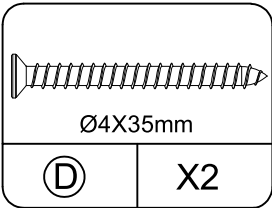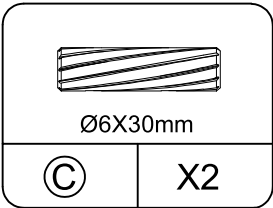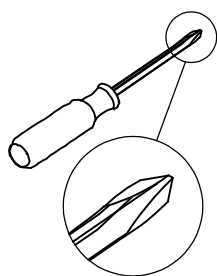





STEP3

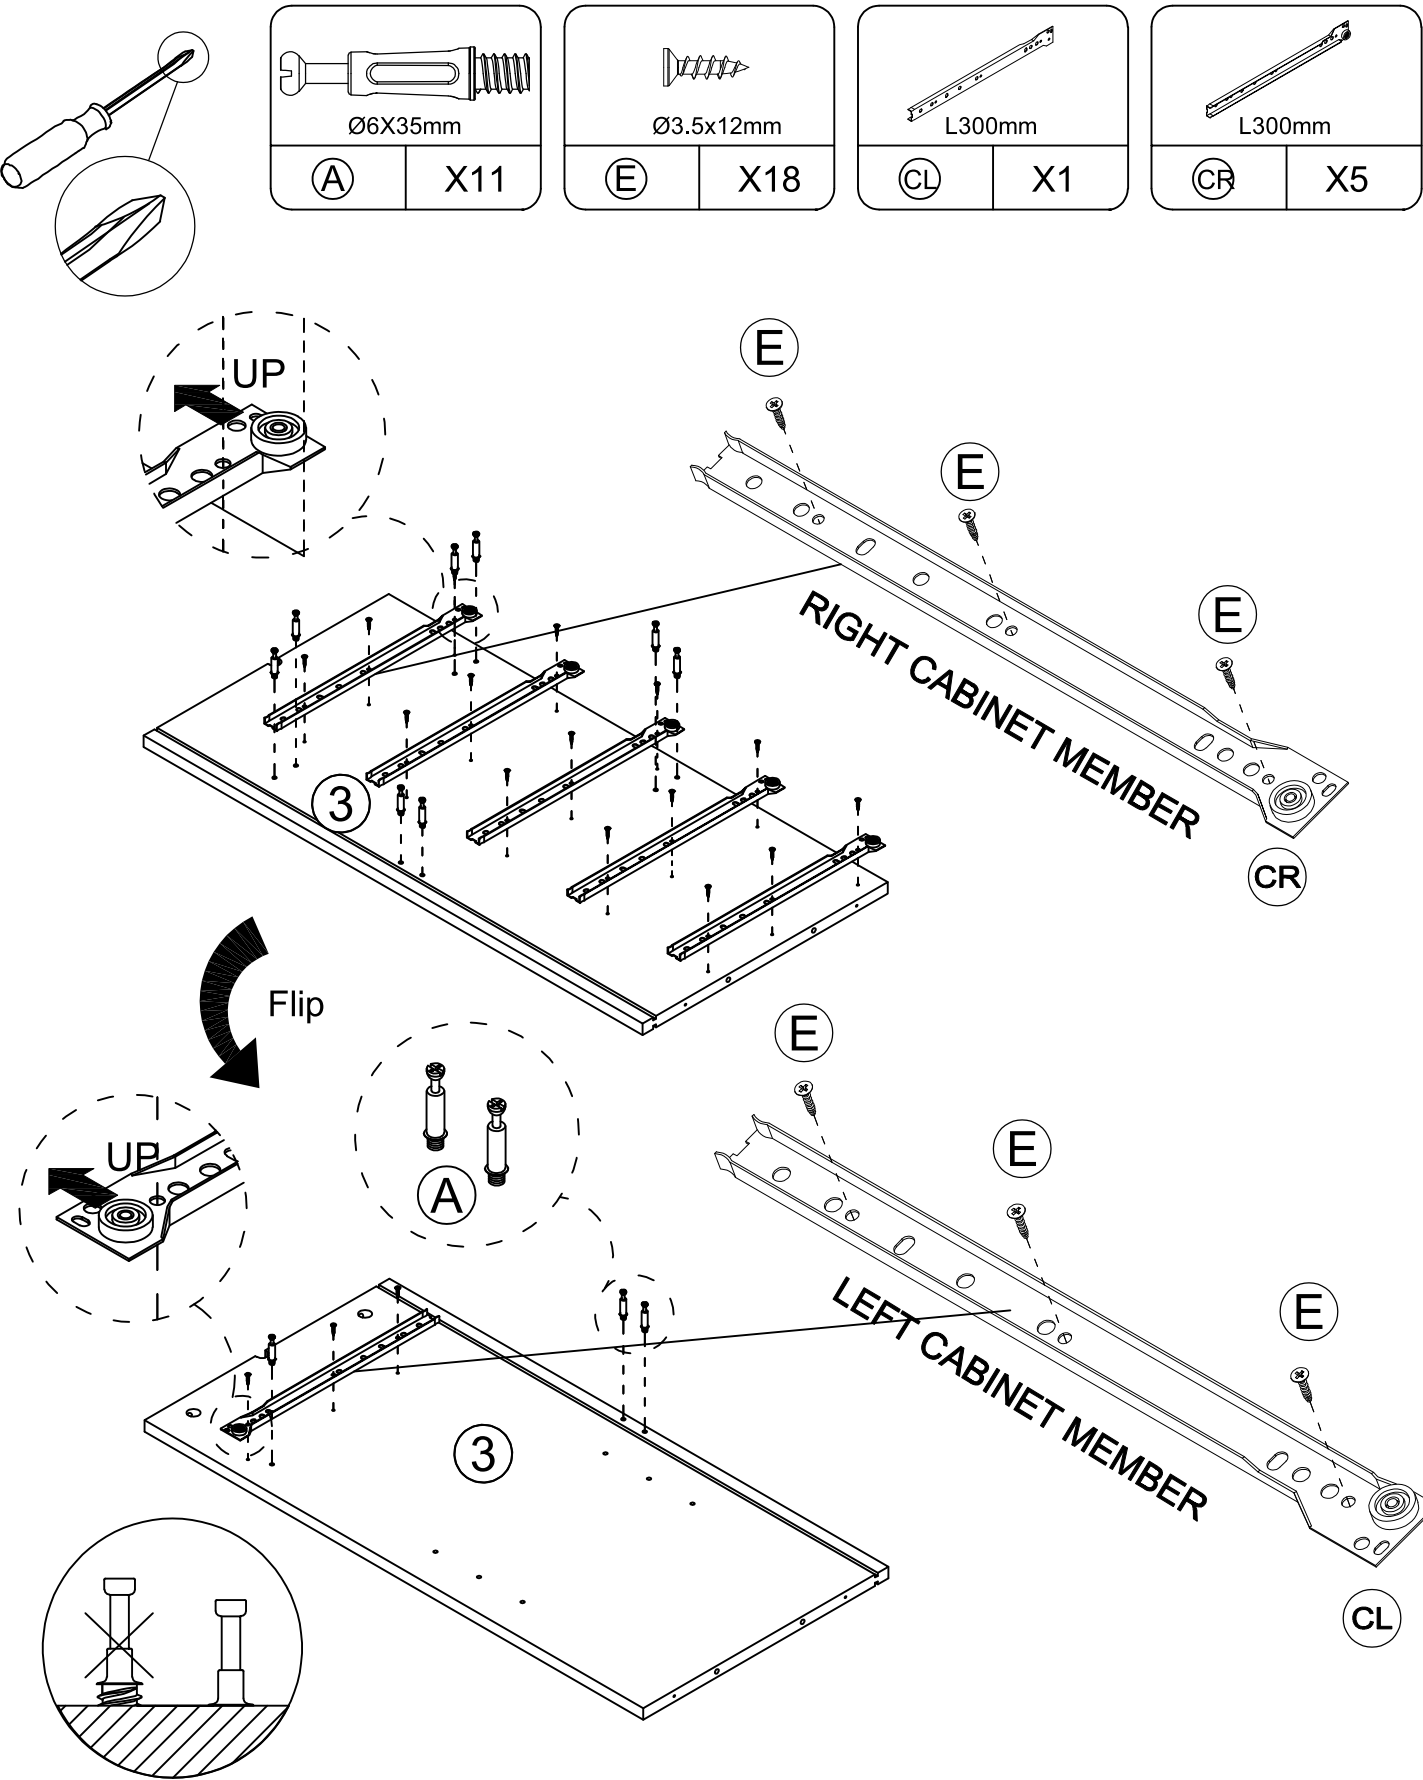

STEP4

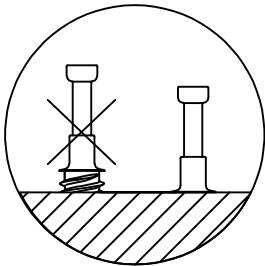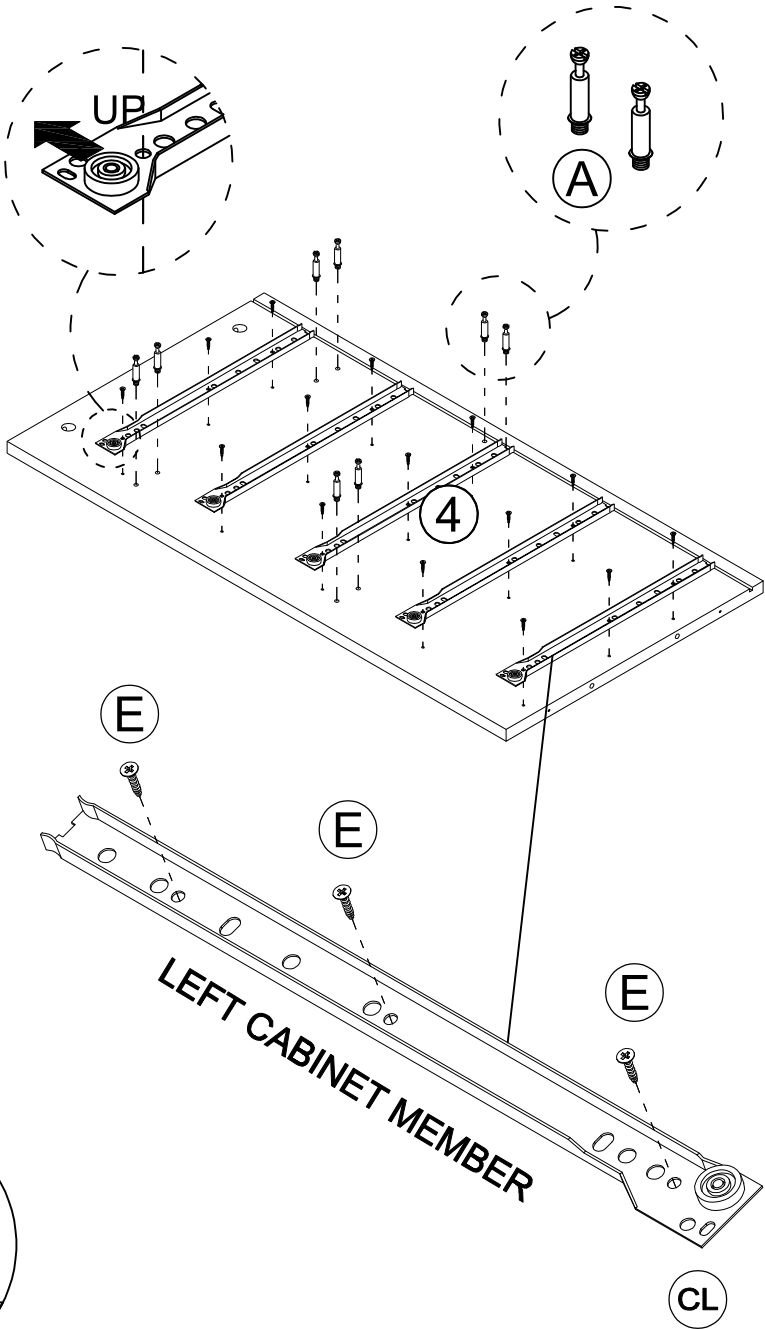
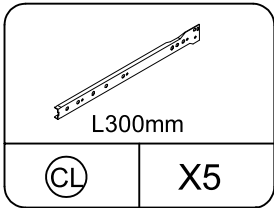
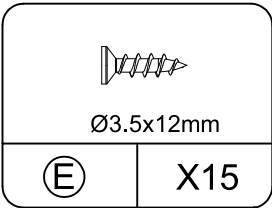
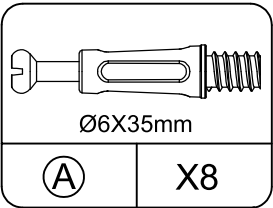
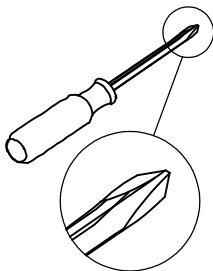


STEP5

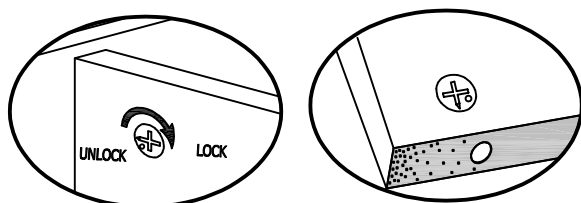
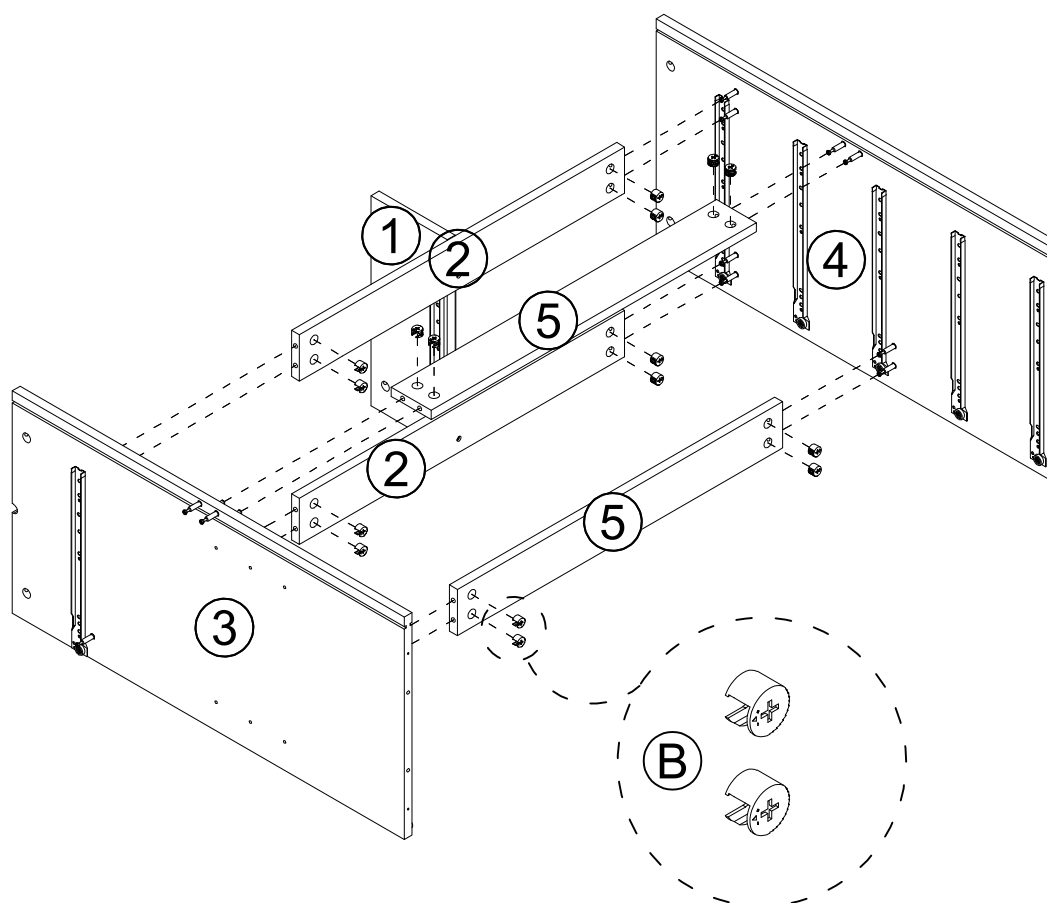
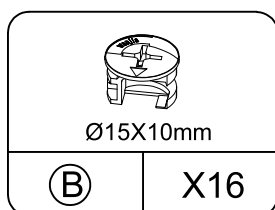
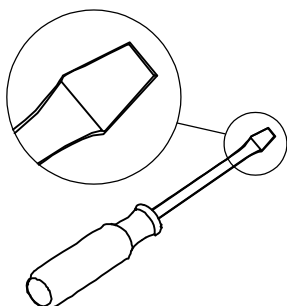


Proper orientation of CAM LOCK

STEP6

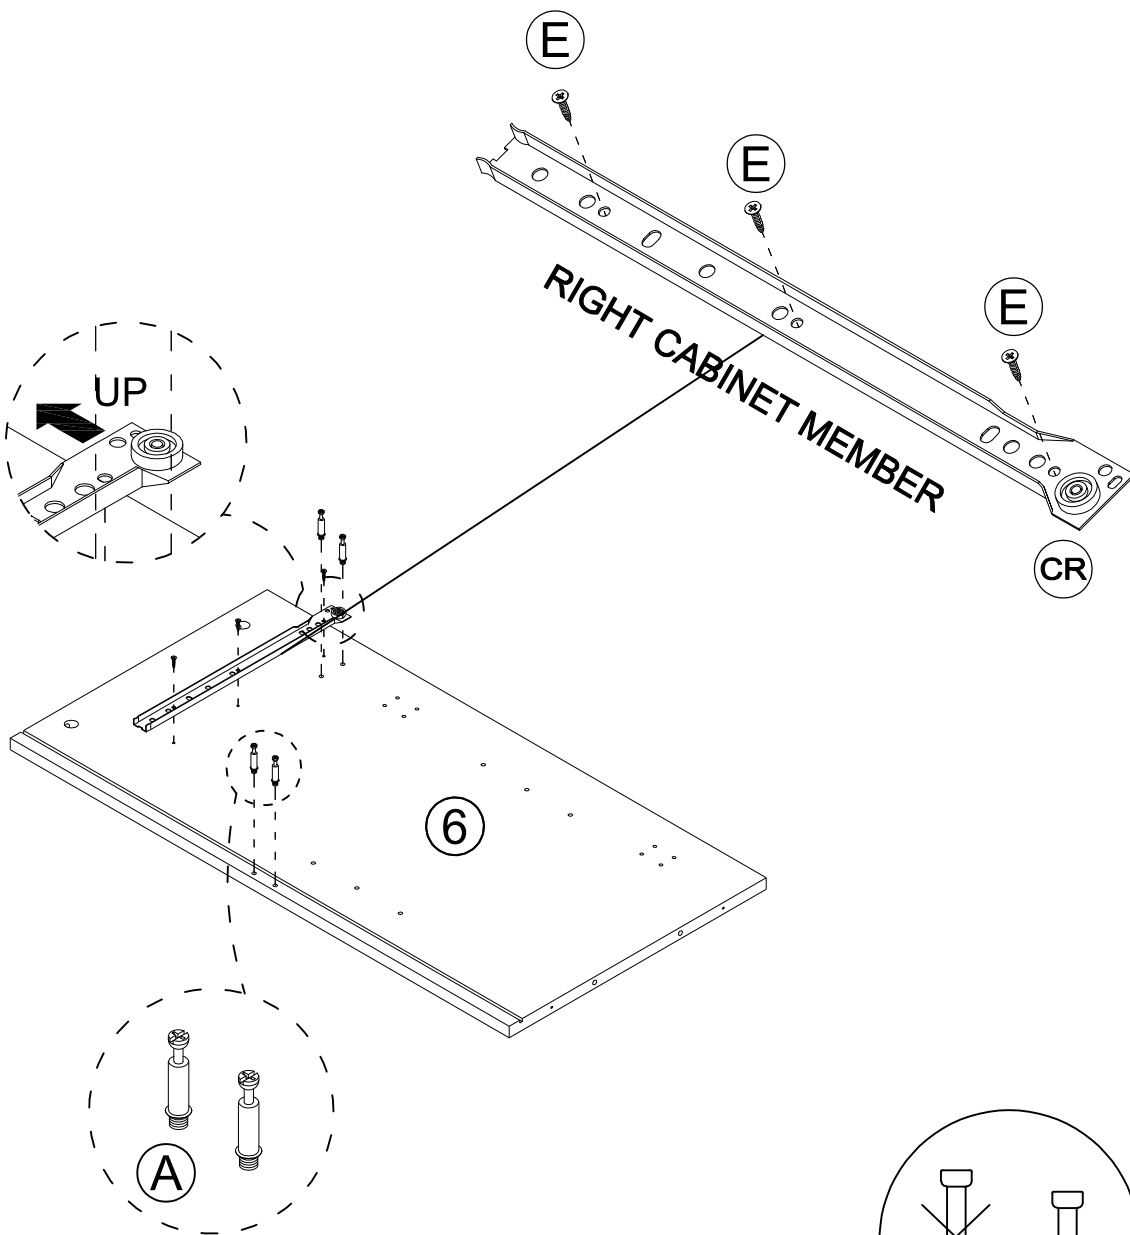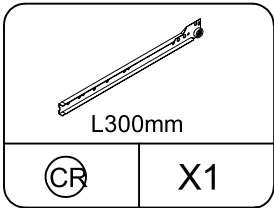
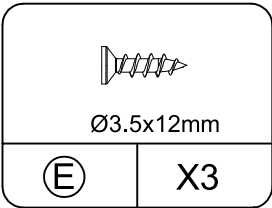
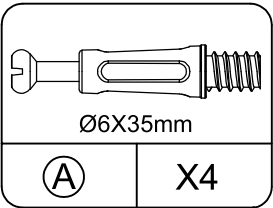
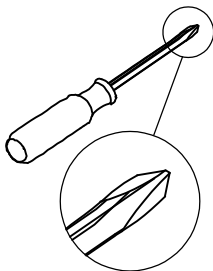


STEP7

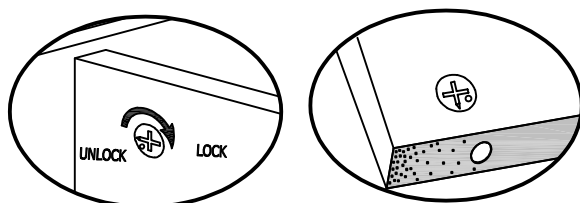
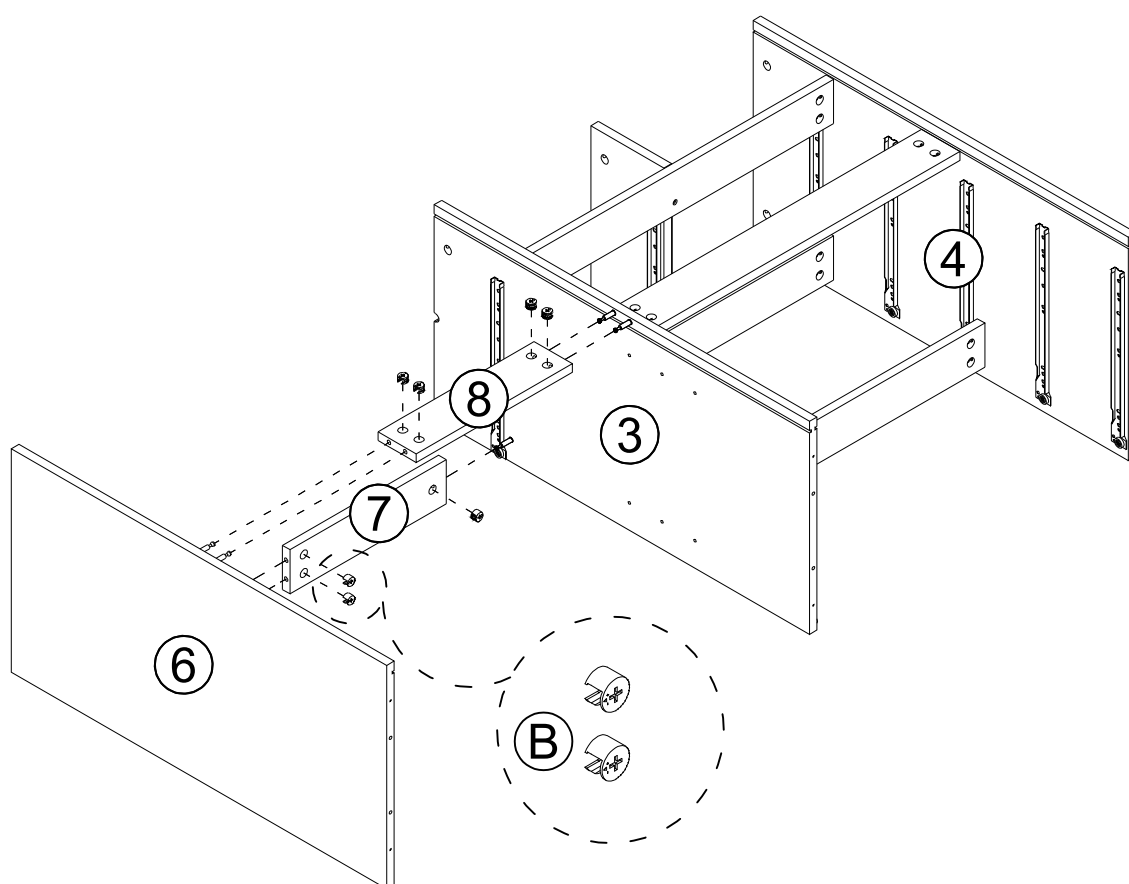
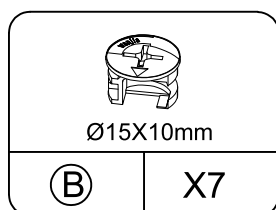
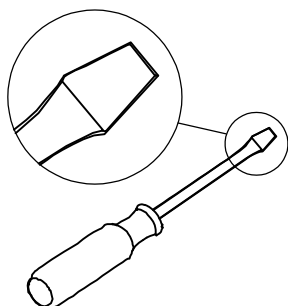


Proper orientation of CAM LOCK







STEP8

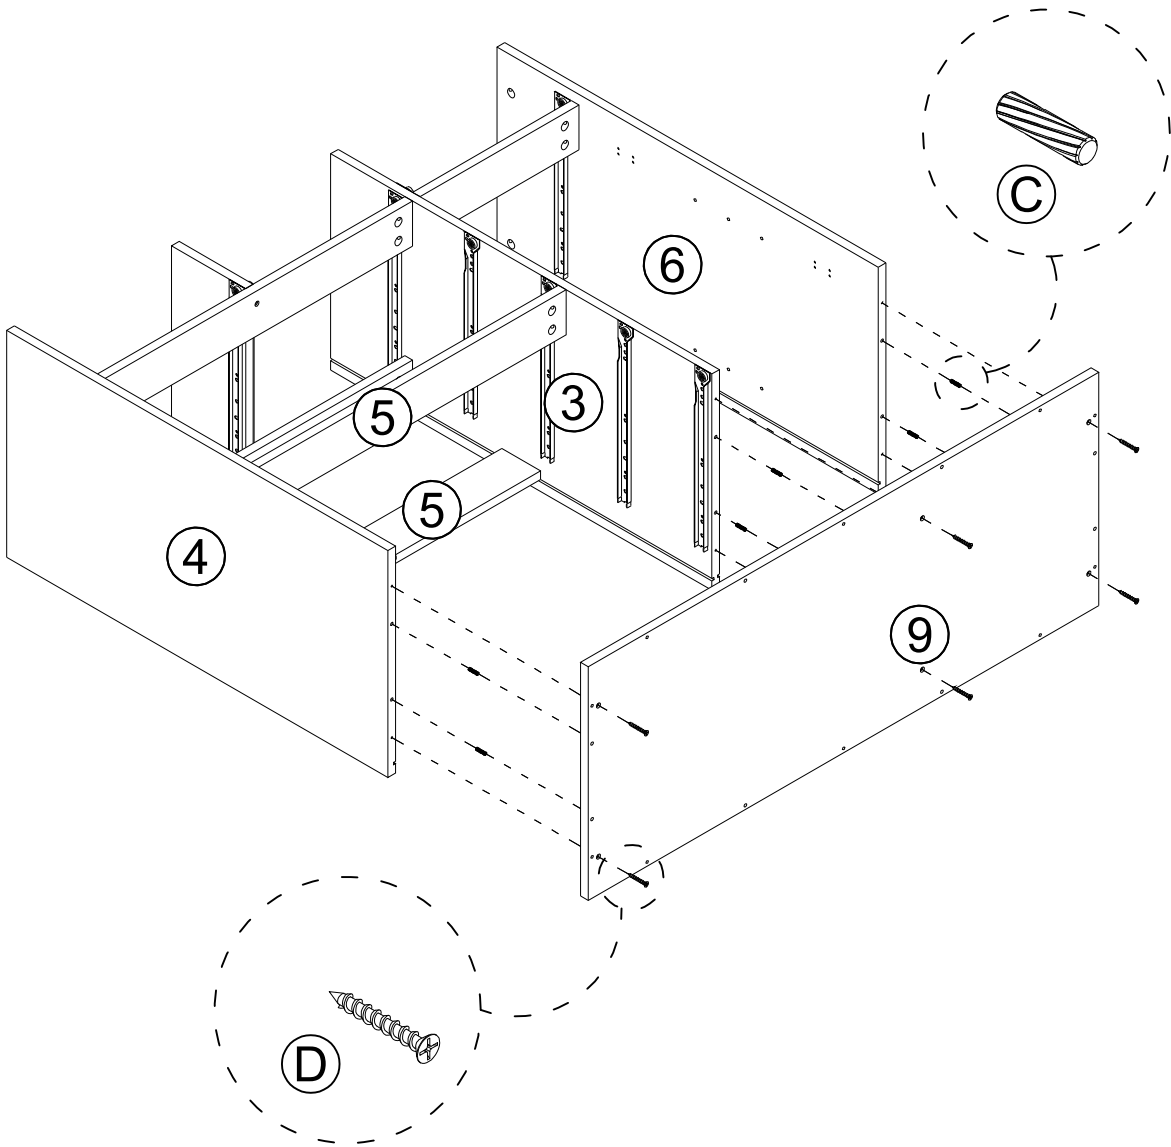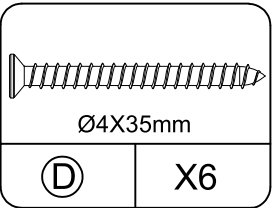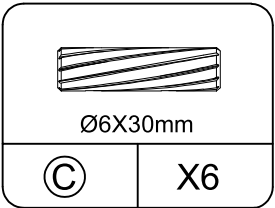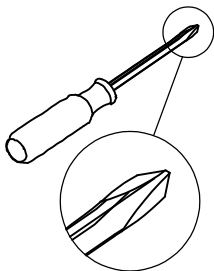






STEP9

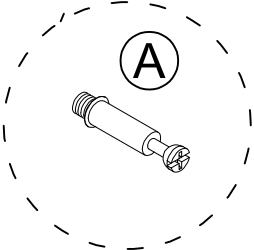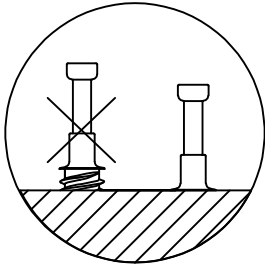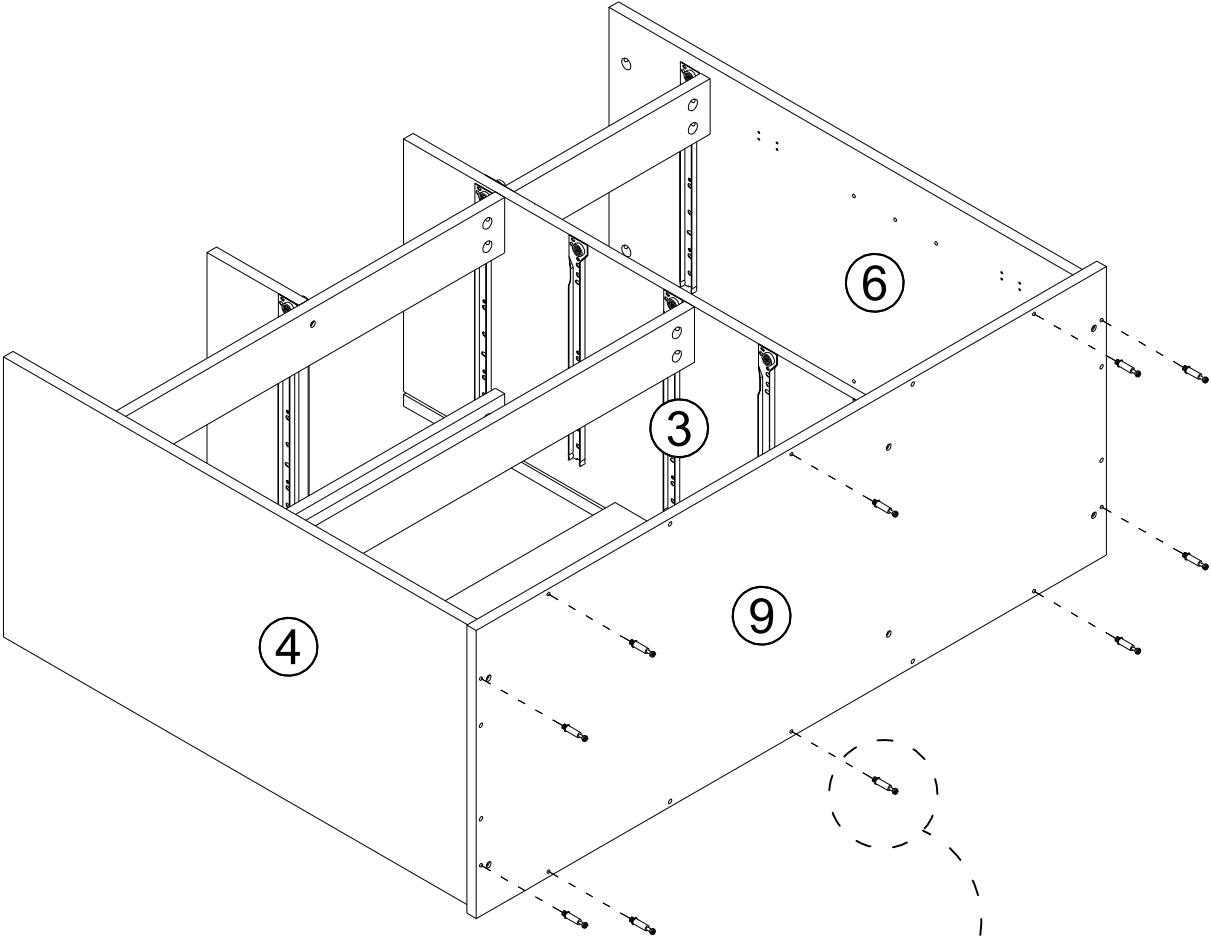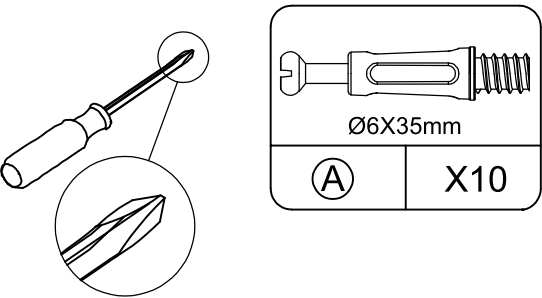

STEP10

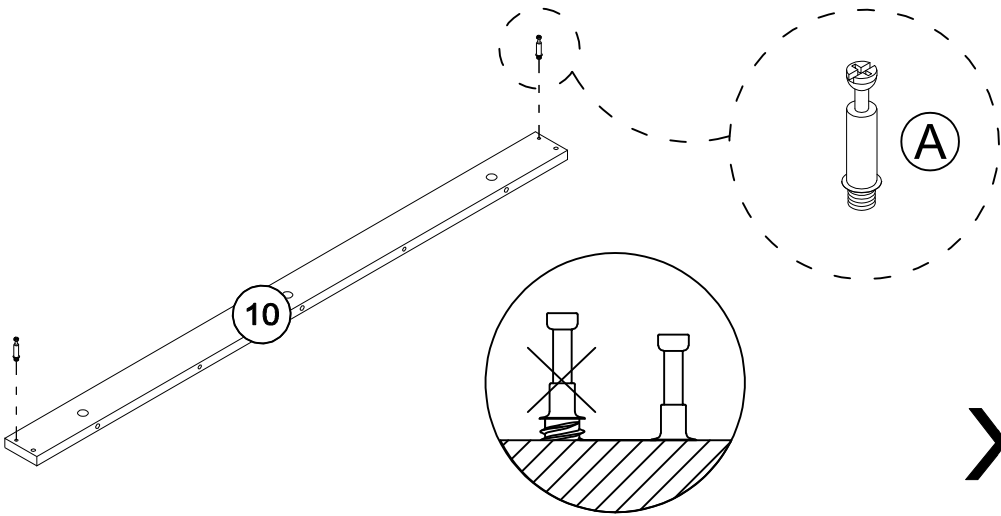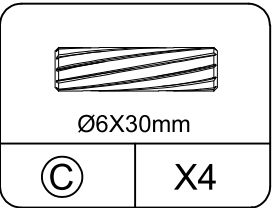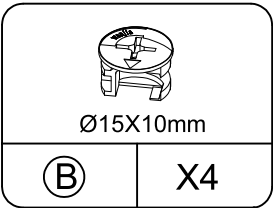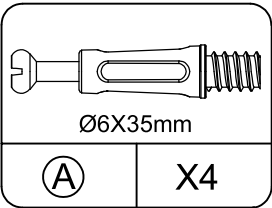
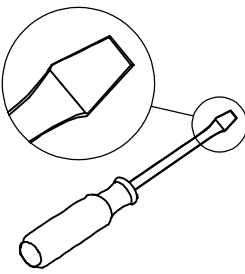
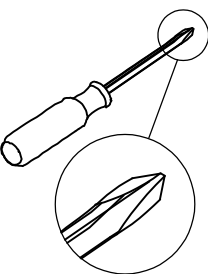


X2


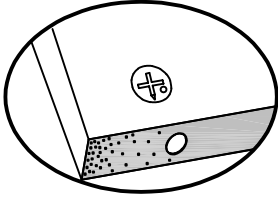
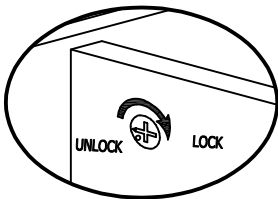
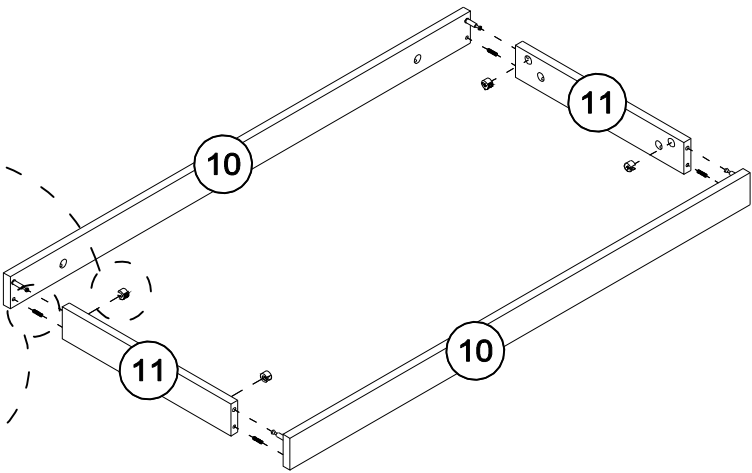
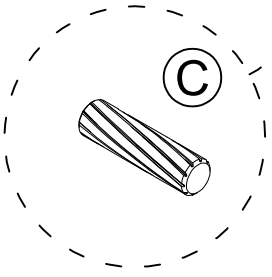
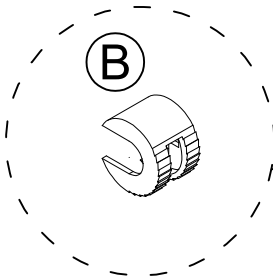


Proper orientation of CAM LOCK

STEP11

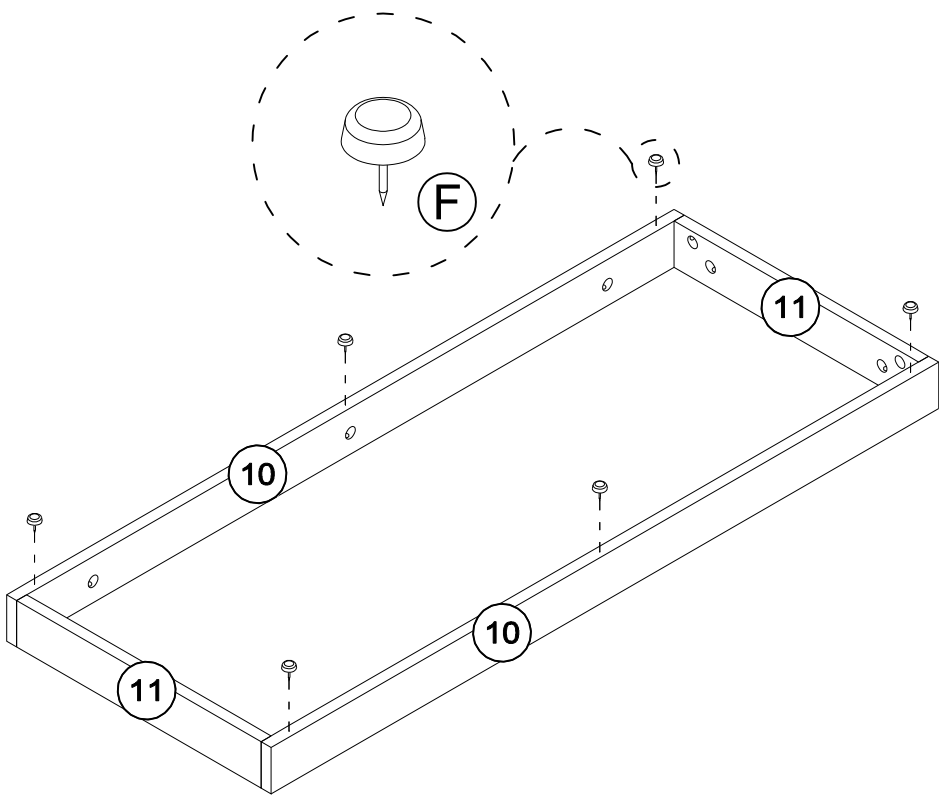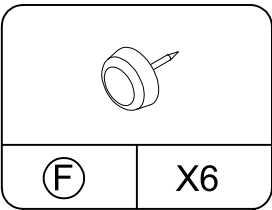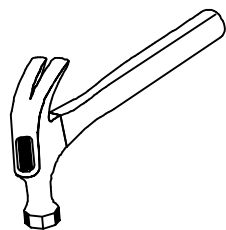


STEP12

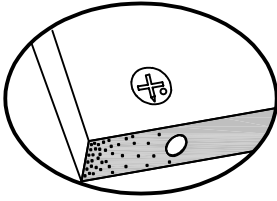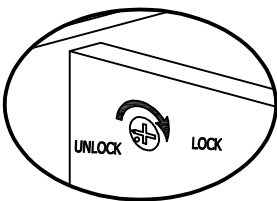
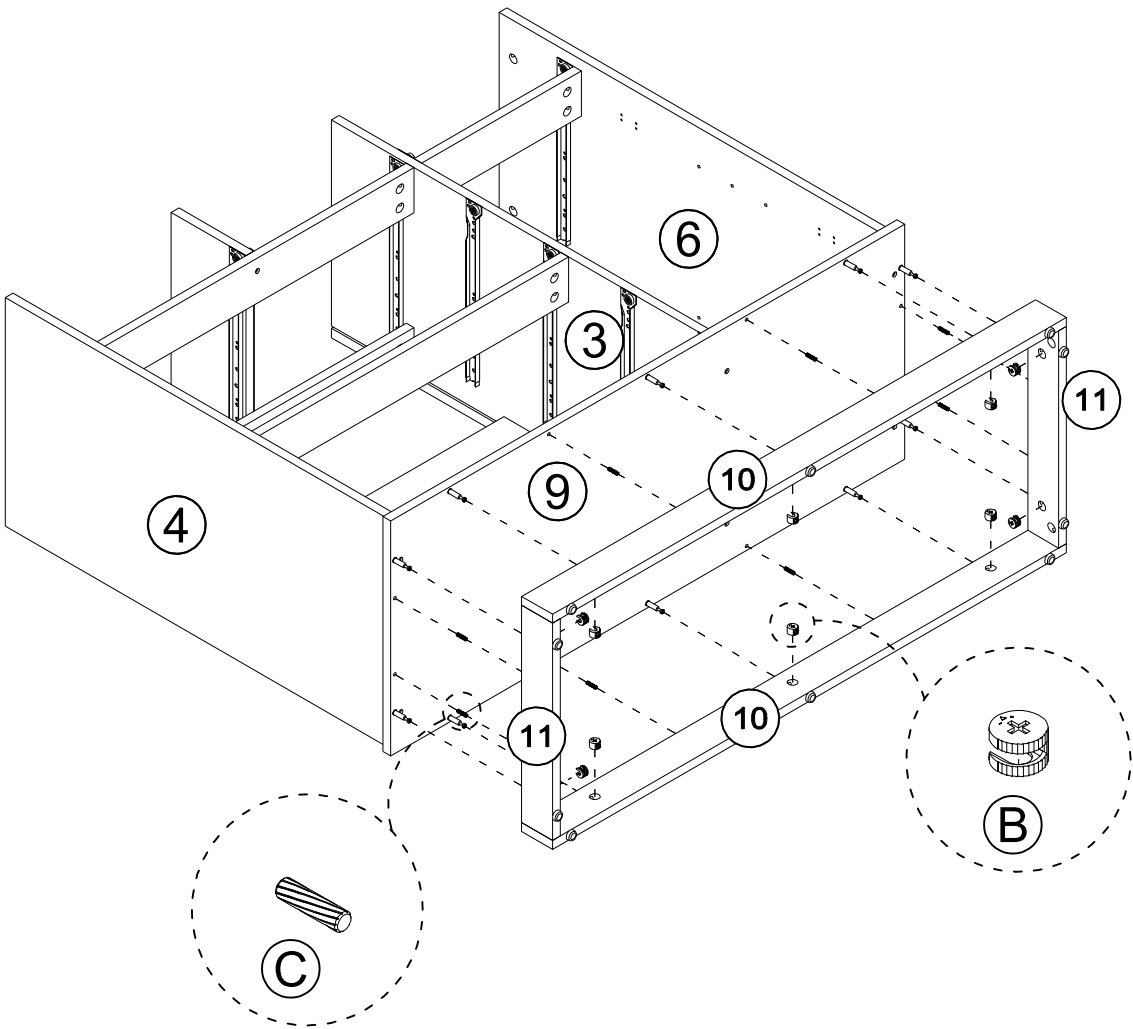
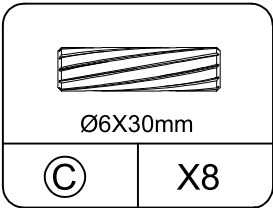
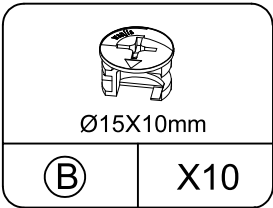
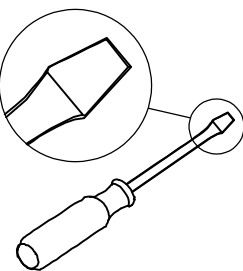


Proper orientation of CAM LOCK


STEP13

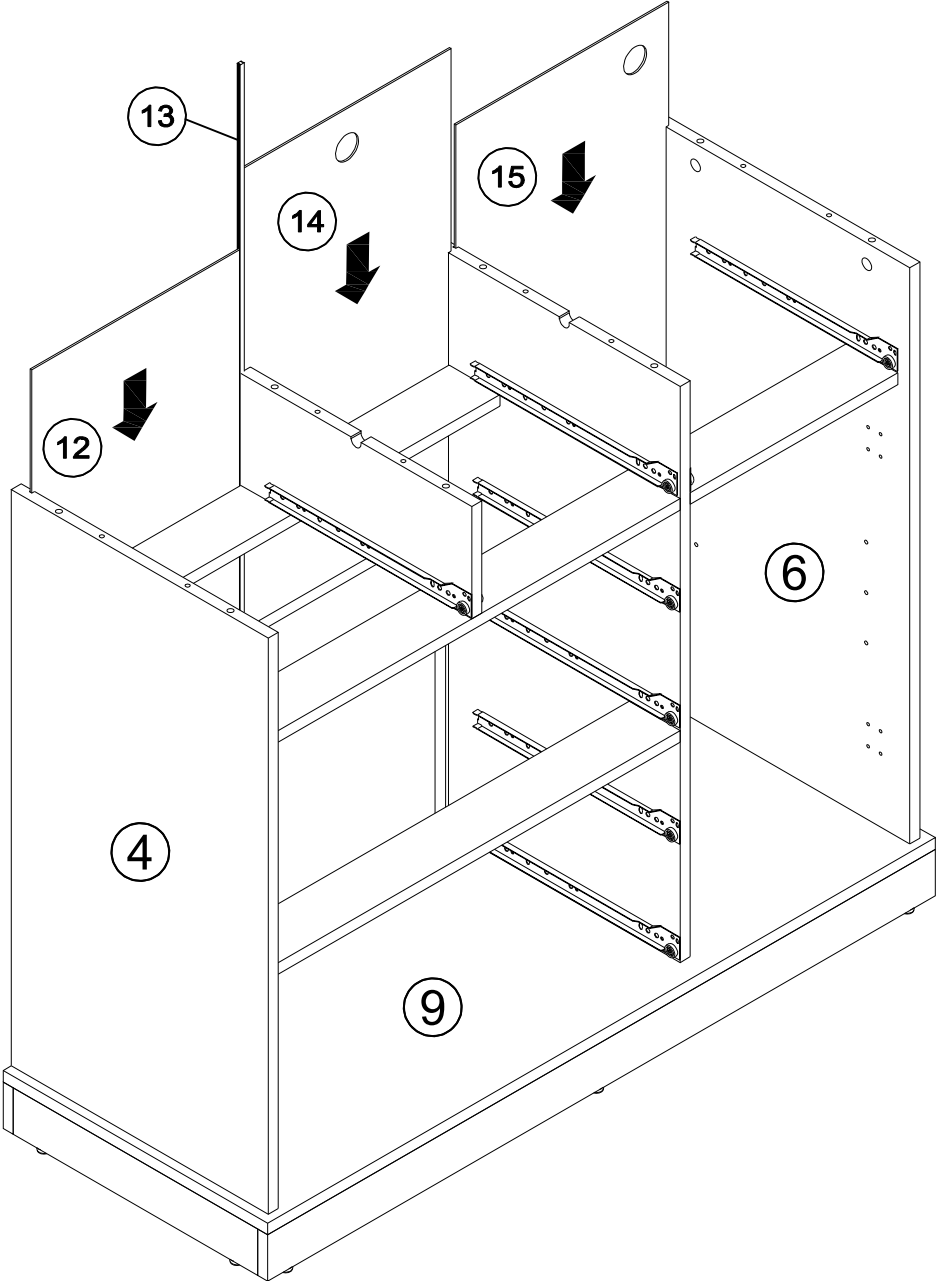

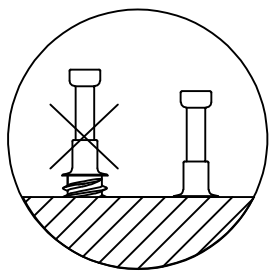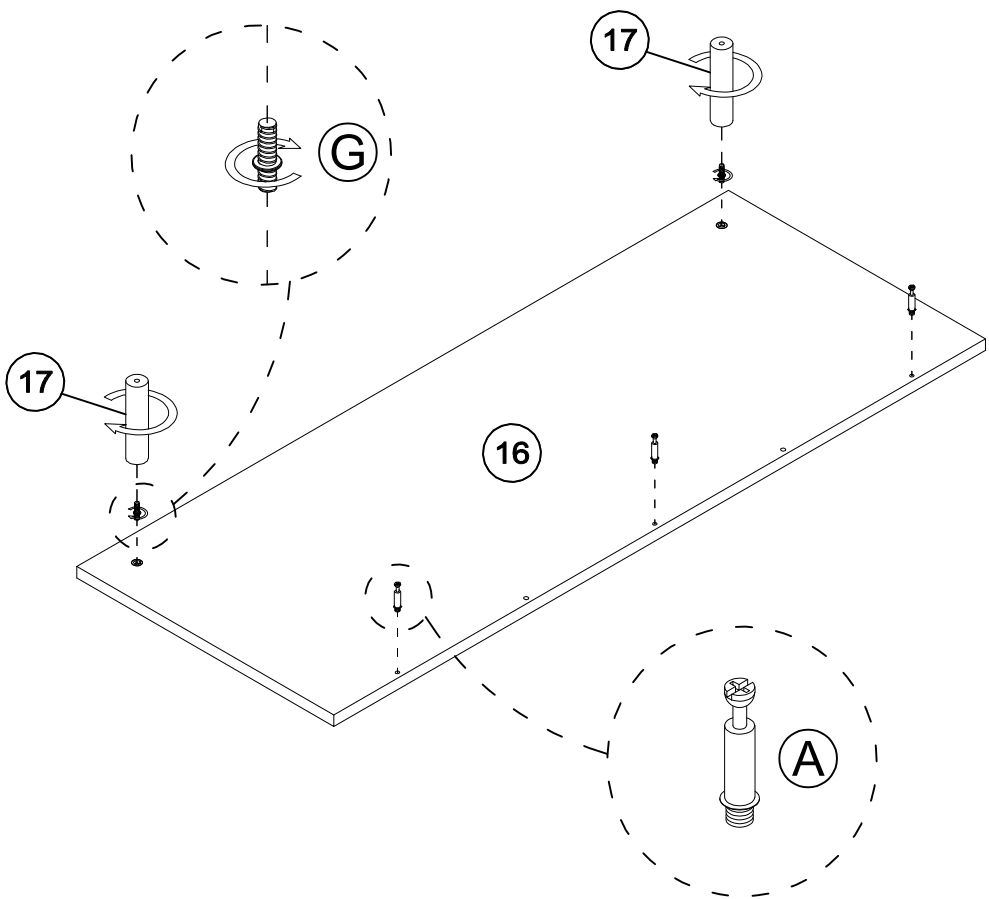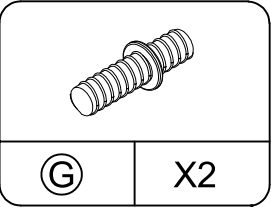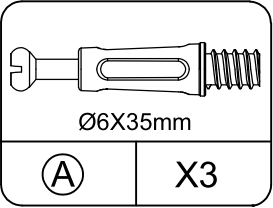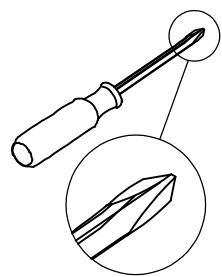

STEP14


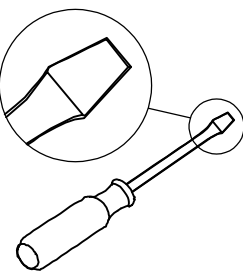


STEP15








	
Ø15X10mm	
(B)	X3

	
Ø6X30mm	
(C)	X2



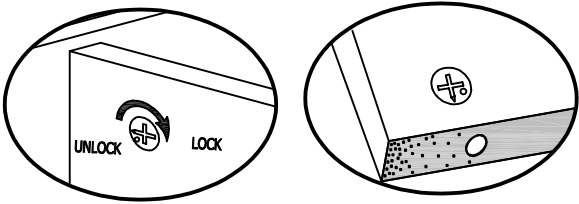
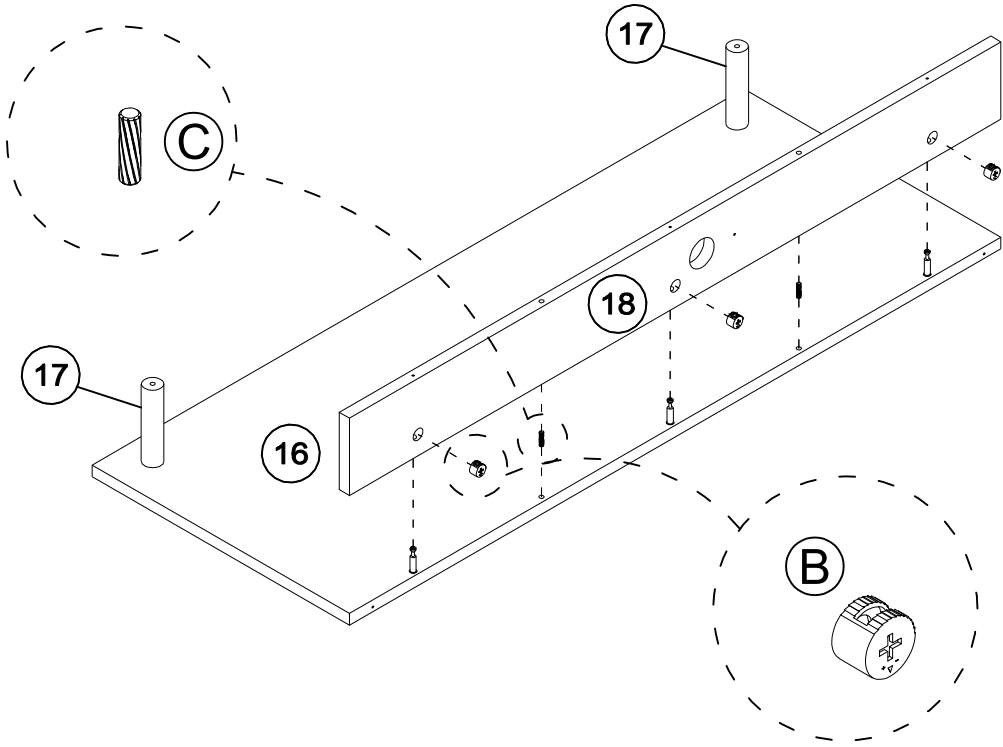


Proper orientation of CAM LOCK






STEP16

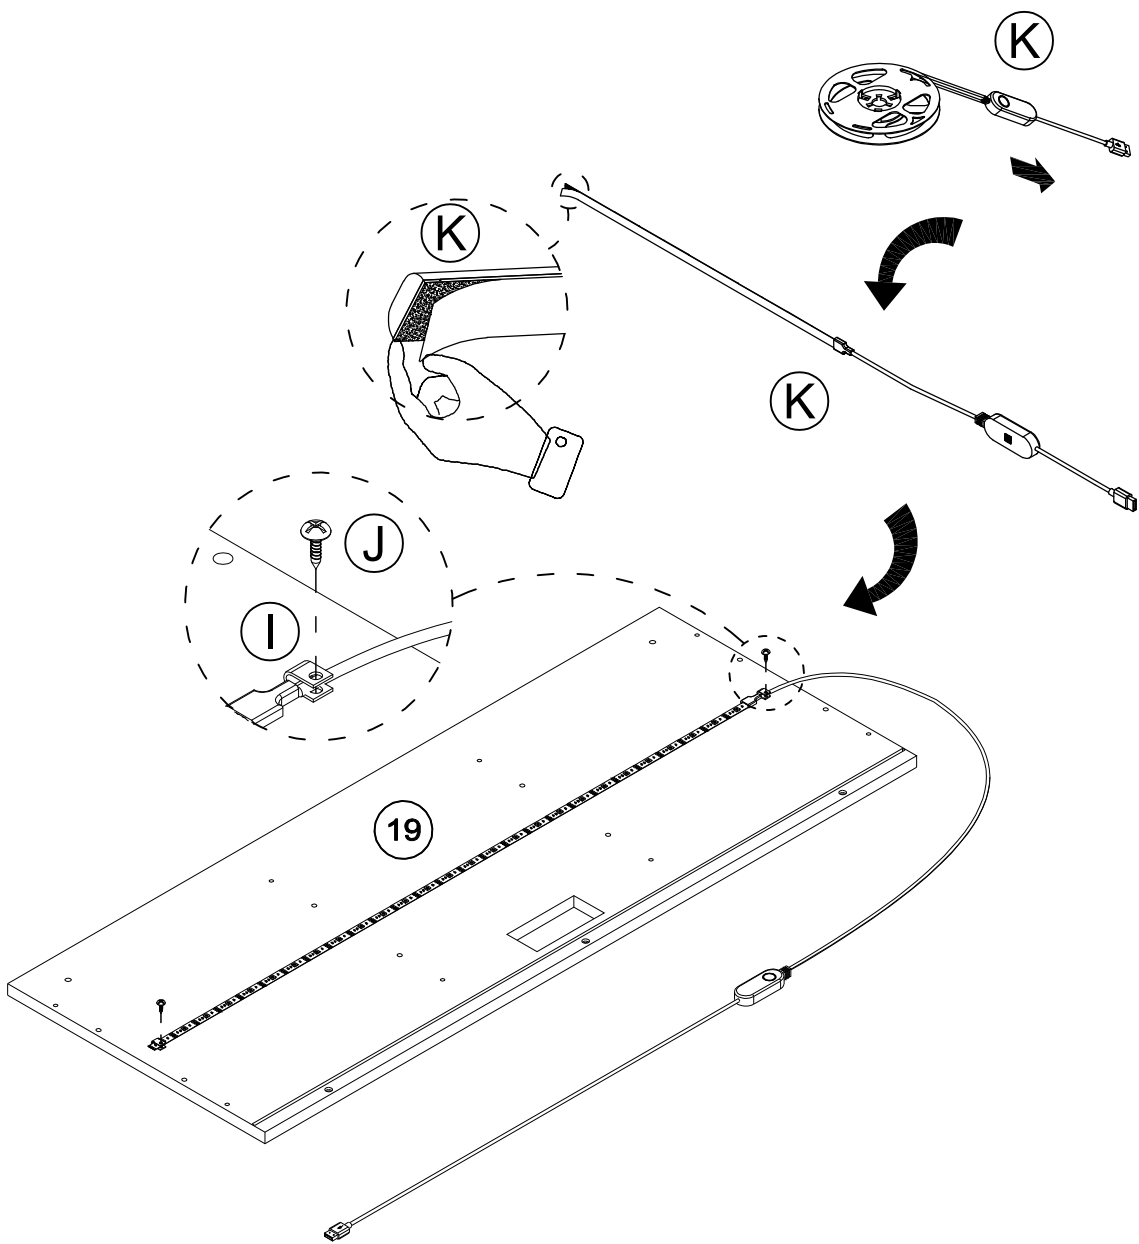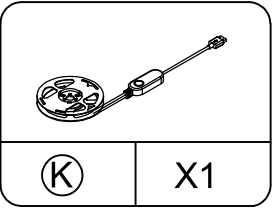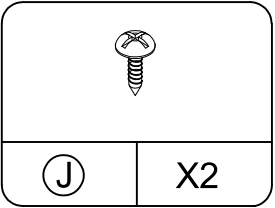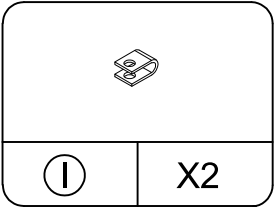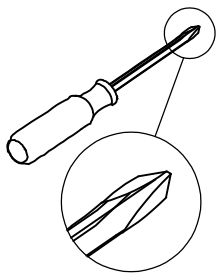


STEP17

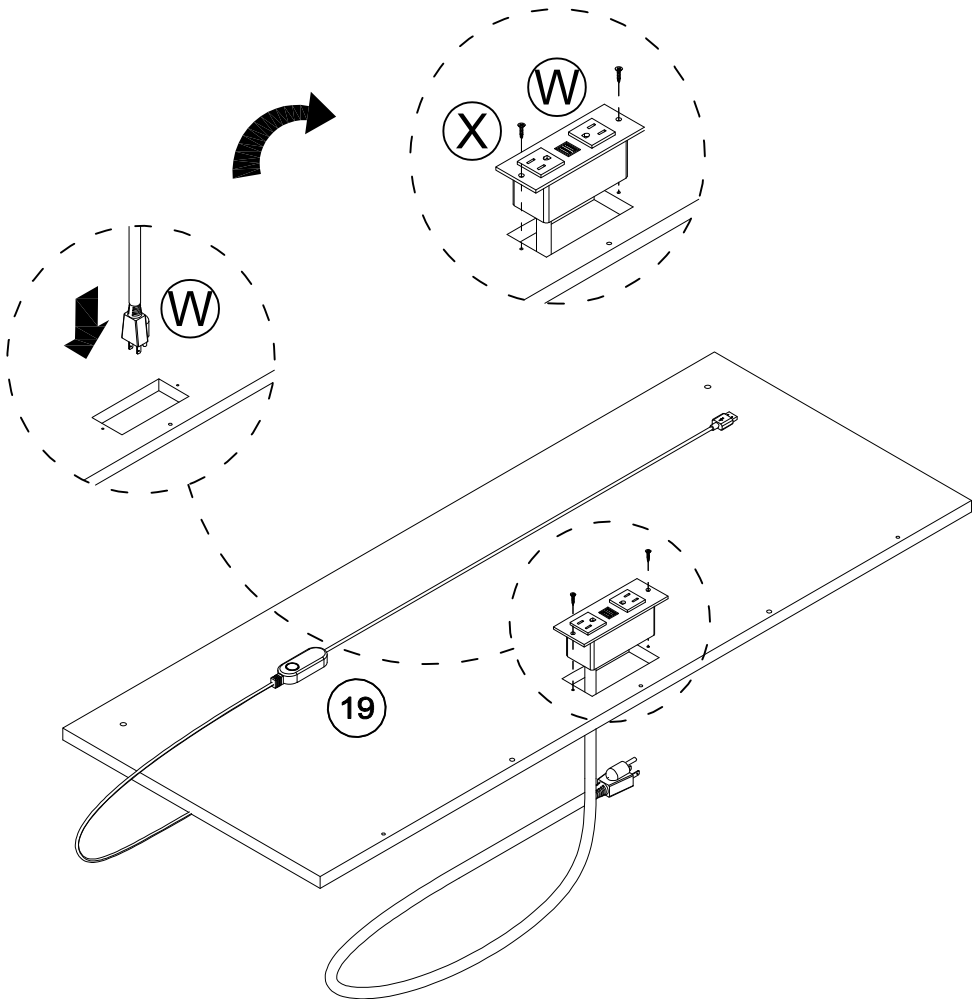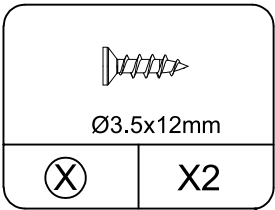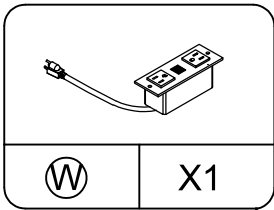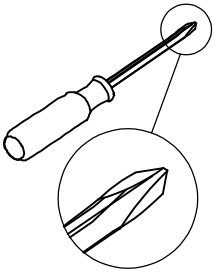





STEP18

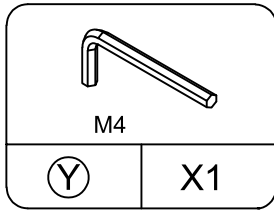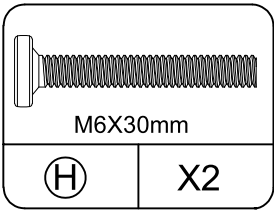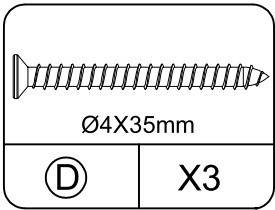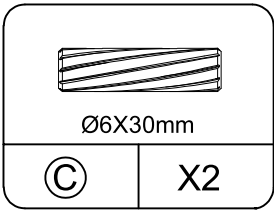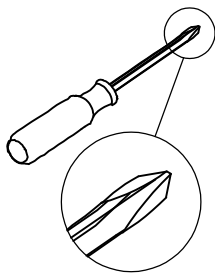


Before you install this screw, please make sure the screw size is M6*30mm

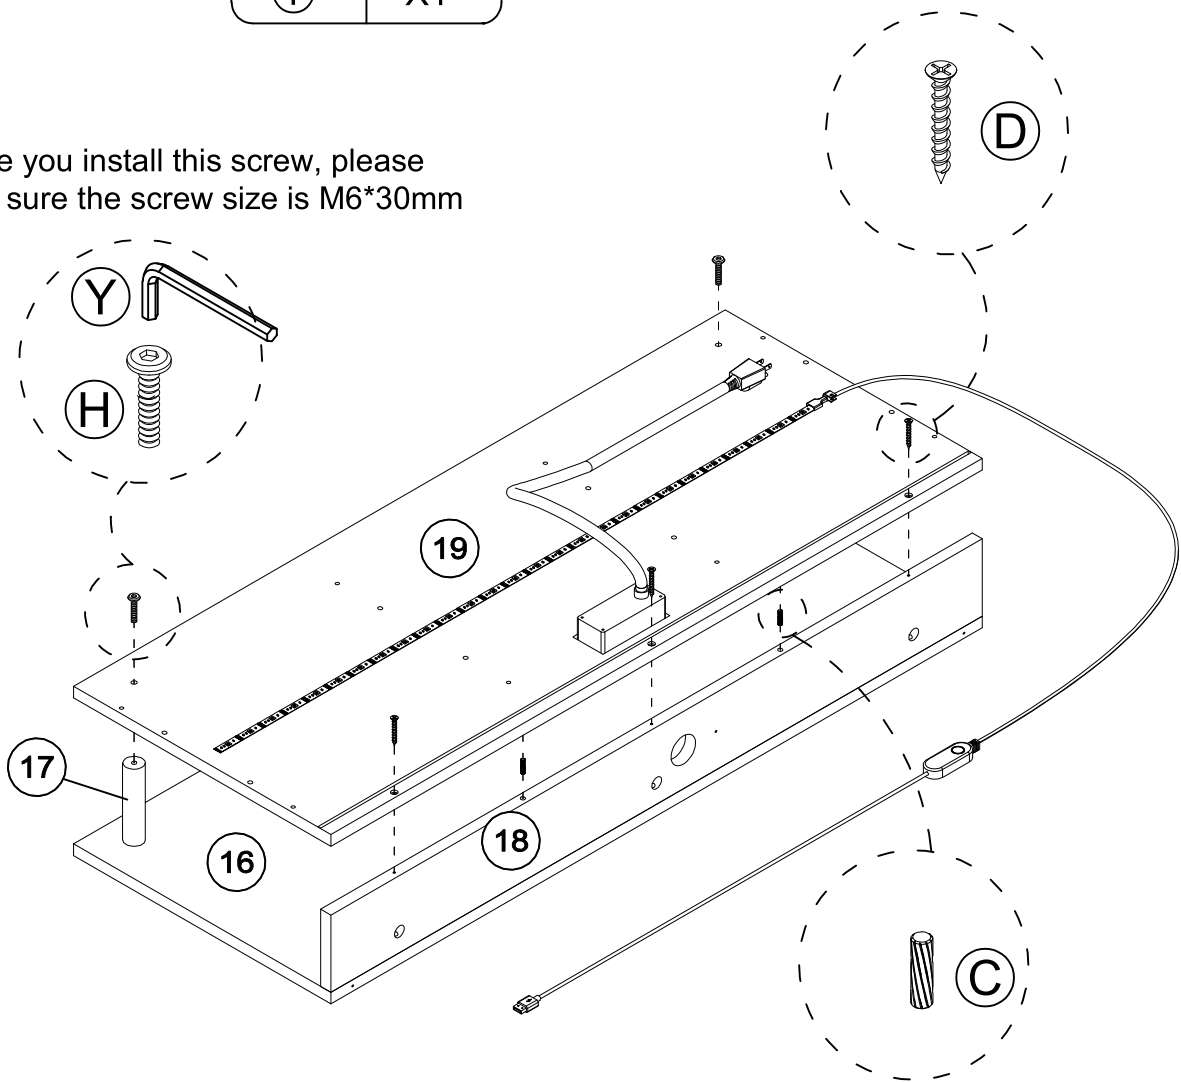


STEP19

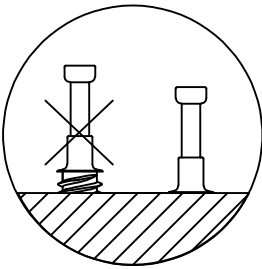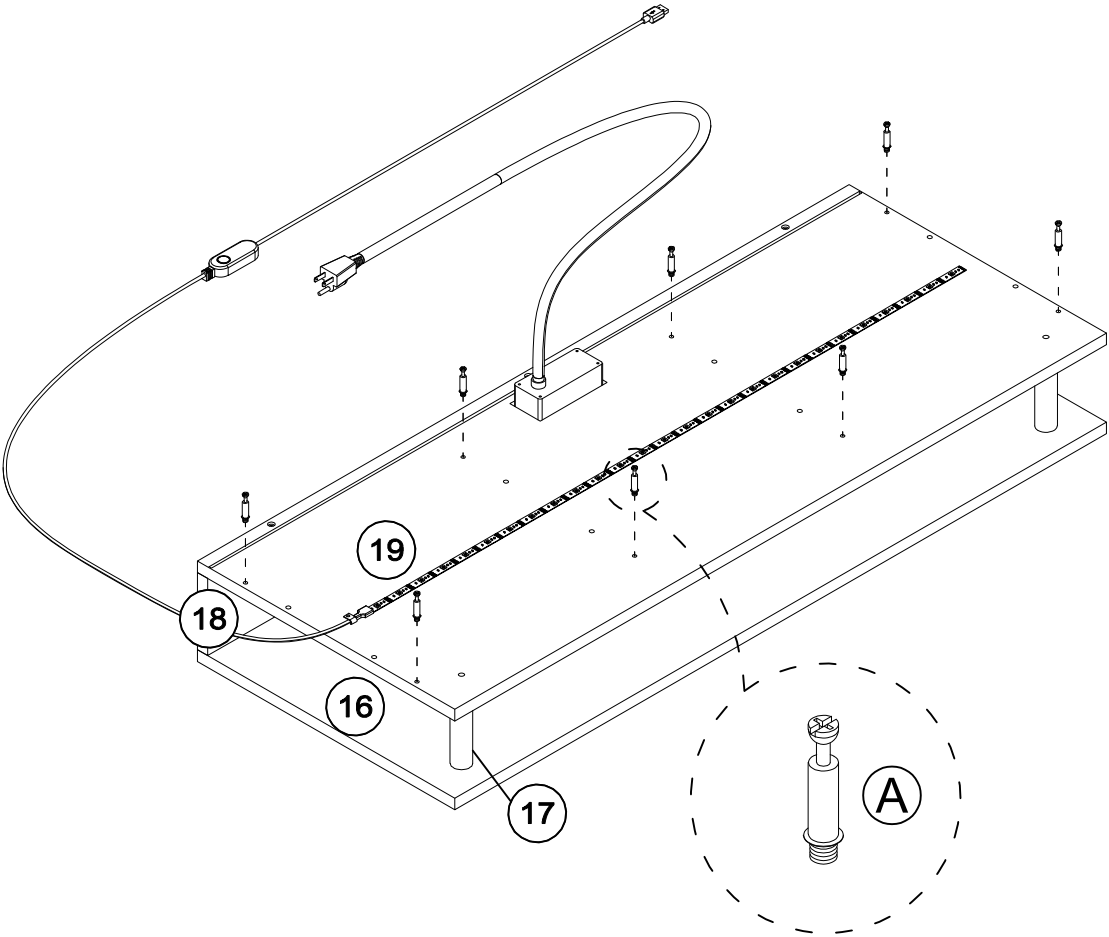
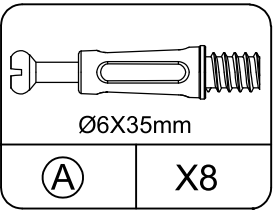
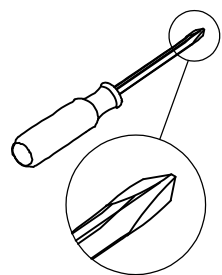


STEP20




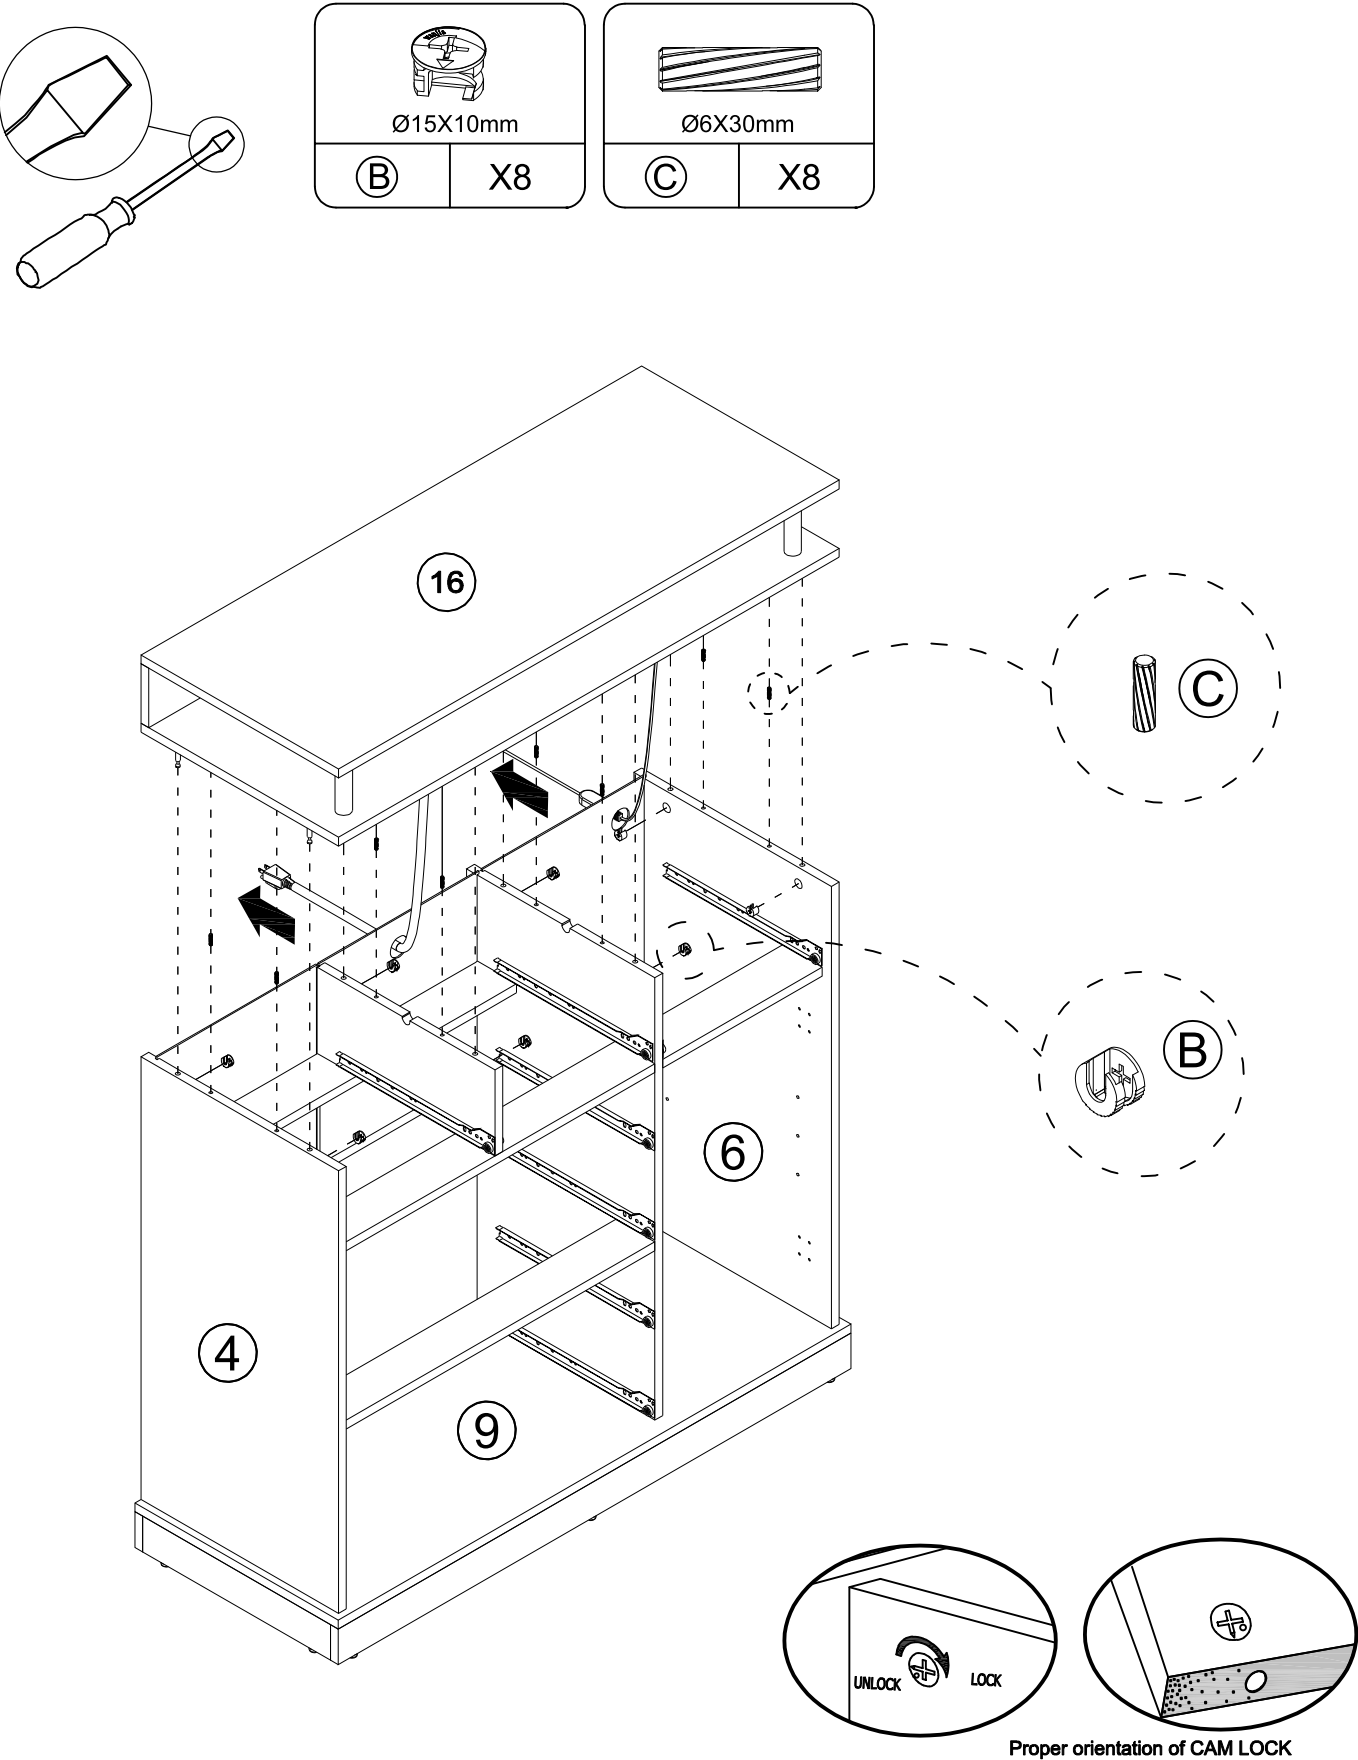


STEP21


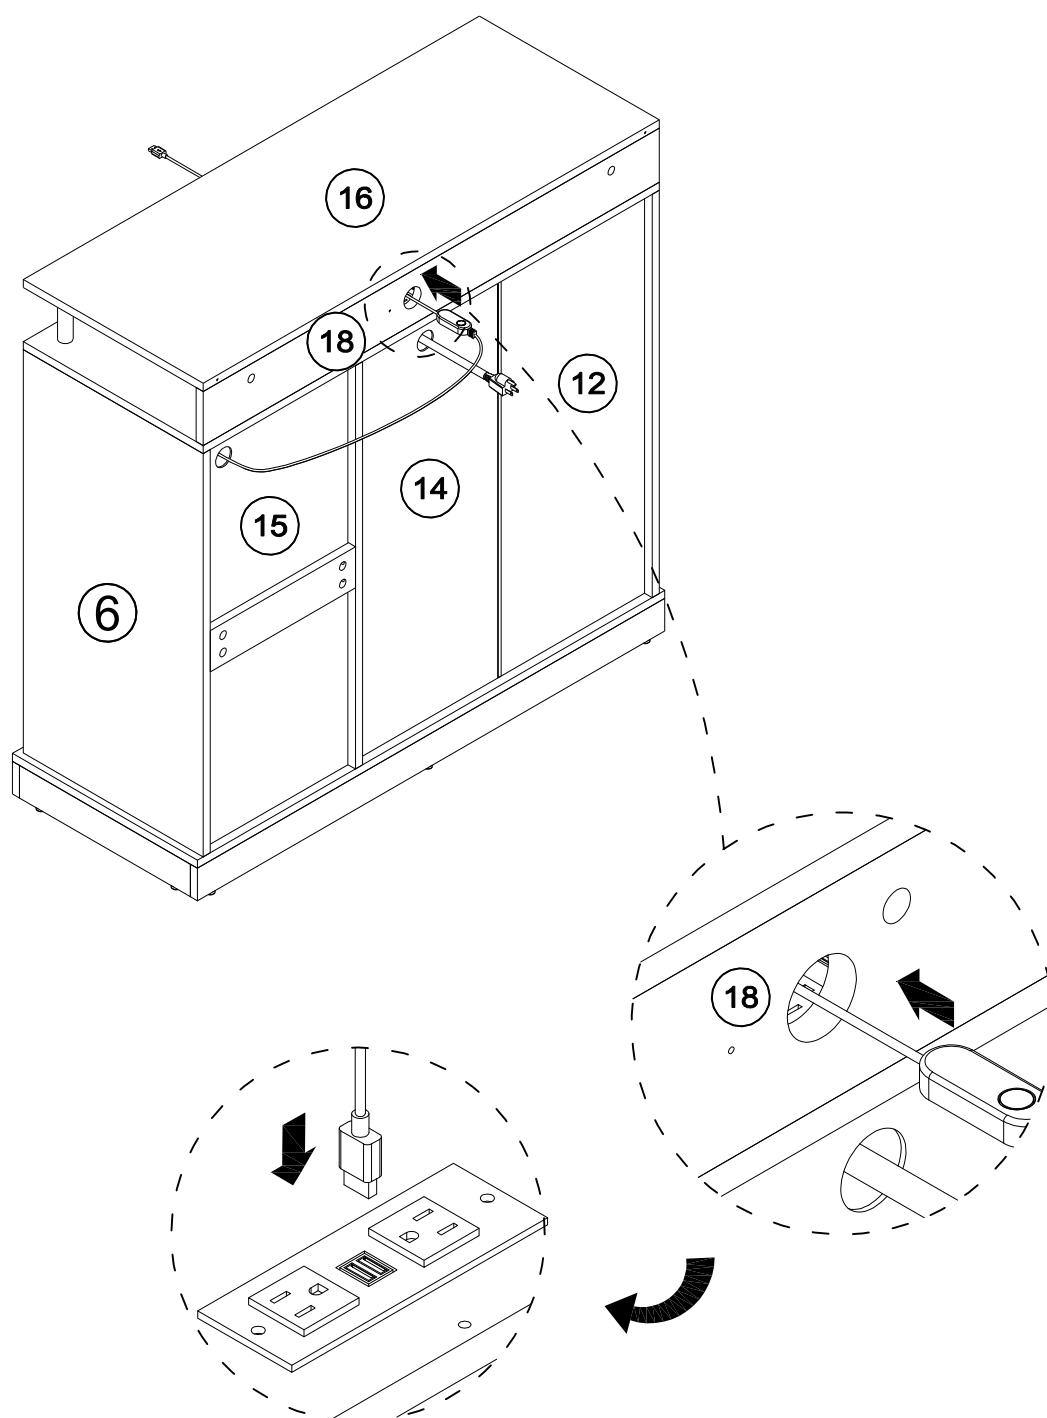


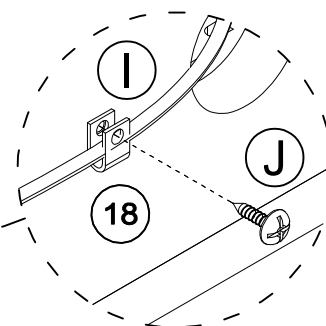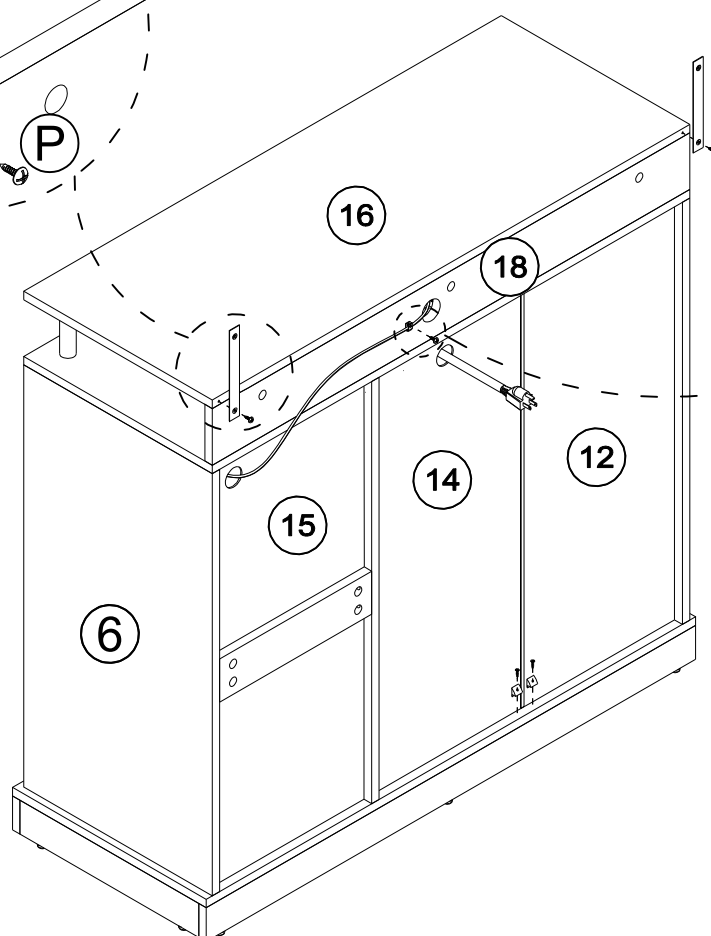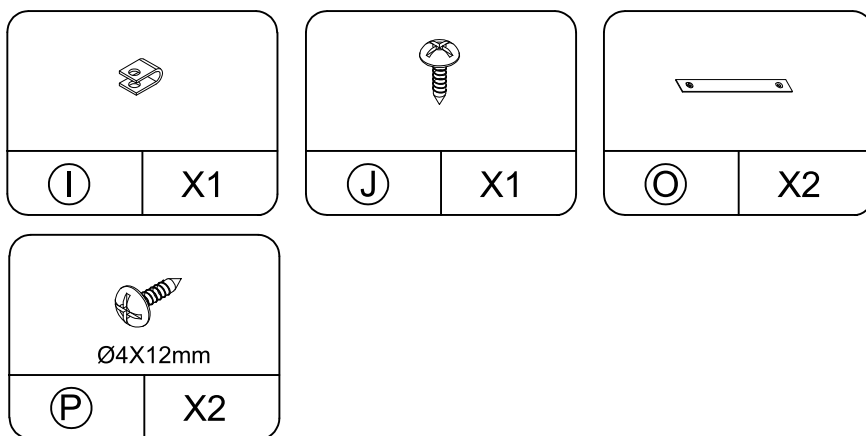

STEP23

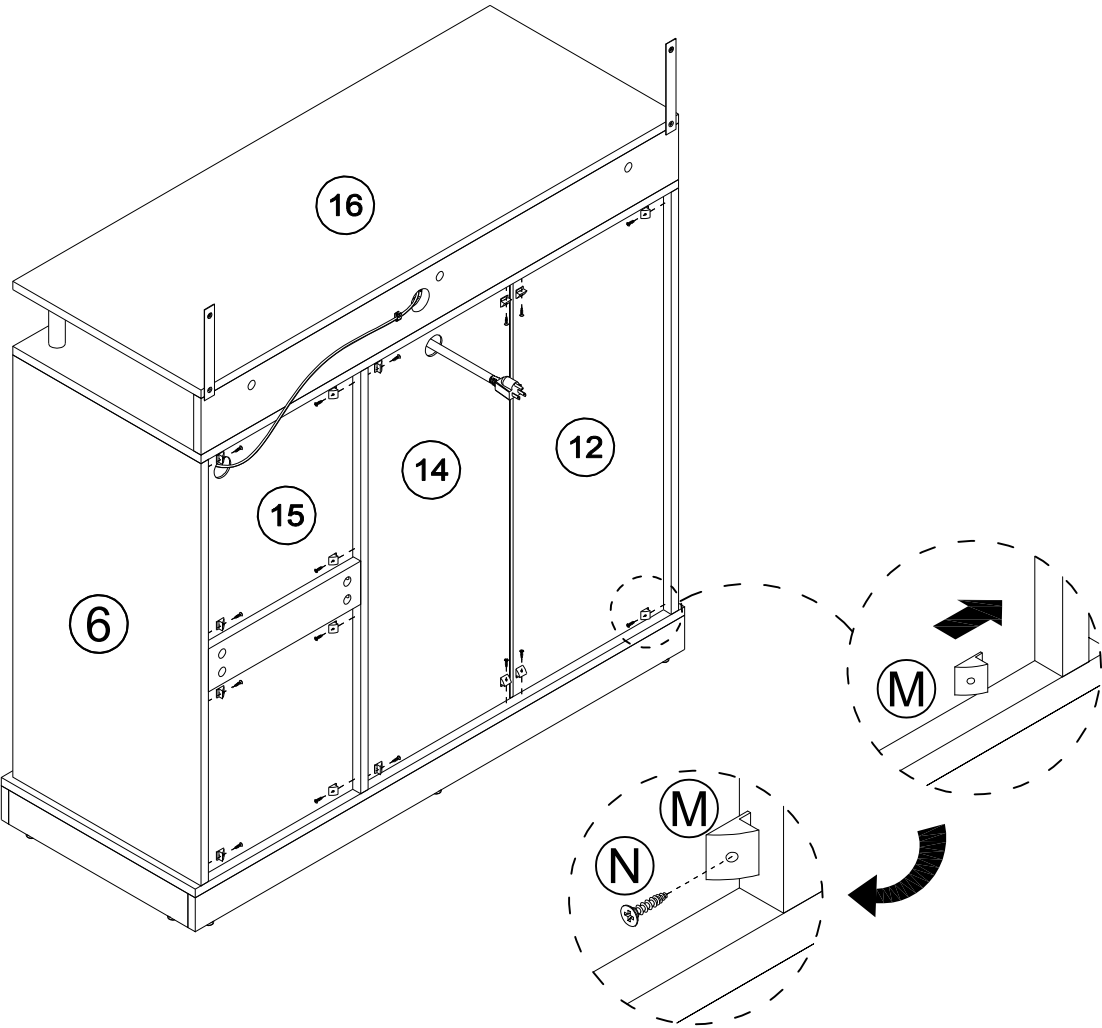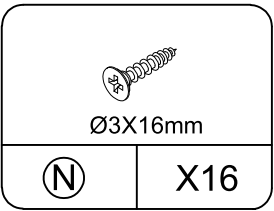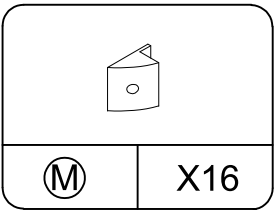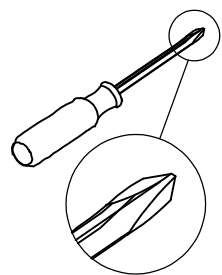


STEP24

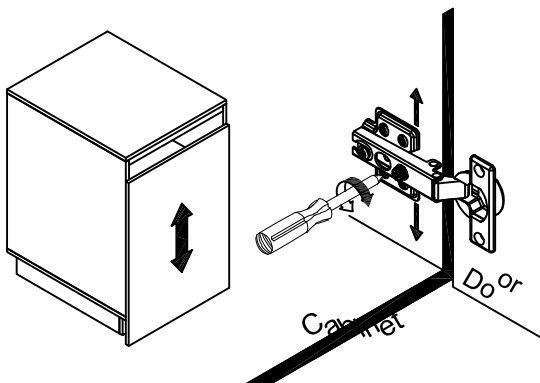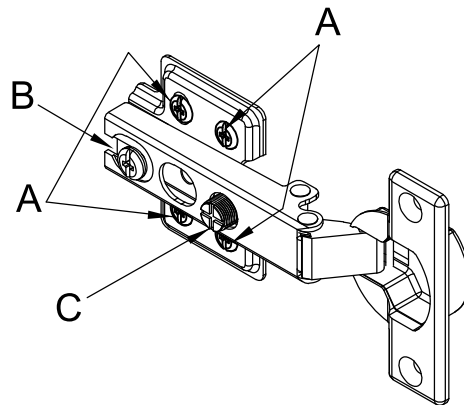


To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

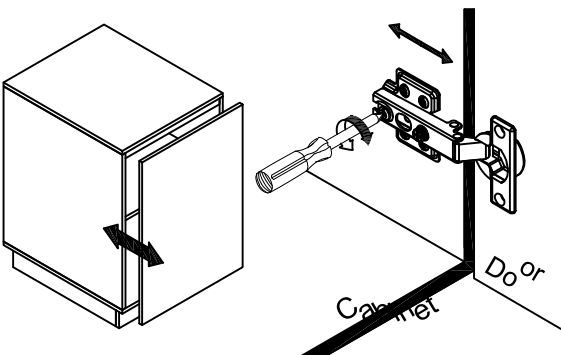

To adjust depth.







Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

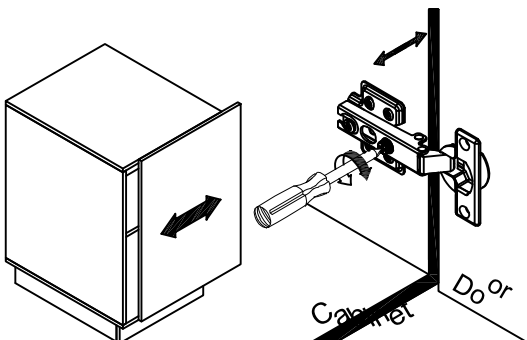


To adjust side ways.

Turning the screw "C" on BOTH hinges on each door.




STEP25

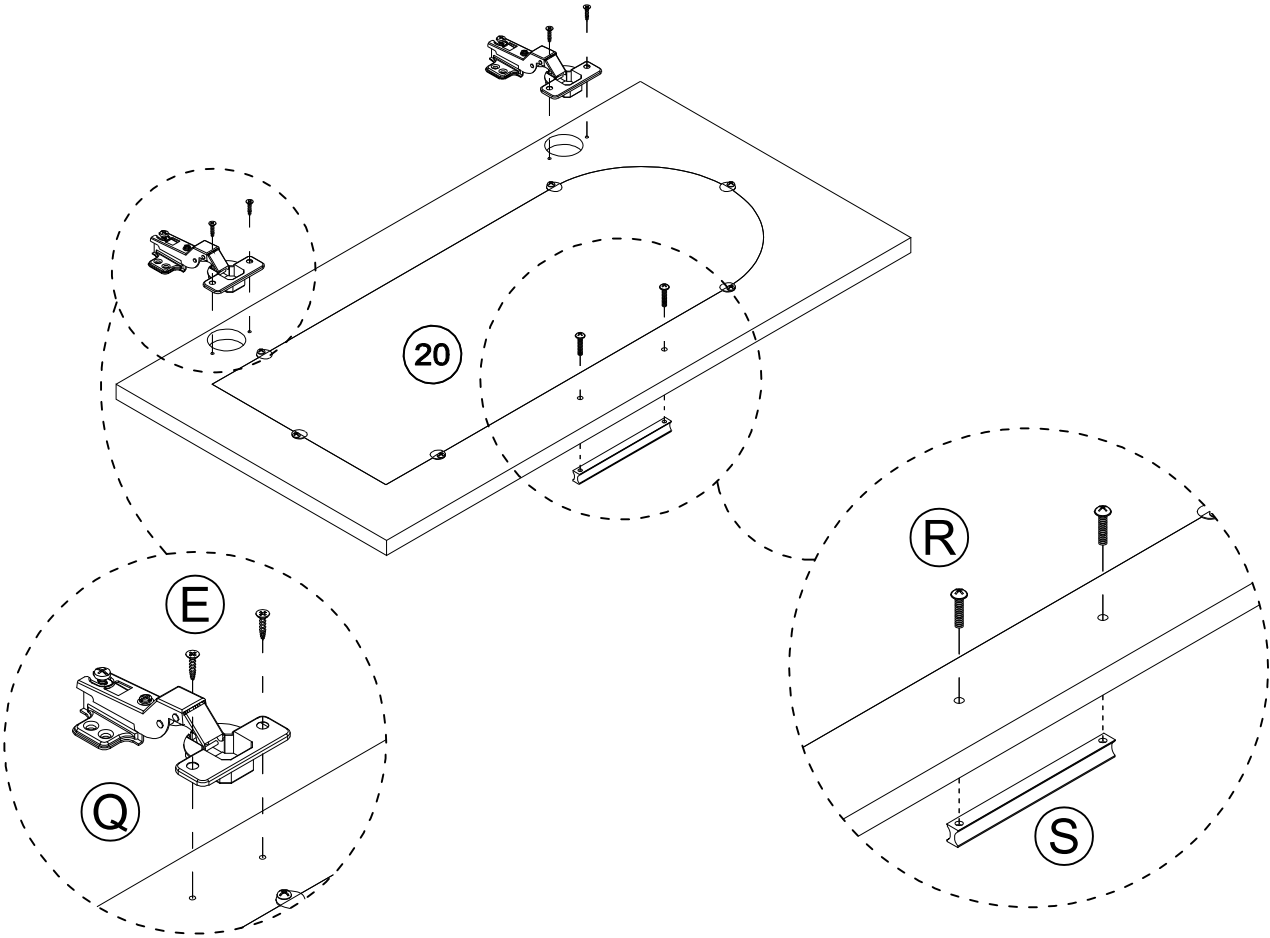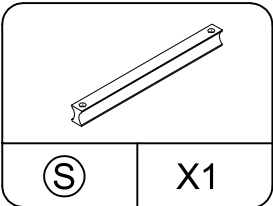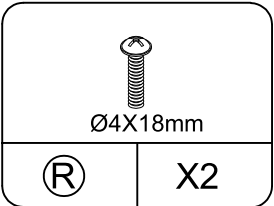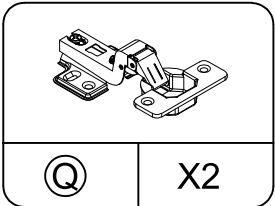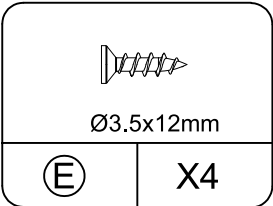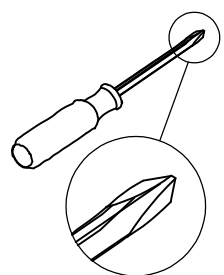


STEP26

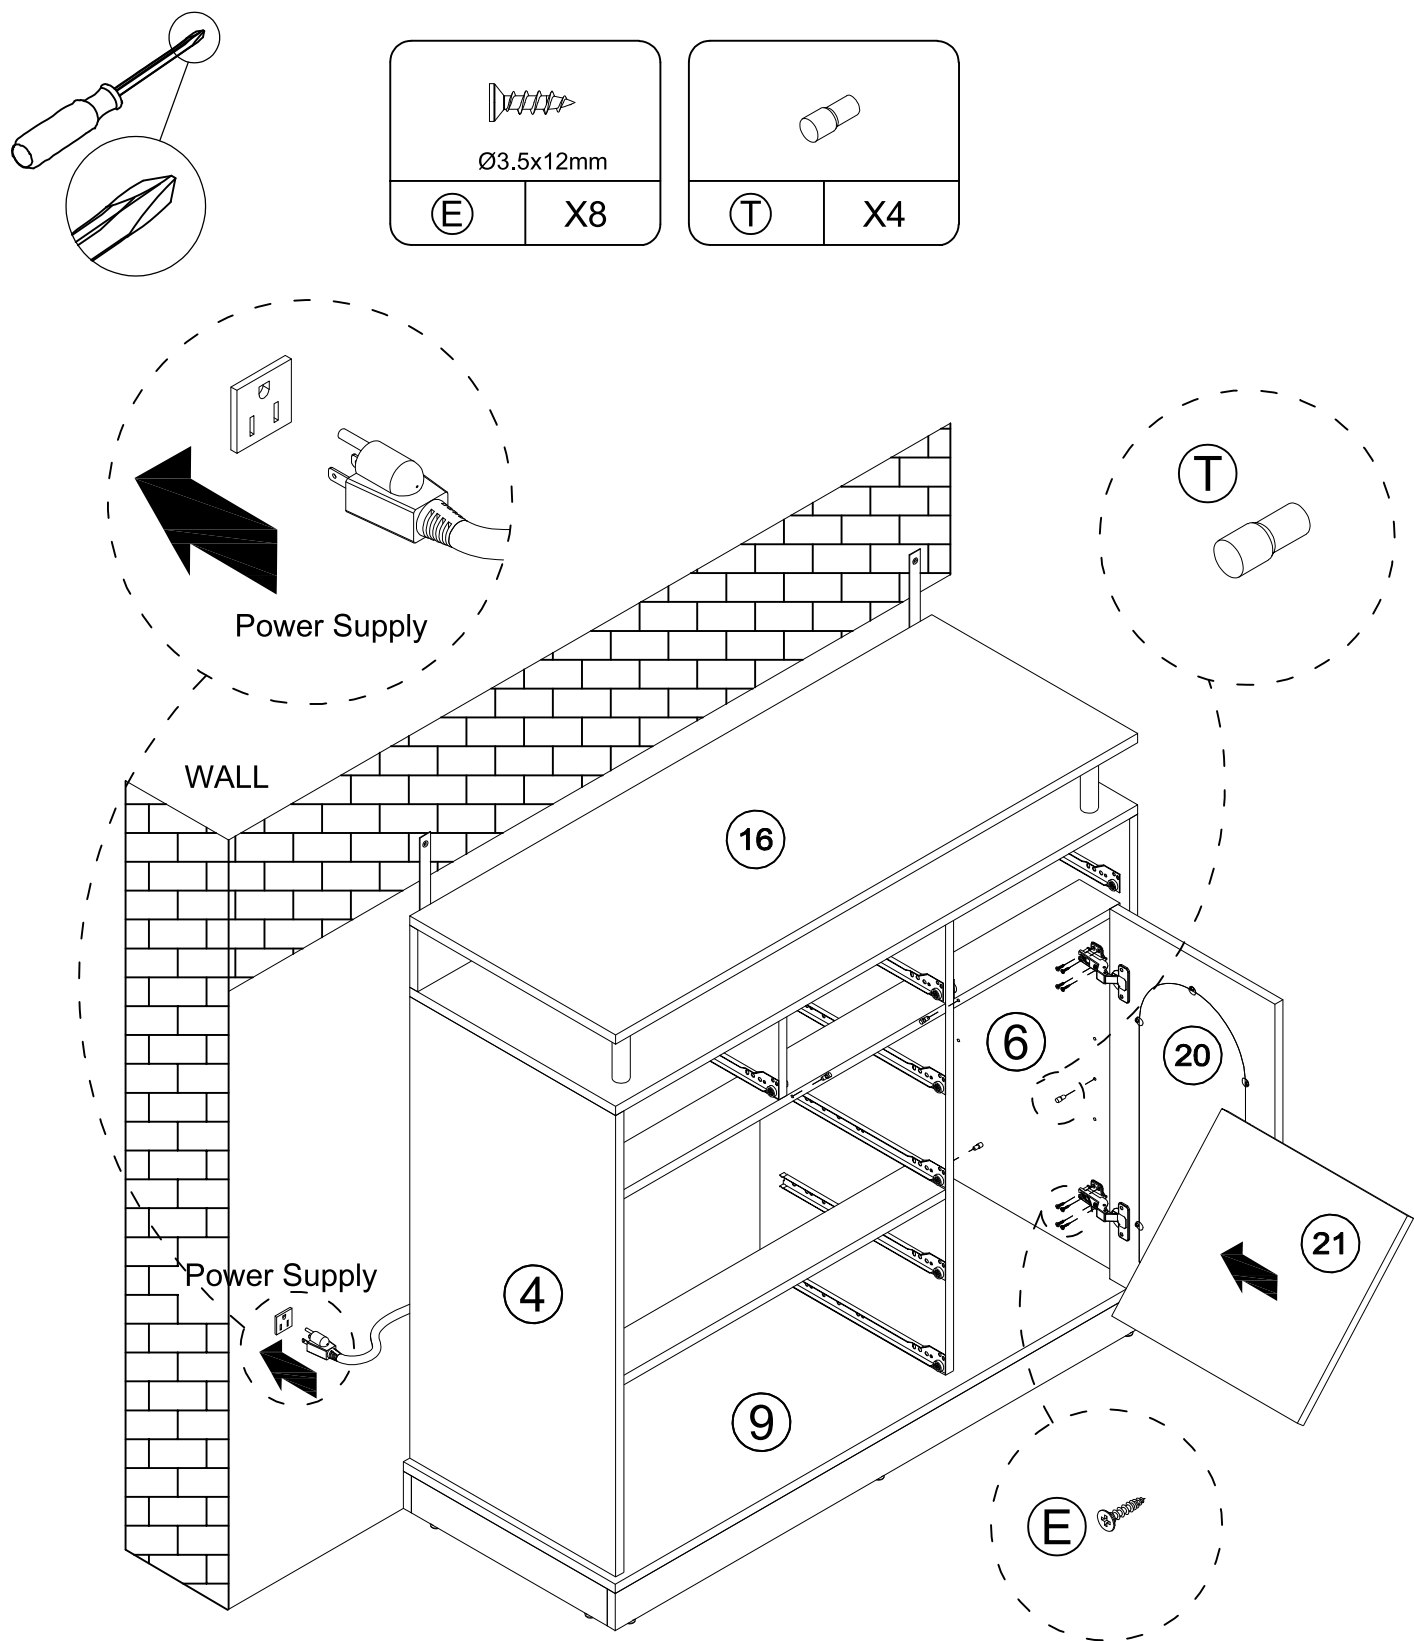

STEP27




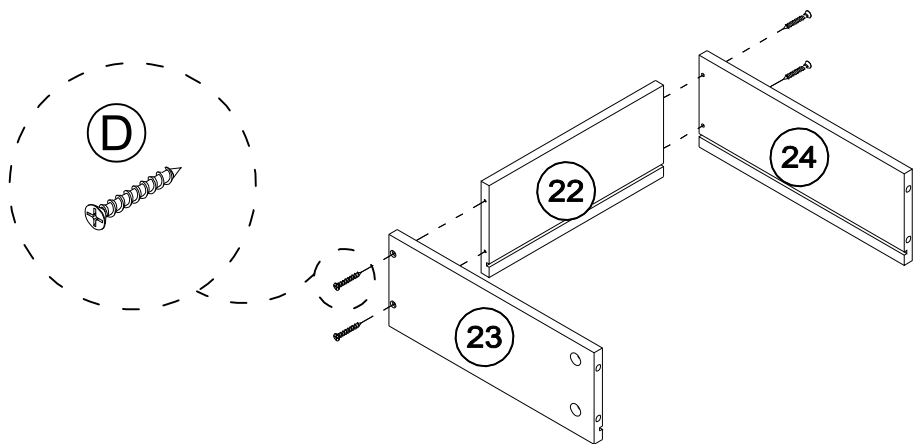
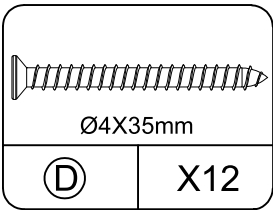
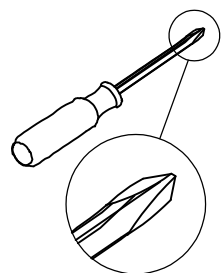


X3

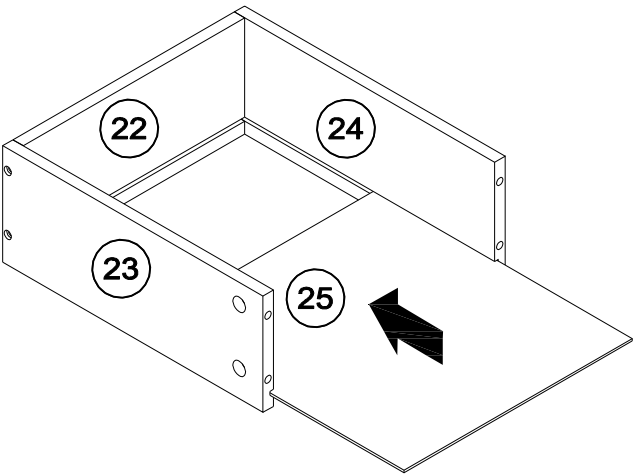

X3




STEP28

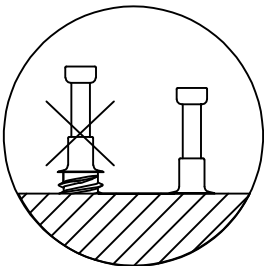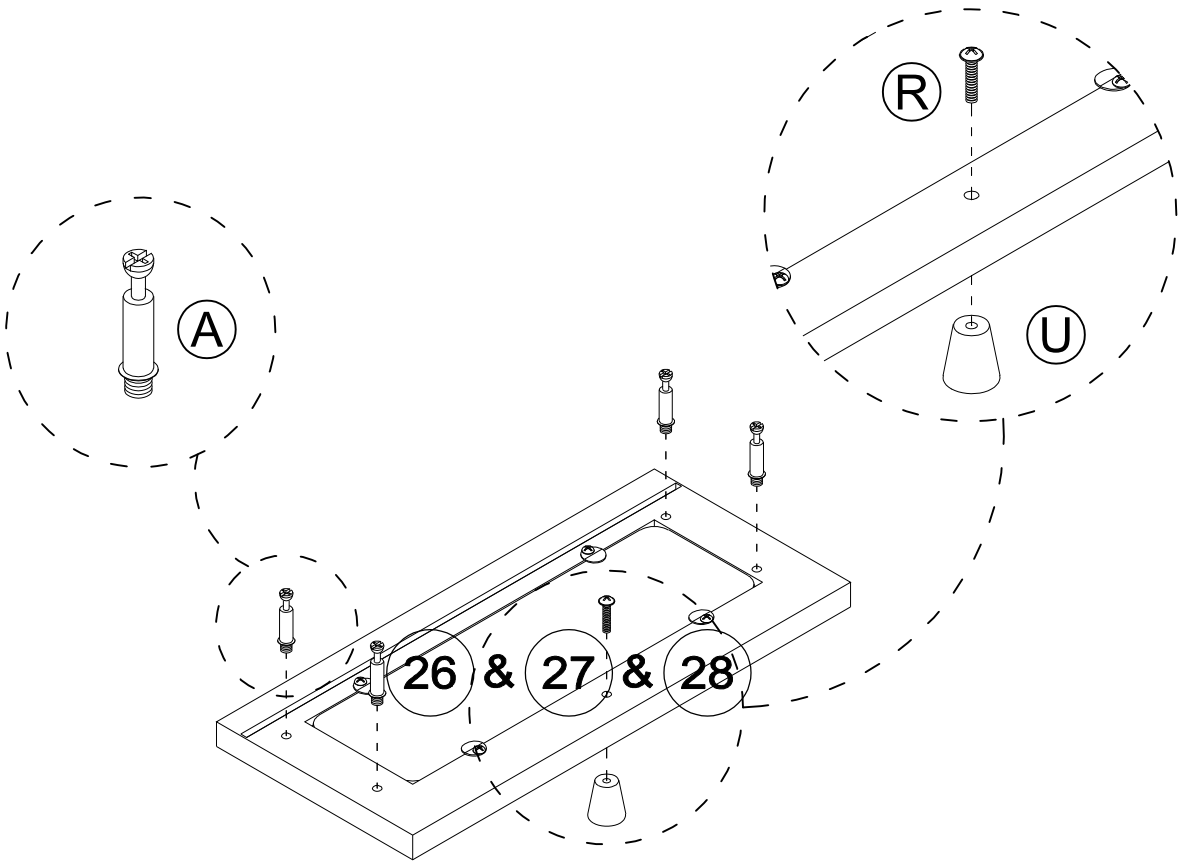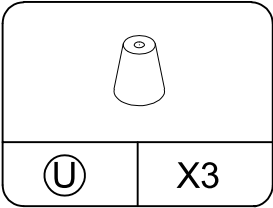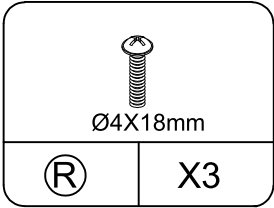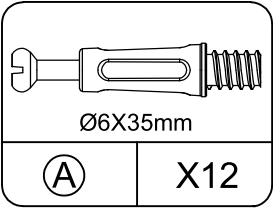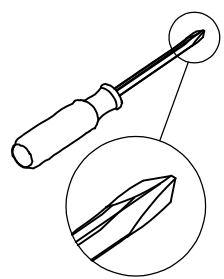


x3

26 & 27 & 28

STEP29

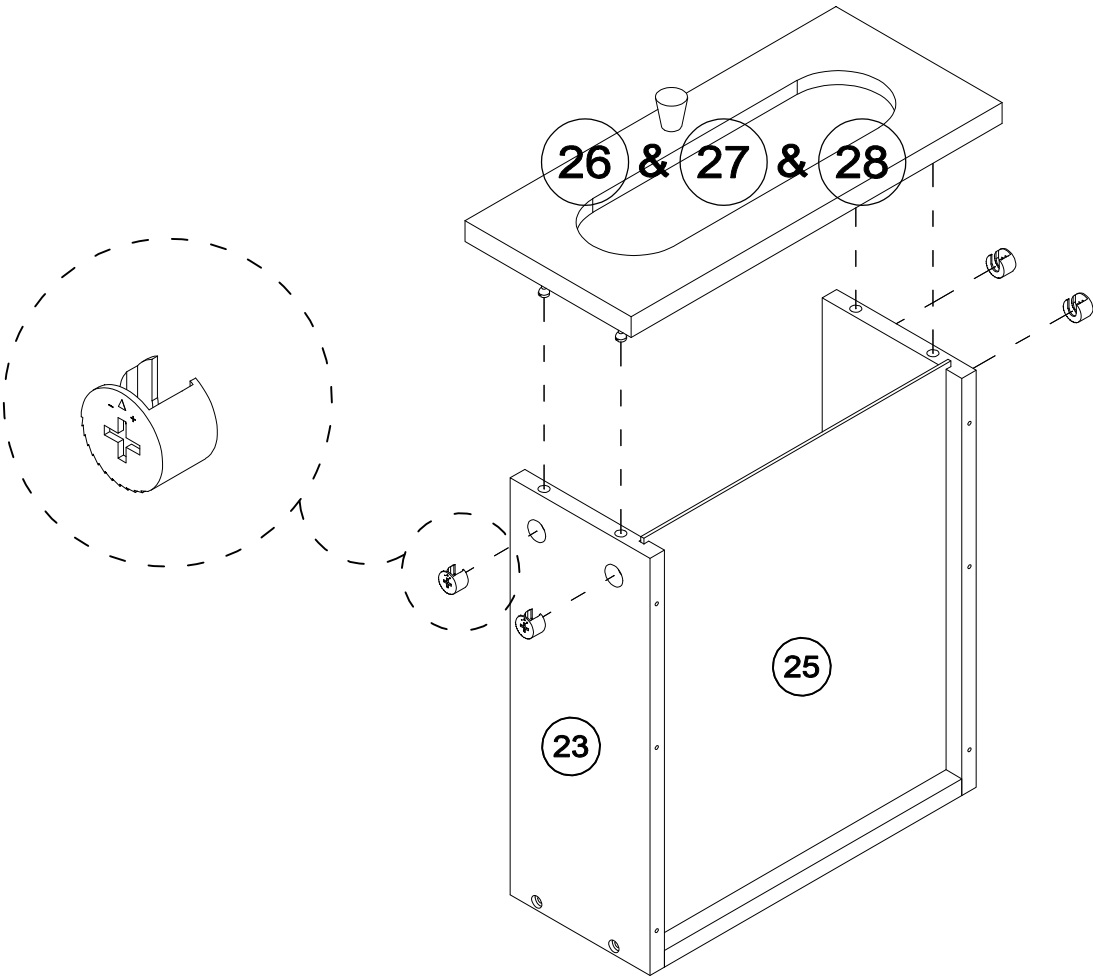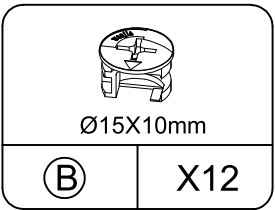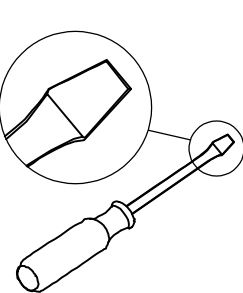


x3

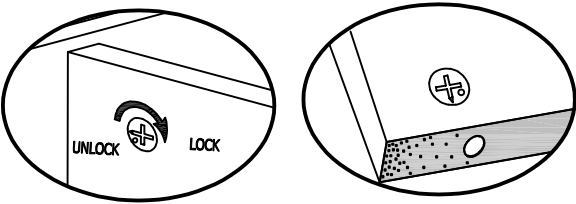



Proper orientation of CAM LOCK


26 & 27 & 28


STEP30

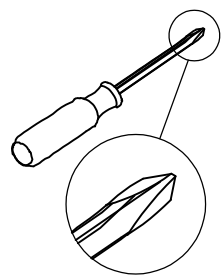

 Ø3.5x12mm	
(E)	X18

 L300mm	
(DL)	X3




 L300mm	
(DR)	X3

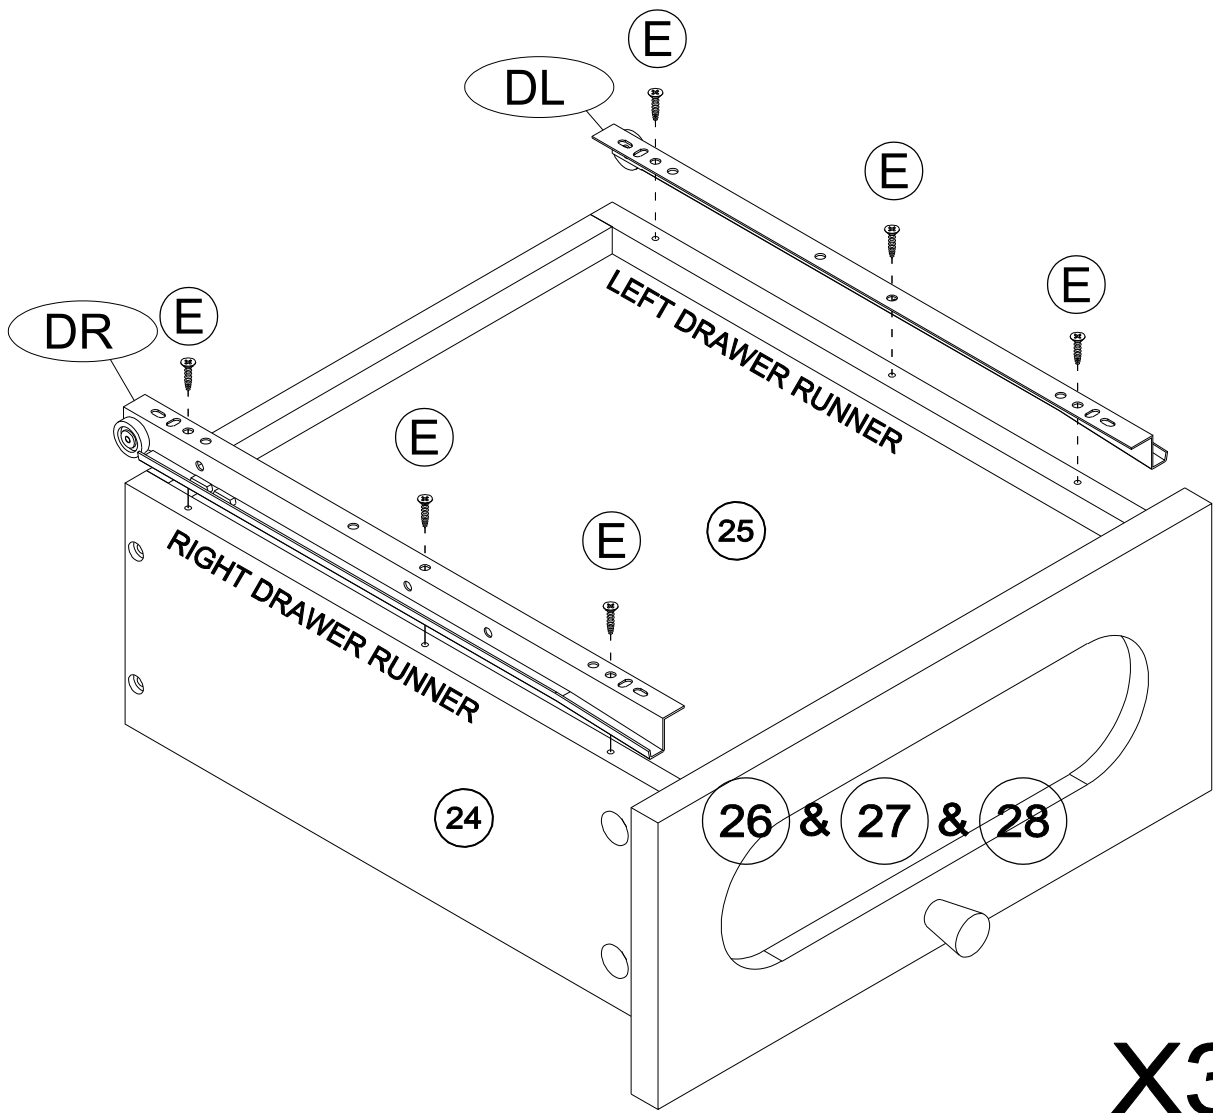

X3






26 & 27 & 28

STEP31

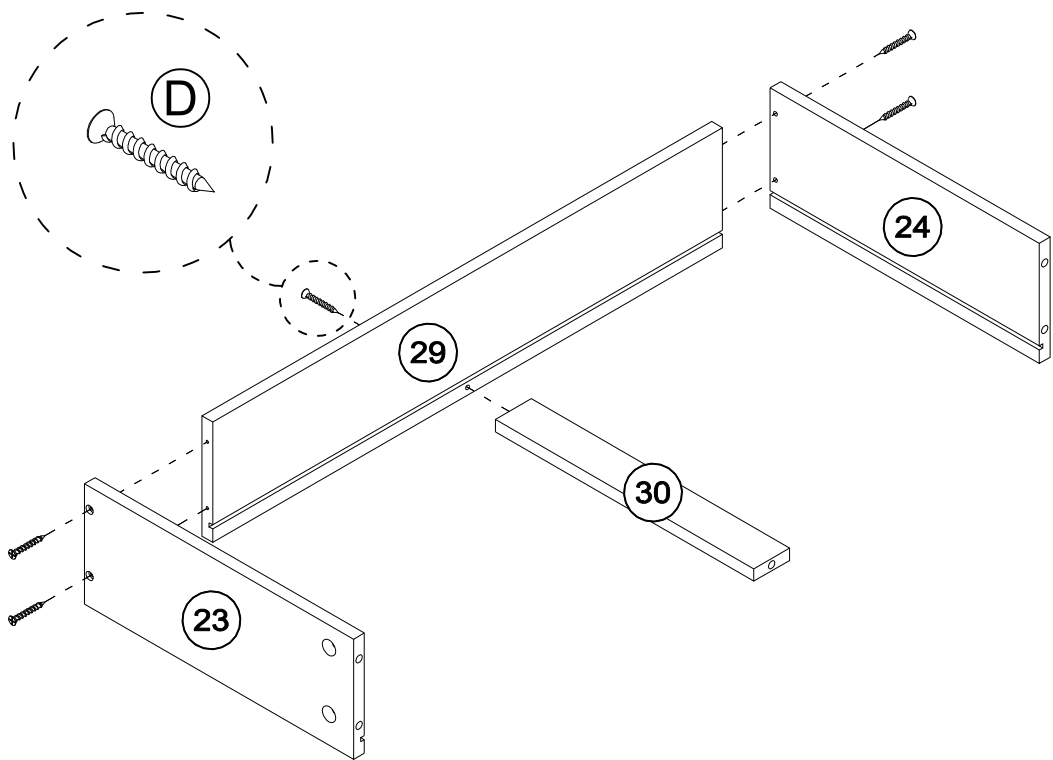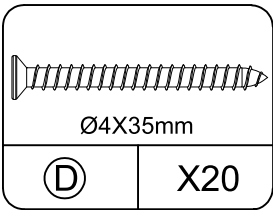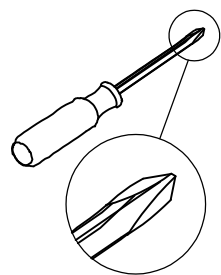


X4

STEP32

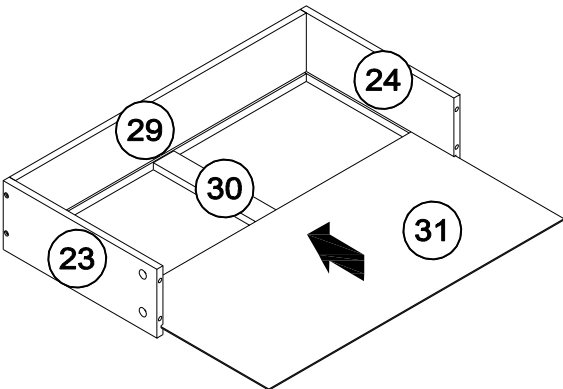
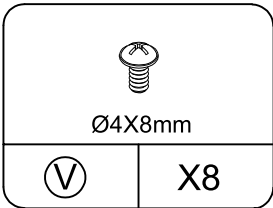
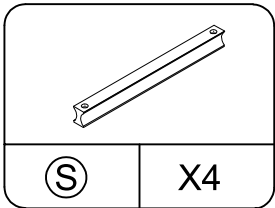
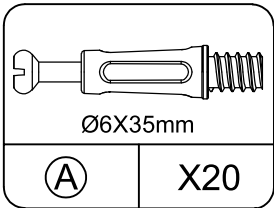
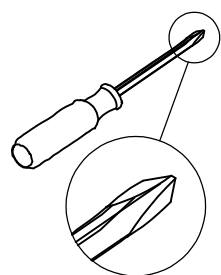


X4

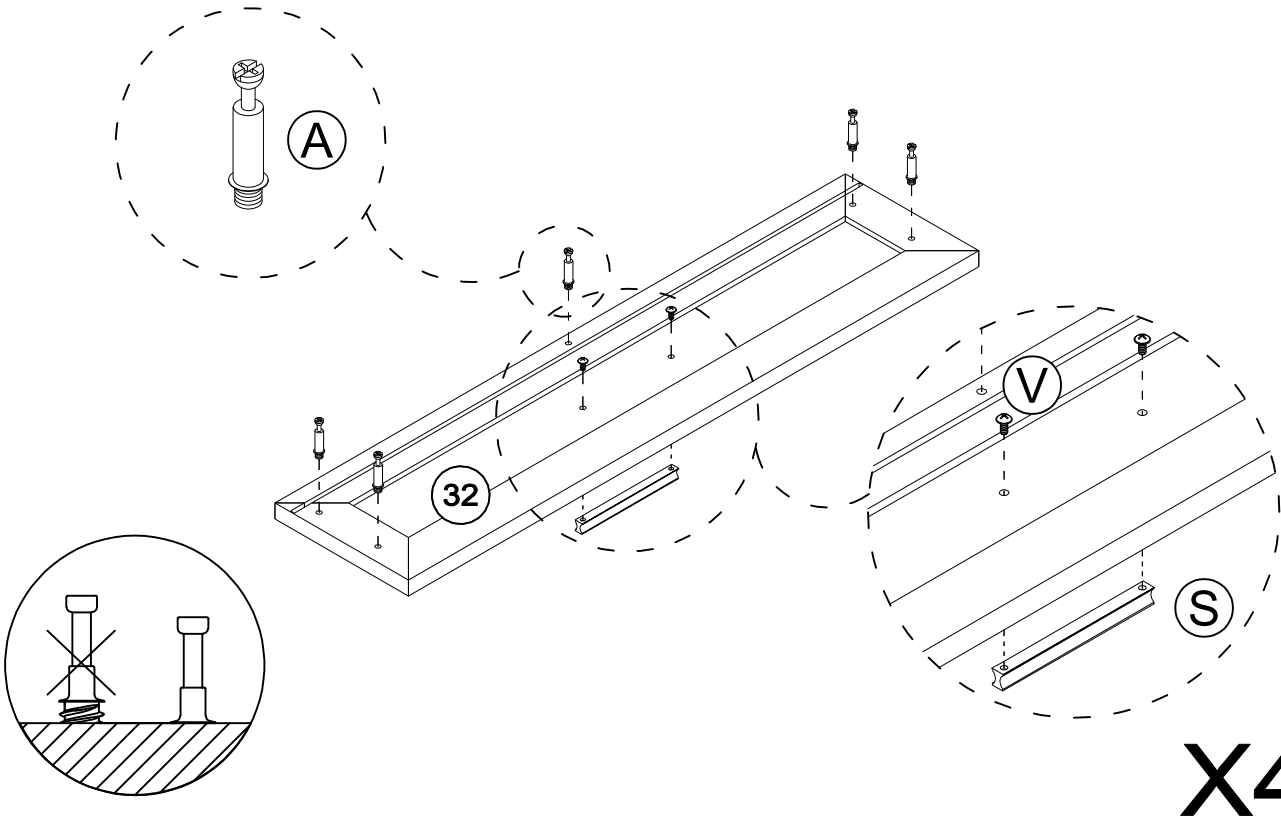

X4


STEP33

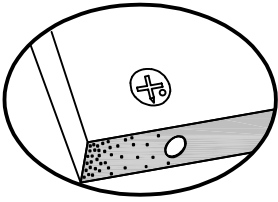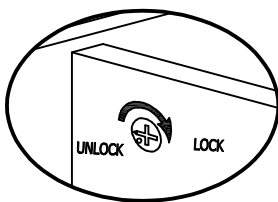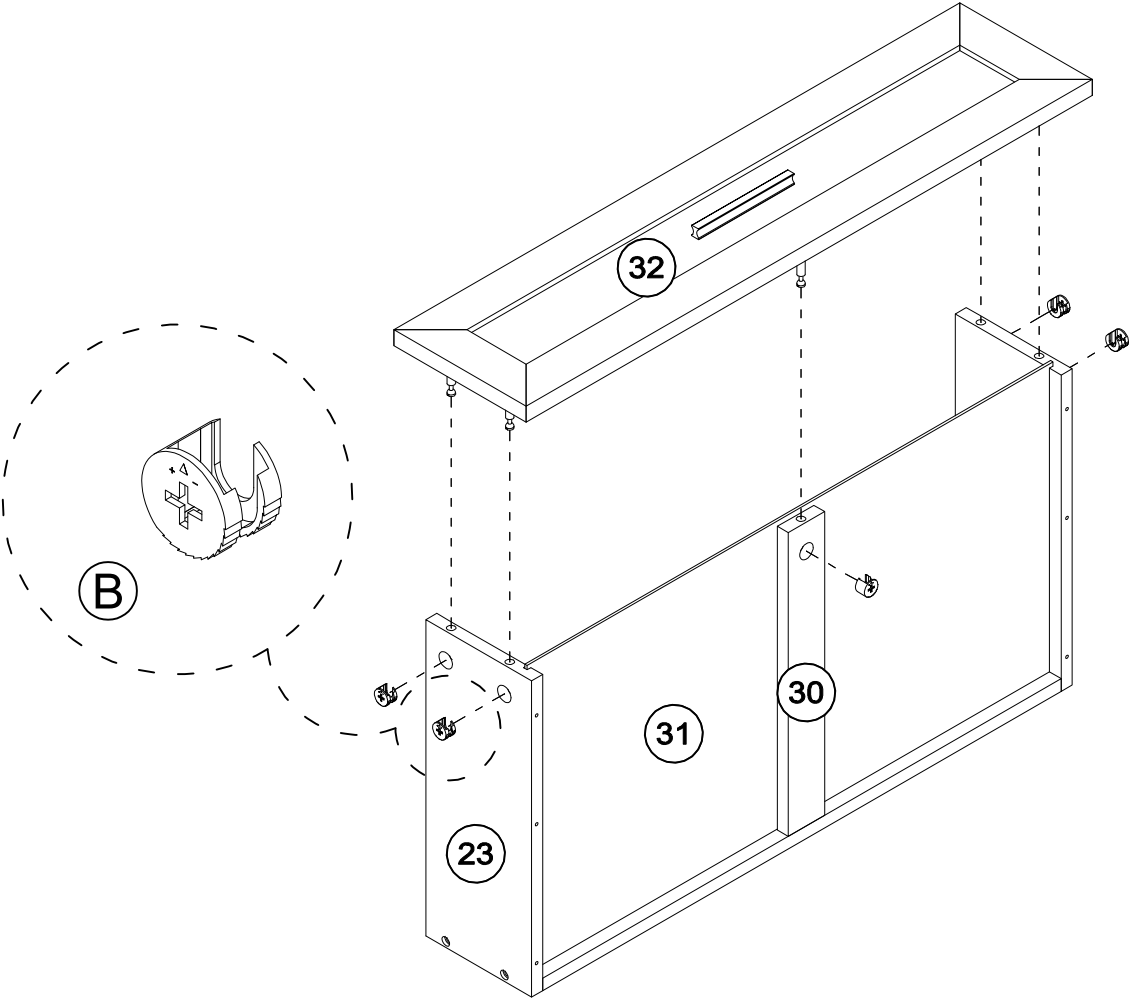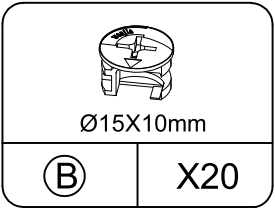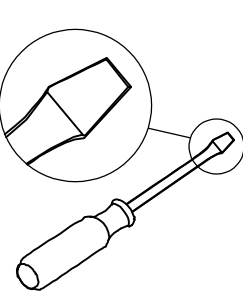



Proper orientation of CAM LOCK


X4

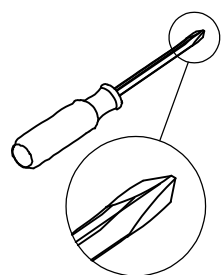
STEP34



 Ø3.5x12mm	
(E)	X24



 L300mm	
(DL)	X4

 L300mm	
(DR)	X4

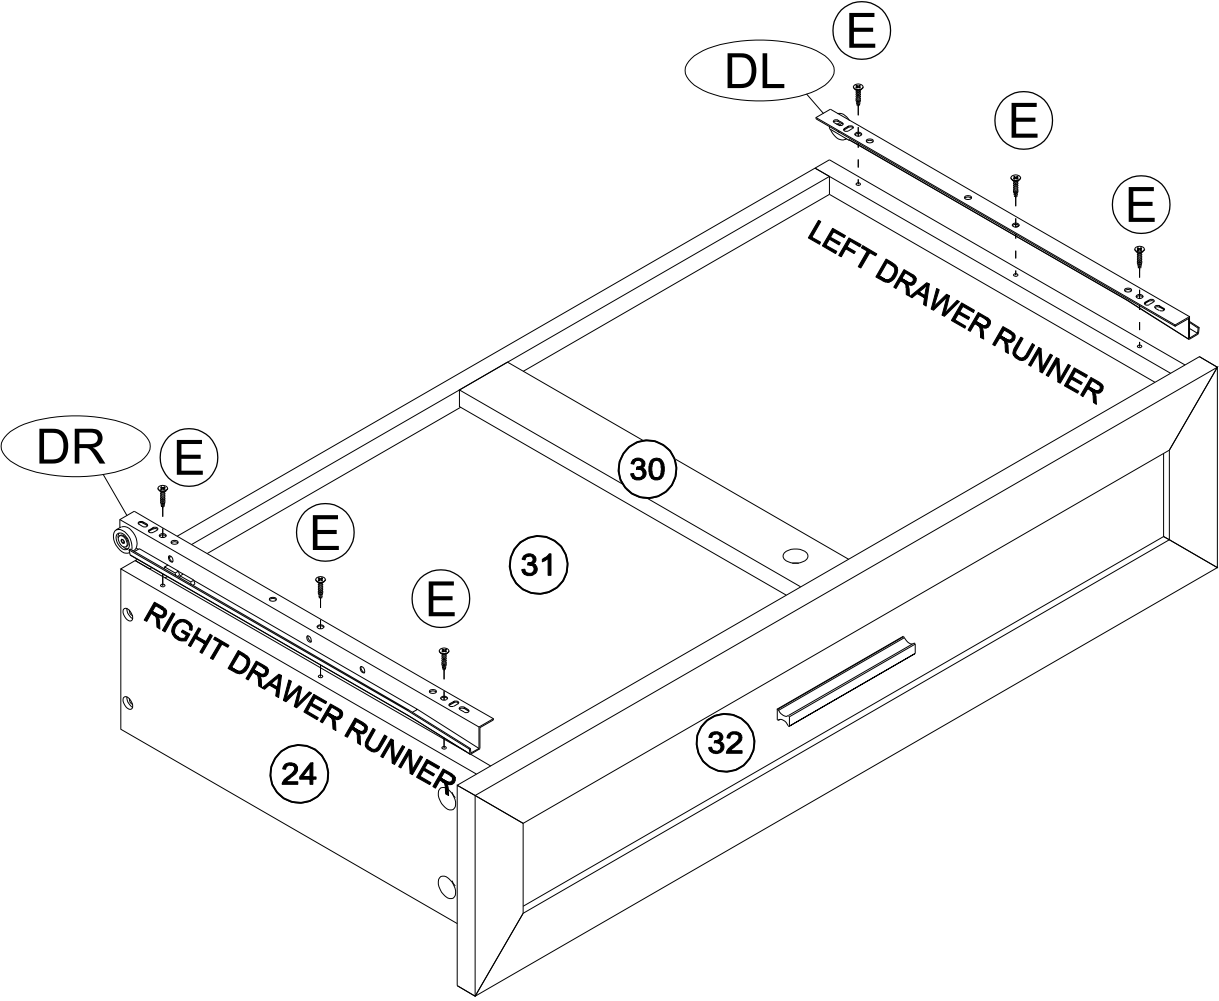

X4

STEP35

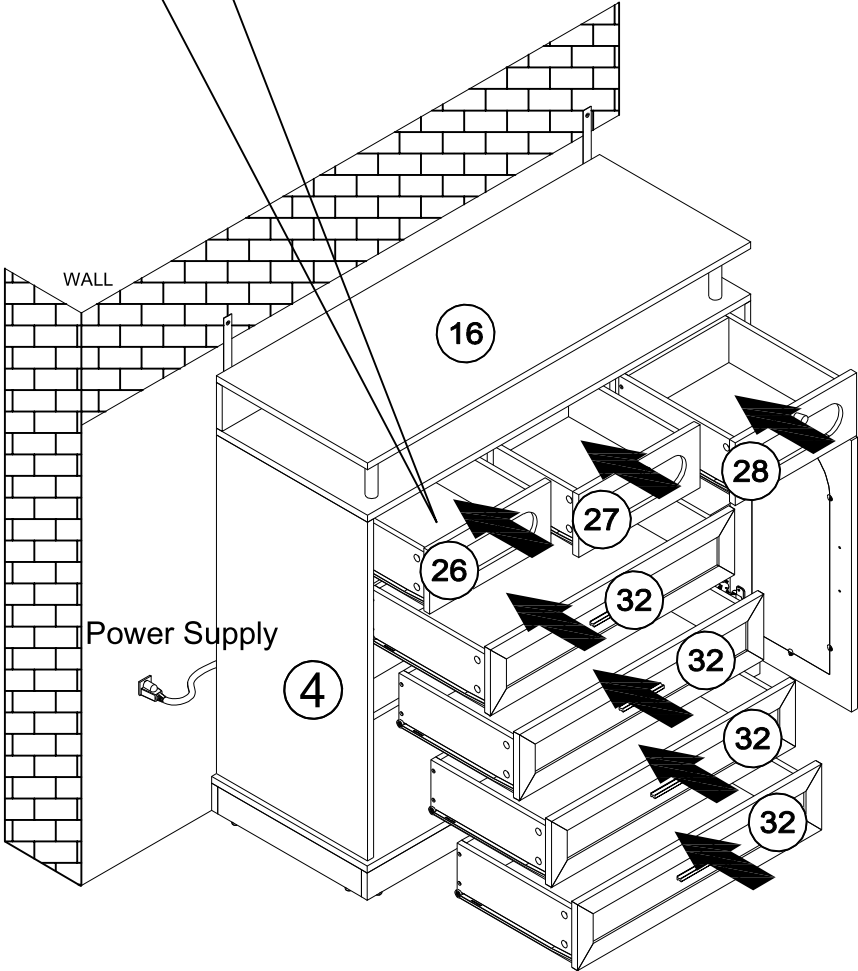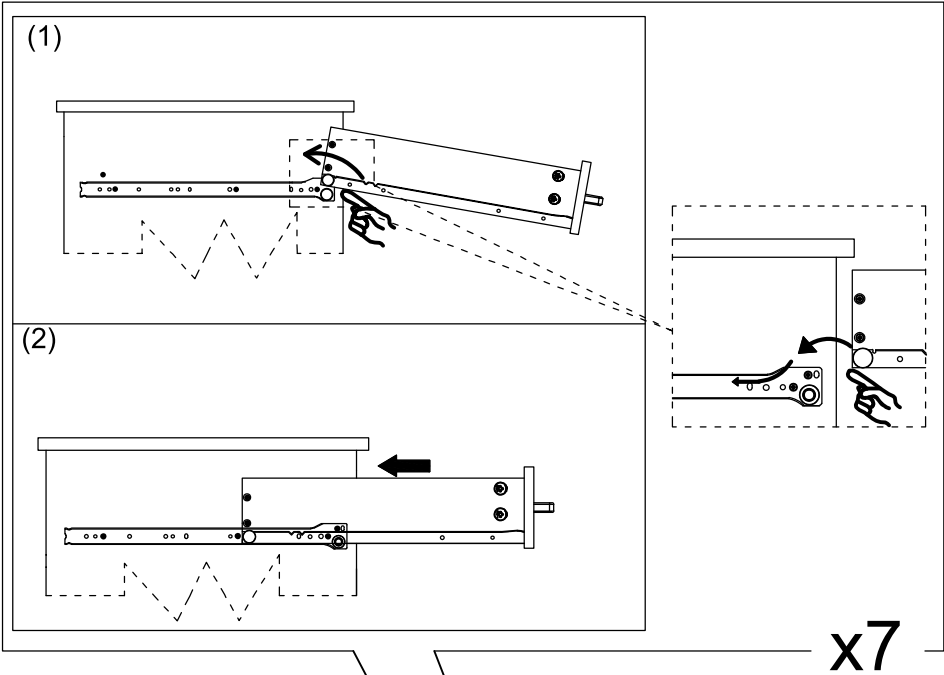

STEP36

