


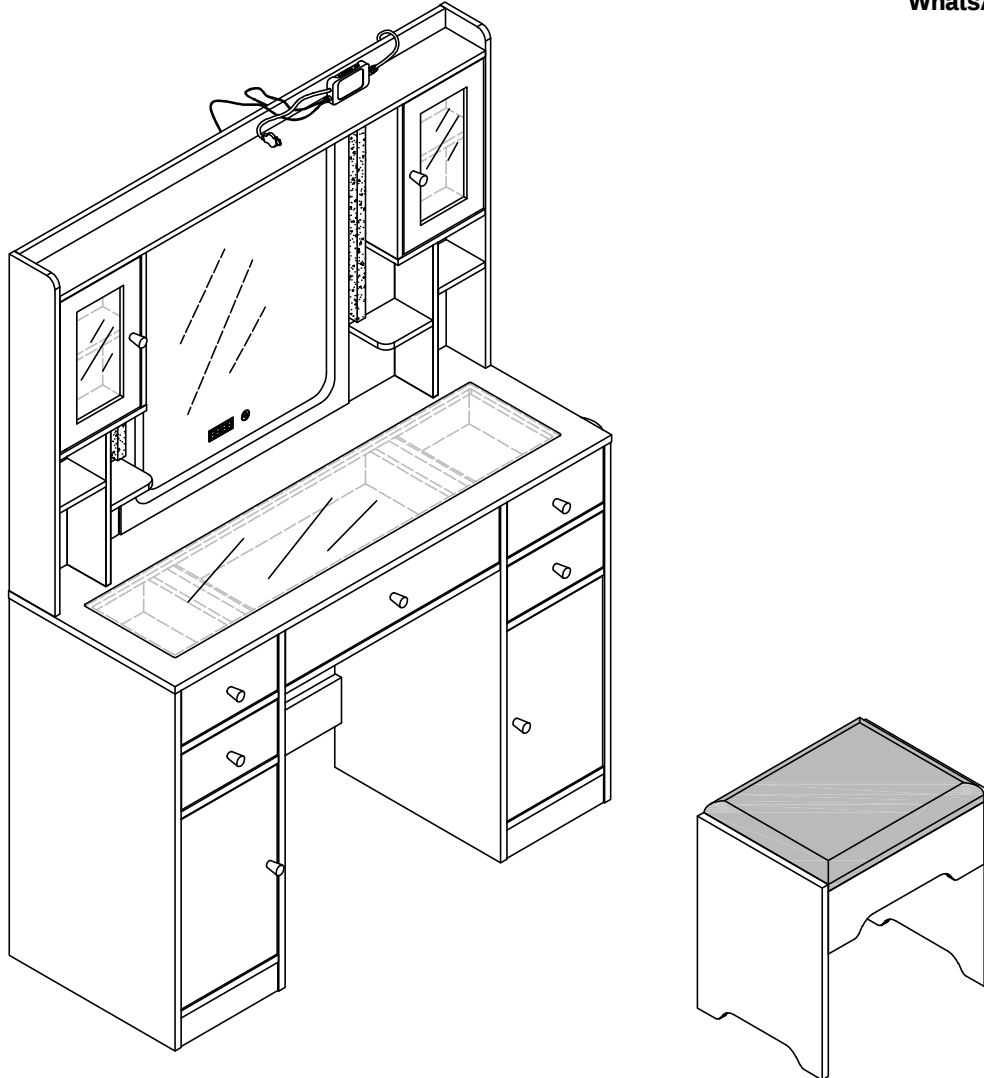


As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

service@vabchesofficial.com

Our professional after-sales team will serve you online all day.

Before You Start

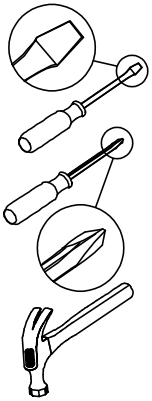


- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints



















PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.

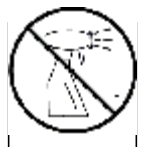


















Board Identification

Not actual size

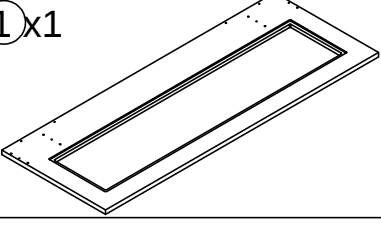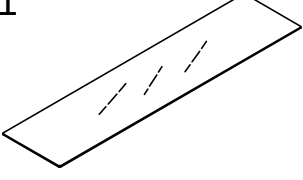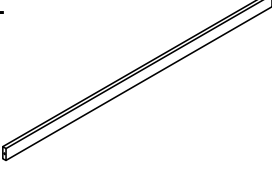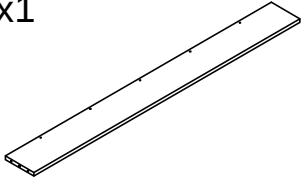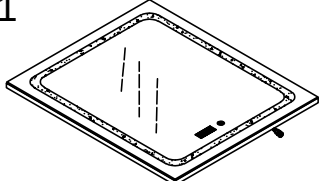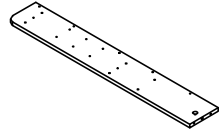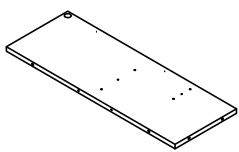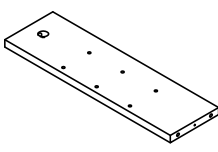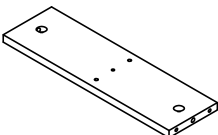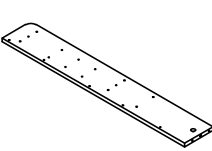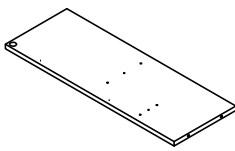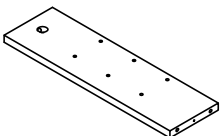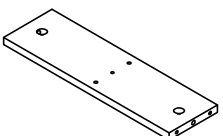①x1 	②x1 	③x1 
Panel	Panel glass	Top plate upper guard strip
④x1 	⑤x1 	⑥x1 
Top plate	Mirror	Left panel on the cabinet
⑦x1 	⑧x1 	⑨x2 
Left back panel on the cabinet	Left inner edge board of the upper cabinet	Upper activity layer board
⑩x1 	⑪x1 	⑫x2 
Left side panel of the cabinet	Vertical board on the left side of the cabinet	Upper layer board
⑬x1 	⑭x1 	⑮x1 
Left side panel of the cabinet	Right panel on the cabinet	Right back panel on the cabinet
⑯x1 	⑰x1 	⑱x1 
Right inner edge board of the upper cabinet	Right side panel of the cabinet	Vertical board on the right side of the cabinet














Board Identification

Not actual size

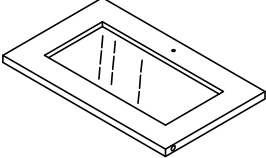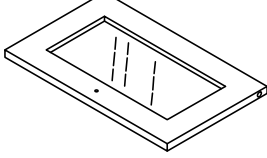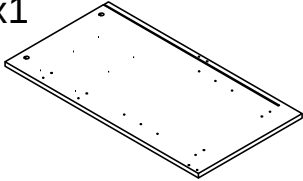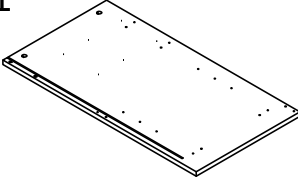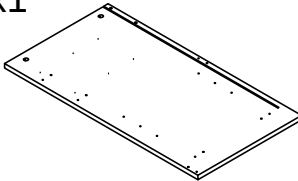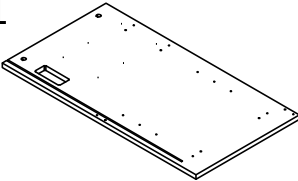

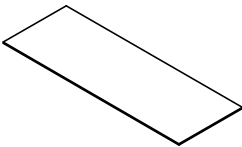
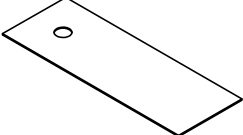



①9 x1 	②0 x1 	②1 x1 
Right side panel of the cabinet	Upper left glass door panel	Upper right glass door panel
②2 x1 	②3 x1 	②4 x1 
Left lower cabinet left board	Left lower cabinet and right board	Right lower cabinet left panel
②5 x1 	②6 x6 	②7 x1 
Right lower cabinet right board	Dropdown Bar	Left lower cabinet door upper strip
②8 x2 	②9 x1 	③0 x1 
Lower activity layer board	Lower left cabinet bottom plate	Lower right cabinet door upper strip
③1 x1 	③2 x1 	③3 x1 
Lower right cabinet bottom plate	Left lower cabinet back panel	Lower right cabinet back panel
③4 x1 	③5 x1 	③6 x1 
Bottom cabinet rear upper brace	Bottom cabinet front brace	Left door panel

Board Identification

Not actual size

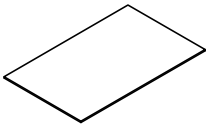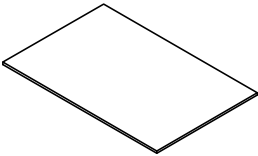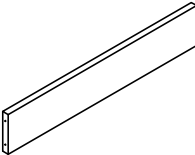③⑦ x1 	③⑧ x1 	③⑨ x1 
Right door panel	Large drawer panel	Rear panel of large drawer
④① x5 	④② x5 	④③ x1 
Drawer left panel	Drawer right panel	Bottom strip of large drawer
④④ x1 	④⑤ x4 	④⑥ x4 
Large drawer base plate	Small drawer panel	Small drawer back panel
④⑦ x4 	④⑧ x2 	④⑨ x2 
Small drawer bottom plate	Stool foot	Stool foot brace
⑤① x1 	⑤② x1 	
Stool panel	Bottom cabinet rear pull-down bar	

Part List


 $\varnothing 6 \times 35 \text{mm}$ A x81(+3) Cam Bolt	 $\varnothing 15 \times 10 \text{mm}$ B x81(+3) Cam Lock	 $\varnothing 6 \times 30 \text{mm}$ C x90(+5) Dowel	 $\varnothing 4 \times 35 \text{mm}$ D x48(+3) Flat Head Tapping Screw	 $\varnothing 3.5 \times 12 \text{mm}$ E x60(+5) Sliding Track Screw
 F x1 Atmosphere light set	 G x4 Magnetic collision and screw	 H x5 A Hook	 I x1 Hair dryer holder and Screw	
 J x2 Anti-Fall Strip and shim	 $\varnothing 4 \times 12 \text{mm}$ K x10 Round head screw	 $\varnothing 3 \times 16 \text{mm}$ L x12 Back Buckle and screw	 $\varnothing 6 \times 30 \text{mm}$ M x2 Plastic Expansion	 N x10 Double hole iron sheet
 O x8 Telescopic door shaft	 P x9 Handle screw and handle	 Q x14(+2) Hole sticker	 R x1 Socket	 $\varnothing 3 \times 12 \text{mm}$ S x2 Screw
 T x1 Power Supply	 U x16 Lamina Torus	 $\varnothing 3 \times 12 \text{mm}$ V x24 Screw	 W x4 Angle iron	
 L300mm CL x5 Sliding Track	 L300mm CR x5 Sliding Track	 L300mm DL x5 Sliding Track	 L300mm DR x5 Sliding Track	

Part List


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.


1

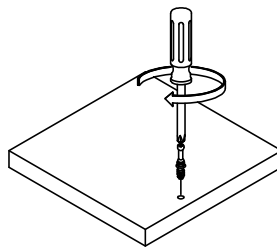

2

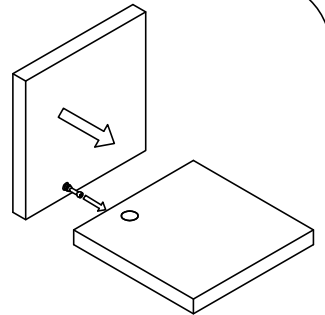


3

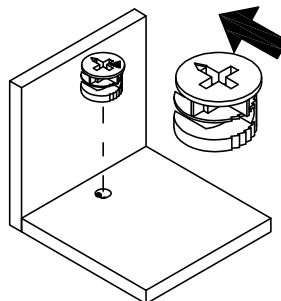


The opening must point toward the edge of the board

4

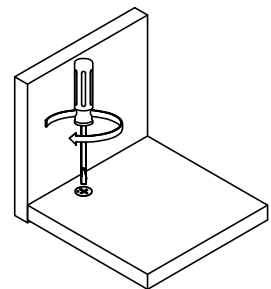


Board Identification


Not actual size

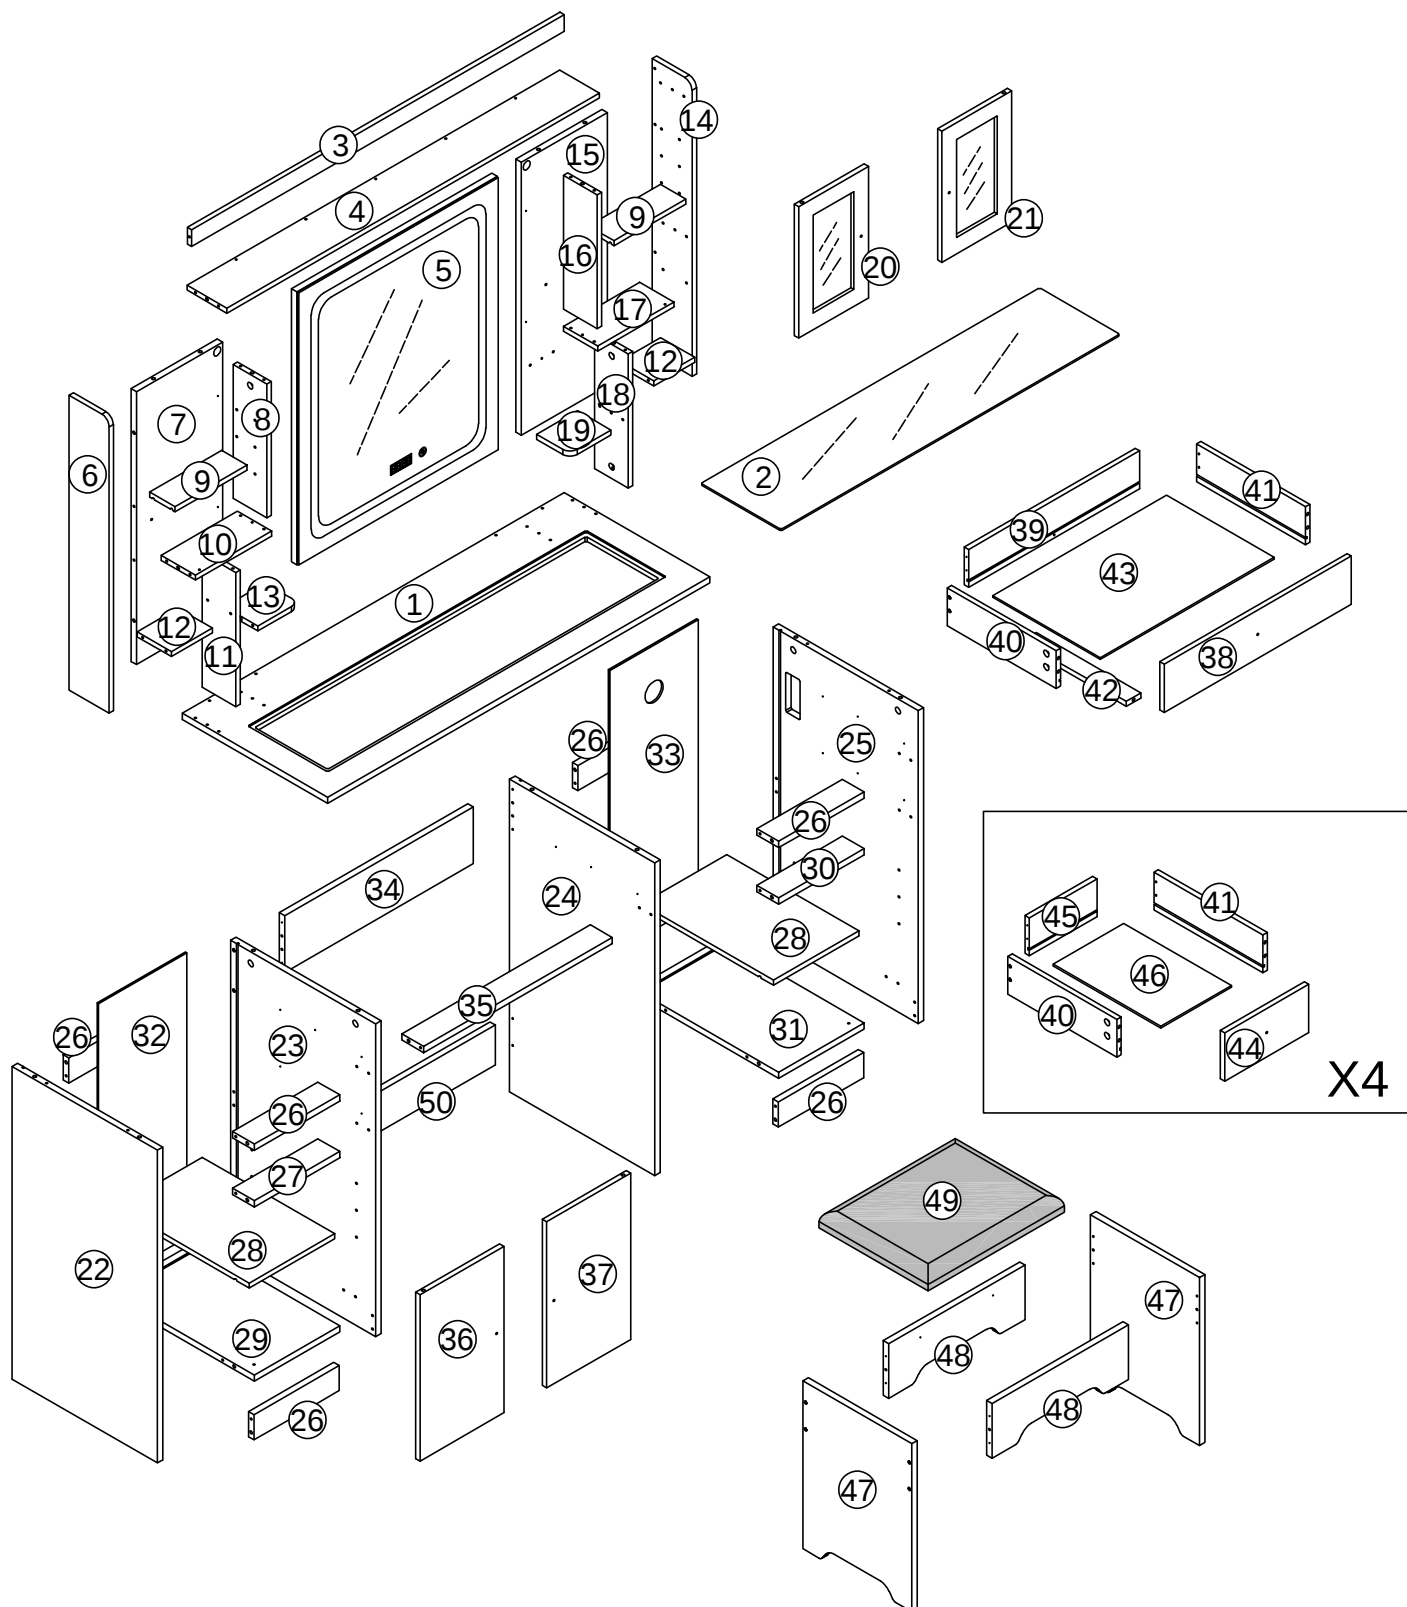


STEP 1

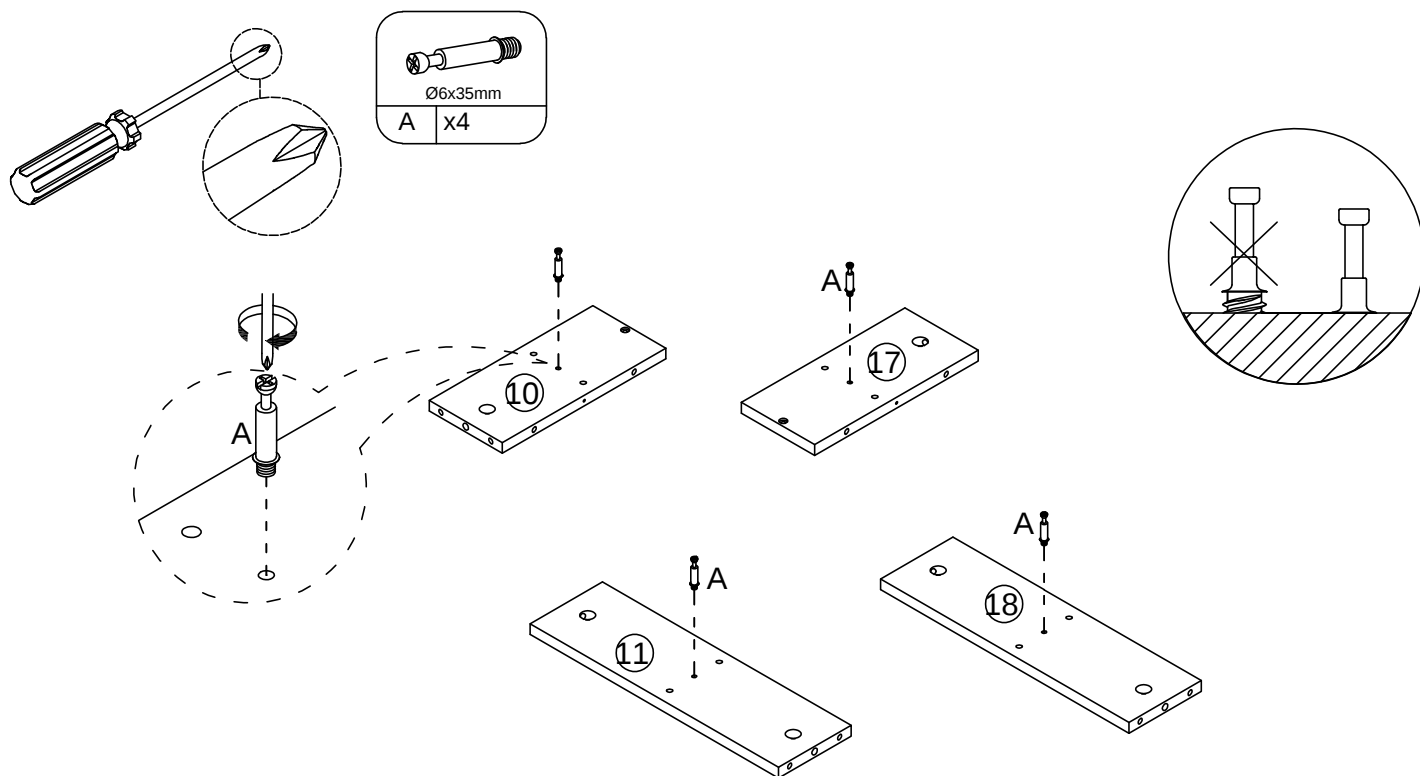


STEP 2

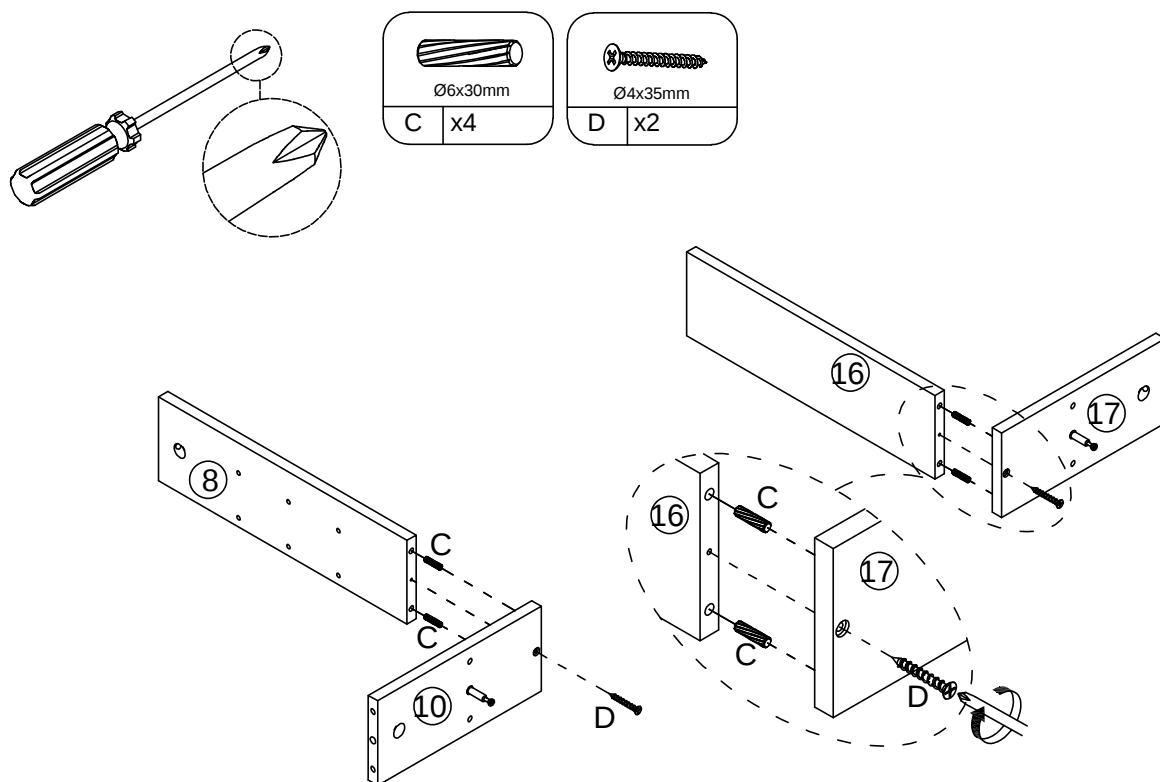


STEP 3

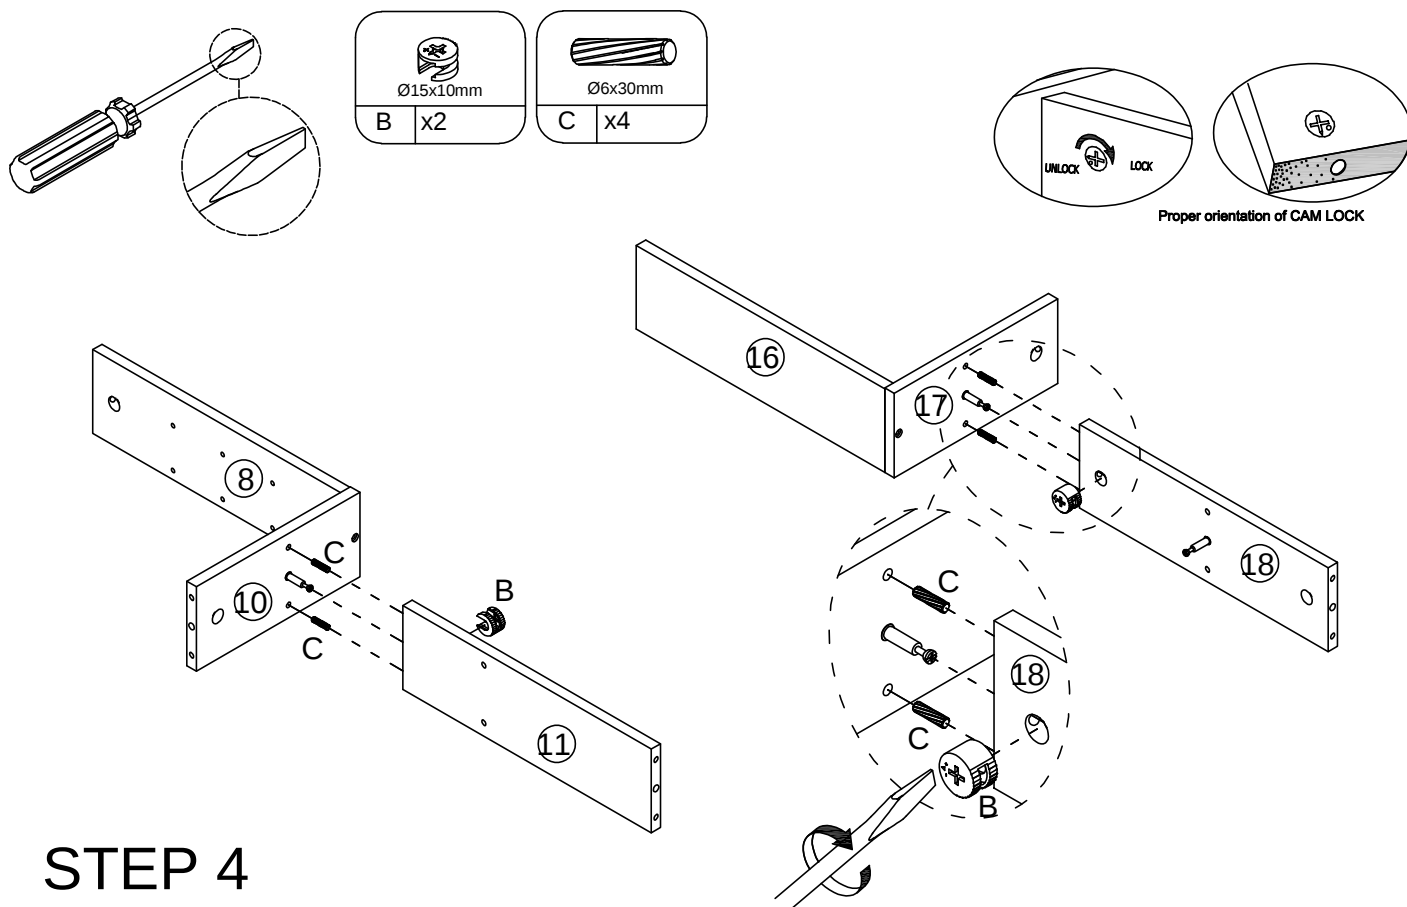


STEP 4

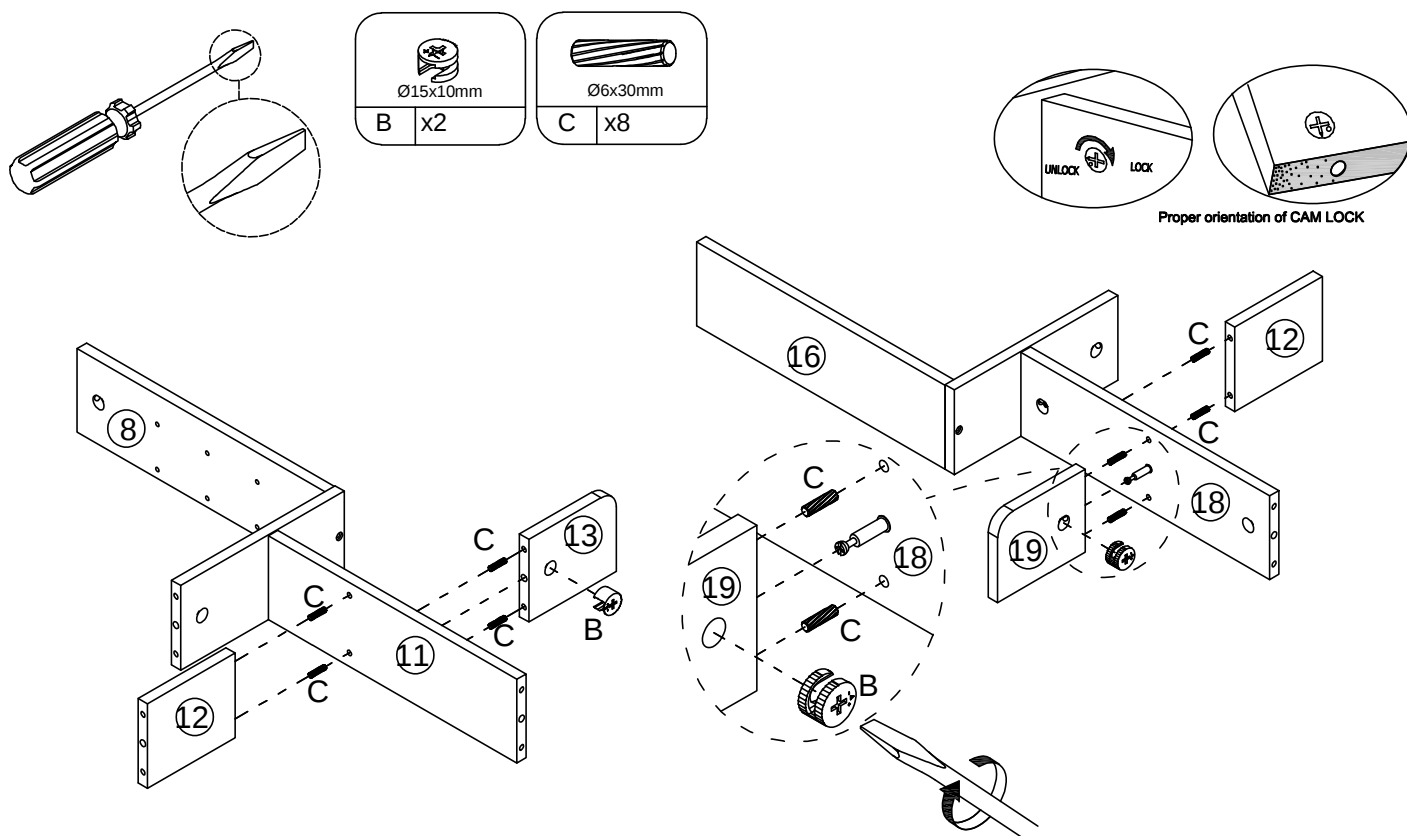


STEP 5

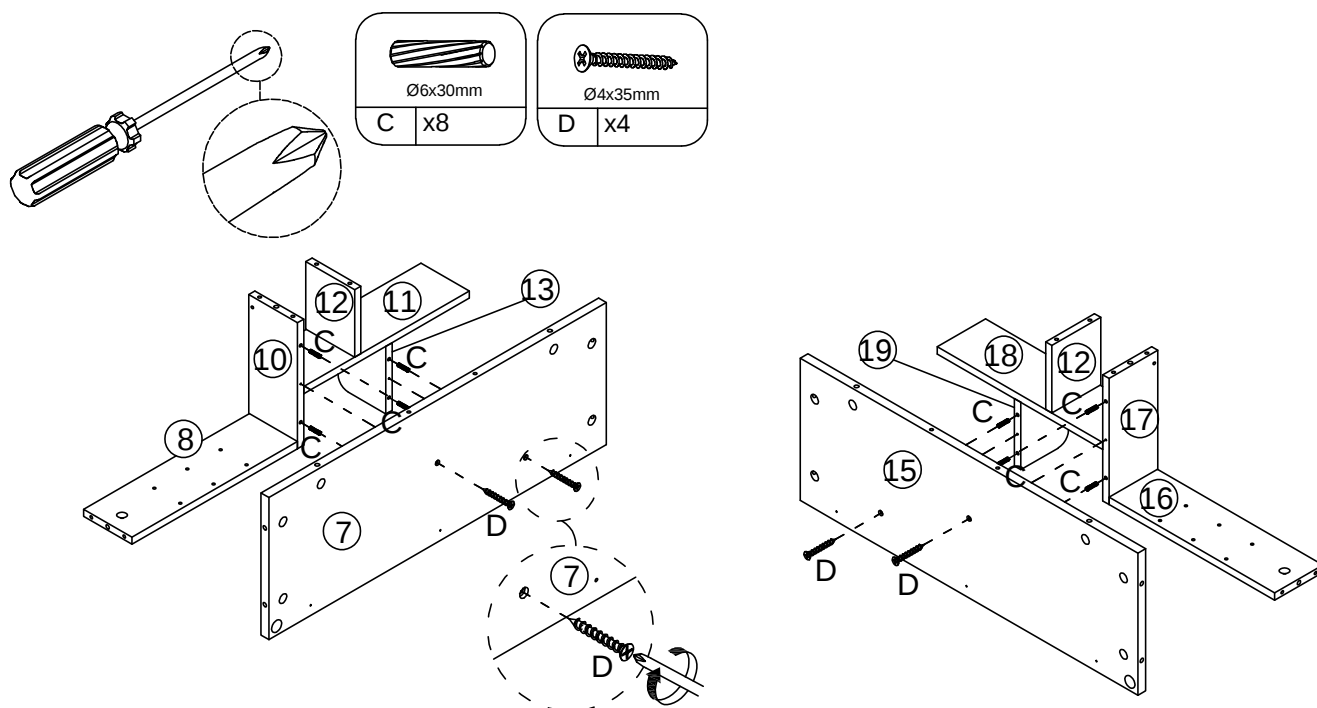


STEP 6

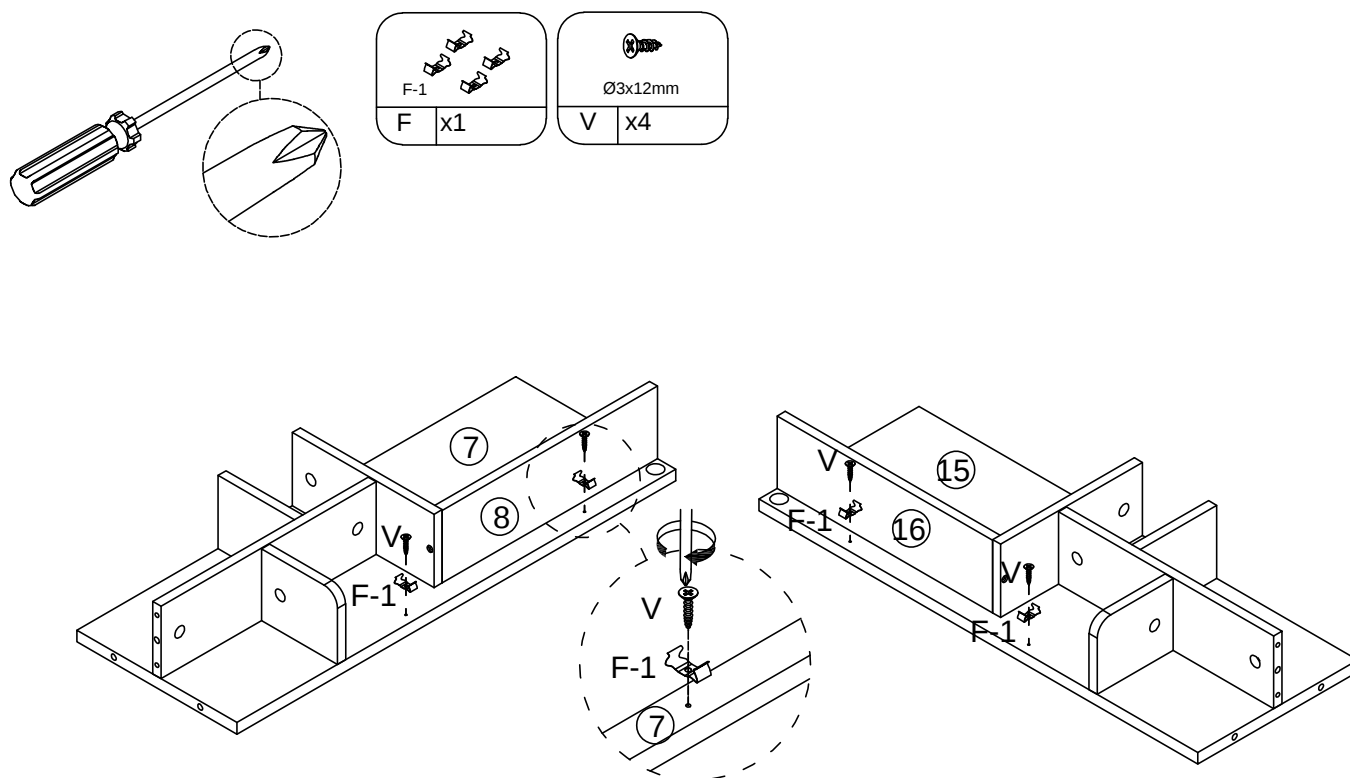







STEP 7

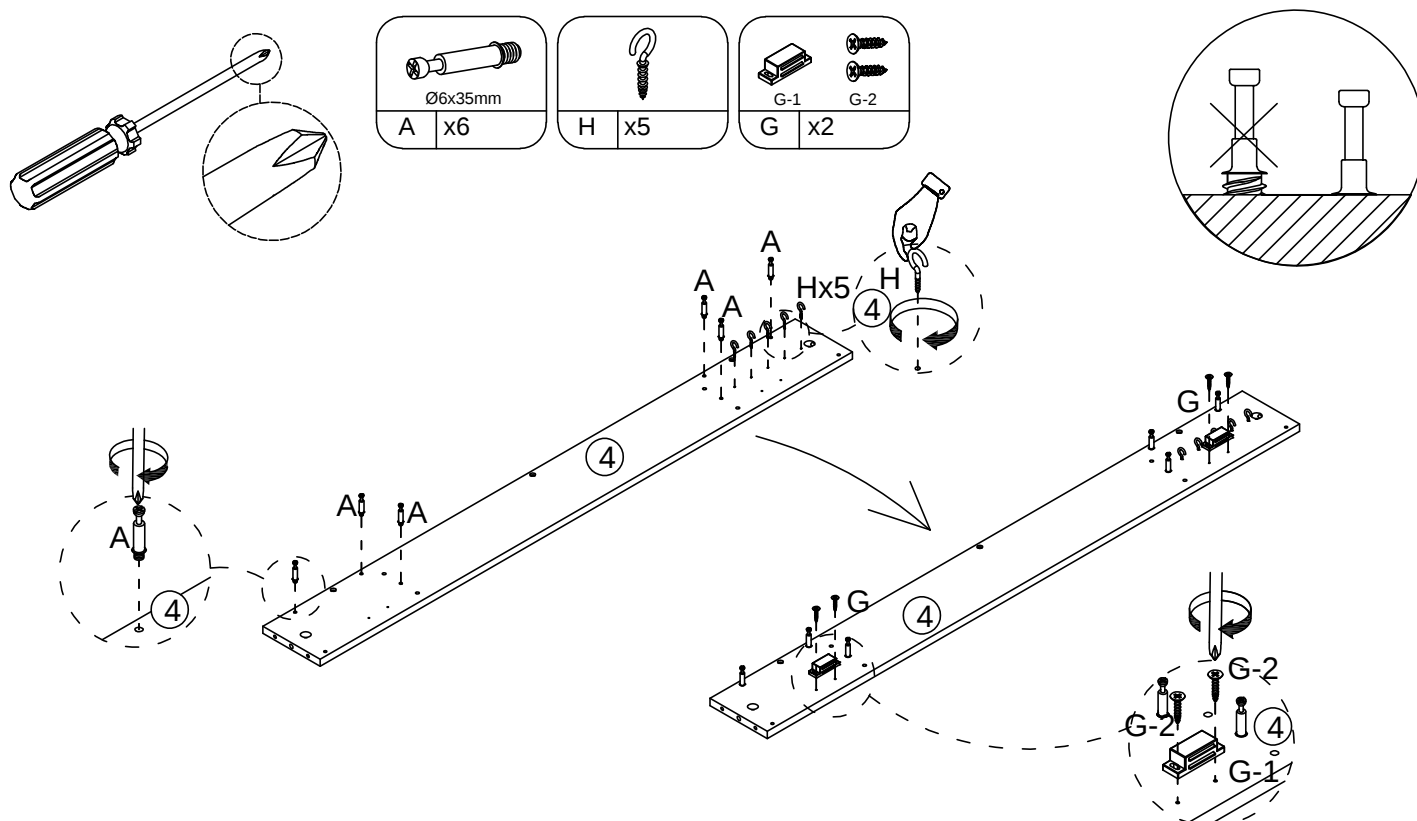



STEP 8

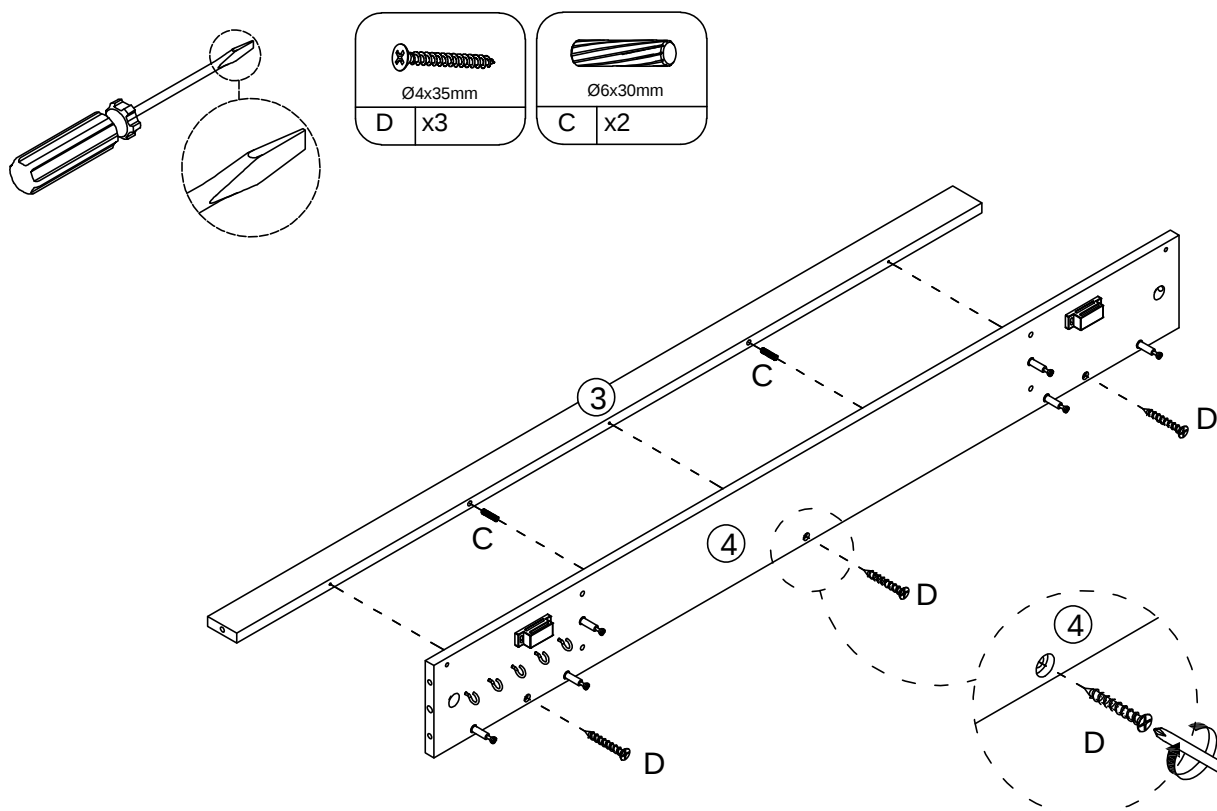







STEP 11

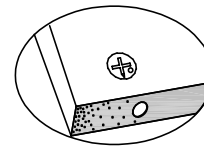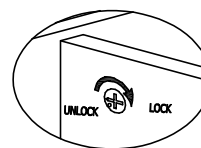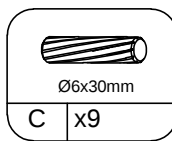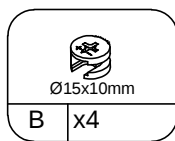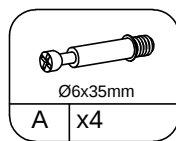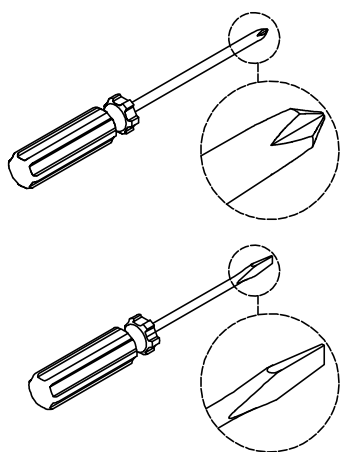



Proper orientation of CAM LOCK

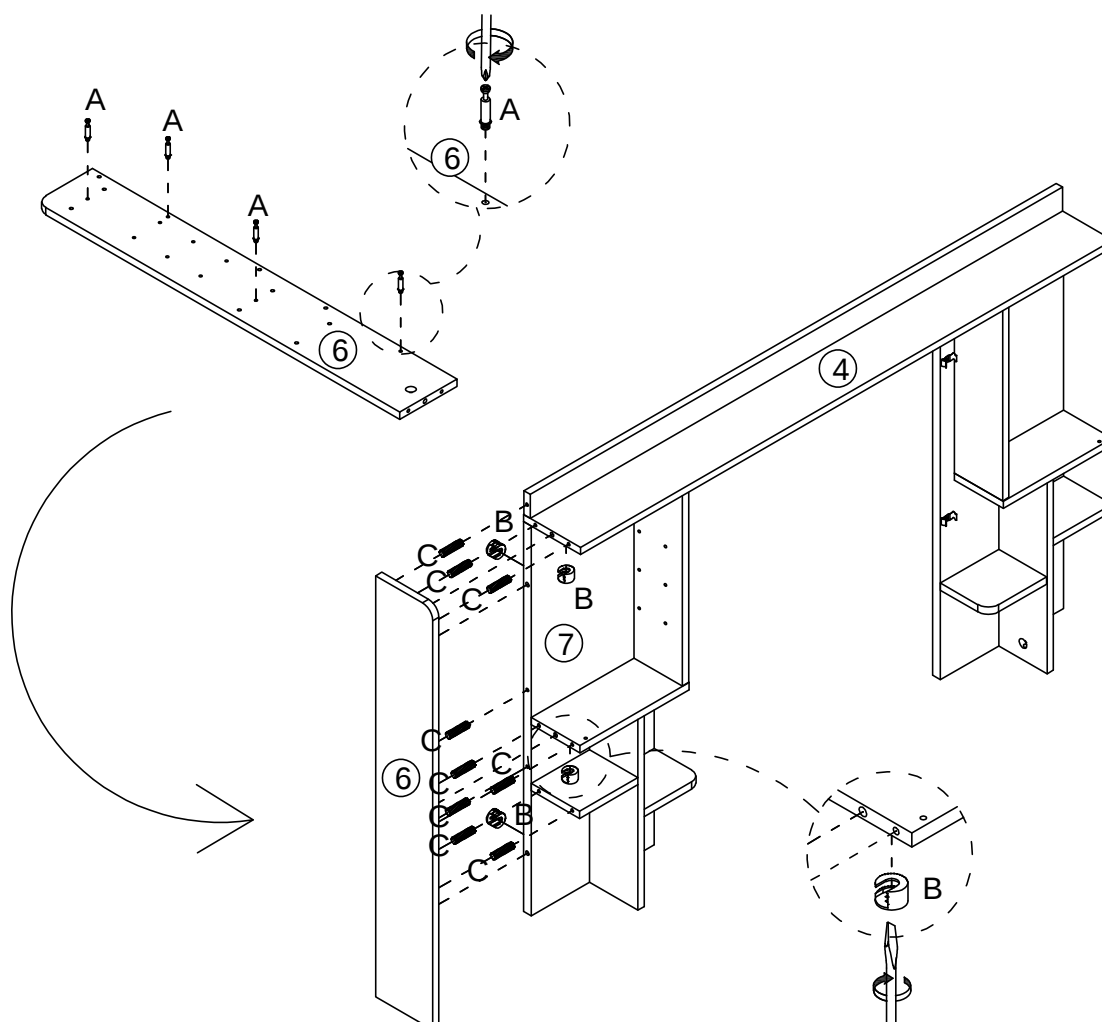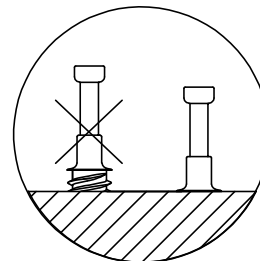


STEP 12

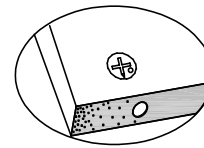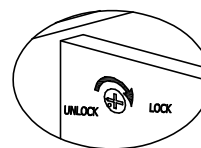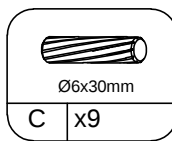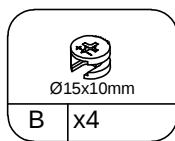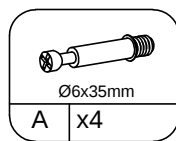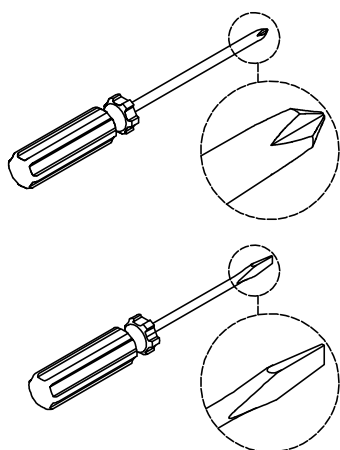






Proper orientation of CAM LOCK

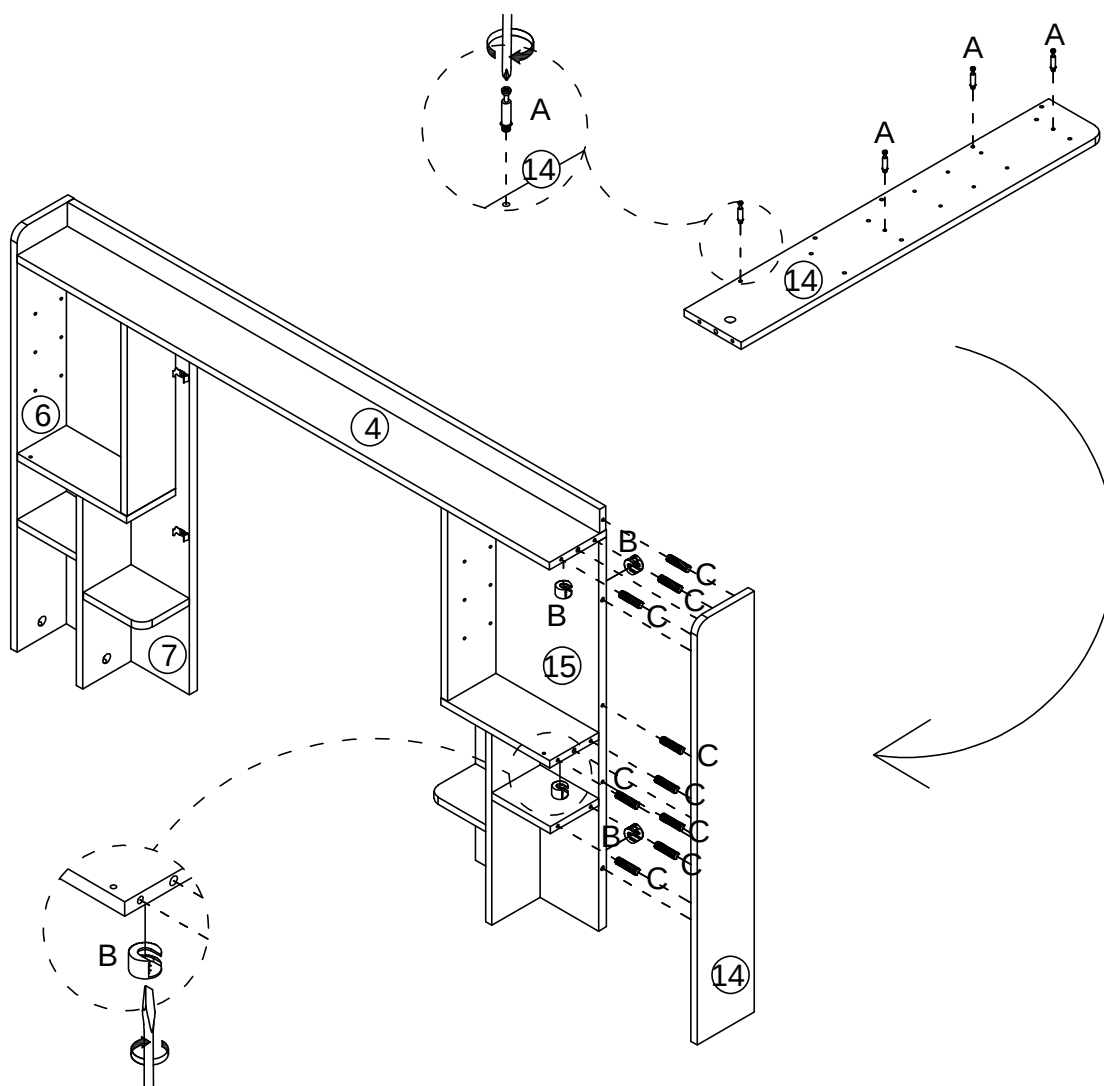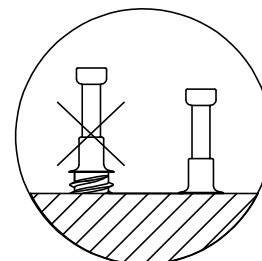


STEP 13

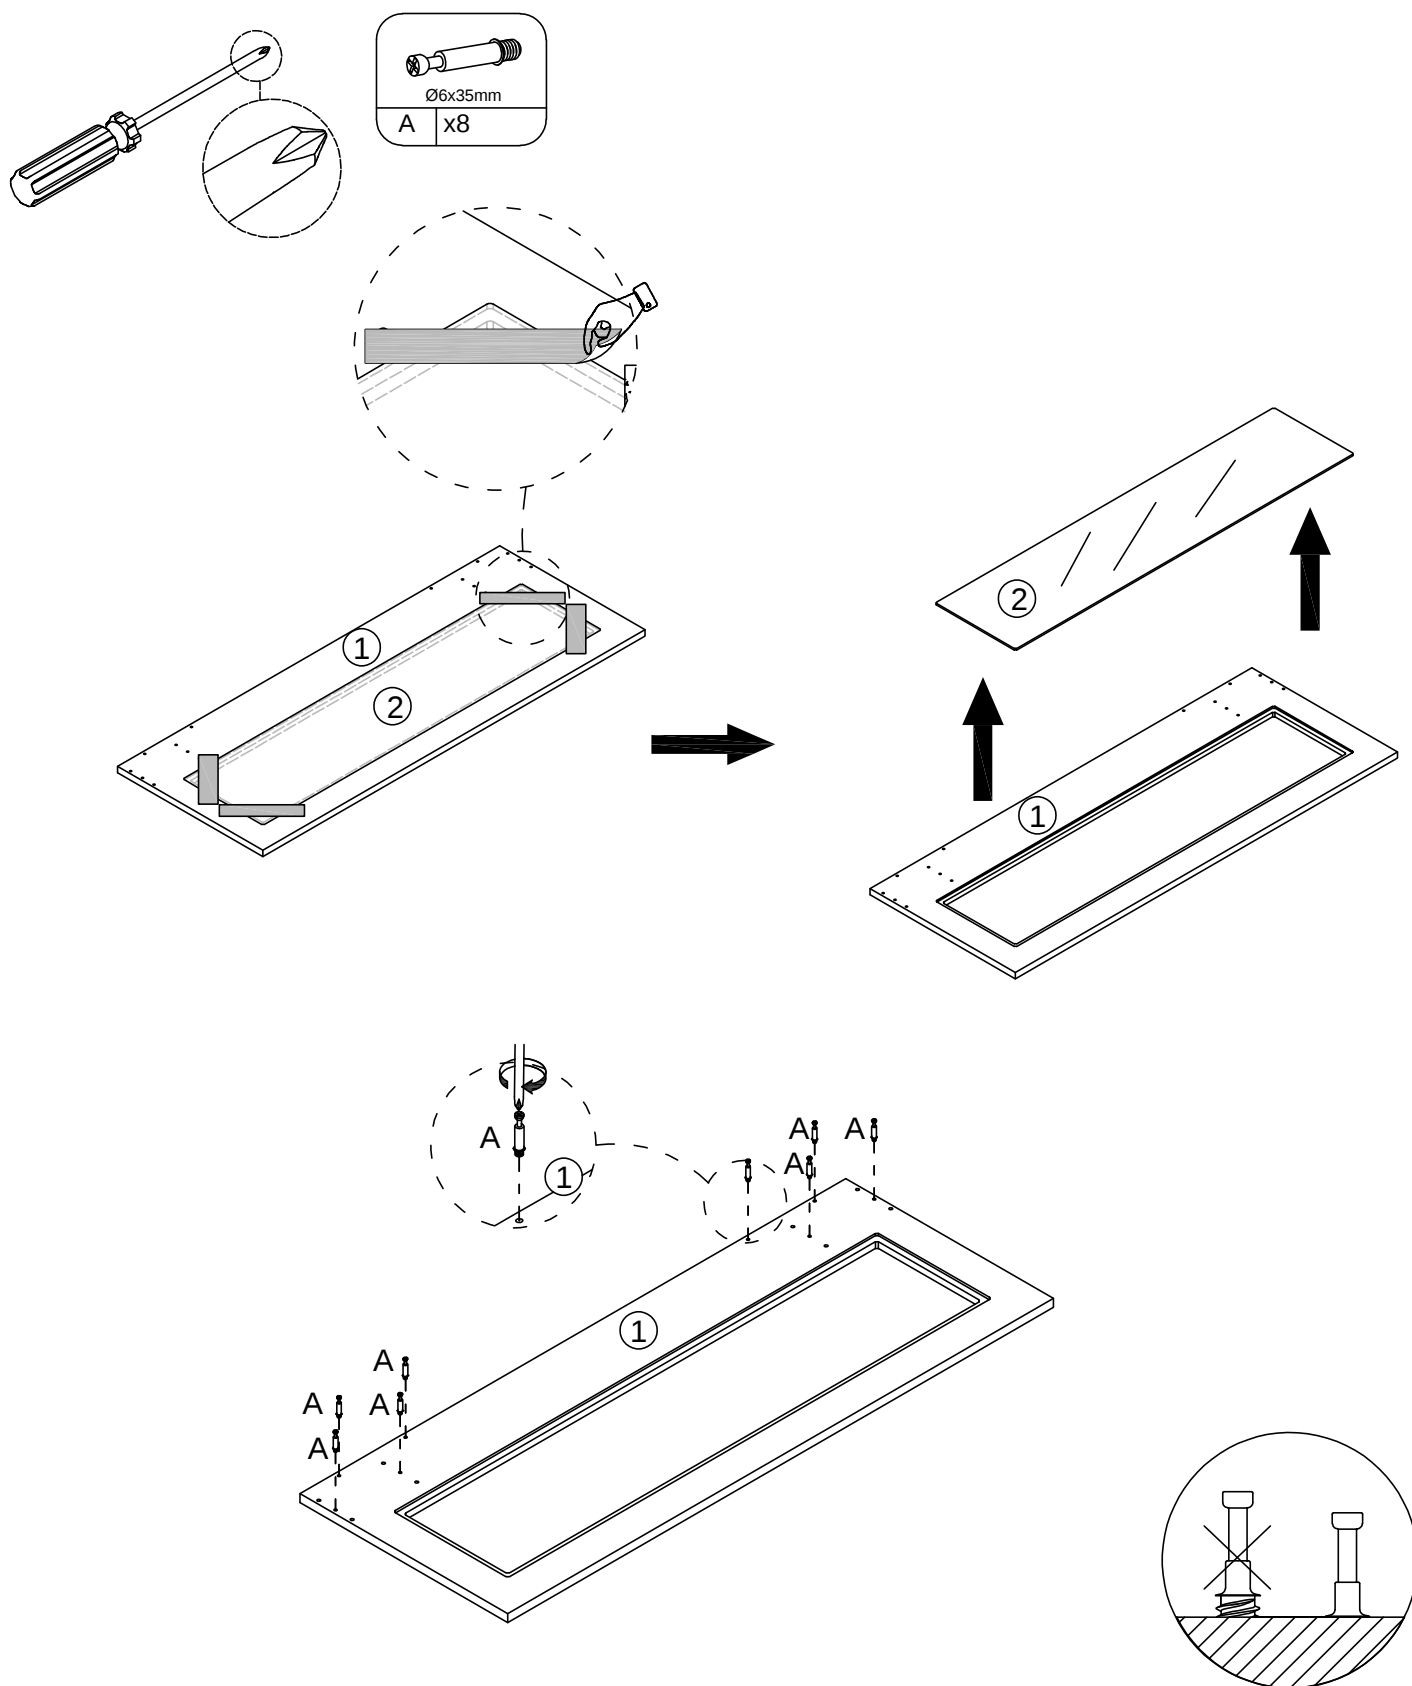





STEP 14

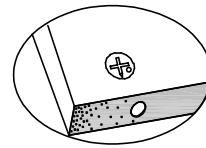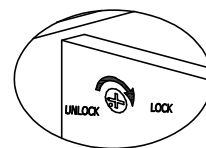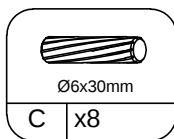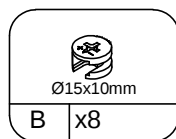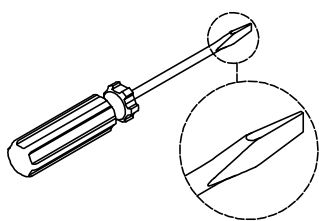










Proper orientation of CAM LOCK

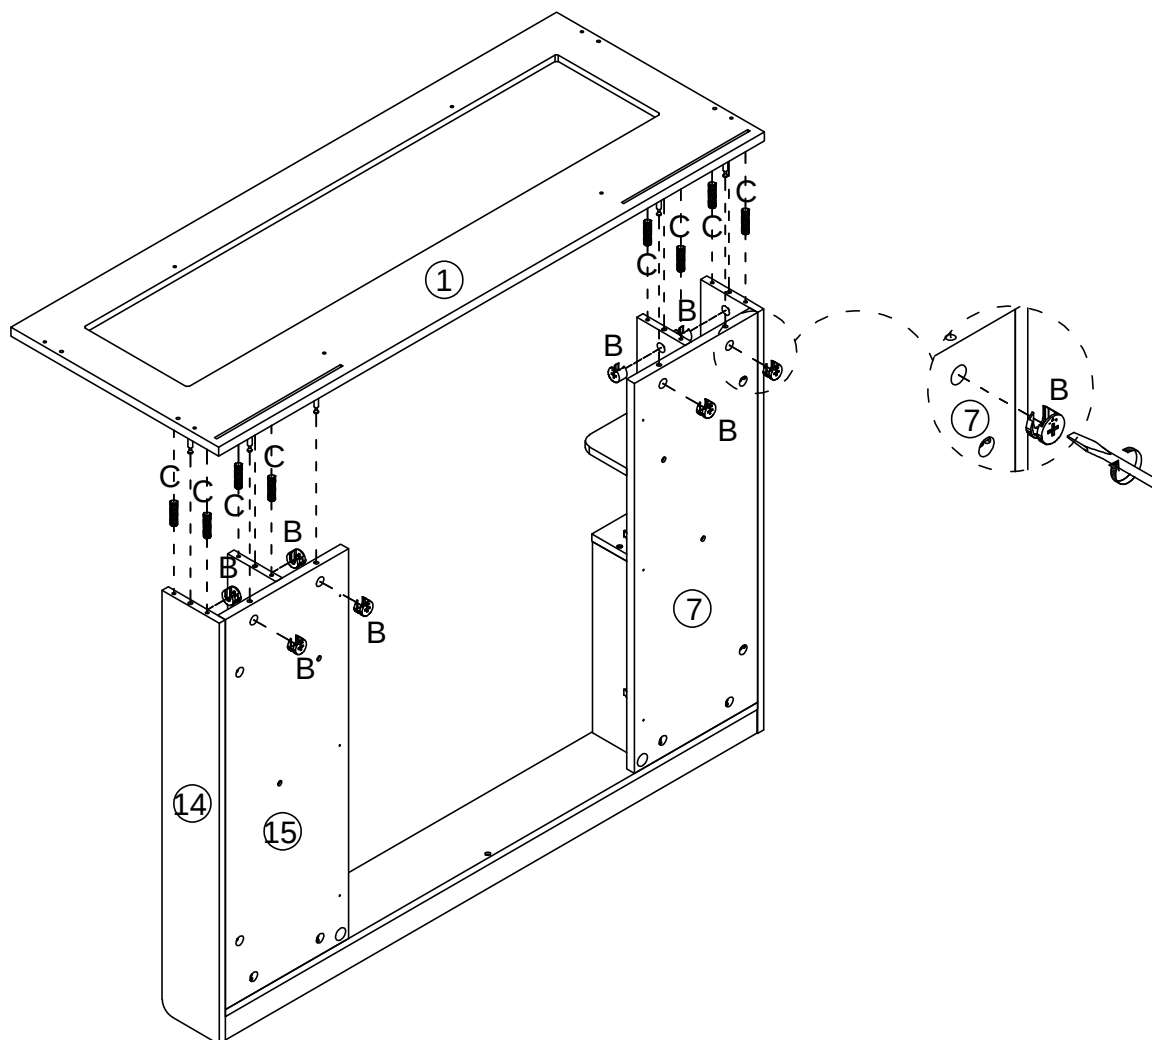



















STEP 15

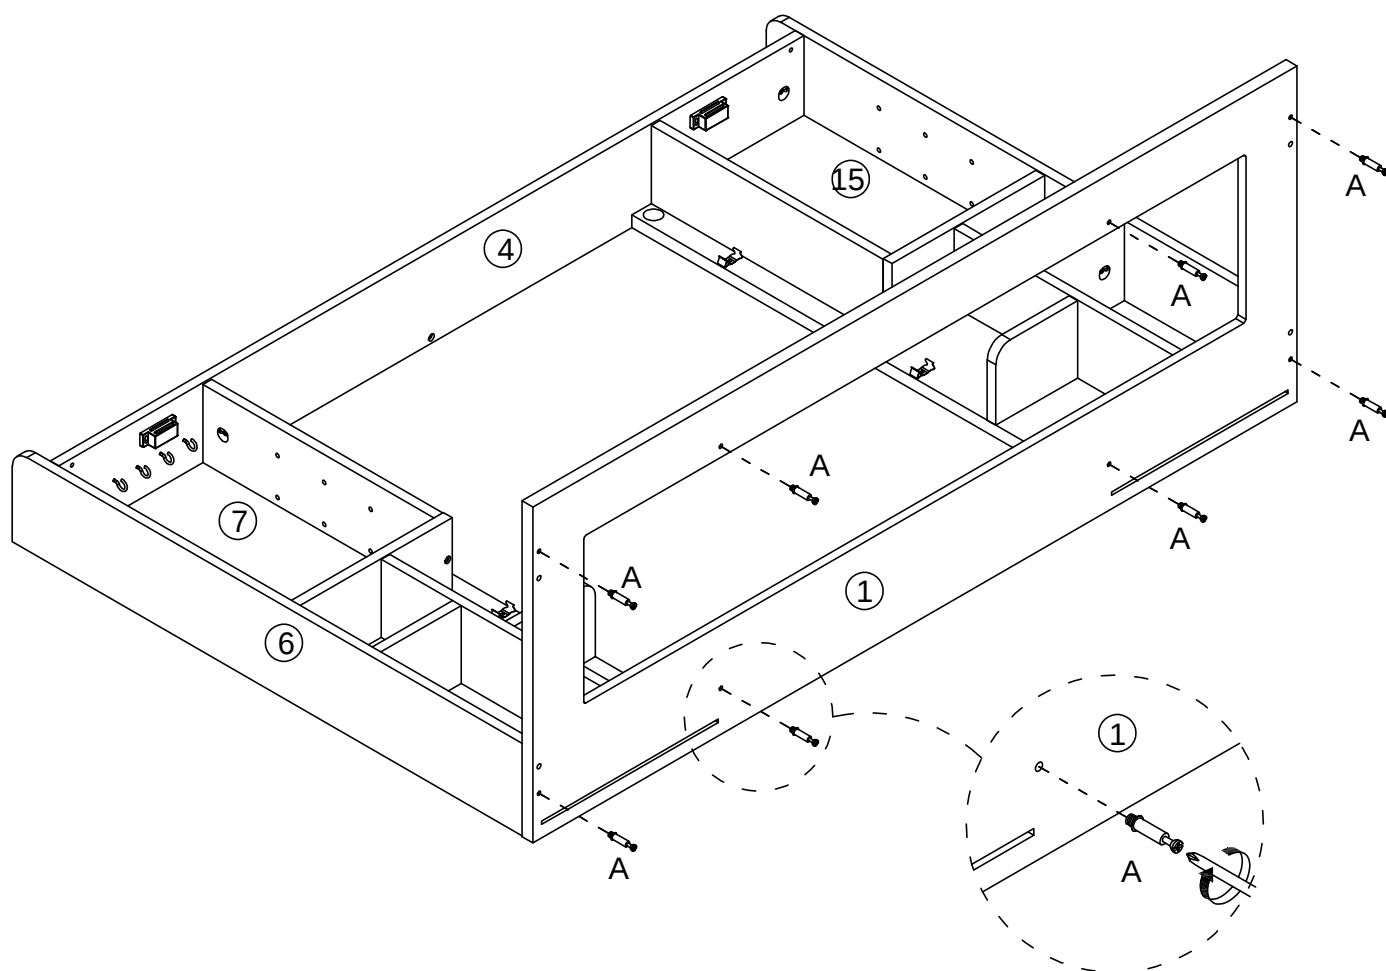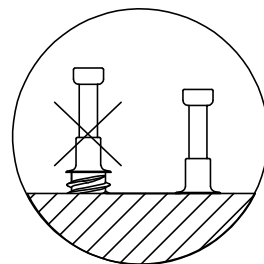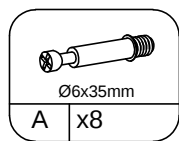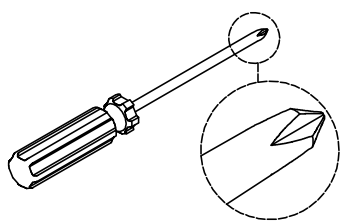









STEP 16

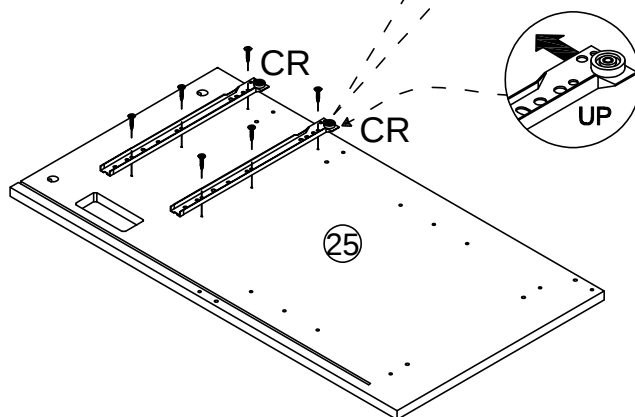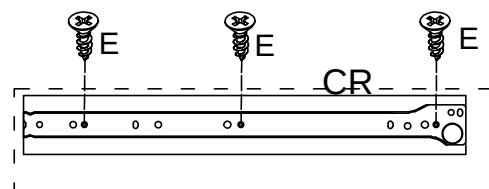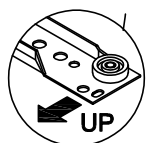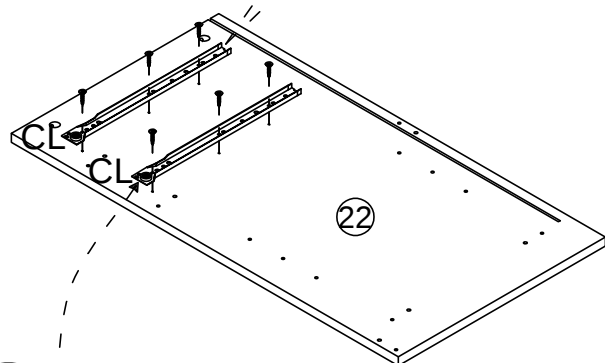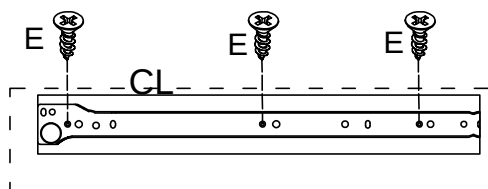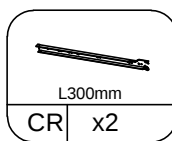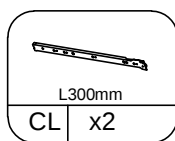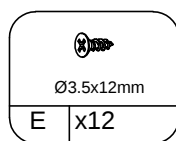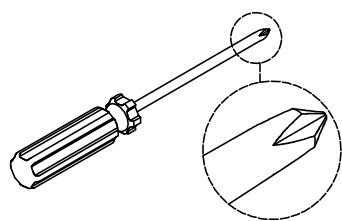


STEP 17

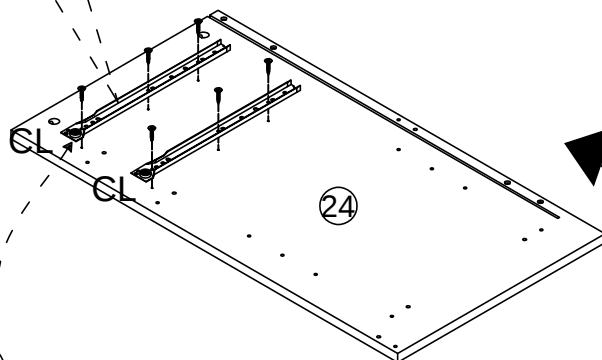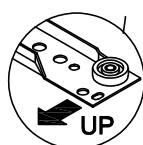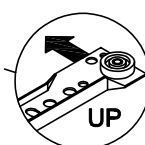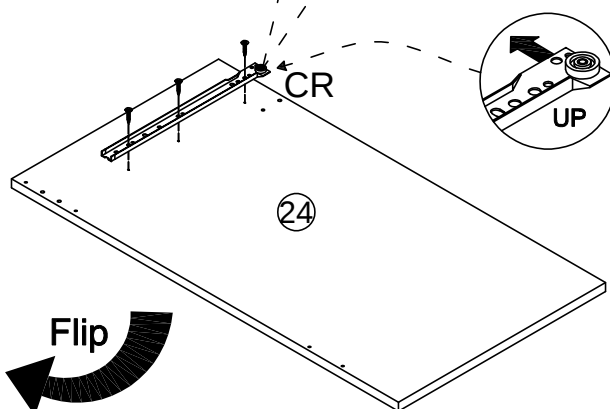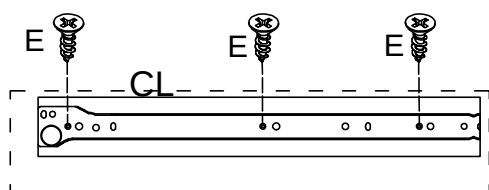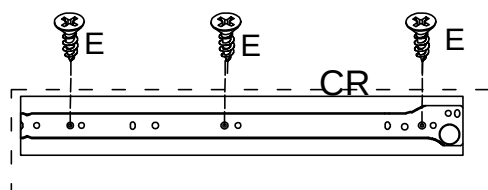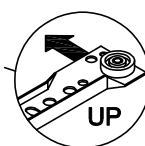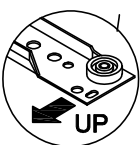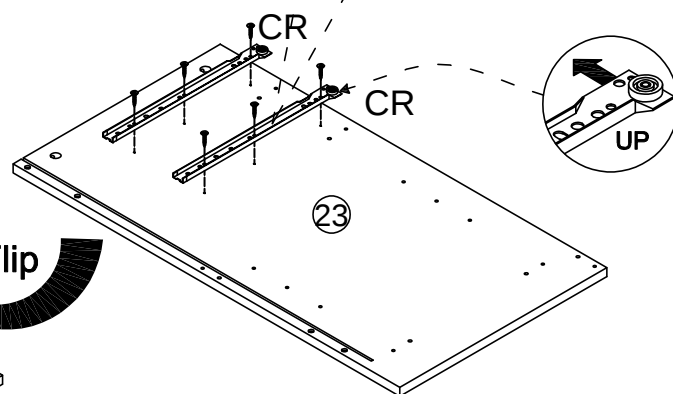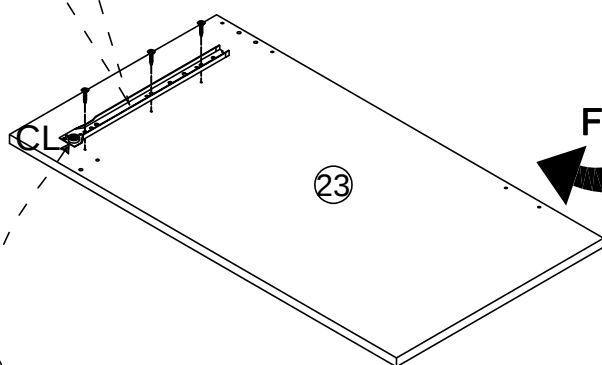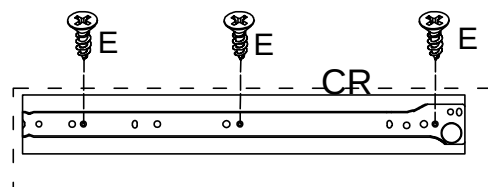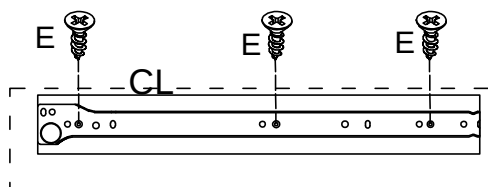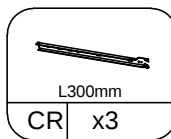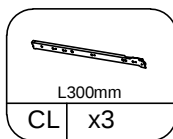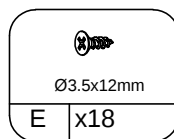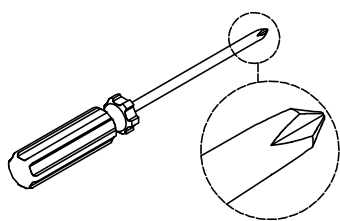


STEP 18

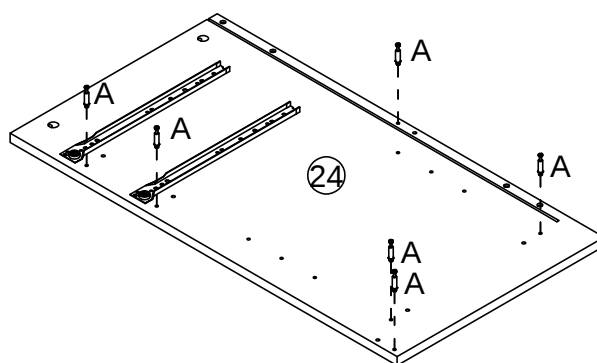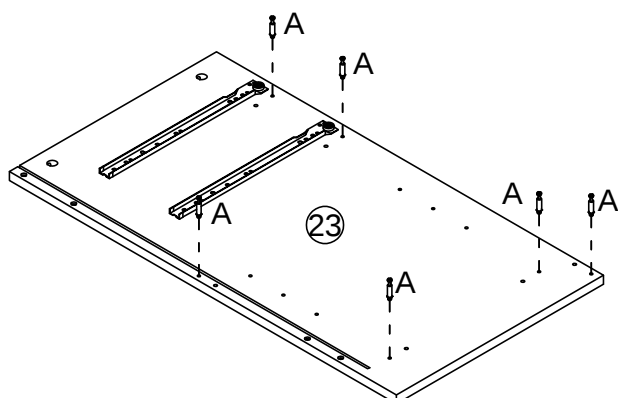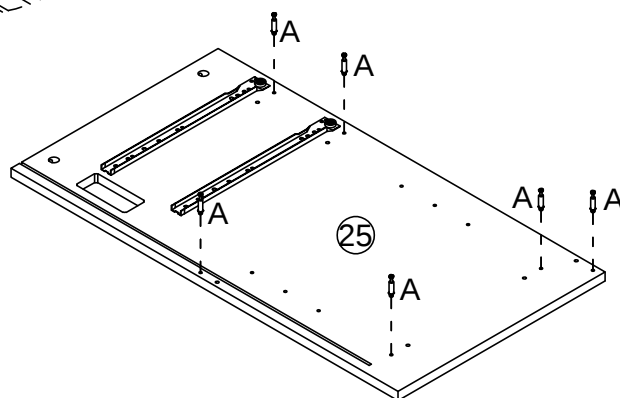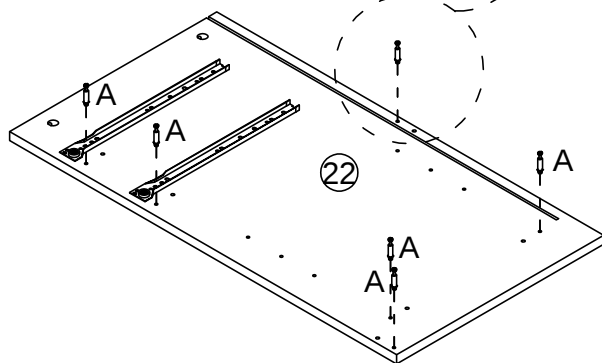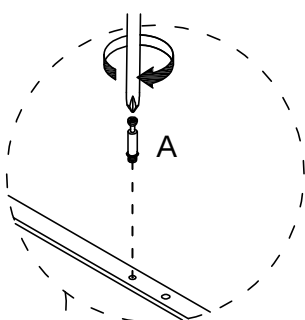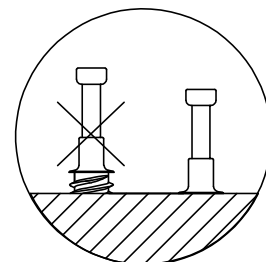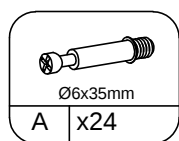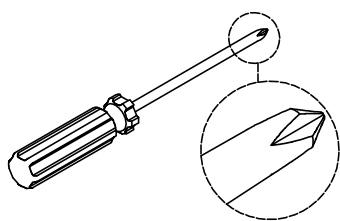


STEP 19

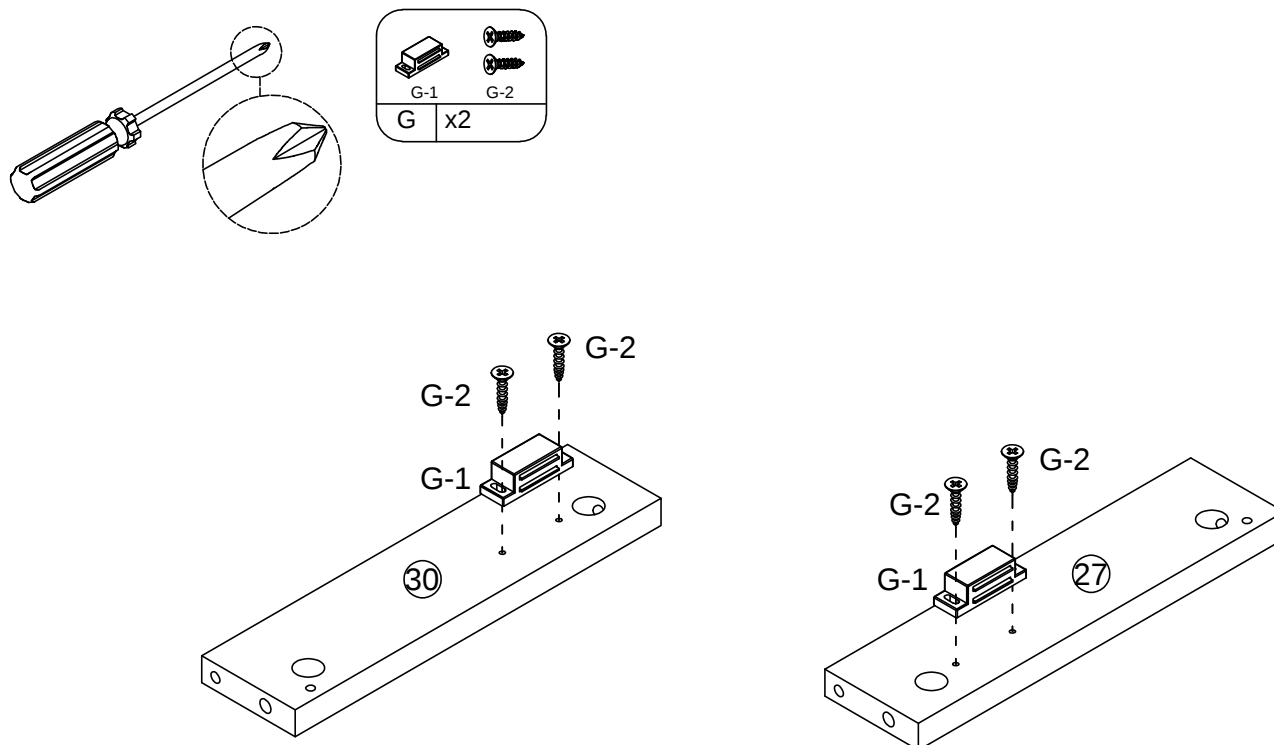


STEP 20

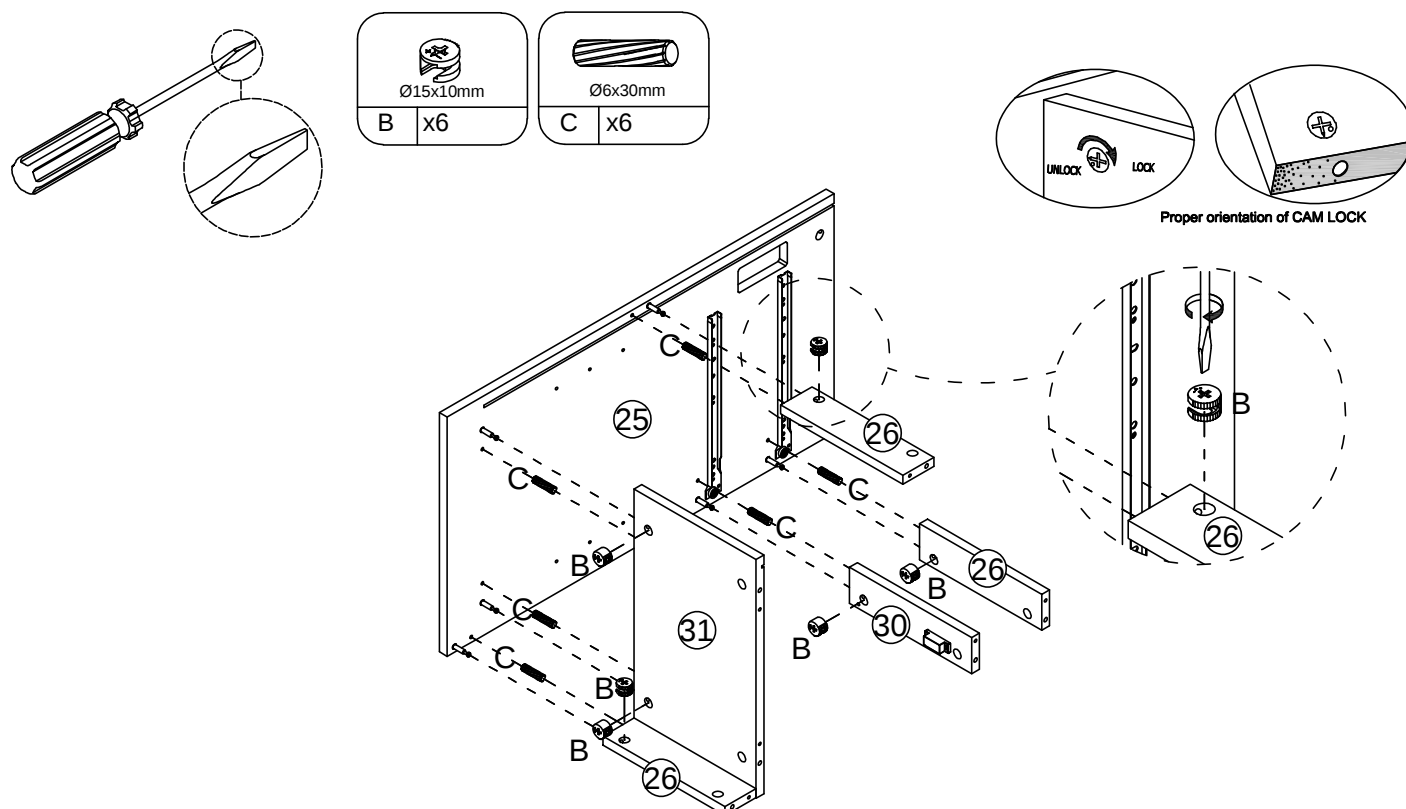







STEP 23

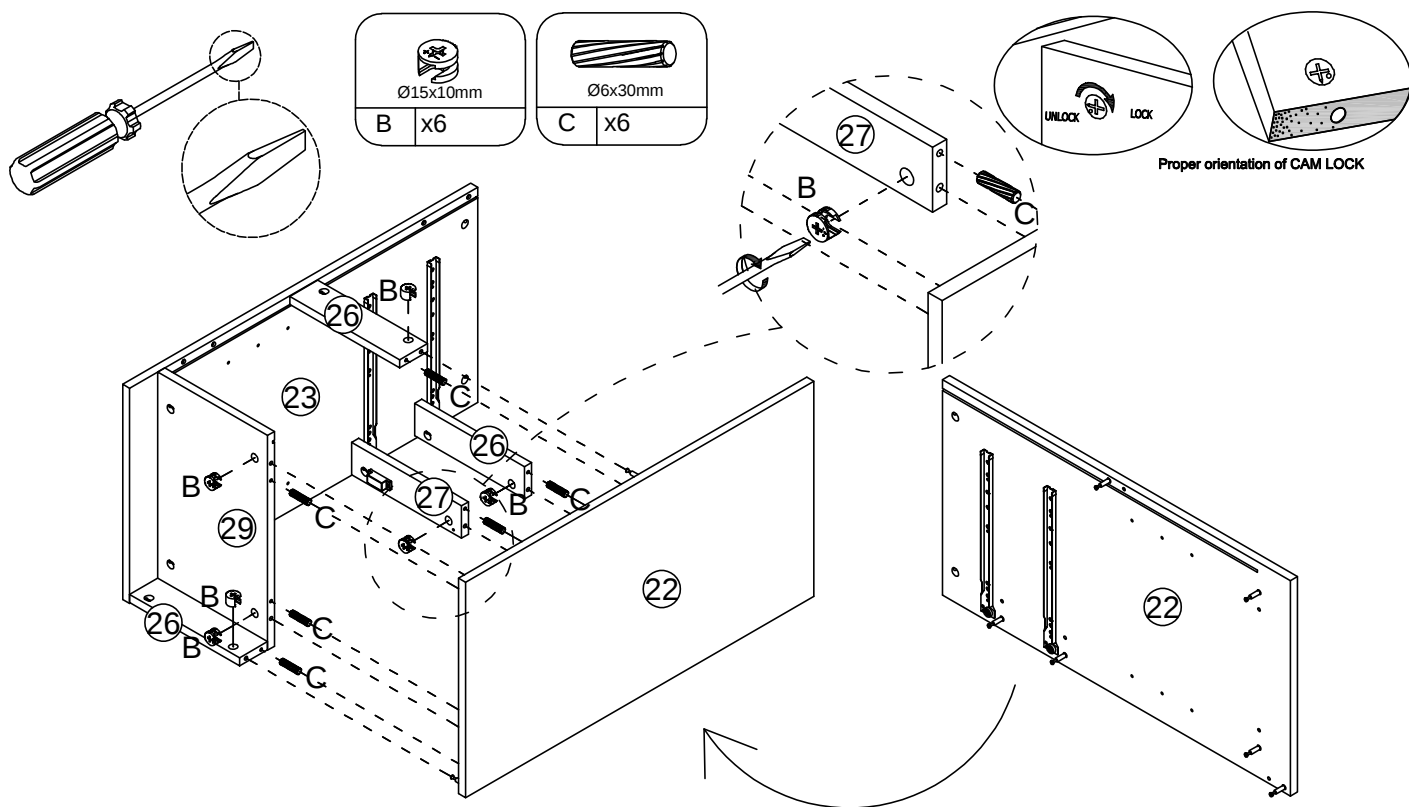


STEP 24

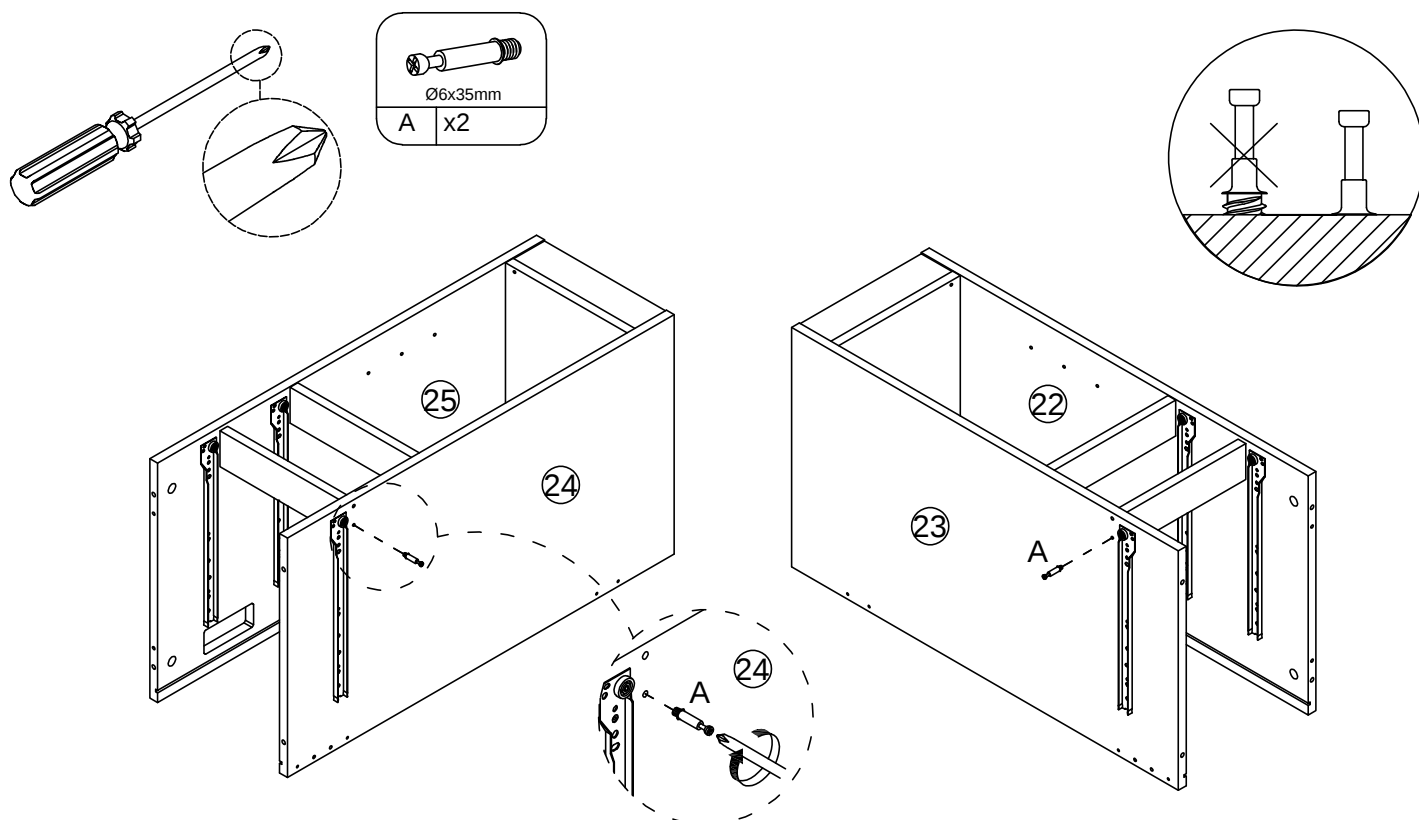


STEP 25

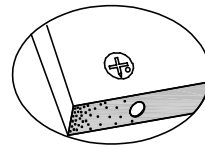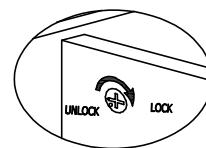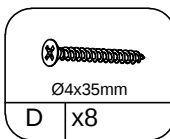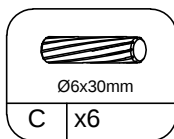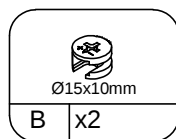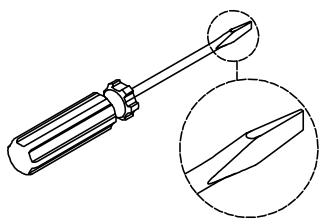


Proper orientation of CAM LOCK

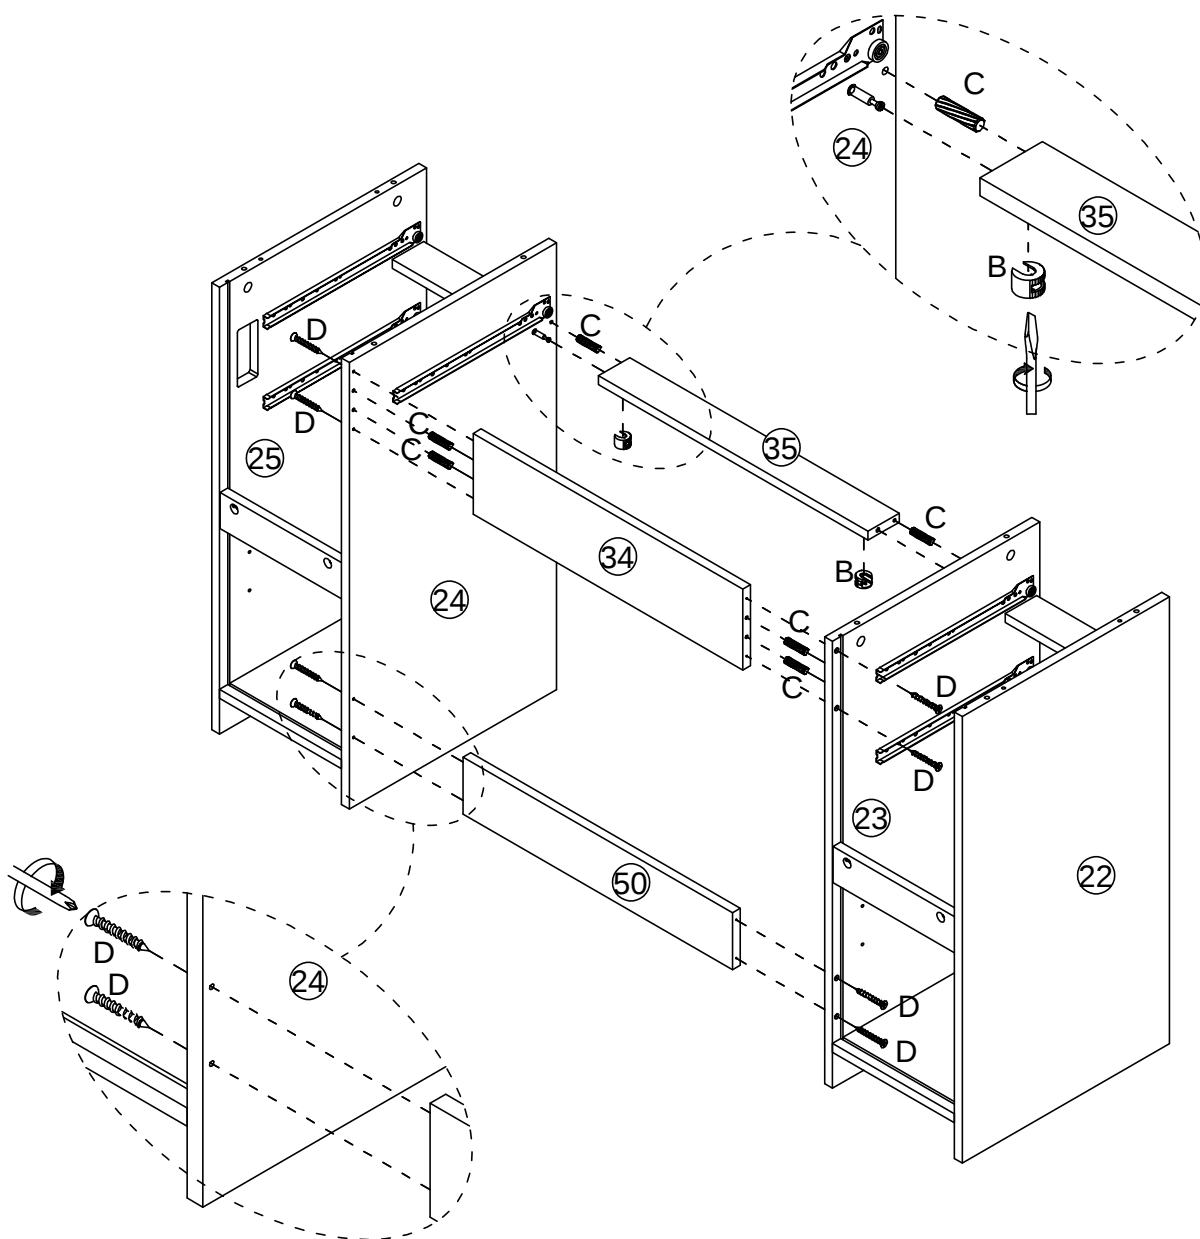






STEP 26

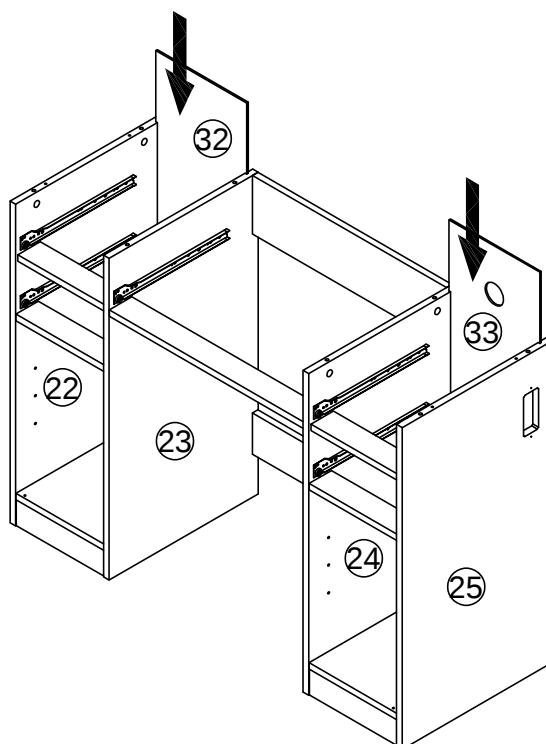



STEP 27

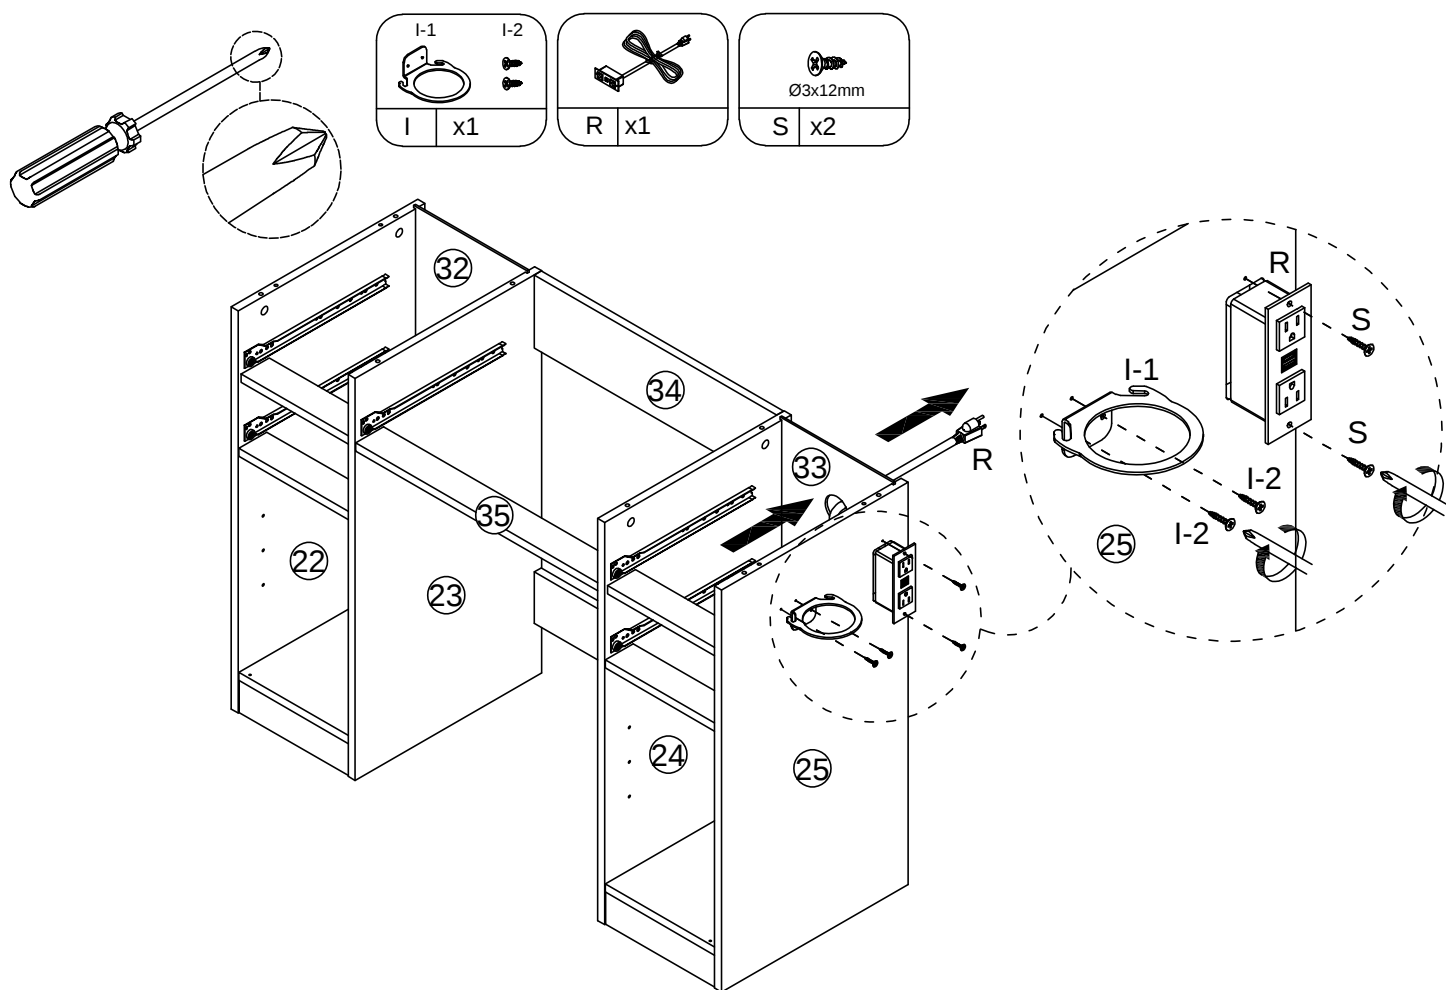



STEP 28

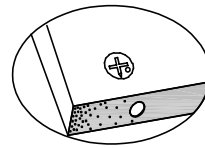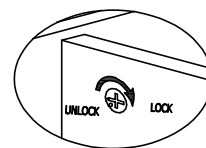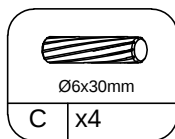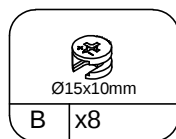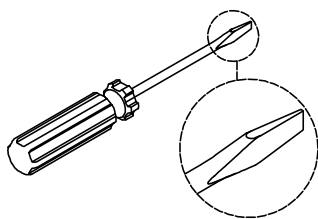


Proper orientation of CAM LOCK

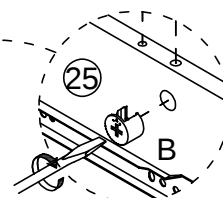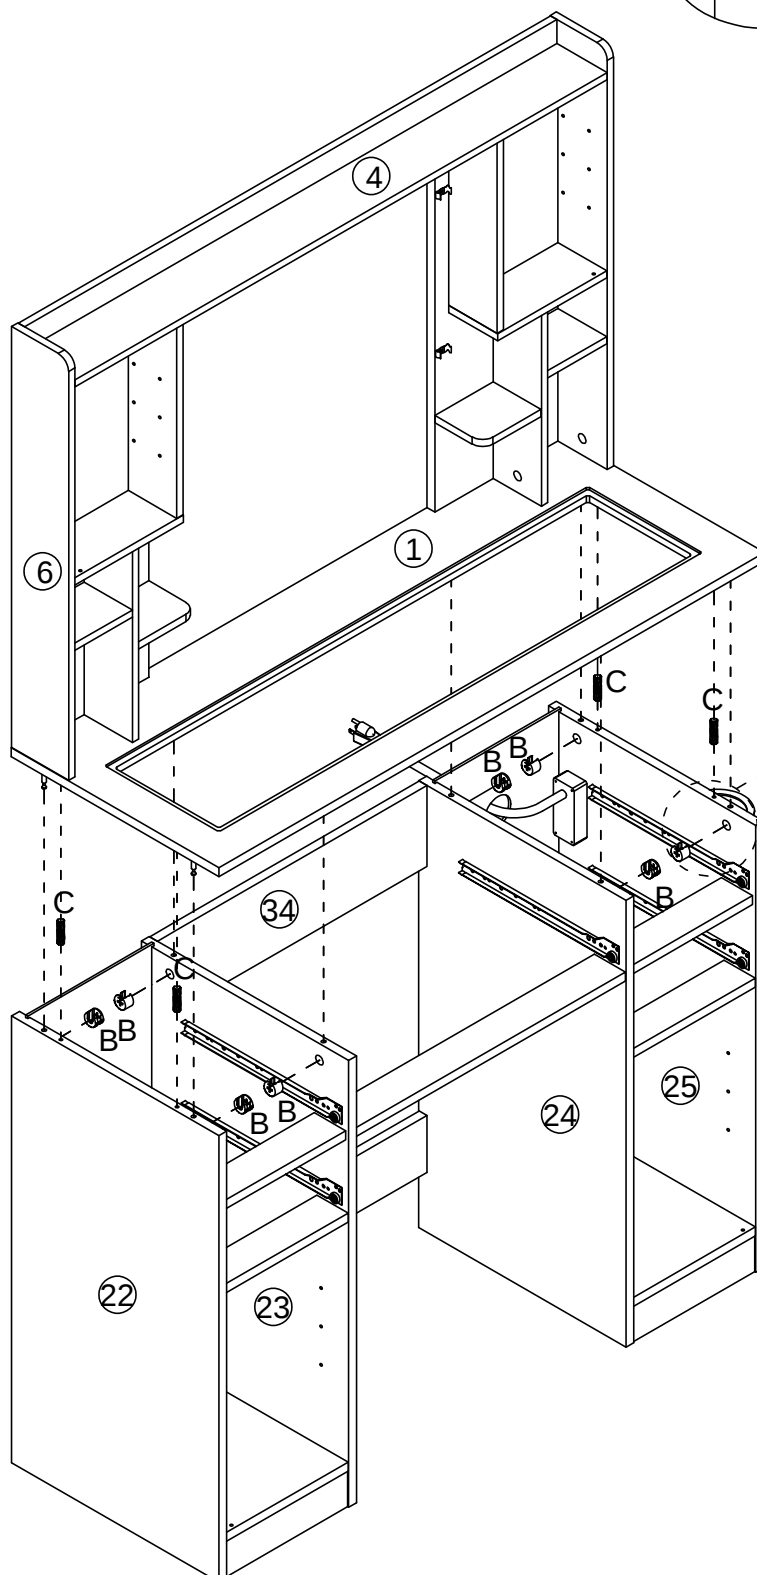


STEP 29

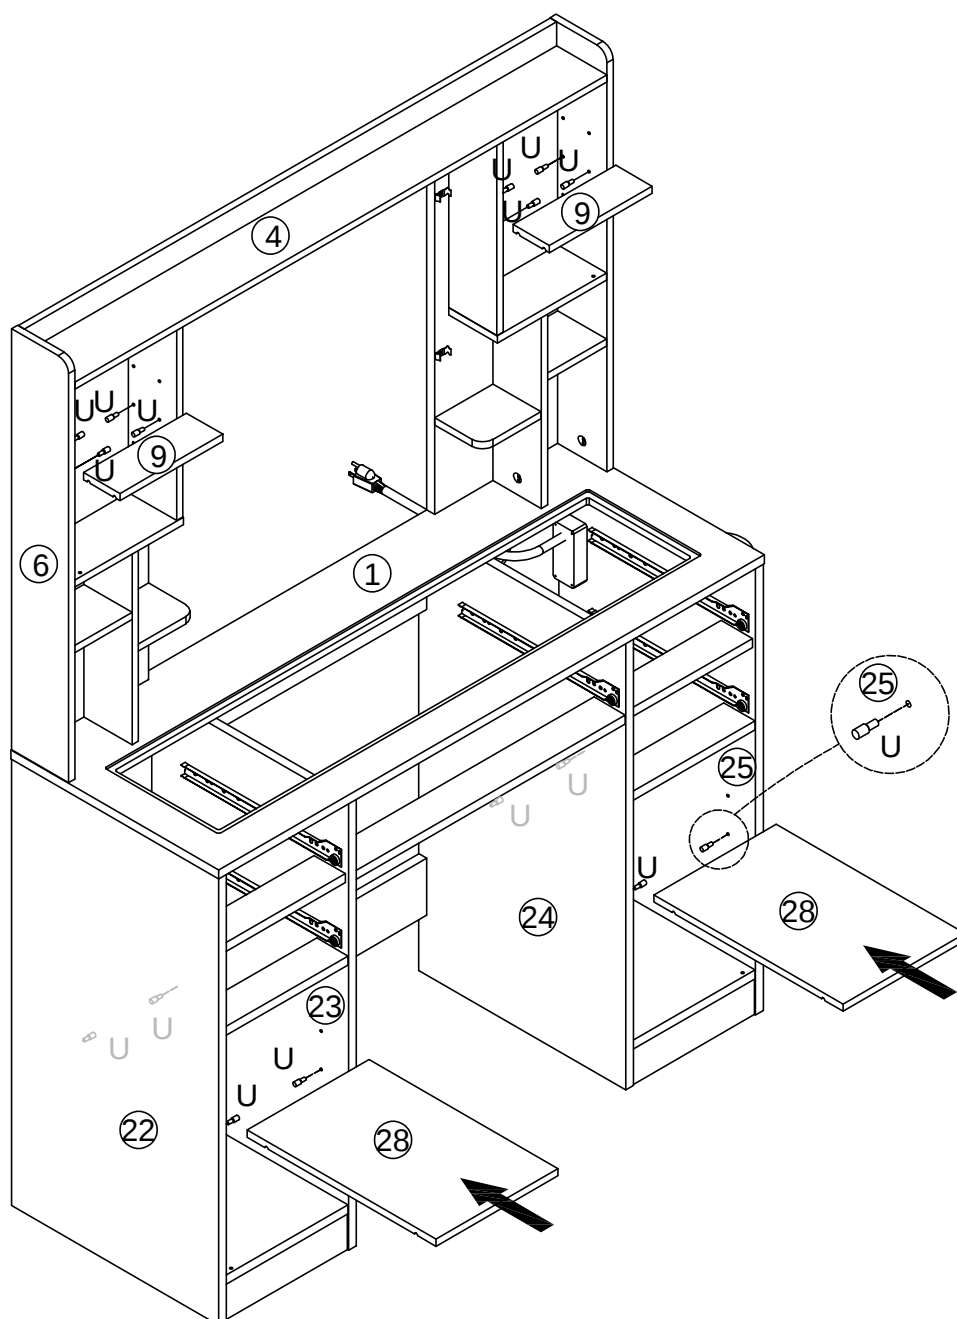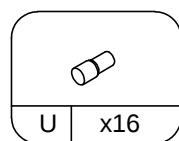


STEP 30

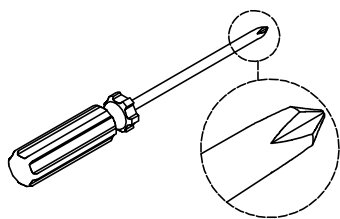





		P-1 P-2					
O	x8	P	x4	N	x4	V	x8

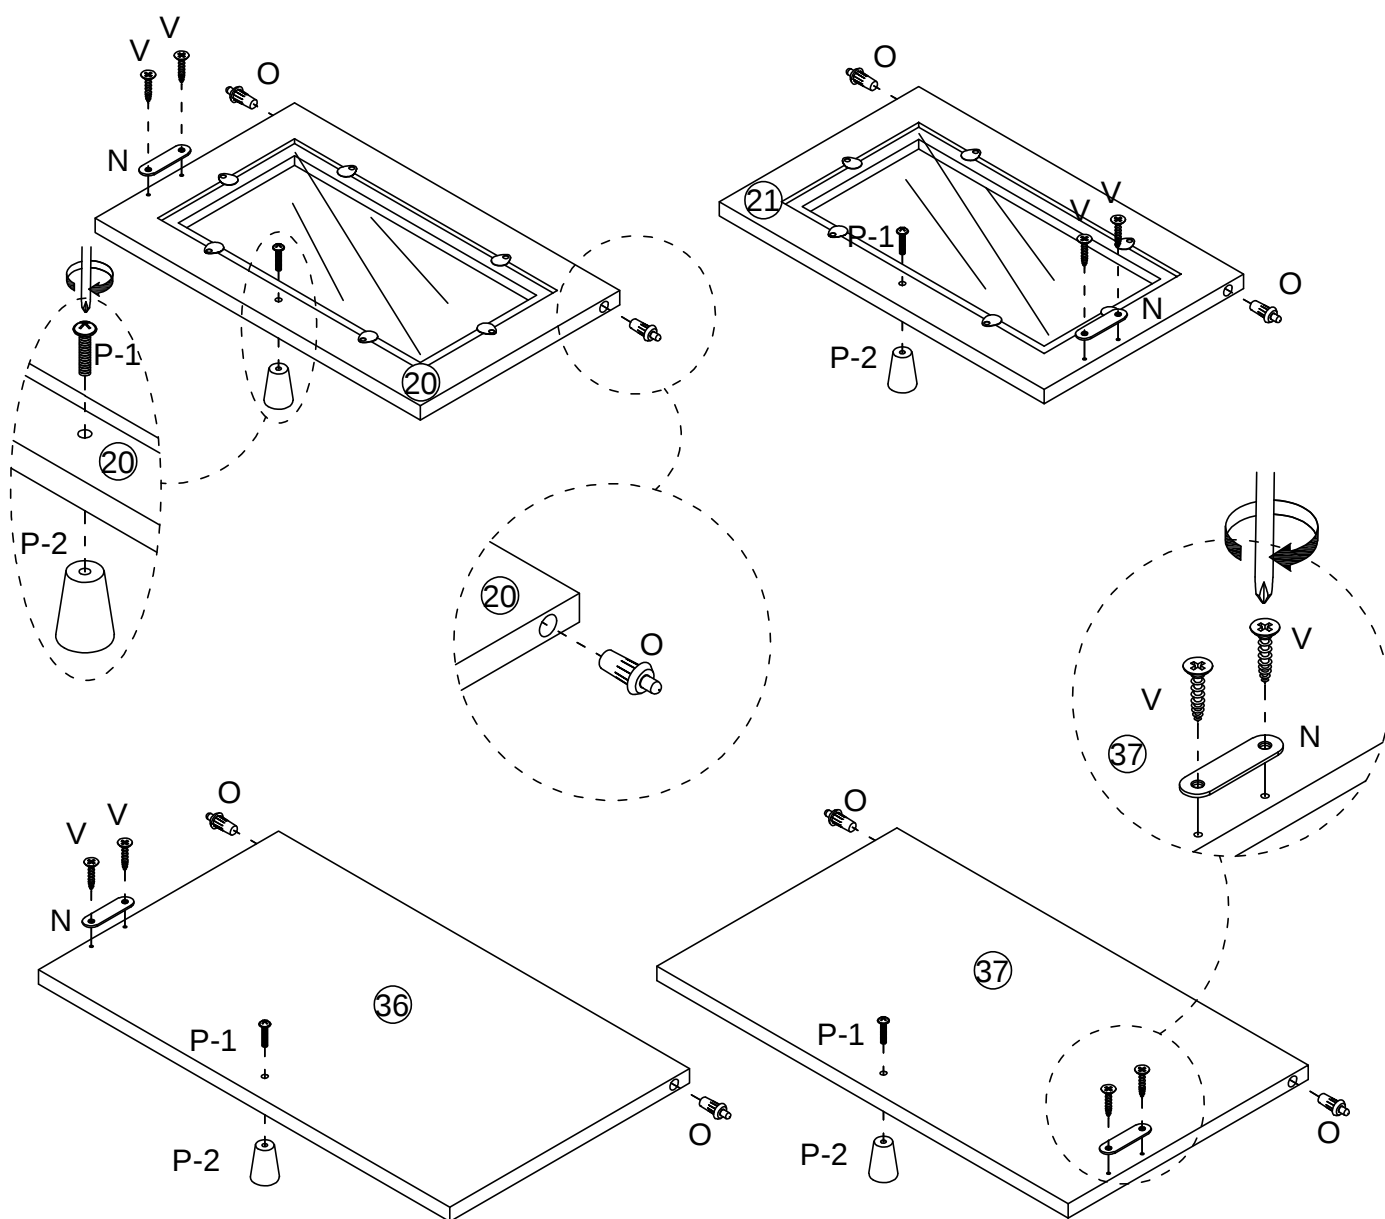


STEP 31

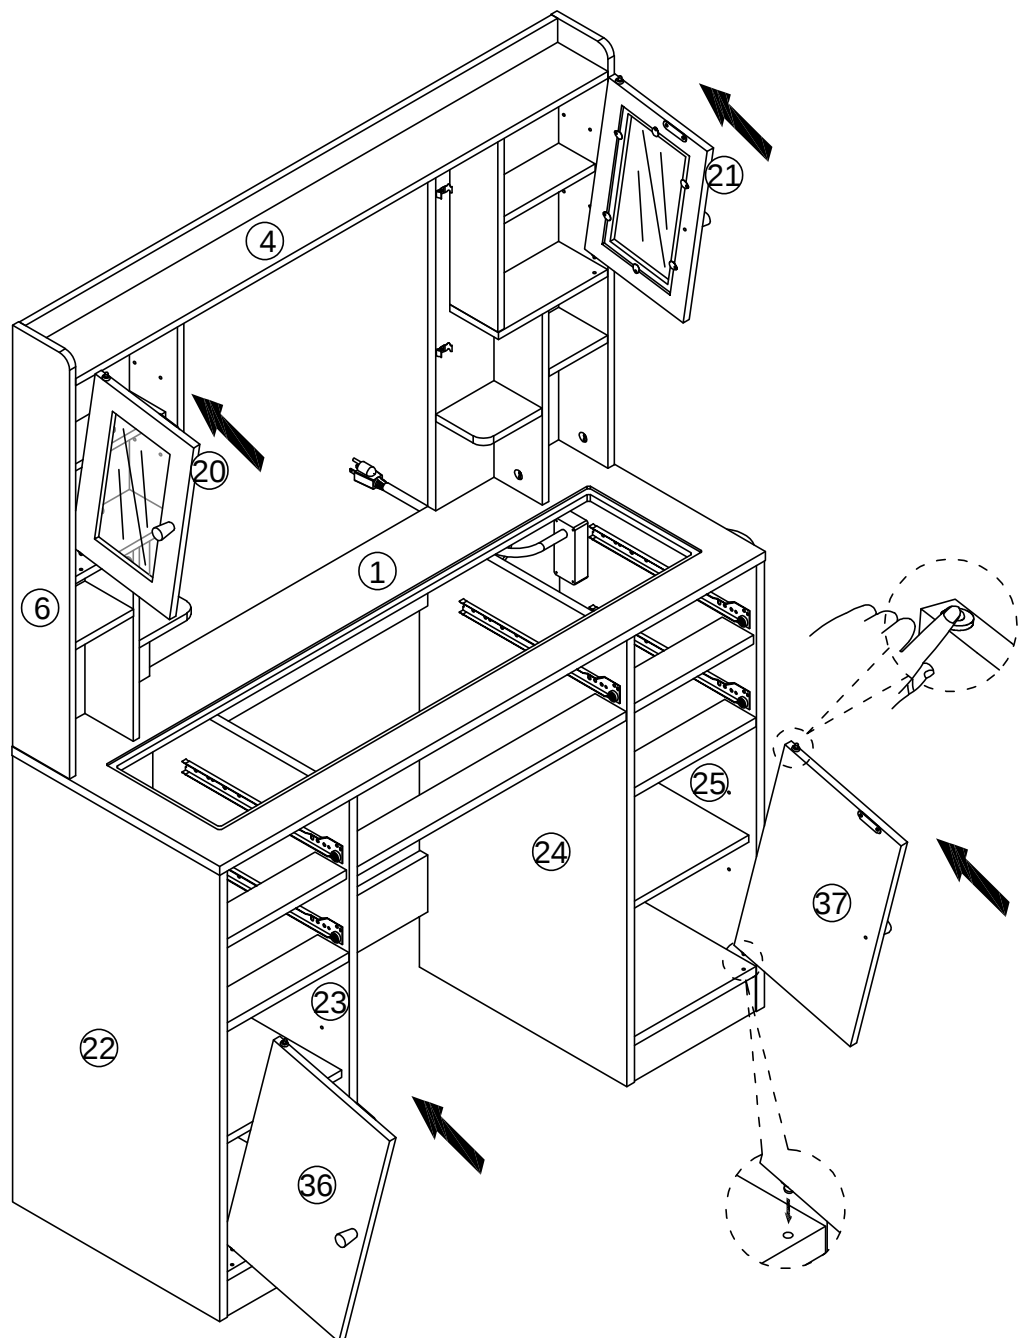




STEP 32

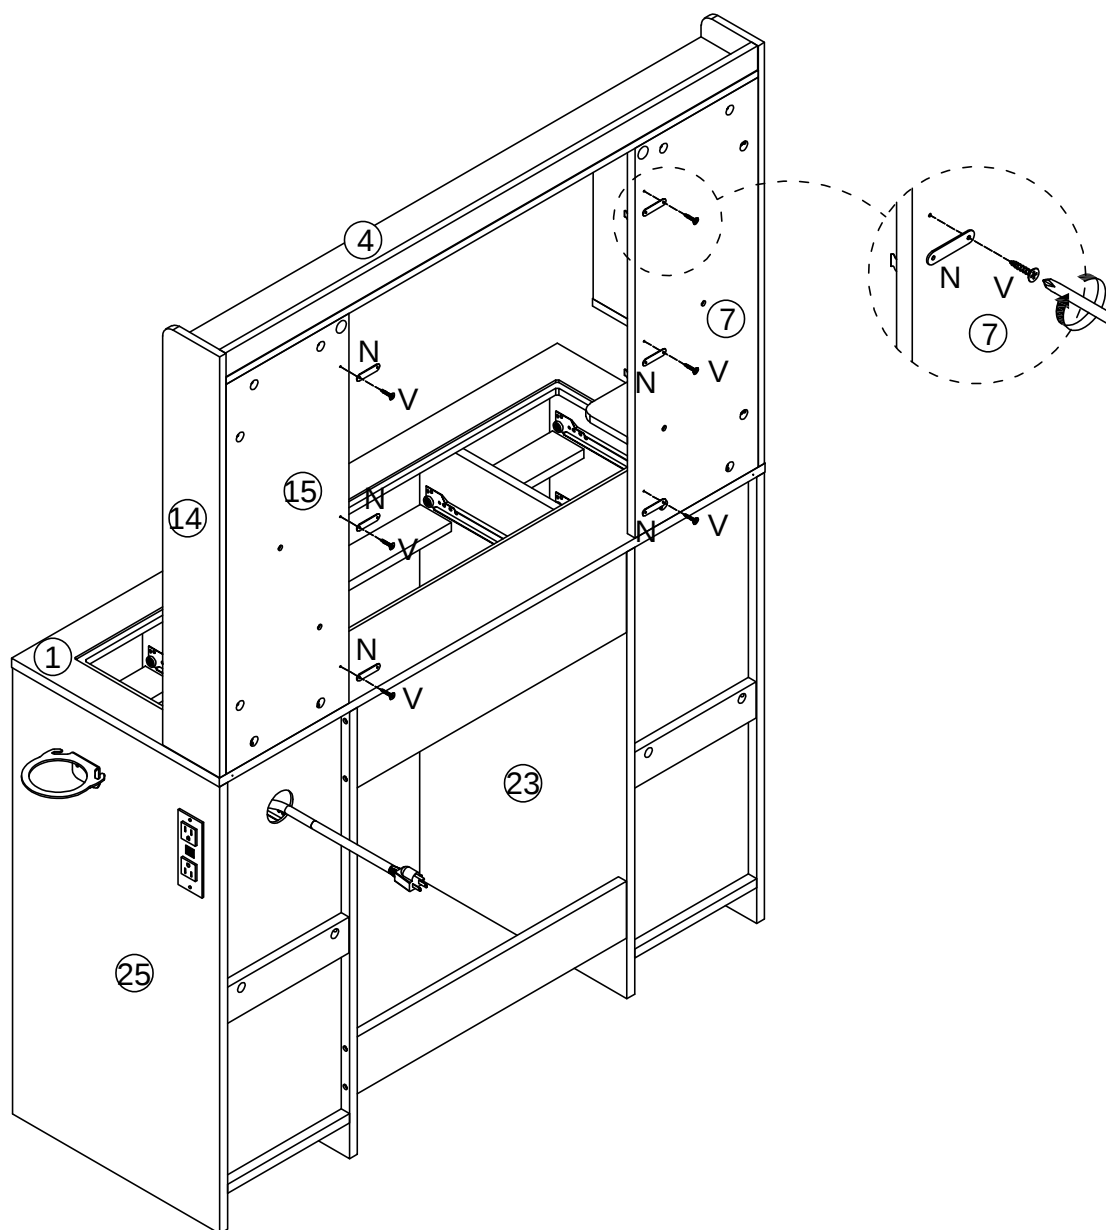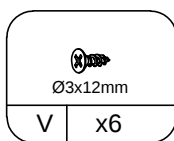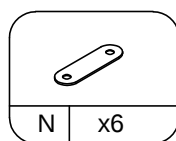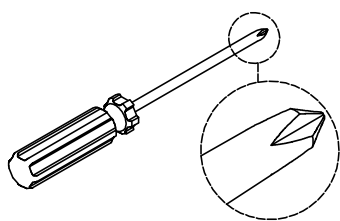






STEP 33

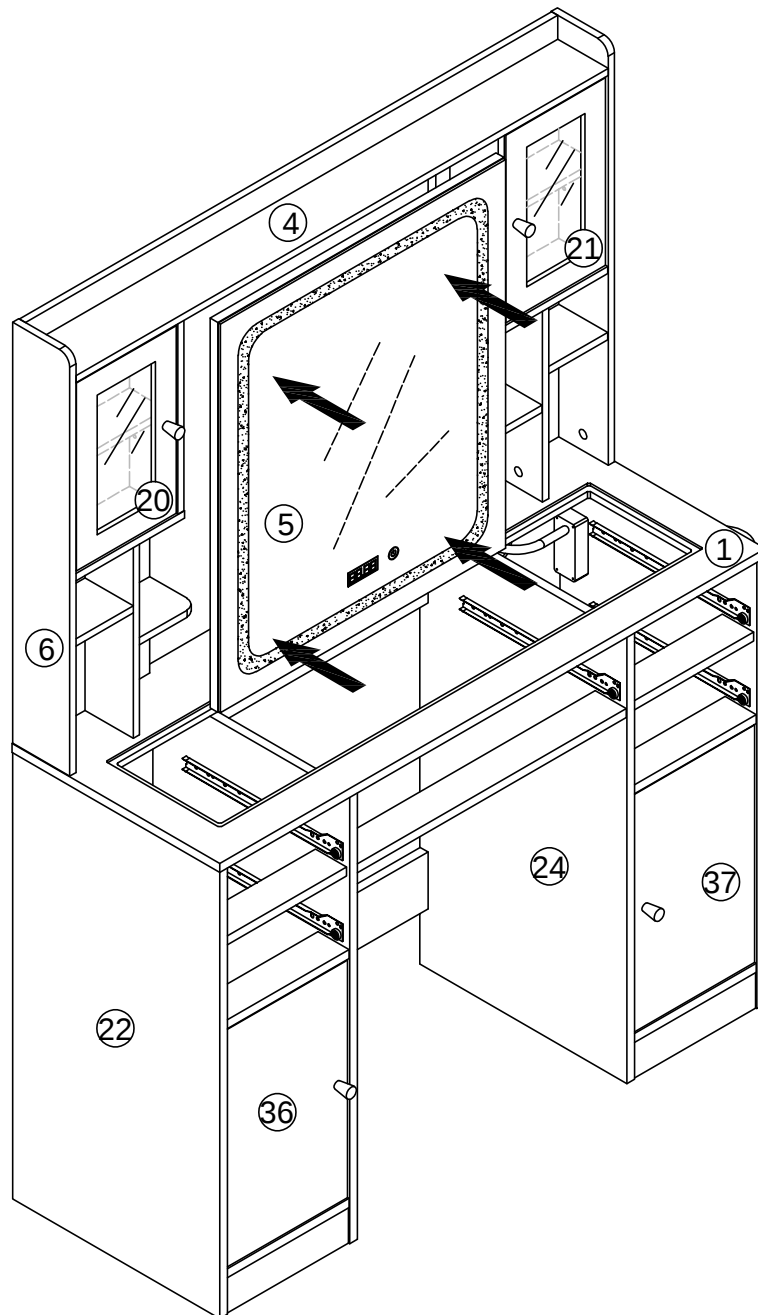


STEP 34

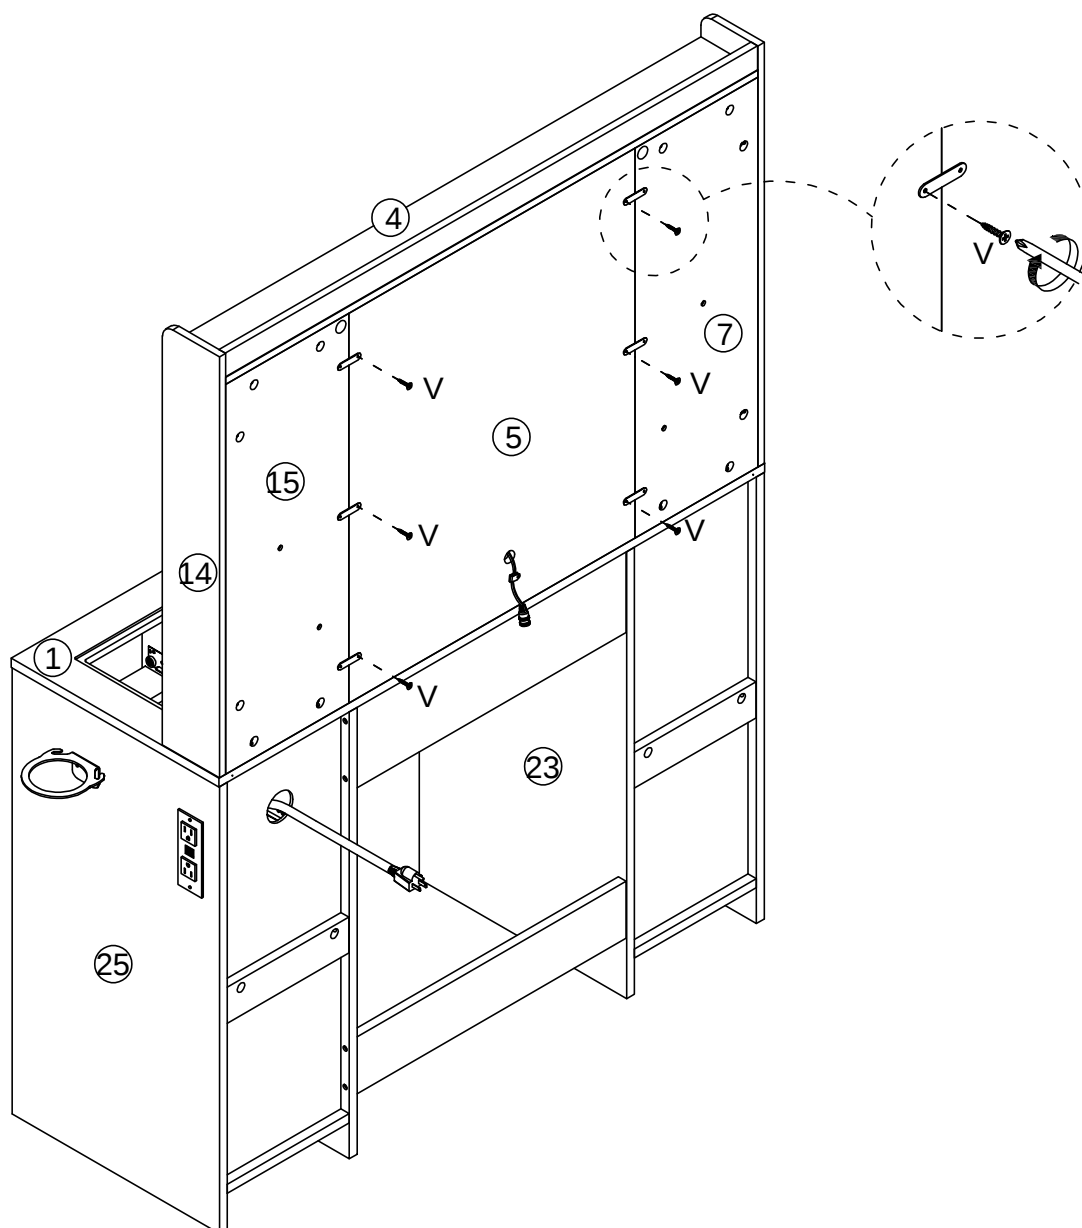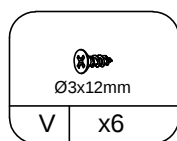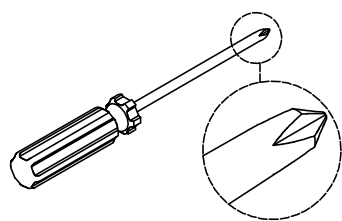



STEP 35

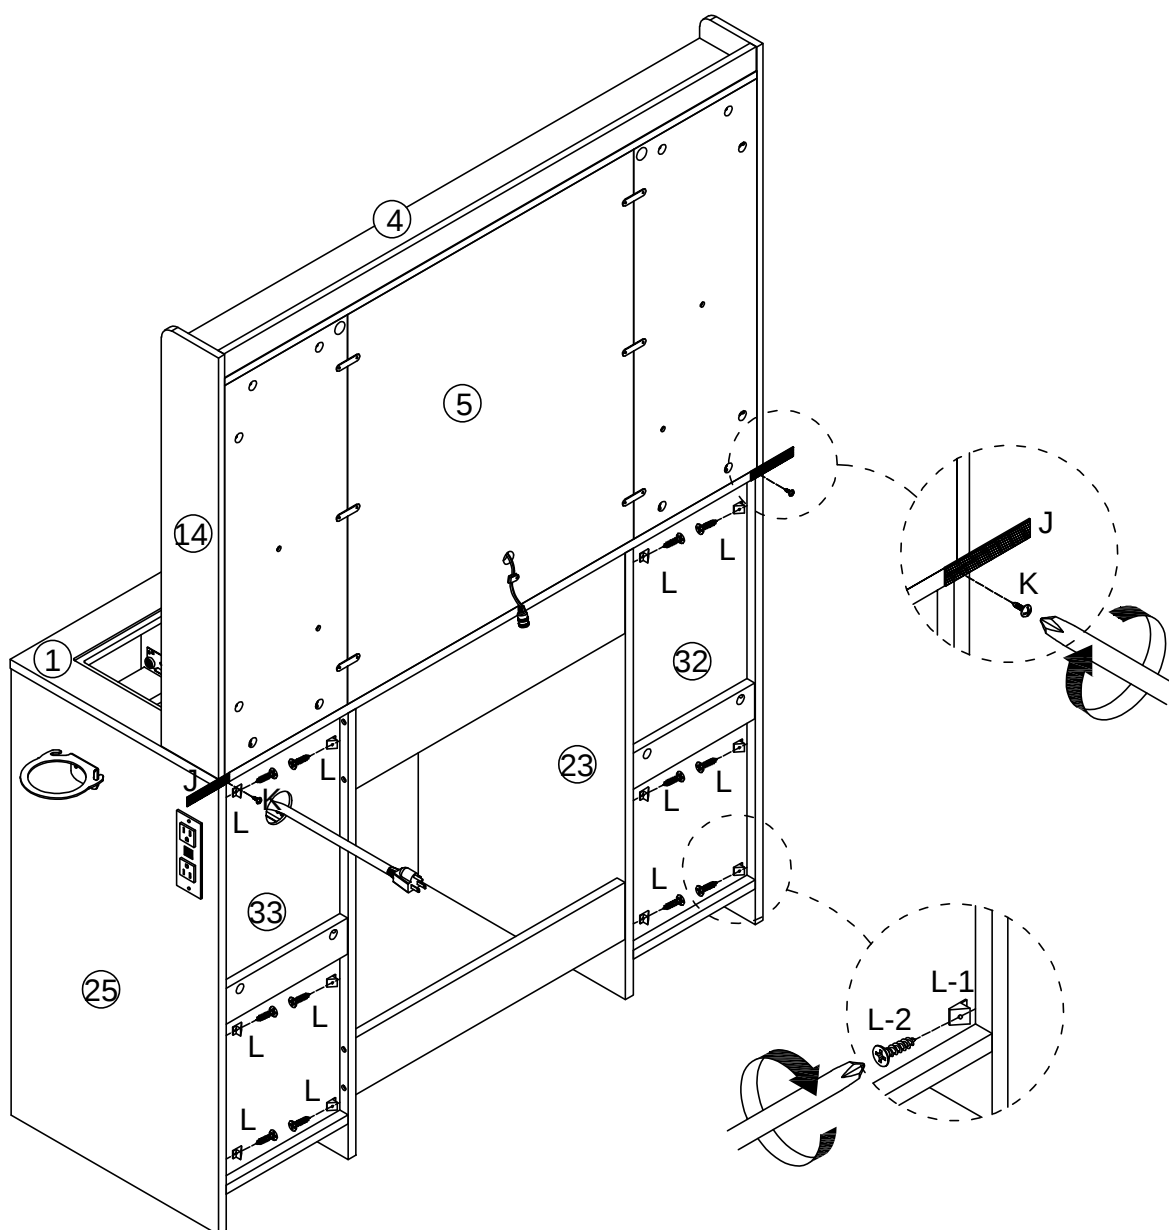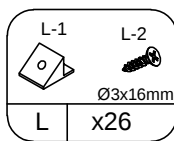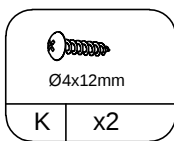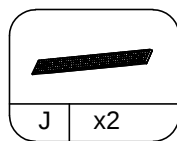
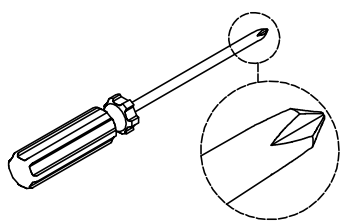


STEP 36


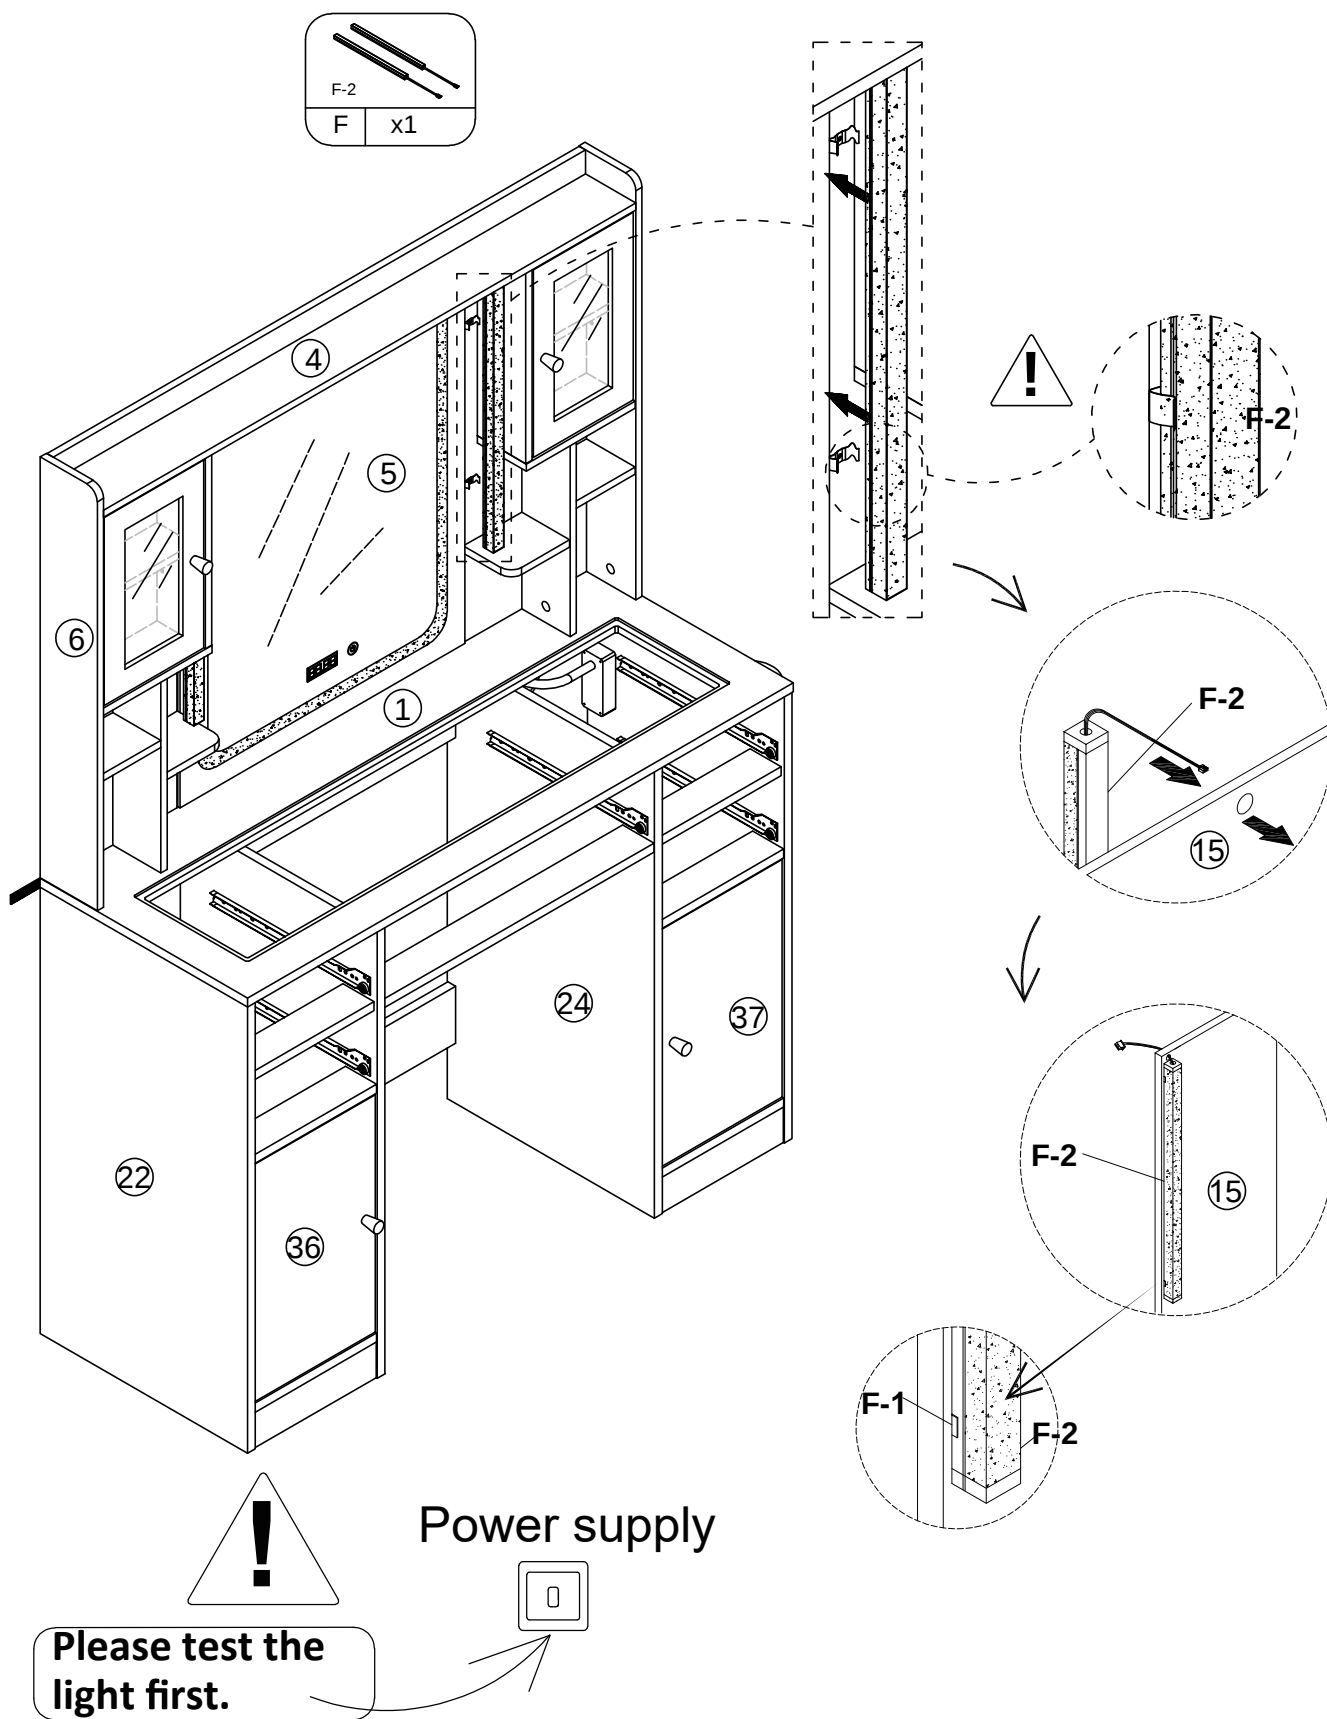


STEP 37


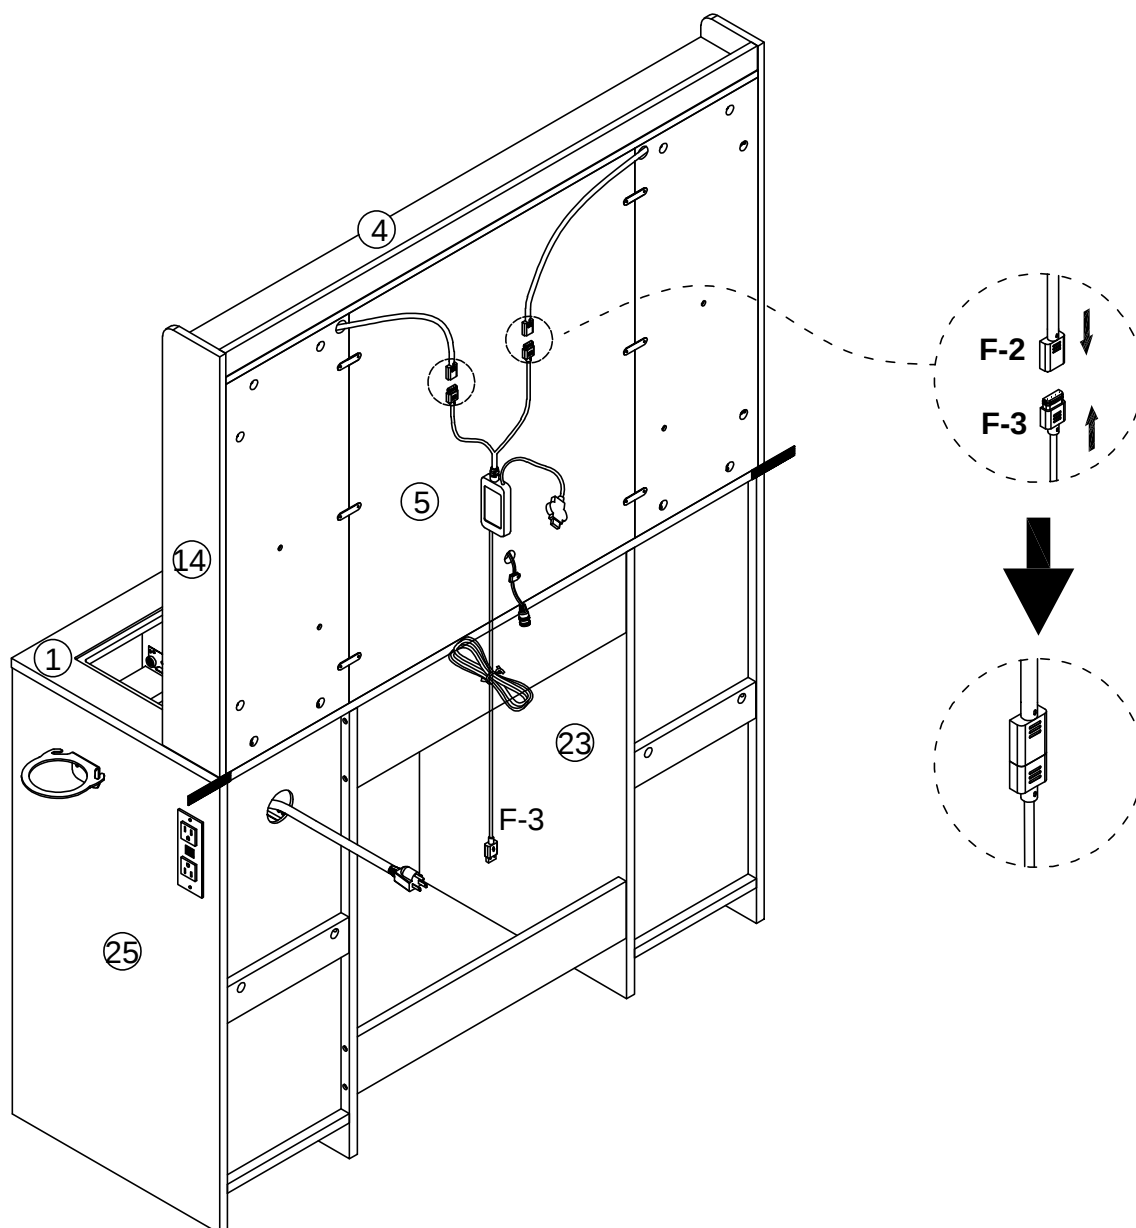
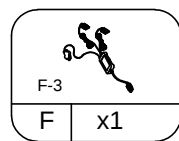


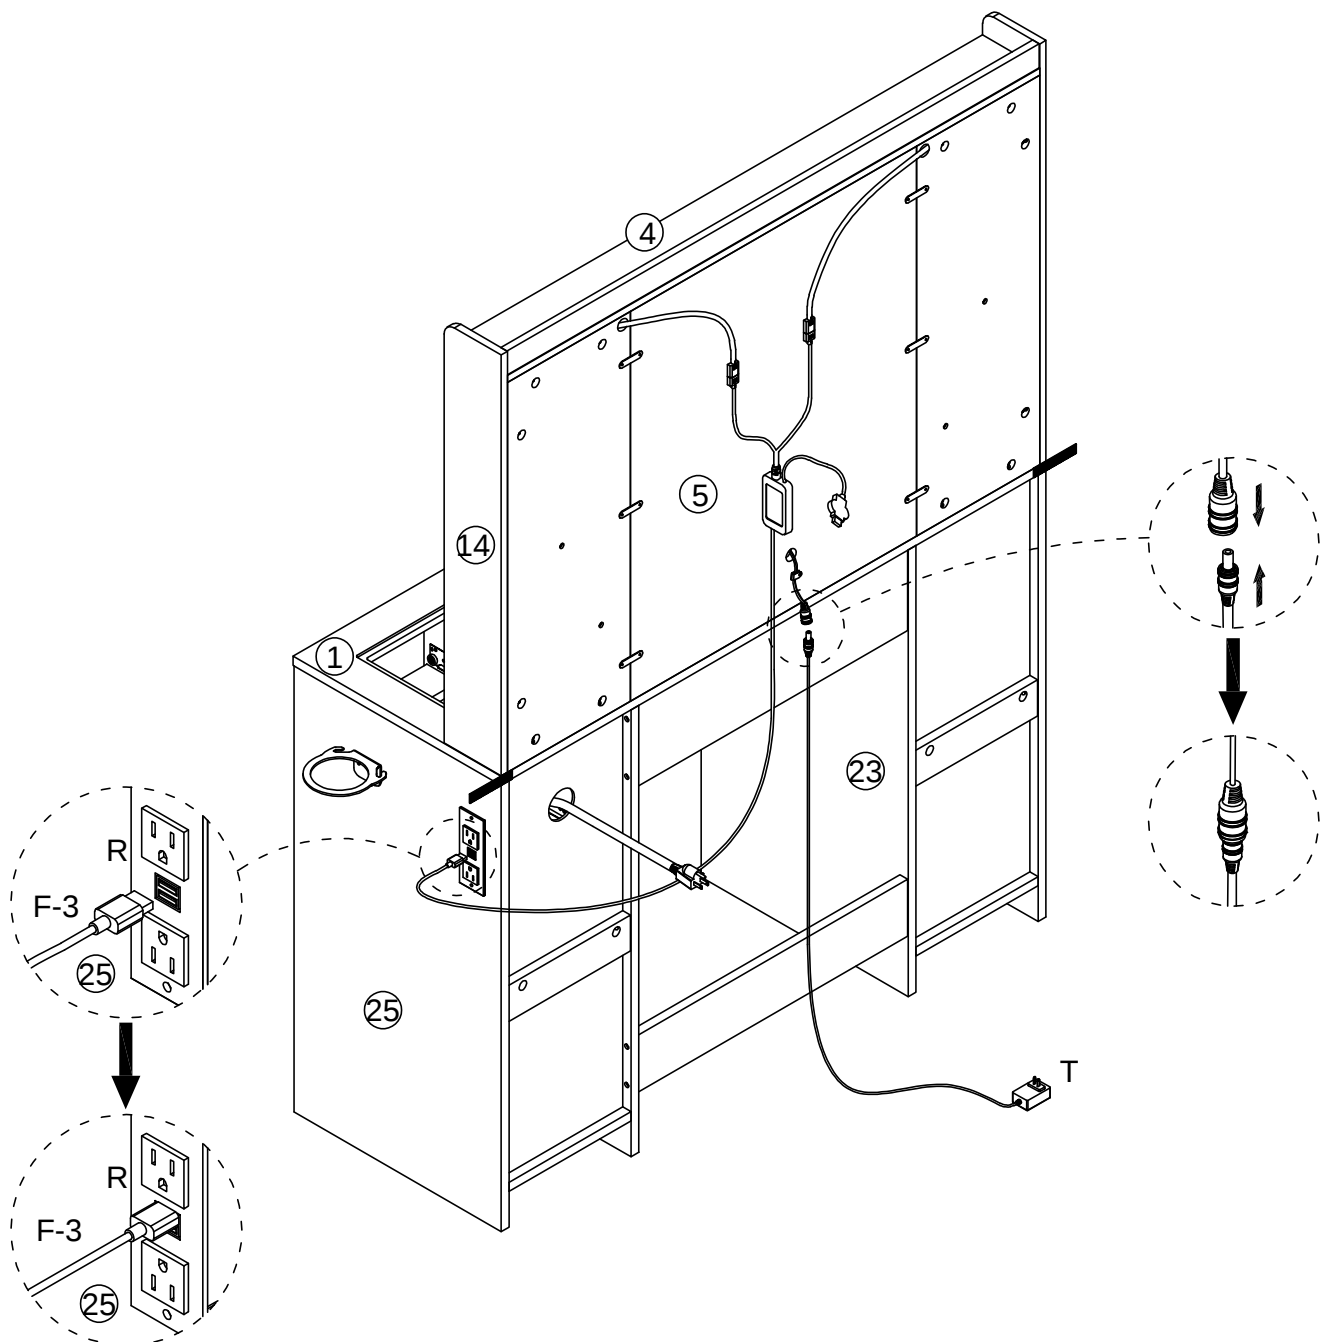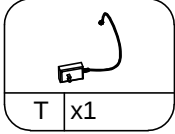

STEP 39



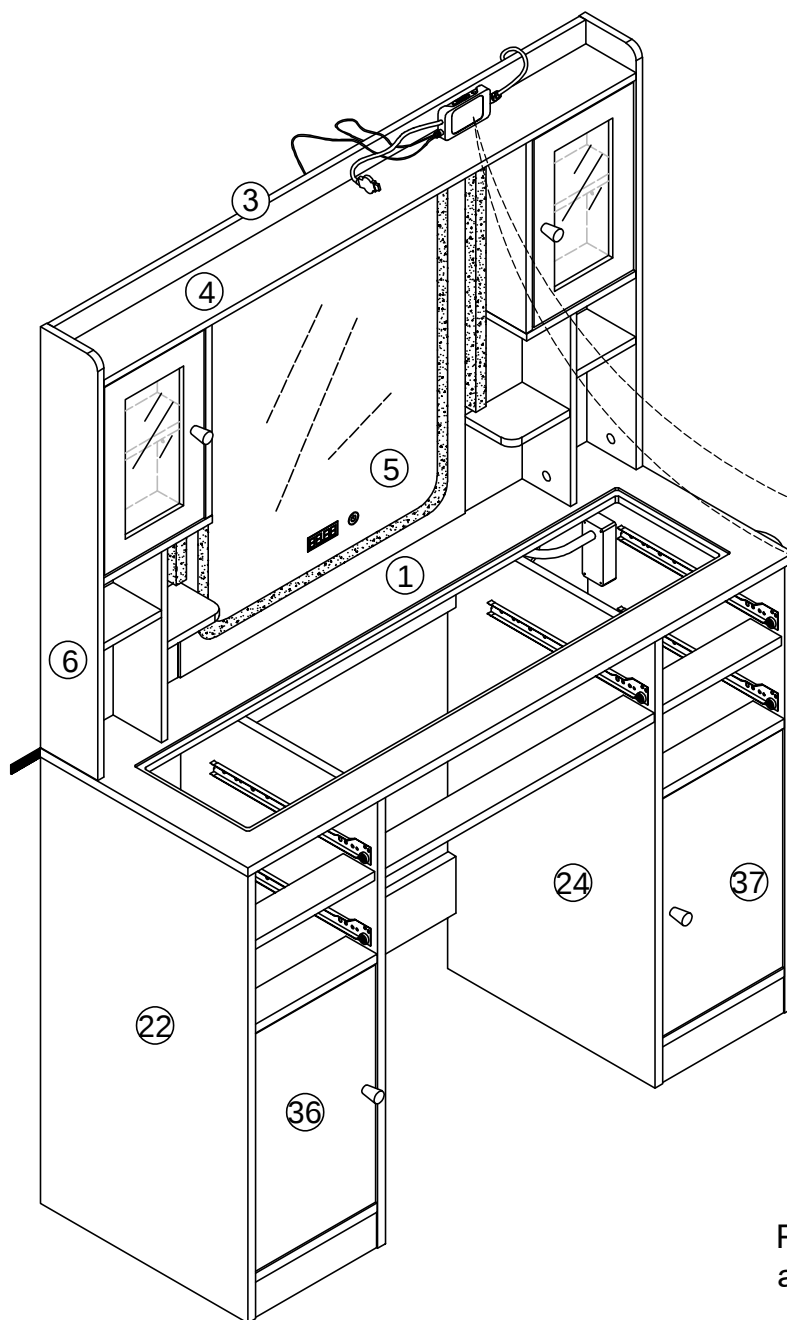
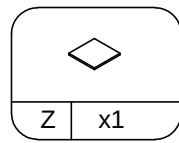


Tear off the back glue of Z

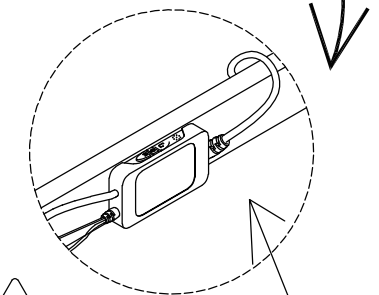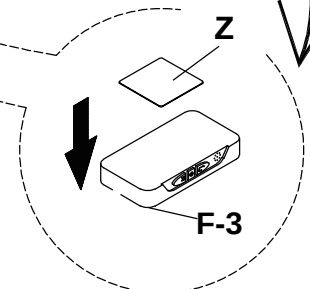
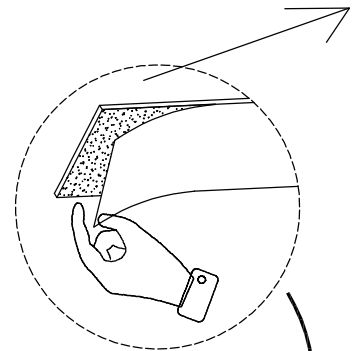


Peel off fitting Z the other back cover
and glue fitting Z to plate 3






STEP 40

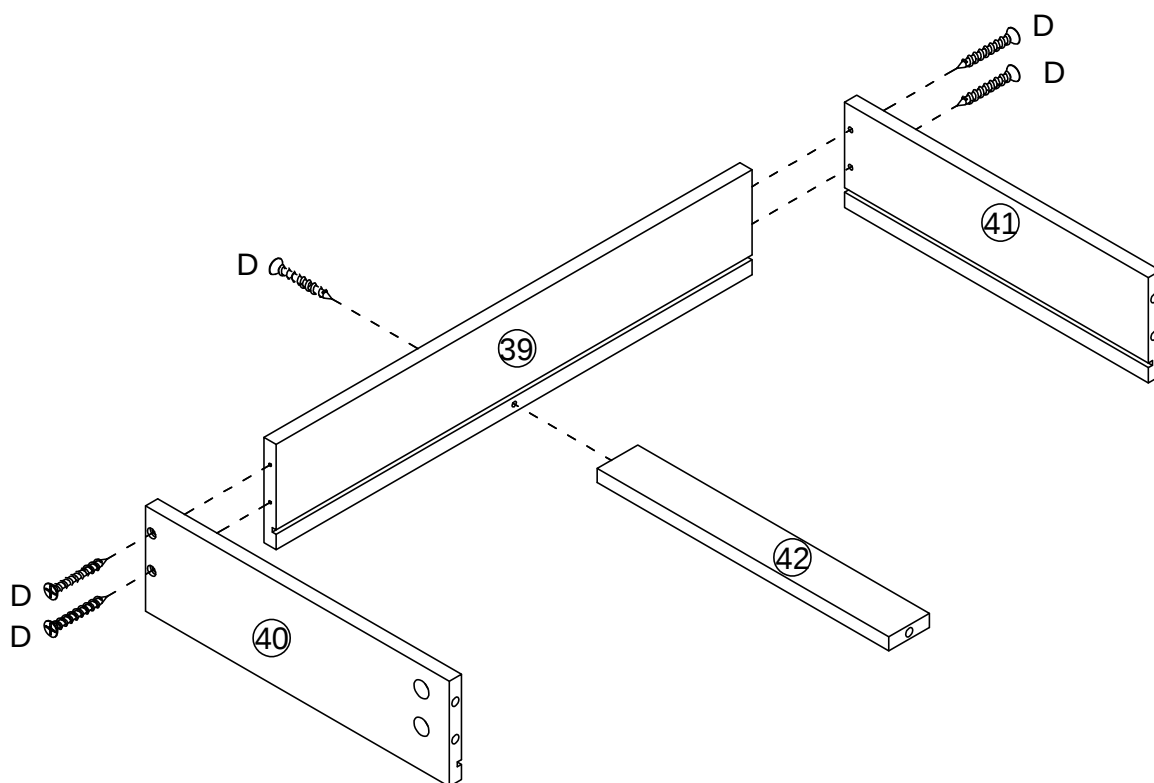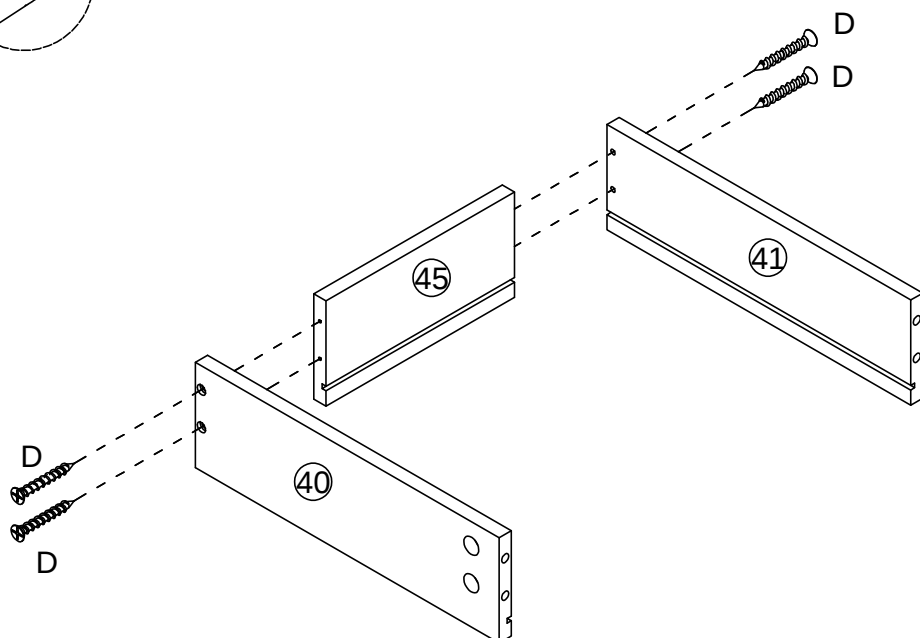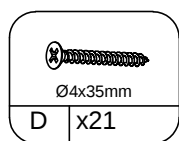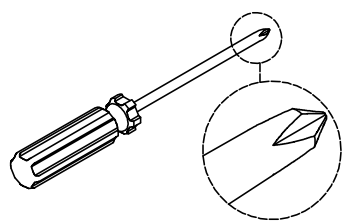


STEP 41

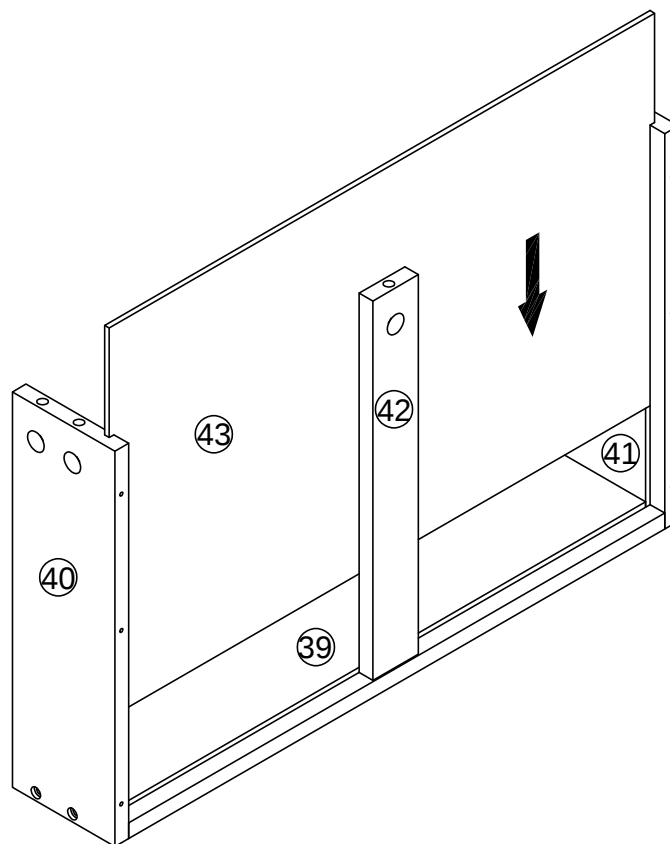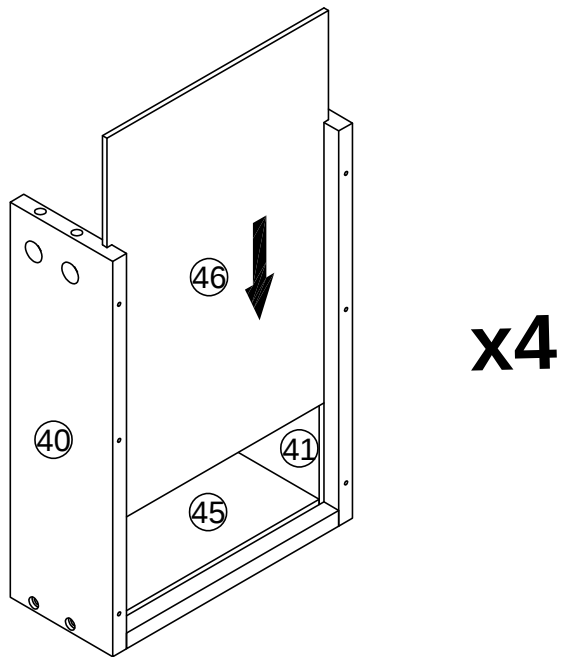





STEP 42

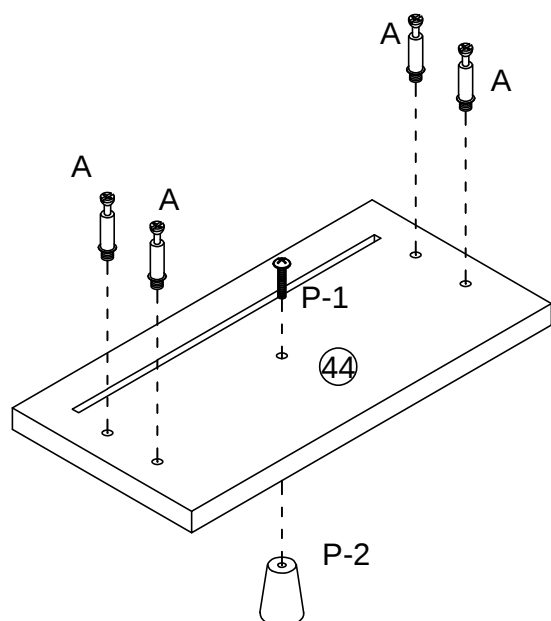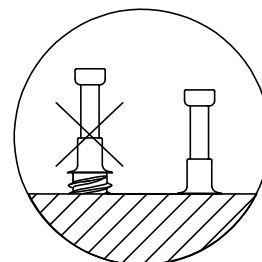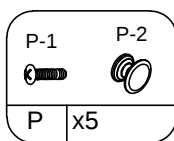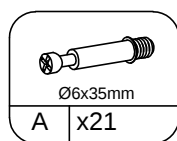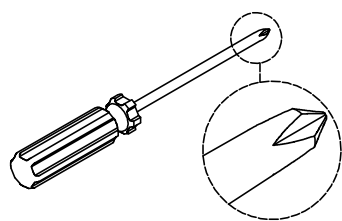


x4

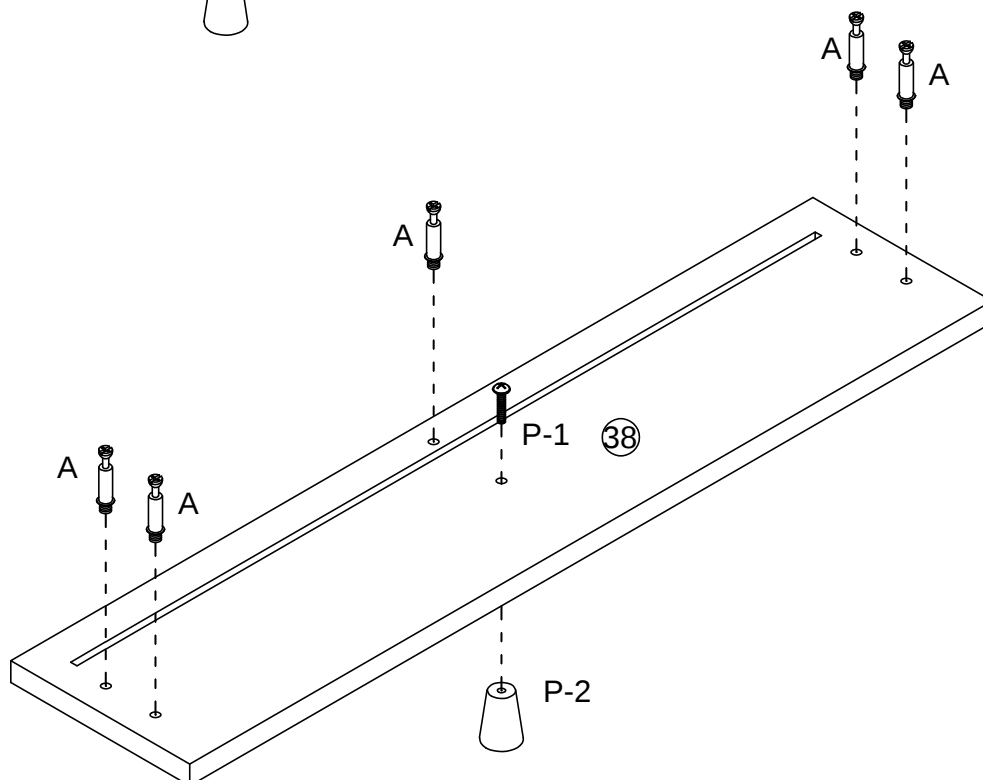











STEP 43

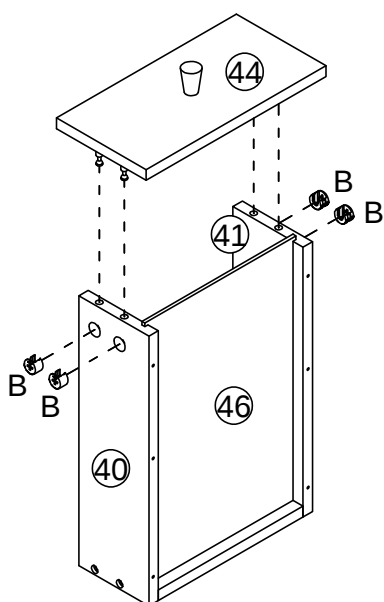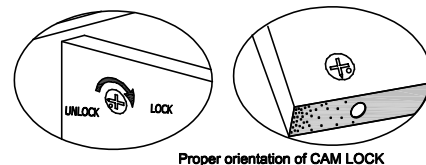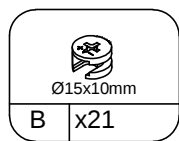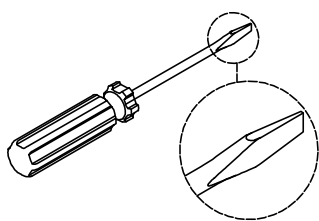


x4

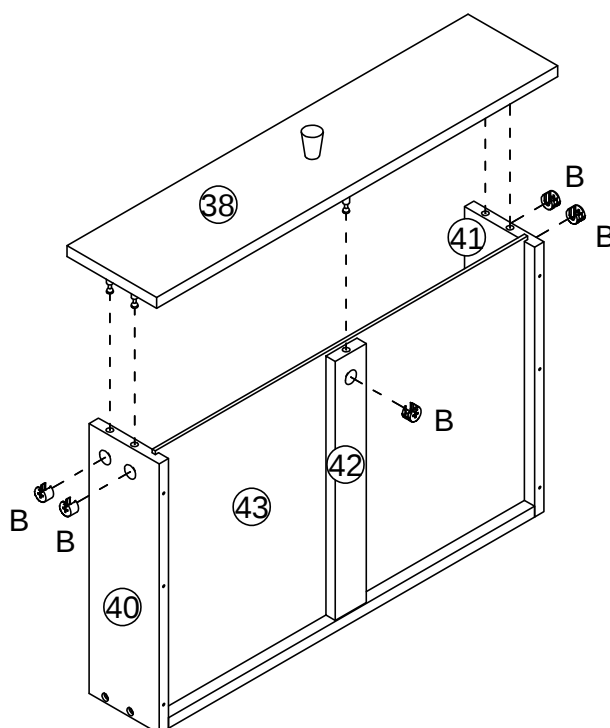



STEP 44

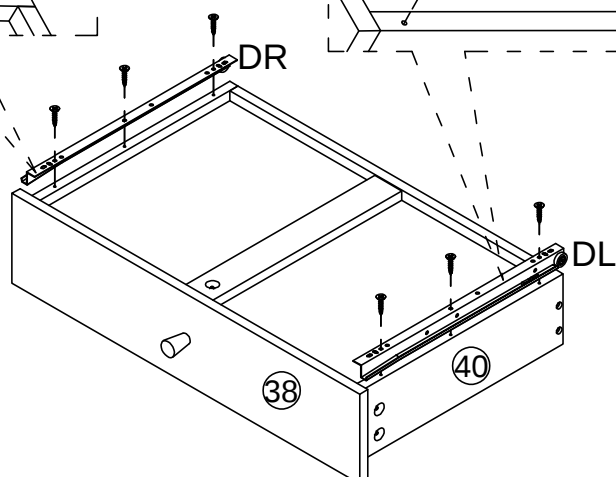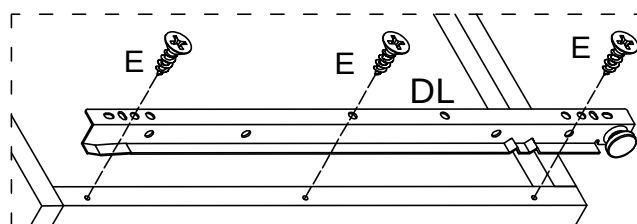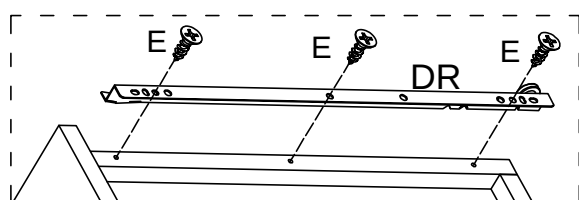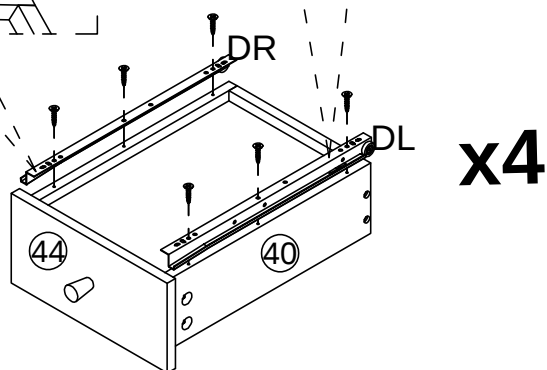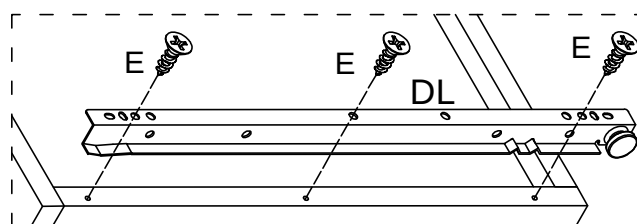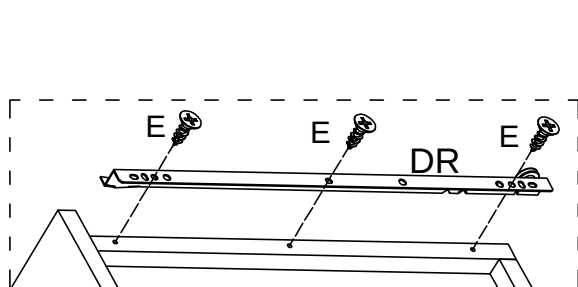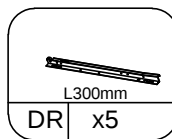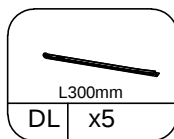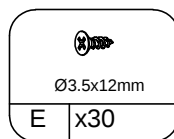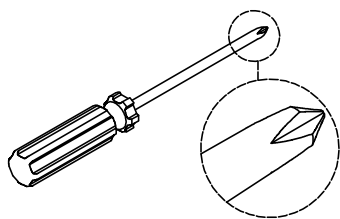


STEP 45

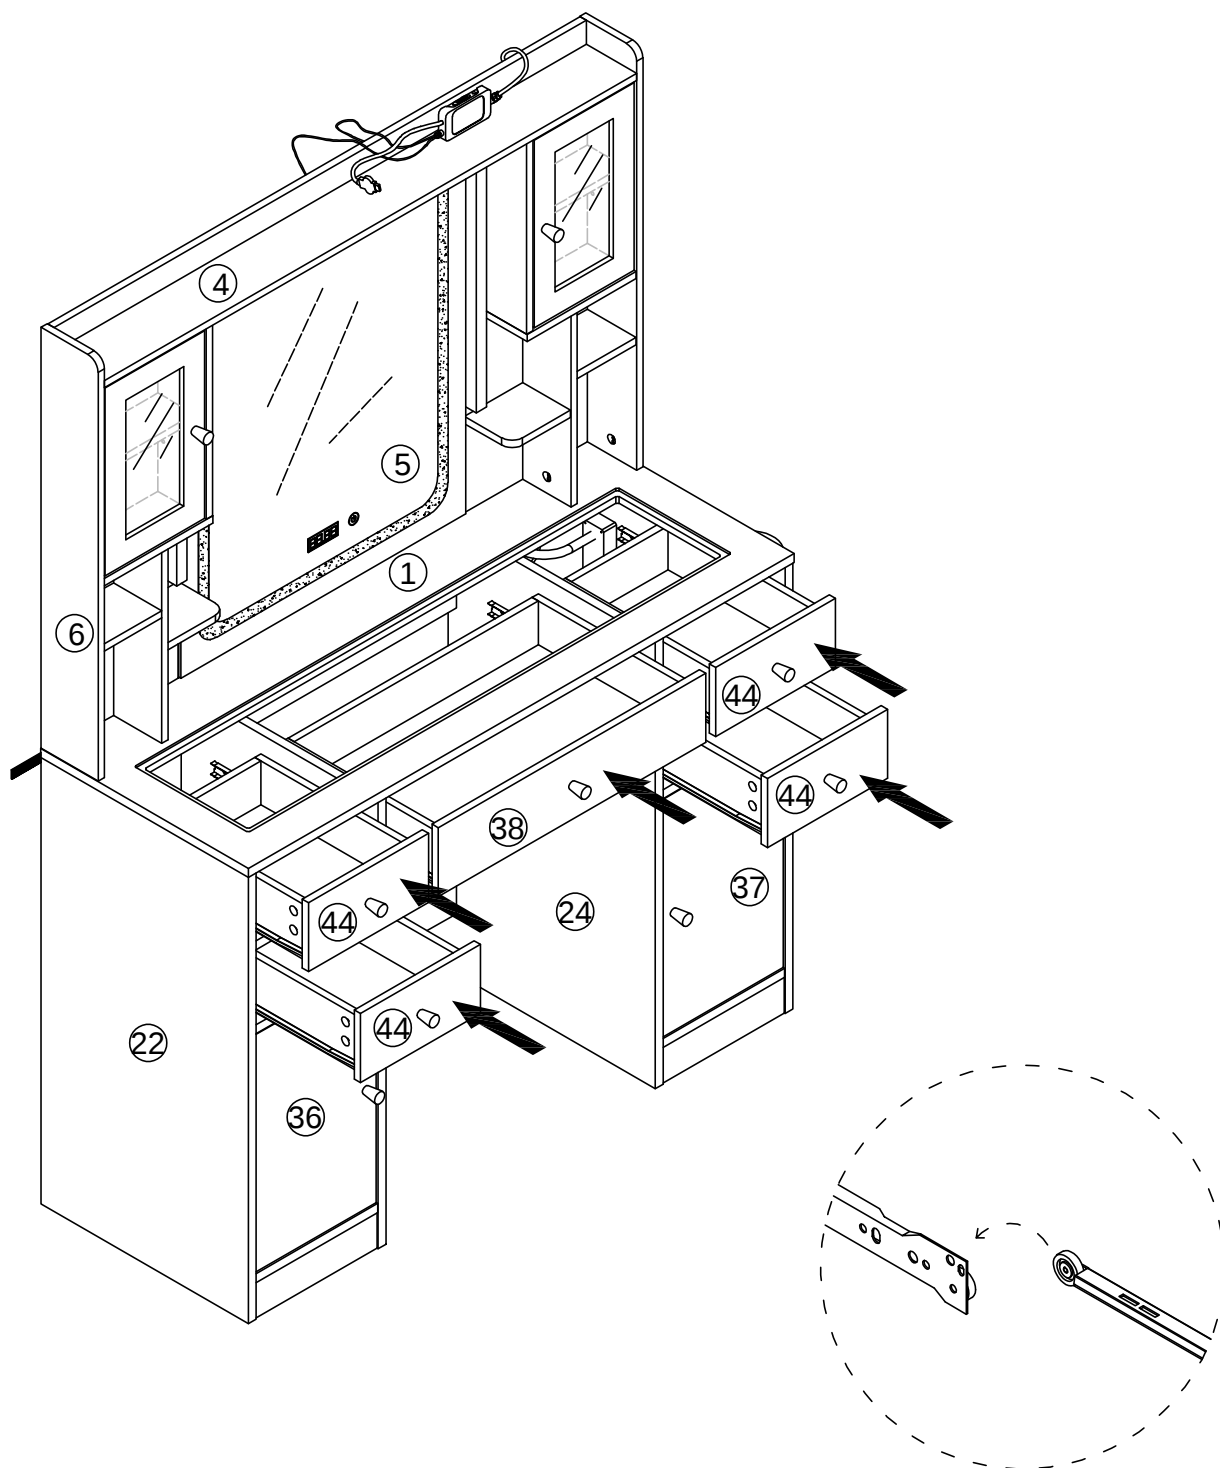








STEP 46

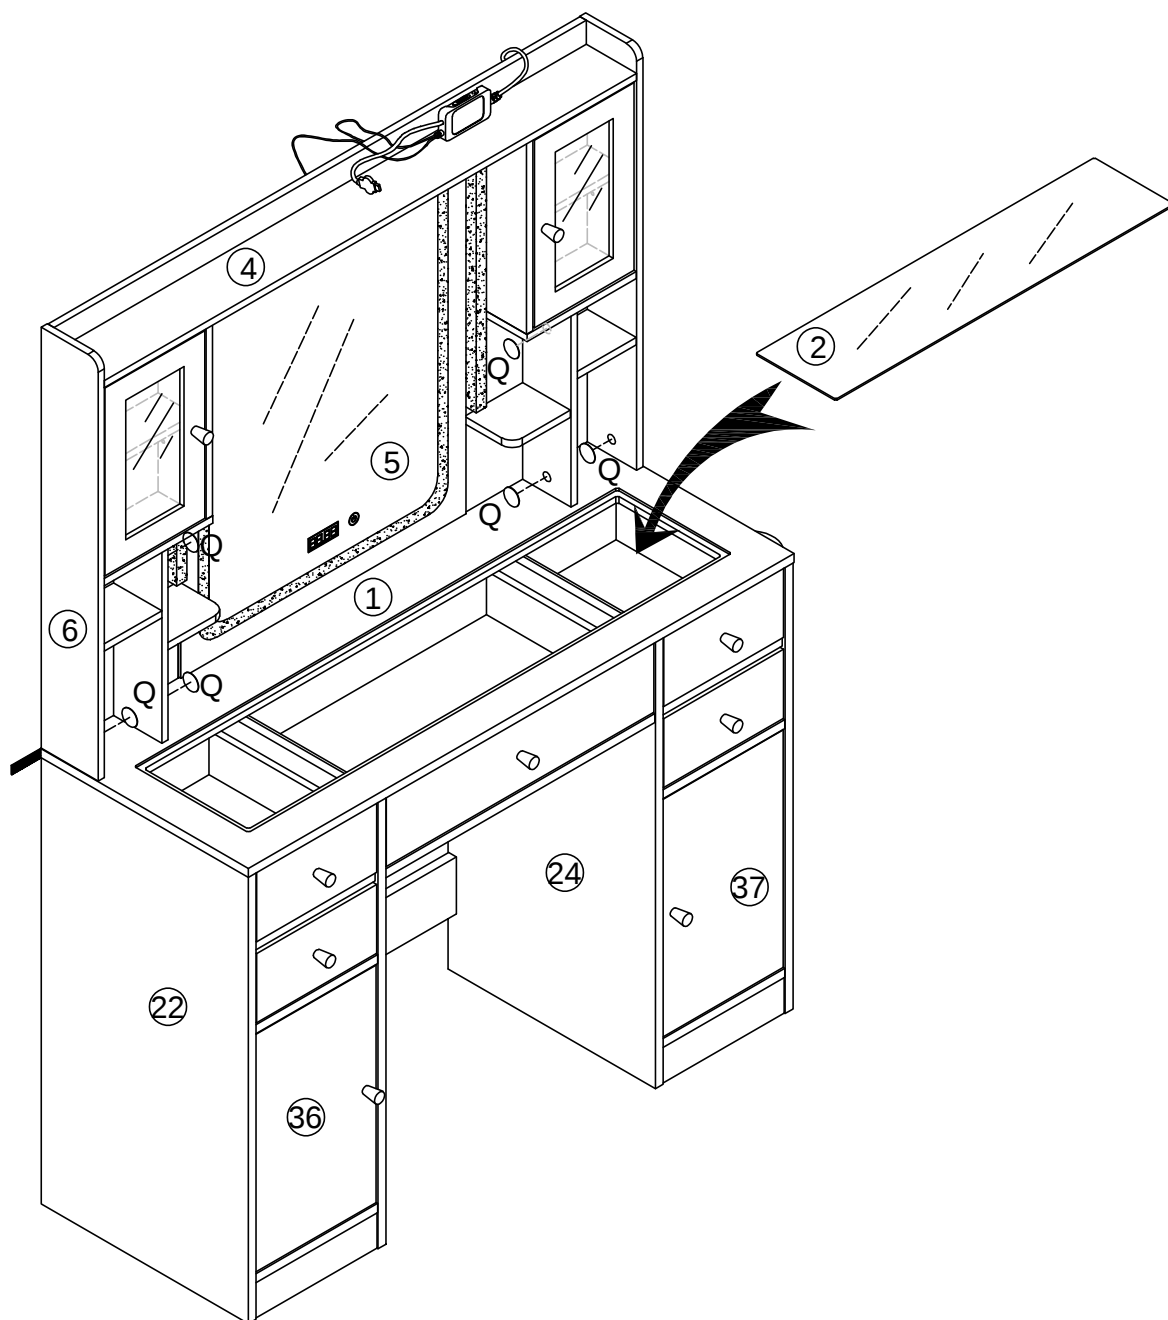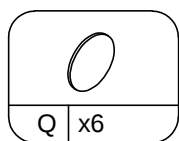






STEP 47

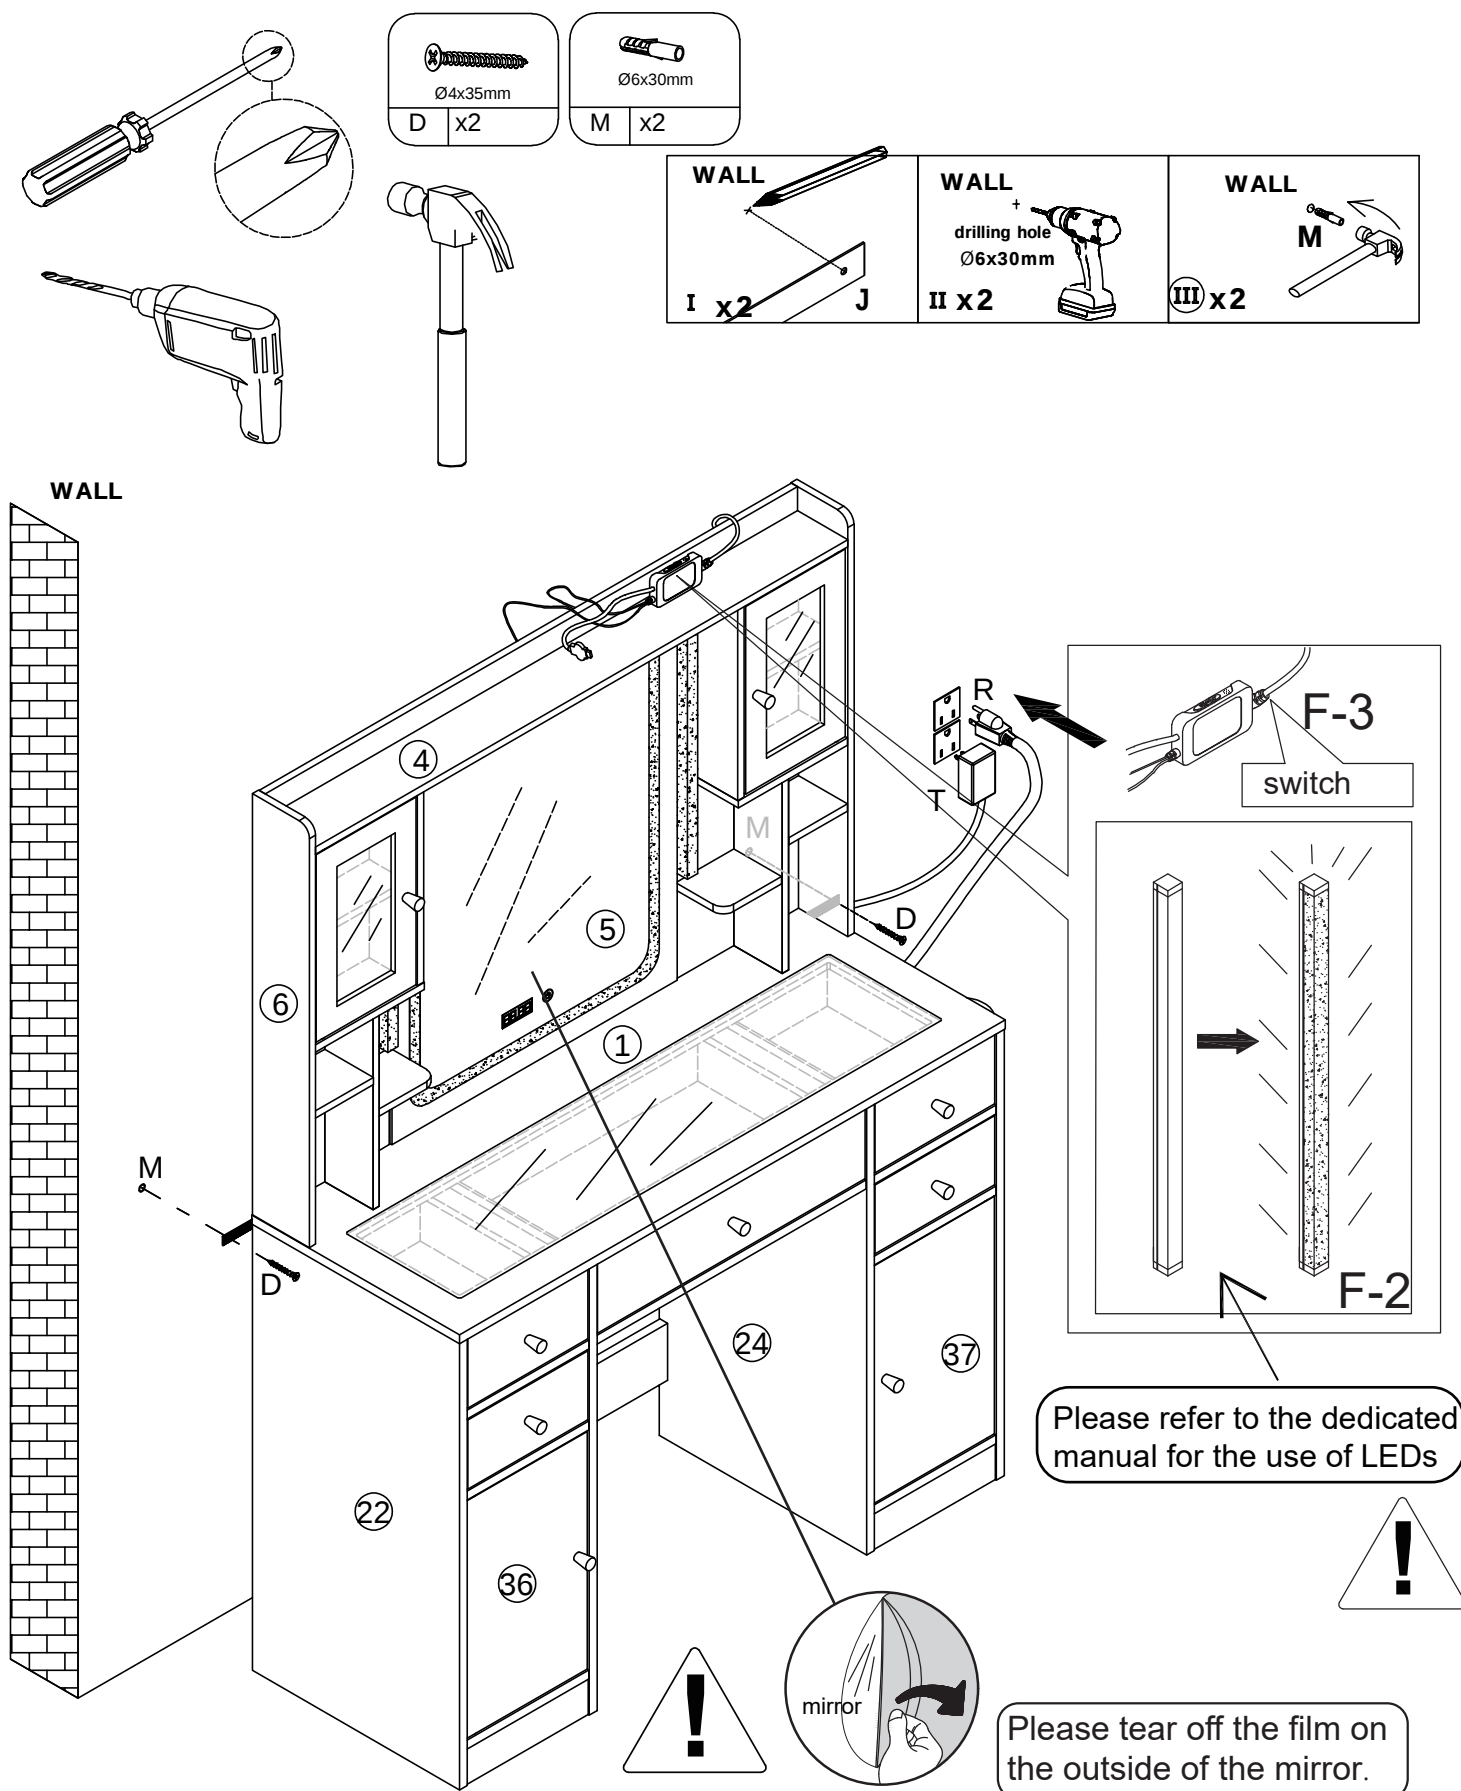

STEP 48

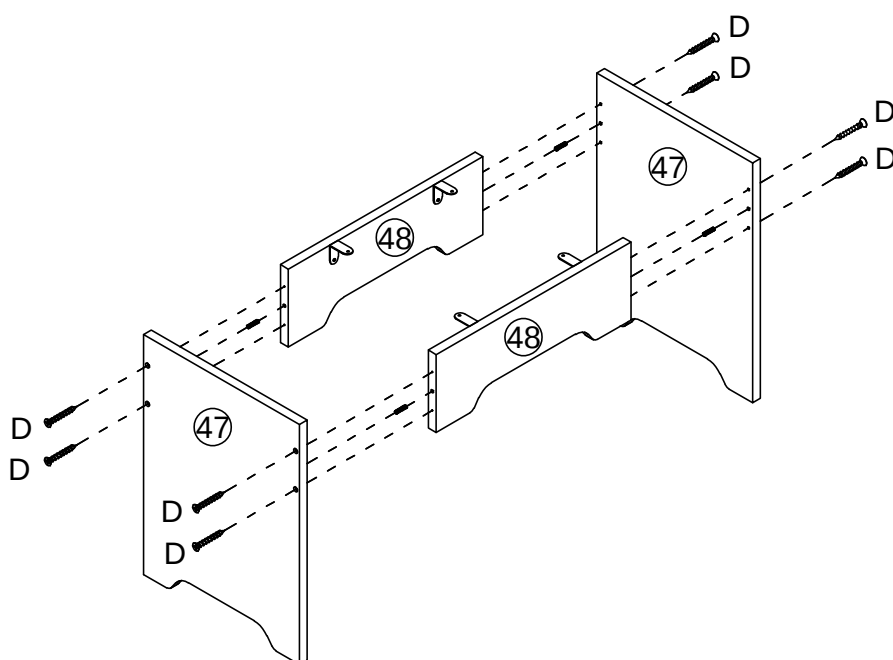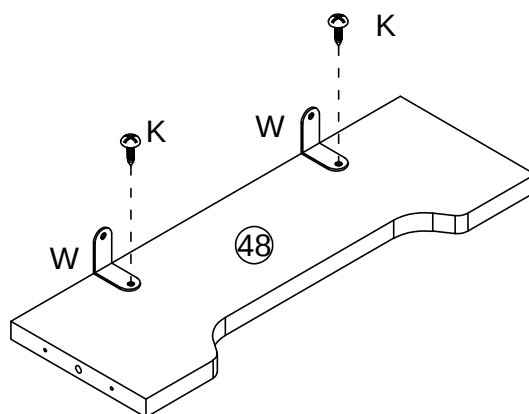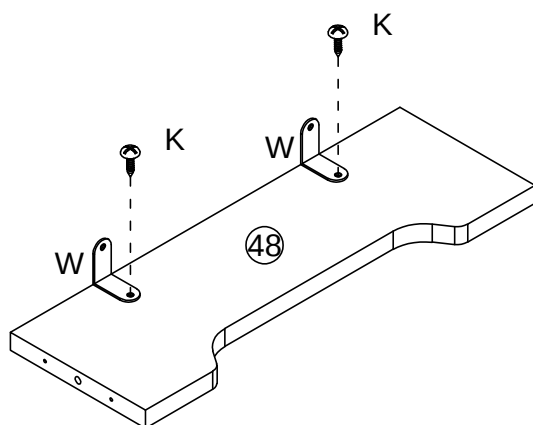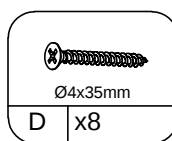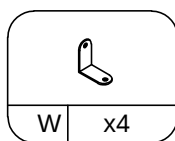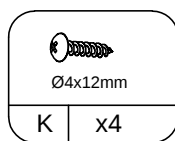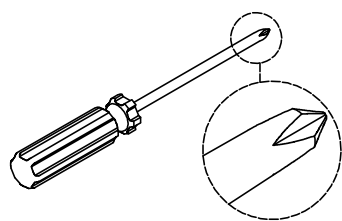

STEP 49

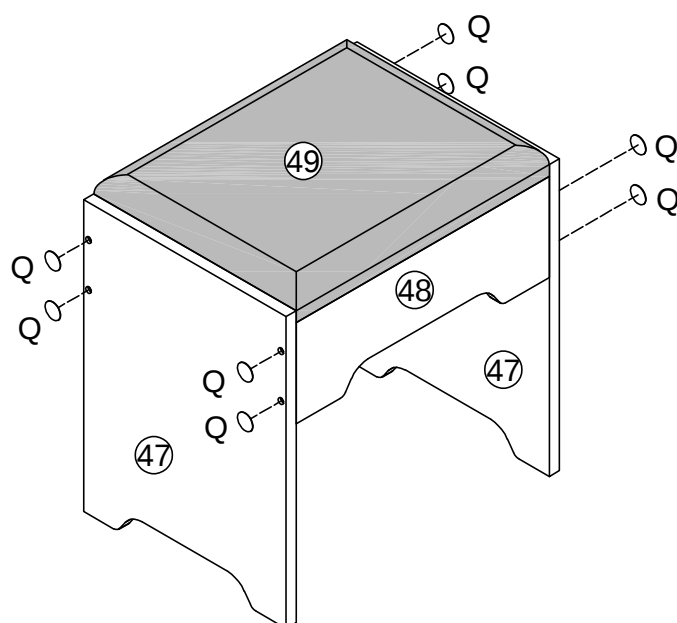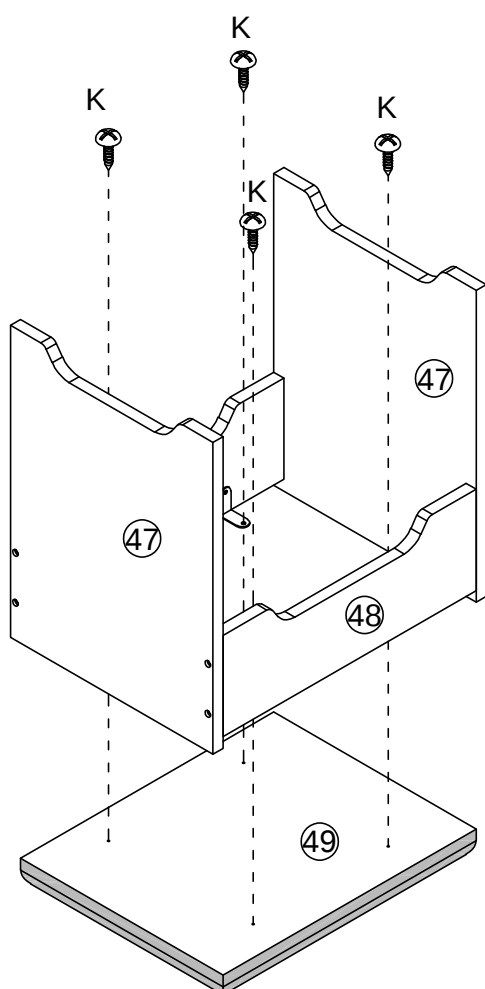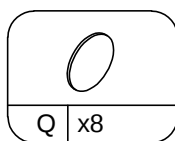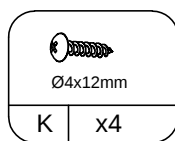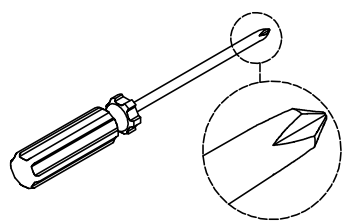

STEP 50

