



# Model 510S Sunlight Outdoor Shower Parts Identification & Assembly Instructions



Economy Shower Hardware  
(Cold water Only)

## Optional Shower Hardware



Platinum Shower Hardware  
(Hot & Cold)  
(Full stainless steel with hand held shower.)




SS-01	1	Shower Wall Assembly
SS-02	6	Shower Floor Boards
SS-03	2	Front/Back Floor Support
SS-04	4	Floor Joists
SS-05	1	Wall Assembly Top Cover
H4	2	Stainless Steel Angle Bracket



# Model 510S Sunlight Outdoor Shower

## Parts Identification & Assembly Instructions

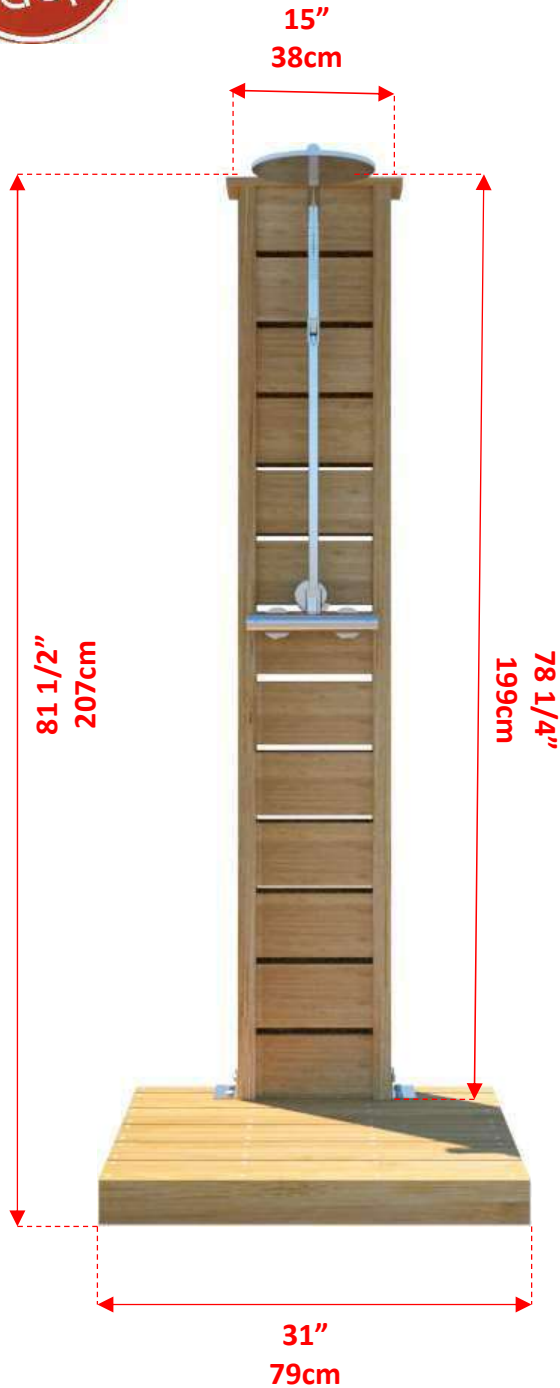


Packaging  
80" x 14" x 7" 125 lbs  
203cm x 36cm x 18cm 57kgs






# Model 510S Sunlight Outdoor Shower Parts Identification & Assembly Instructions

1. Locate the Wall Assembly Top Cover (SS-05) and secure to the Wall Assembly (SS-01) with provided screws (Fig.2)

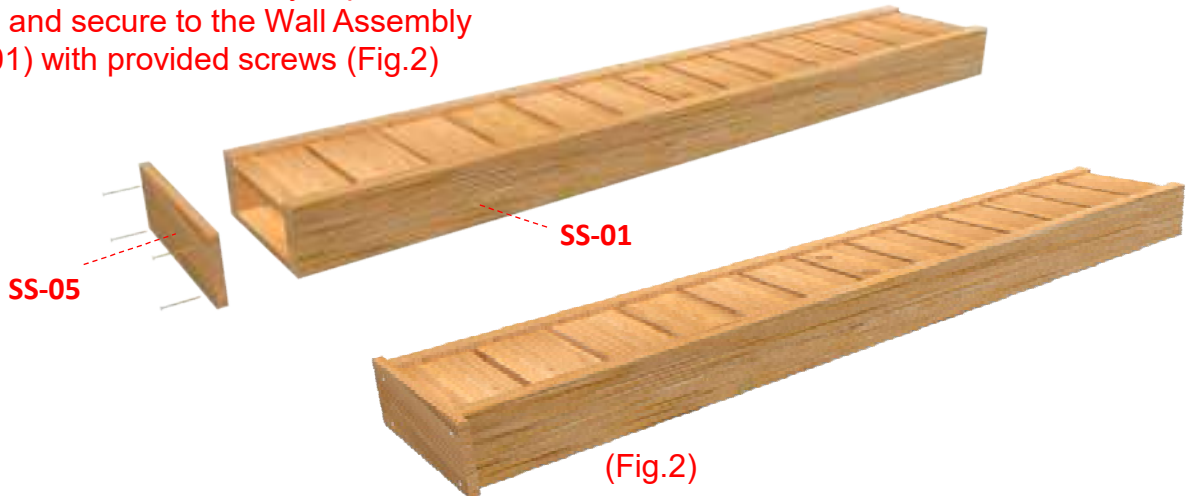


## 2. Floor Assembly

Screw (SS-03) Front Back Floor Supports to (SS-04) Floor Joists using the provided screws.

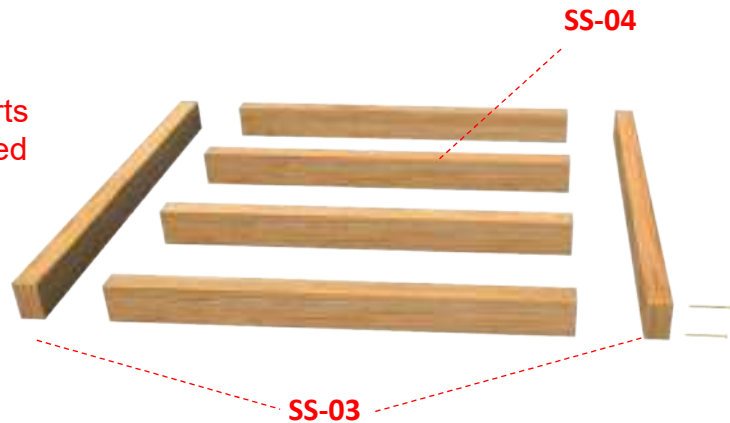

3. Once base is assembled as in (Fig.3), Screw (SS-02) Shower Floor Boards to each of (SS-04) Floor Joists spacing floor boards evenly.

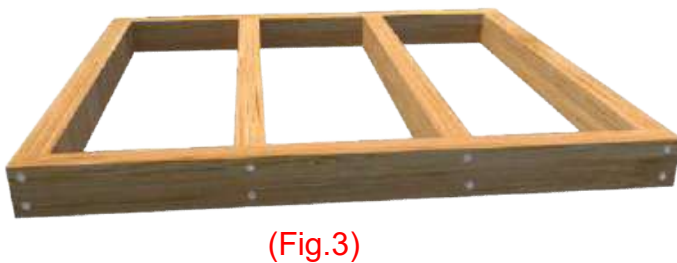



# Model 510S Sunlight Outdoor Shower Parts Identification & Assembly Instructions



4. Position (SS-01) Shower Wall Assembly centered and flush onto the back of the assembled base. Secure (H4) Angle Brackets to either side of the wall assembly with the provided lag screws. (Fig.4)



(Fig.4)

5. Assemble the Shower Head Assembly to the back wall of the shower as per the manufacturers instructions.

