



Holley EFI Digital Dash Mounts

PART NUMBER: 03-26000, 03-26001, 03-26002

INSTALLATION INSTRUCTIONS

These 860 Performance Digital Dash Mounts are designed specifically for the Holley EFI 6.86 (p/n 553-112 & 553-117), 7 (p/n 553-106), and 12.3" (p/n - 553-111 & 553-116) Digital Displays. If you need any assistance during installation or if you have questions about this mounting bracket, call our Tech Help Line at (254) 848-4300.

Tools Needed for Installation:

- 1/4" Allen Wrench
- 5/32" Allen Wrench
- 1/2" Wrench
- Phillips Head Screwdriver
- Marker

These are the tools required for installation of this kit on a standard steering column. If your vehicle has alternate parts, other tools may be required.



HOLLEY EFI 7" DIGITAL DASH

- Using a Phillips head screwdriver, install the mounting bracket with the provided #8-32 screws on the back of your Holley dash with the flange for the steering column brackets pointed away from the dash.



HOLLEY EFI 6.86" PRO DASH

- Using a Phillips head screwdriver, install the mounting bracket with the provided #10-32 screws on the back of your Holley dash with the flange for the steering column brackets pointed away from the dash.



HOLLEY EFI 12.3" PRO DASH

- Using a 5/32" Allen wrench, install the mounting bracket with the provided 1/4-28UNF screws on the back of your Holley dash with the flange for the steering column brackets pointed away from the dash.



- Position the steering column brackets, mounting bolts, and the dash/mounting bracket assembly in the required location.

IMPORTANT: All appropriate safety equipment (gloves, tools etc.) must be used during the installation of this product(s).

Nitro Dave's LLC accepts NO responsibility for injuries or damages resulting during and/or from the installation of any product(s). Nitrous oxide is for off-road use only.


WWW.NITROUSOUTLET.COM/INSTALLATION-GUIDES



Holley EFI Digital Dash Mounts

PART NUMBER: 03-26000, 03-26001, 03-26002

INSTALLATION INSTRUCTIONS

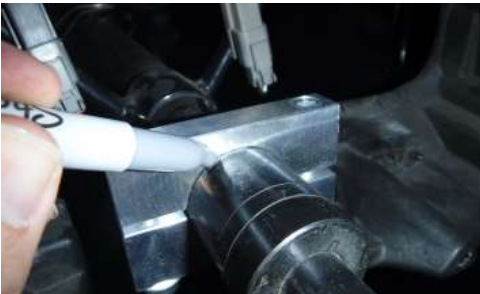

- Remove the Holley dash and mounting bracket, then mark your desired steering column bracket location on the steering column.



- Using a 1/4" Allen wrench and 1/2" wrench, tighten the steering column brackets in place using the provided bolts, washers, and lock nuts. Make sure to tighten the hardware evenly across the bracket so that the dash remains level.



- Using a 1/2" wrench, tighten the mounting bracket on to the steering column bracket bolts with the provided non-locking nuts.



- Connect the dash plug to your vehicle's electrical system.



- Your installation is complete.

IMPORTANT: All appropriate safety equipment (gloves, tools etc.) must be used during the installation of this product(s).

Nitro Dave's LLC accepts NO responsibility for injuries or damages resulting during and/or from the installation of any product(s). Nitrous oxide is for off-road use only.

WWW.NITROUSOUTLET.COM/INSTALLATION-GUIDES