



NuWrap XtraFlex DIY Quick Guide

Simple steps and recommendations for the installation of Thermotec NuWrap XtraFlex for acoustic pipe lagging.

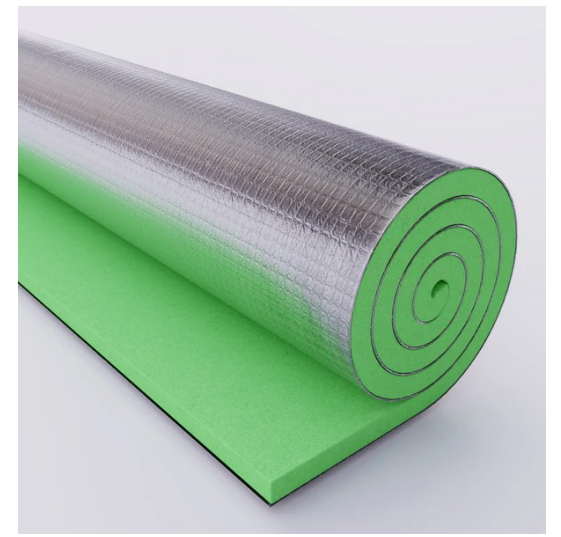


For your health and safety please ensure that you are wearing the appropriate safety equipment including protective goggles and gloves when installing.

STEP 1

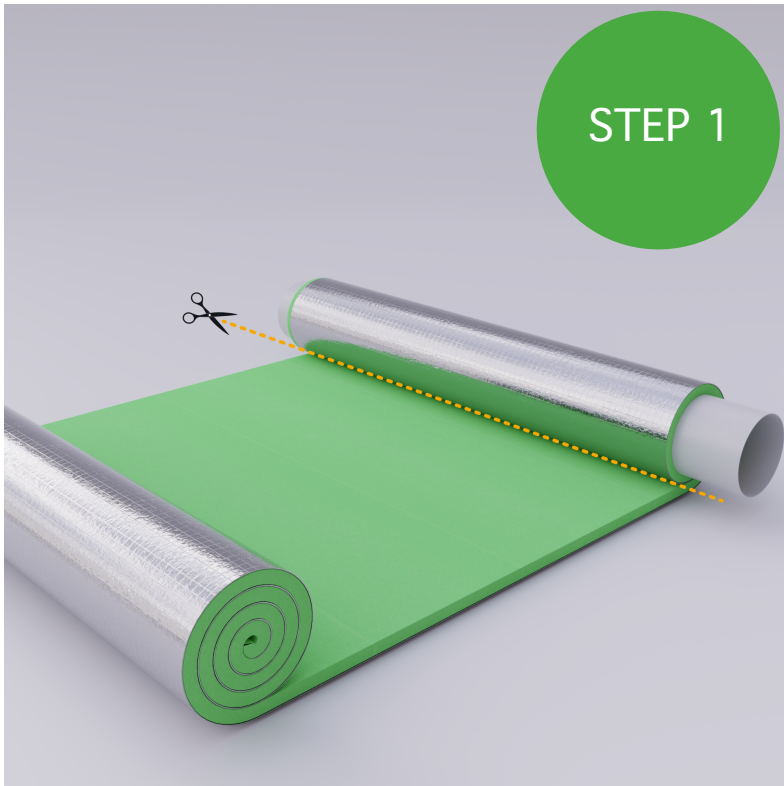


Measure and Cut NuWrap XtraFlex to match the diameter of the pipe, with a ~40mm overlap, so for a 110mm outside diameter pipe cut your width to ~520mm

STEP 2:

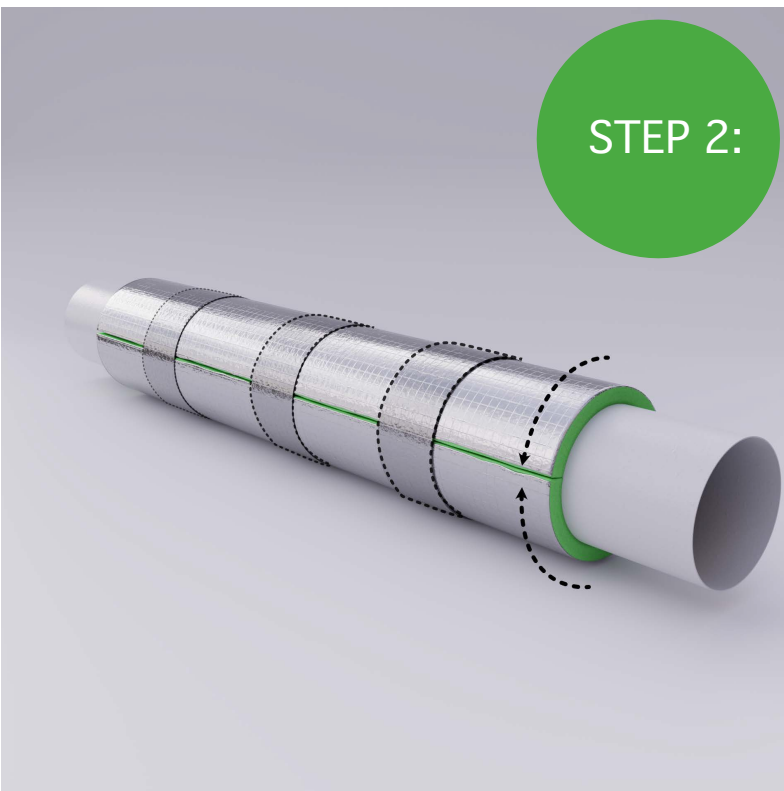

Wrap the NuWrap XtraFlex around pipe. Keep the outside surface clean and dust free. Apply Thermotec Reinforced 72mm wide self adhesive foil reinforced tape around the circumference and joints. On horizontal pipes rotate the joint to face downwards.

STEP 3:

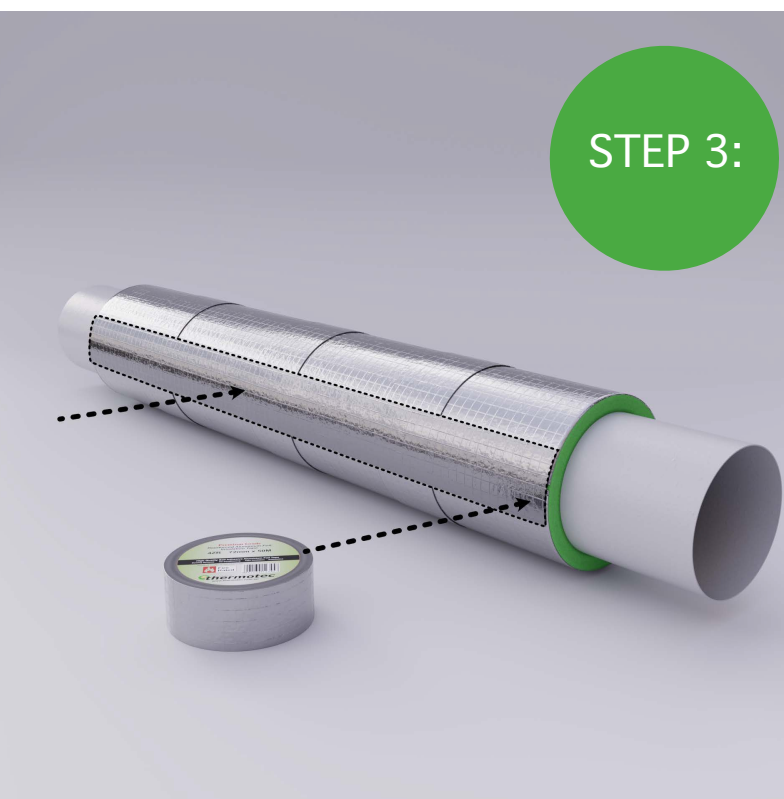

Apply the Thermotec Reinforced 72mm wide self adhesive foil tape lengthwise along the joint. For the best acoustic performance, make sure there are no gaps between any of the joints.